 


10A
Backhoe

(Serial No. 120001 –)

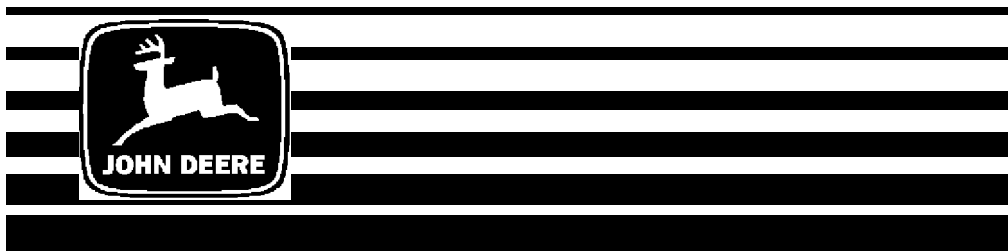

**OPERATOR'S
MANUAL**

**John Deere
Lawn & Grounds Care Division
OMM118747 C9**

North American Version
Litho in U.S.A
English

INTRODUCTION

THANK YOU for purchasing a John Deere product.

Read this manual and your vehicle manual thoroughly. Failure to do so could result in personal injury or equipment damage.



This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are metric units and their U.S. customary equivalents. RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward. When you see a broken line arrow (----->) it indicates the part it is pointing to is hidden.

Product warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The product warranty is explained on the warranty certificate you received from your dealer.


Record identification numbers below. Be sure to record all the numbers to help in tracing the machine if it is stolen. You also need to give these numbers to your dealer when you order parts.

Date of Purchase:

Dealer Name:

Phone:

Serial Number:

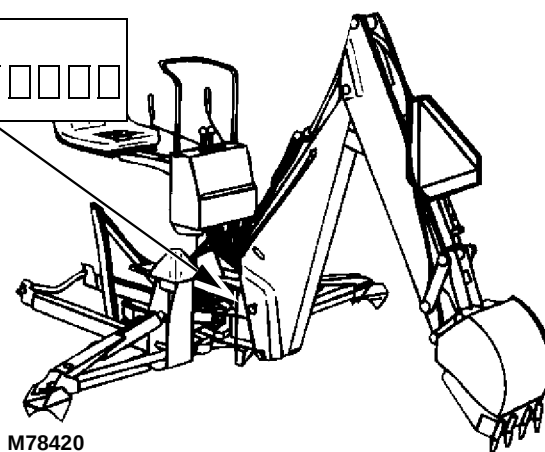

M78420

TABLE OF CONTENTS

	Page
Safety	1
Controls	2
Preparing the Vehicle	3
Installing	39
Removing	52
Operating the Machine	62
Service Machine Safely	70
Service	72
Troubleshooting	78
Storing Machine	80
Assembly	81
Specifications	97
Index	102
John Deere Service Literature	109

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1999
John Deere Horicon Works
All rights reserved
Previous Editions
COPYRIGHT© 1992, 1996

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

SAFETY




Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.

The words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards.



Machine Safety Labels

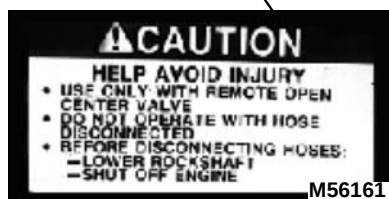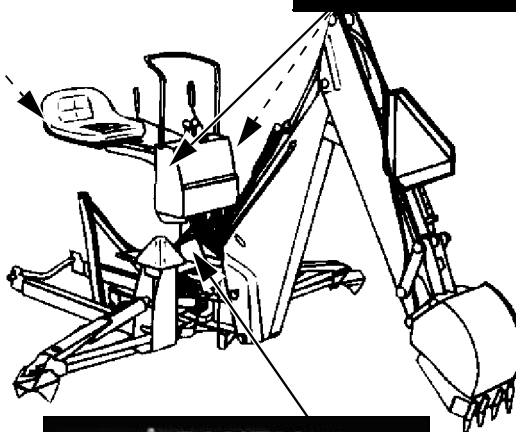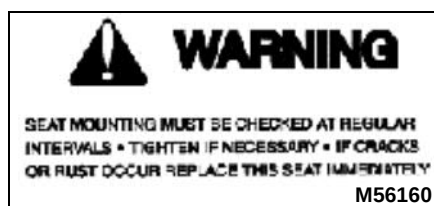

CONTROLS

Controls

IMPORTANT: Do not attempt to raise rear of tractor or front of skid-steer loader with boom and/or dipperstick or cylinder damage could result.
Become familiar with all the controls.
Carefully read this manual.

Boom Control Lever

▲ (Lower Boom; Lever forward)
▼ (Raise Boom; lever rearward)

Dipperstick Lever


(Extend Dipperstick; Lever Forward) ▲
(Retract dipperstick; Lever rearward) ▼

Swing Control Lever

(Swings Boom left and right)

Bucket Control Lever

(Left curl inward; Right curl outward)

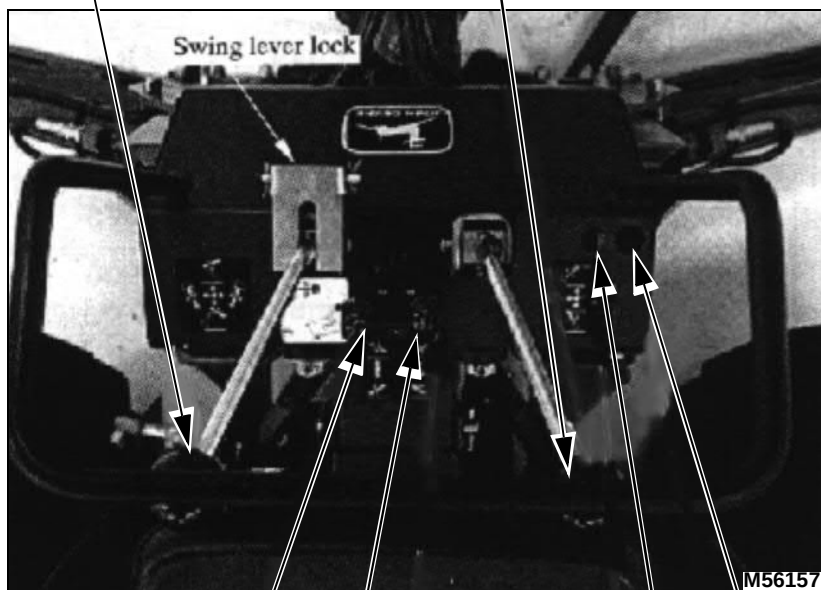

Left/Right-Hand Stabilizer Control Lever

(Lever rearward raises stabilizer)
(Lever forward lowers stabilizer)

Swing and boom pin

Storage

PREPARING THE VEHICLE

Tractor Front Ballast Requirements

Tractor front end stability is necessary for safe and efficient operation. It is important that the proper amount of weight be installed on the front of the tractor as recommended in your tractor operator's manual.

NOTE: If the tractor is equipped with a loader, additional weighting is not required.

Find the minimum number of weights recommended for your tractor in the table below.

Tractor	Minimum Number of Front Weights	Estimated lbs
5200, 5300, 5400, 5500	8	900
5210, 5310, 5410, 5510	8	900
1250	8	375
1450, 1650, 2150, 2350	8	900

PREPARING THE VEHICLE

Tractor Rear Ballast and Tire Inflation



CAUTION: Never operate the tractor with a loose rim, wheel or axle.

When operating a tractor with a John Deere Loader, the 10A backhoe is sufficient ballast when operating the loader. However, when the backhoe is removed, the tractor must have adequate rear ballast. (See the loader operator's manual for proper tractor rear ballast.)

Inflate all tires to maximum recommended inflation pressure as shown in the tractor operator's manual.


DO NOT exceed tire carrying capacity. See tractor operator's manual.



PREPARING THE VEHICLE


Remove 3-Point Hitch (All)

Remove center link (A), draft and lift links (B), and sway chains (C).

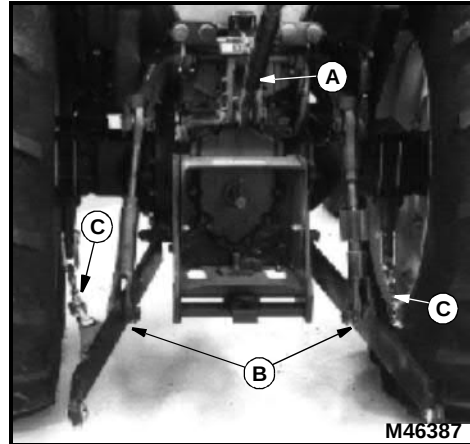

Remove Drawbar, Sway Blocks, and Master Shield

1. Remove drawbar (A), swayblocks (2150 and 2350), and master shield with brackets at (B).
2. Two 3/8 x 3/4 in. cap screws in supports will be needed when attaching right-and left-hand rear hangers (2150 and 2350 only).

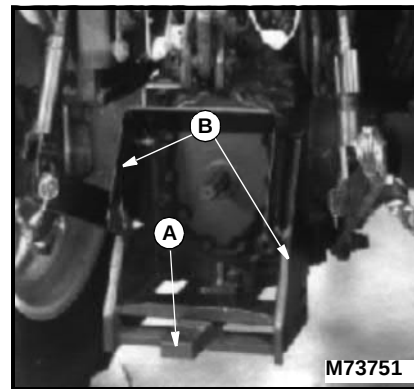



Suggest:

If the above button click is invalid.

 
Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

PREPARING THE VEHICLE


Slot Sway Block Supports (5000 and 5000 Ten Series)

1. Measure and scribe a line (A) 1/2 inch (12.7 mm) up from the top of round holes as shown.

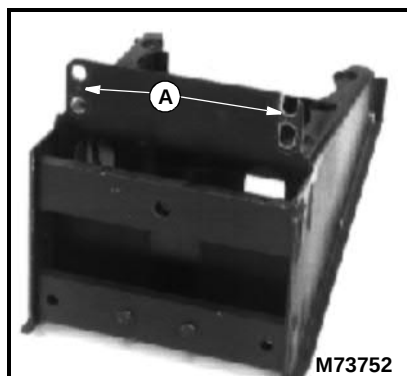

2. Slot four holes as shown on the two right holes.

NOTE: Later model tractors may already have the holes slotted.

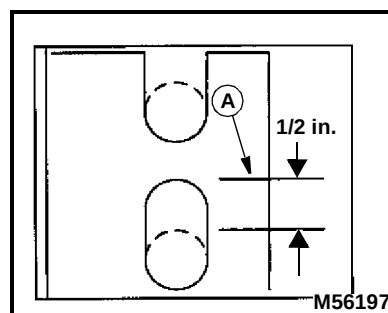

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>