

SRI30 SR200
SRI50 SR220
SRI75 SR250
SVI85 SV250
SV300

Alpha Series Skid Steer Loader

TR270
TR320
TV380

Alpha Series Compact Track Loader

OPERATOR'S MANUAL

Part number 84571609

4th edition English

December 2011

Replaces part number 84533037



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Right, left, front and rear of the machine	1-3
Identification numbers	1-4
Machine components	1-7

2 SAFETY INFORMATION

Signal word definitions	2-1
Safety rules	2-2
Decal information	2-3
Safety decals	2-4
Utility safety	2-11
Operator precautions	2-12
Proper entry and exit	2-13
Starting and stopping precautions	2-14
Seat belt precautions	2-15
Specific precautions to this machine	2-16
Operating precautions	2-17
Maintenance precautions	2-19
Fuel handling precautions	2-21
Burn prevention	2-21
Fire extinguisher	2-22
California proposition 65 warning	2-22
Hazardous chemicals	2-22
Transporting precautions	2-23
Electro-Magnetic Compatibility (EMC)	2-23
Roll Over Protective Structure (ROPS)	2-24
Welding on the machine	2-25
Mechanical lift arm lock procedure - radial lift machines	2-26
Mechanical lift arm lock procedure - vertical lift machines	2-27
No engine power - lift arm down control	2-28
Emergency exit	2-29

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Door latches, cab	3-1
Window glass, cab	3-2
Windshield wiper and washer controls	3-2
Cab air louvers	3-3

OPERATOR'S SEAT

Standard seat	3-4
Mechanical suspension seat	3-4
Air seat	3-4
Seat belt	3-5

MECHANICAL HYDRAULIC CONTROLS

Steering and travel	3-6
Moving the machine	3-6
Turning the machine	3-7
Lift arm and bucket controls	3-8
Hand controls	3-8
Foot pedals	3-9

ELECTRO HYDRAULIC CONTROLS

Control pattern overview	3-10
Standard H control pattern	3-10
Standard ISO control pattern	3-11
H control pattern steering and travel	3-12
Left hand control lever	3-12
Right hand control lever	3-12
Moving the machine	3-13
Turning the machine	3-14
H control pattern lift arm and bucket controls	3-15
Lift arm raise/lower control	3-15
Bucket curl/dump control	3-16
ISO control pattern steering and travel	3-17
Moving the machine	3-17
Turning the machine	3-18
Lift arm and bucket controls	3-20

CONTROL HANDLES

Switch configurations	3-21
Two speed function	3-26

AUXILIARY HYDRAULICS

Standard auxiliary hydraulics	3-27
High flow auxiliary hydraulics	3-28
Enhanced high flow auxiliary hydraulics	3-29

INSTRUMENT CLUSTER

Electronic instrument cluster (EIC)	3-30
Advanced instrument cluster (AIC)	3-35
Instrument cluster	3-40
Left column switch identification	3-52
ISO or H pattern control switch	3-54
Machine lights	3-54
Telematics	3-54

4 OPERATING INSTRUCTIONS COMMISSIONING THE UNIT

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Operating Instructions	4-1
STARTING THE UNIT	
Engine operation	4-3
Throttle	4-5
STOPPING THE UNIT	
Parking the machine and stopping the engine	4-6
Operating in extreme temperatures	4-7
Booster battery procedure.....	4-8
MOVING THE UNIT	
Machine operation.....	4-9
5 TRANSPORT OPERATIONS	
SHIPPING TRANSPORT	
Transporting the machine	5-1
RECOVERY TRANSPORT	
Moving a disabled machine	5-5
6 WORKING OPERATIONS	
GENERAL INFORMATION	
Mechanical attachment mounting systems.....	6-1
Hydraulic attachment mounting systems.....	6-4
Field operation.....	6-6
7 MAINTENANCE	
GENERAL INFORMATION	
General safety before you service.....	7-1
Lubrication analysis program	7-3
Plastic and resin parts	7-3
Ecology and the environment	7-3
Tilting operator's compartment forward.....	7-4
Machine cleaning	7-8
Window removal and cleaning	7-9
Cab door removal and installation.....	7-11
Battery safety - check and cleaning	7-12
Fire extinguisher.....	7-14
Biodiesel fuel	7-15
Engine hourmeter	7-16
Wheels and tires.....	7-17



Suggest:

If the above button click is invalid.

Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

Fluids and lubricants	7-19
Lubrication and maintenance access.....	7-20
Fuses and relays	7-23

MAINTENANCE CHART

Maintenance Chart	7-25
-------------------------	------

Maintenance procedures

Clean tracks and components.....	7-26
Engine and hydraulic coolers.....	7-27
Engine coolant reservoir level check	7-27
Engine oil	7-28
Lift arm, pivot points, coupler pins and cylinder pins	7-29
Hydraulic system	7-30
Seat belt, lap bar and seat interlock operation check	7-32
Alternator and air conditioning compressor (if equipped) belt tension	7-33
Cab intake filter	7-34
Roll Over Protective Structure (ROPS) mechanism and hardware check	7-35
Engine oil and filter	7-35
Final drive - Drain fluid	7-37
Radiator coolant level check	7-38
Fuel filter.....	7-39
In line fuel filter	7-39
Drive chain tension check	7-40
Primary fuel filter	7-41
Hydraulic oil filter	7-42
Final drive chain tank oil.....	7-43
Air cleaner elements	7-43
Hardware - loose or damaged.....	7-45
Hydraulic fluid	7-45
Radiator drain and flush	7-45
Final drive chain tank oil.....	7-47

STORAGE

Storing the machine	7-48
---------------------------	------

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

Error code index	8-1
------------------------	-----

9 SPECIFICATIONS

General specification	9-1
Material weights	9-23
Torque charts - Minimum tightening torques for normal assembly	9-24
Units of measure and conversion	9-29
