

JOHN DEERE 2750 TRACTOR

 


OPERATORS MANUAL JOHN DEERE 2750 TRACTOR

OML55482 L4 English

**JOHN DEERE WERKE MANNHEIM
OML55482 L4**

LITHO IN THE U.S.A.
ENGLISH





Read this manual carefully to learn how to operate and service your machine correctly.

SAFETY



CAUTION: This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury, and carefully read the message that follows.

DIRECTIONS

Left, right, front and rear in this manual are seen from the operator's seat facing the direction of forward travel.

MEASUREMENTS

This machine is of metric design.

For your convenience, most specifications are given in metric measurement with the customary U.S. measurement following.

Some specifications cannot be converted. These appear in metric only.

Most hardware is metric. Specified metric hardware must be used for replacement.



CAUTION: Use only metric tools. Other tools may not fit properly. They may slip and cause injury.

WARRANTY

The warranty on this machine appears on your copy of the purchase order which you should have received from your dealer when making your purchase. This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Warranty and field improvements are a part of John Deere's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.


MACHINE NUMBERS

Write your product identification number (PIN) and serial numbers on the pages provided at the end of this manual, and provide this information to your dealer when ordering spare parts.

Identification Views



L106 066

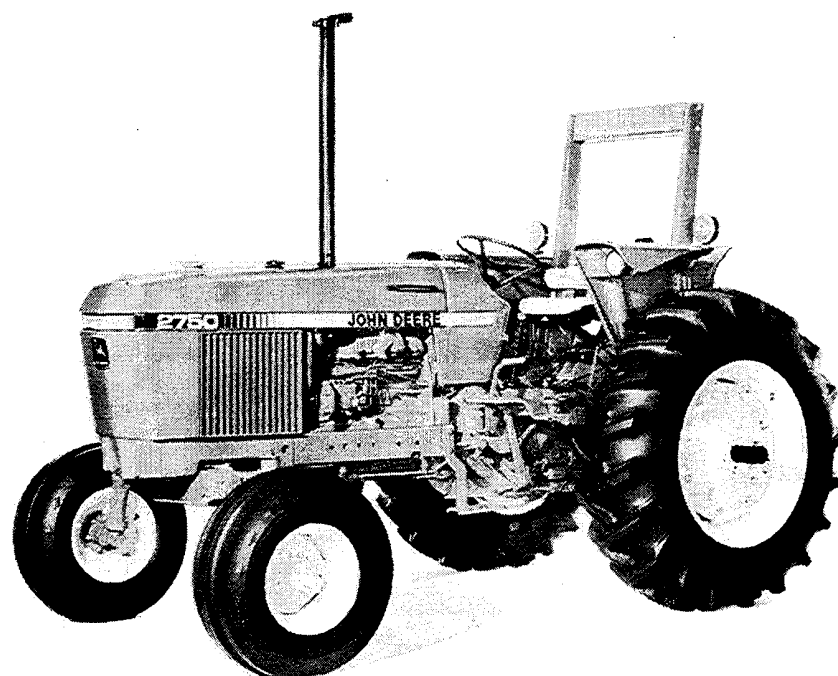

L100 071

L100071,L106066-2750ALE-070284

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

Safety	05-
- Safety	05-1

Crime Prevention Tips	05-
- Crime prevention tips	05-9

Controls and Instruments	10-
- Controls	10-1
- Control lights	10-2
- Instruments	10-3

Break-In Period	15-
- After the first 4 and 8 hours	15-1
- After the first 50 hours	15-1
- After the first 100 hours	15-2
- Within the first 100 hours	15-2

Operating the Engine	20-
- Prestarting check	20-1
- Starting the engine	20-2
- Thermostart aid	20-3
- Ether starting aid	20-4
- Starting with a booster battery	20-6
- Towing the tractor to start	20-7
- Towing the tractor	20-7
- Parking the tractor	20-8
- Stopping the engine	20-8

Operating the Tractor	25-
Reduce fuel consumption	25-1
Ground travel speeds	25-3
- At desired engine speed	25-3
- At rated engine speed	25-4
Operating the tractor	25-5
- Shifting gears	25-5
- Hi-Lo shift unit	25-6
- Creeper transmission	25-6
- Differential lock	25-7
- Foot brakes	25-7

Operator's Station	30-
- Lighting system	30-1
- Seats	30-3
- Roll guard	30-5
- Seat belt	30-5
- Windshield wipers	30-6
- Fan, air louvers, heater	30-6
- Air conditioning system	30-6
- Steering wheel adjustment	30-7

Treads, Tires, Ballast	35-
Wheel treads	35-1
- Adjusting front wheel tread	35-2
- Checking front wheel toe-in	35-3
- Adjusting front wheel toe-in	35-3
- Rear wheel tread adjustment	35-4
Tires	35-8
- Tire pressures	35-8
- Servicing tires	35-8
Ballast	35-9
- Measuring rear wheel slip	35-10
- Rear wheel weights	35-10
- Installing rear wheel weights	35-11
- Filling tires with liquid ballast	35-12
- Front weights	35-13

Rockshaft, Three-Point Hitch	40-
Rockshaft	40-1
- Control lever	40-1
- Load selector lever	40-3
- Rate-of-implement drop	40-4
Three-point hitch	40-5
- Draft links	40-5
- Center link	40-7
- Lift links	40-7
- Attaching implements	40-8
- Positioning sway blocks	40-9

Accessories	45-
Selective control valves	45-1
- Tractors without SOUND-GARD body	45-1
- Tractors with SOUND-GARD body	45-5
- Breakaway couplers	45-7
- Maximum permissible oil withdrawal	45-9
Double acting remote hydraulic cylinder	45-10
Swinging drawbar	45-11

Contents

Power Take-Off	50-	Service-Clutch	85-
– PTO guard	50-1	– Adjusting clutch	85-1
– Operation of PTO	50-2	– Adding fluid to clutch reservoir	85-1
– Attaching PTO driven equipment	50-3	– Lubricating clutch throw-out bearing	85-2
 Front-Wheel Drive	 55-	 Service-Engine	 90-
– Operation	55-1	– Engine oil	90-1
– Front wheel steering angle	55-2	– Engine filter	90-2
– Adjusting front wheel tread	55-3	– Alternator V-belt	90-2
– Tires	55-5	– Engine speeds	90-2
 Fuel, Lubricants, Coolant	 60-	 Service-Cooling System	 95-
Fuel	60-1	– Checking coolant level	95-1
– Fuel specifications	60-1	– Replacing coolant	95-2
– Fuel storage	60-1	 Service-Axles and Wheels	 100-
Lubricants	60-2	– Lubricating front axle	100-1
– Fluid for hydraulically operated clutch	60-2	– Lubricating drive housings and shafts	100-2
– Engine oil	60-2	– Lubricating rear axles	100-2
– Transmission/hydraulic oil	60-3	– Checking front axle oil level	100-3
– Transmission oil for MFWD front axle	60-3	– Changing front axle oil	100-4
– Multipurpose grease	60-4	 Service-Fuel System	 105-
Engine coolant	60-4	– Checking fuel filter	105-1
 Removing Access Covers	 65-	– Replacing fuel filter	105-2
– Hood	65-1	– Draining water trap	105-2
– Grille screens	65-1	– Bleeding fuel system	105-3
– Battery box covers	65-1	 Service-Transmission/Hydraulic	 110-
 Lubrication and Periodic Service	 70-	– Checking oil level	110-1
– Service intervals	70-1	– Replacing filter element	110-1
– Time table	70-2	– Changing oil	110-2
 Service-Air Intake System	 75-	– Replacing steering filter	100-2
– Primary air filter	75-1	 Service-Miscellaneous	 115-
– Secondary air filter	75-2	– Operator's seat	115-1
– Dust unloading valve	75-3	– 3-Point hitch	115-1
– Air intake hoses	75-3	– SGB-air filter	115-2
 Service-Brakes	 80-		
– Bleeding brakes	80-1		
– Adjusting handbrake	80-1		

Contents

Service-Electrical System	120-	Trouble Shooting	135-
– Batteries	120-1	– Hydraulic system	135-1
– Checking specific gravity	120-1	– Engine	135-2
– Level of electrolyte	120-2	– Electrical system	135-3
– Removing batteries	120-2		
– Starting motor	120-4	Specifications	140-
– Neutral start system	120-4	– Engine	140-1
– Alternator	120-5	– Weights	140-2
– Lamps	120-6	– Electrical system	140-3
– Circuit breaker	120-7	– Capacities	140-3
Service-Heater and Air Conditioning System .	125-	Serial Numbers	145-
– Air conditioning system	125-1	– Serial numbers	145-1
– Heater	125-2		
Tractor Storage	130-	Maintenance Record	150-
– Storage	130-1	– Maintenance record	150-1
– Removing tractor from storage	130-2		

Safety


AVOID TRACTOR RUNAWAY

Avoid possible injury or death from a machine runaway.

Do not start engine by shorting across starting motor terminals. Machine will start in gear and move if normal starting circuitry is bypassed.

Start engine only from operator's seat with transmission in neutral. NEVER start engine while standing on the ground.

When servicing front-wheel drive tractor with rear wheels supported off ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission-hydraulic system pressure will engage front driving wheels, pulling rear wheels off support if front wheels are not raised. Under these conditions, the front-drive wheels can engage even with switch in disengaged position.

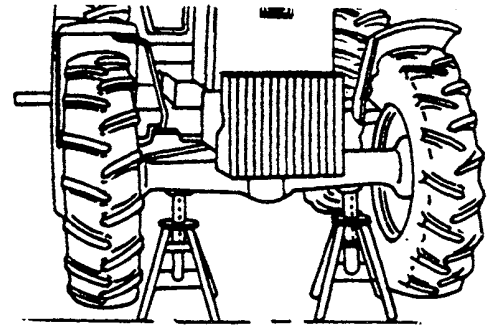


L 104 643

L104643-2350ALE-280284

USE PROTECTIVE EQUIPMENT PROPERLY

Use a seat belt under almost all operating conditions.

If SOUND-GARD body is loosened or removed for any reasons, make certain all parts are reinstalled correctly.

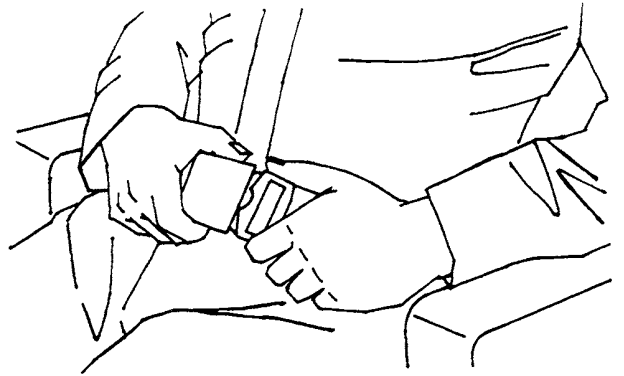


RW4419-2350ALE-091183

NOISE PROTECTION

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

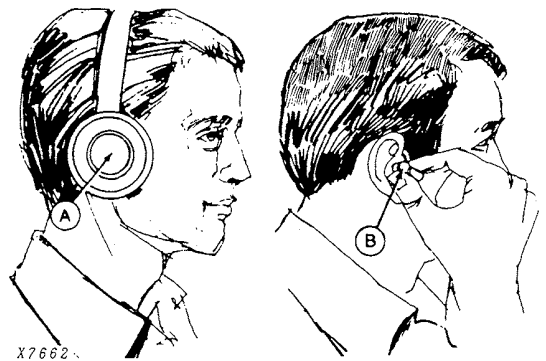


X7662

X7662-1065AZE-262081

SAFETY ON PUBLIC ROADS



CAUTION: Always comply with local traffic regulations when driving on public roads.

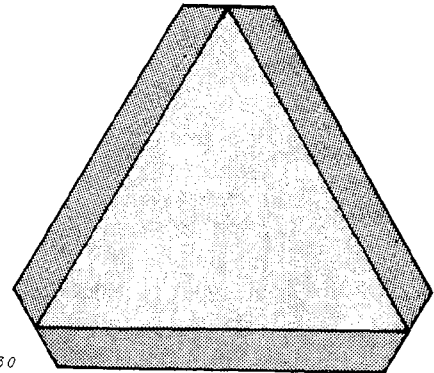


H28930

H28930-1065AZE-261081

HANDLE CHEMICALS PROPERLY

SOUND-GARD body air filters (A) are not designed to filter out harmful chemicals. Follow instructions given in implement operator's manual and those given by the chemical manufacturer when using agricultural chemicals.

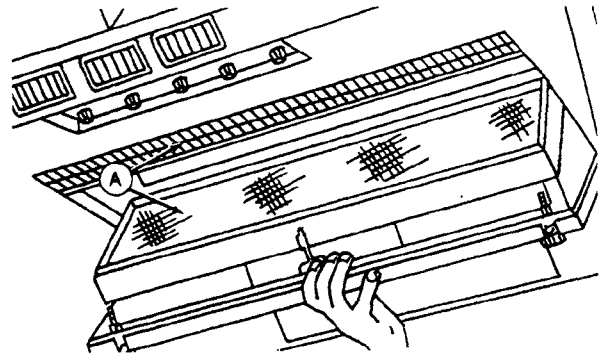

RW5704L-2350ALE-091183

AVOID EXPLOSIONS OR FIRE

Batteries produce explosive gas. Before using booster batteries, read the instructions listed under "Using a Booster Battery", in Operating the Engine section.

To avoid sparks, turn the charger off before connecting or disconnecting a battery charger.

Be careful with starting fluid or any type of fuel. Do not refuel the tractor when the engine is hot or running. Never smoke while handling fuel.


A fire extinguisher can be mounted on your tractor. It is available from your JOHN DEERE dealer. Be sure to read the owners manual packaged with the extinguisher for operation and service instructions.



RW5985,RW2389-2350ALE-091183

EMERGENCY EXIT

For an emergency exit, SOUND-GARD® body windows can be opened. Remove the Quick-Lock pins (A) and headed pins (B) from window latches, and push window wide open.

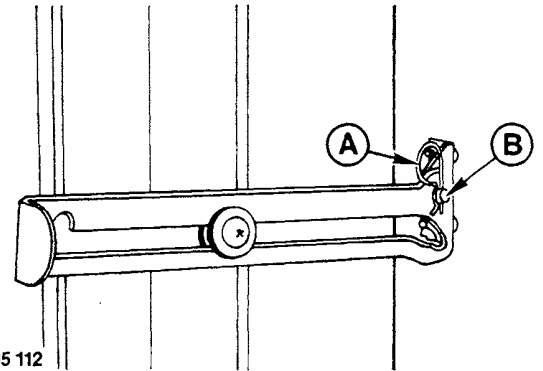


L 105 112

L105112-2350ALE-091183

OPERATING THE ENGINE

Before starting the engine make sure there is plenty of ventilation. Never operate the engine in a closed building. Danger of asphyxiation!

When starting the engine, rockshaft control lever must be in "lower" position.

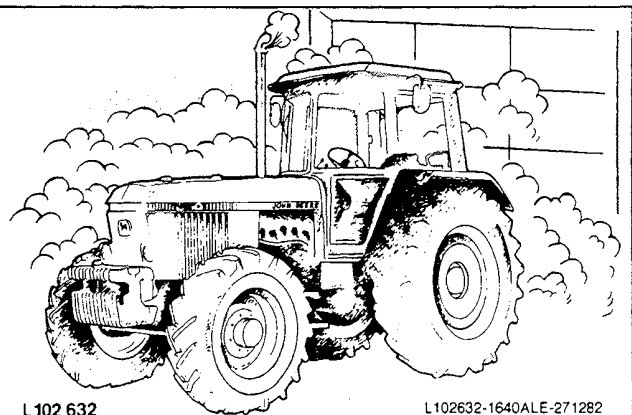


L 102 632

L102632-1640ALE-271282

DO NOT MODIFY TRACTOR

Unauthorized modification to the machine may impair the function and/or safety and effect machine life.

Never modify structural members of SOUND-GARD body or ROLL-GARD protective frame by welding, bending, drilling or cutting as this might weaken the structure. If any component is damaged, replace it. Do not attempt repairs.

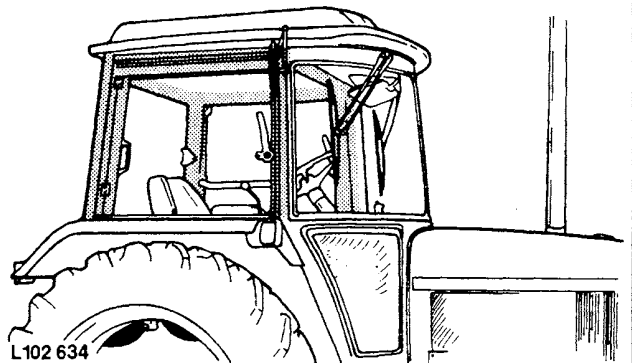

L102 634

L102634-2350ALE-091183

STAY CLEAR OF PTO

Stop the engine and be sure the PTO drive line (A) has stopped before:


- Connecting or disconnect implement drive line
- Making adjustments on the implement
- Clearing out PTO driven equipment

PTO master shield (B) and drive lines should be in place at all times except for special applications as directed in the implement operator's manual.

The PTO shaft guard should be in place when the PTO is not being used.

Operate PTO at recommended speed.

Avoid loose-fitting or dangling clothing.

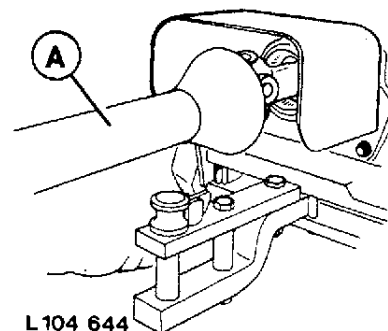


L104644-2350ALE-091183

TOW EQUIPMENT PROPERLY

Lock drawbar pin in place and use safety chain for towed equipment.

Use caution when towing loads at transport speeds. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes. Avoid hard braking applications. Consult implement operator's manual for recommended transport speeds.

Use additional caution when transporting towed loads under adverse surface conditions, when turning or on inclines.

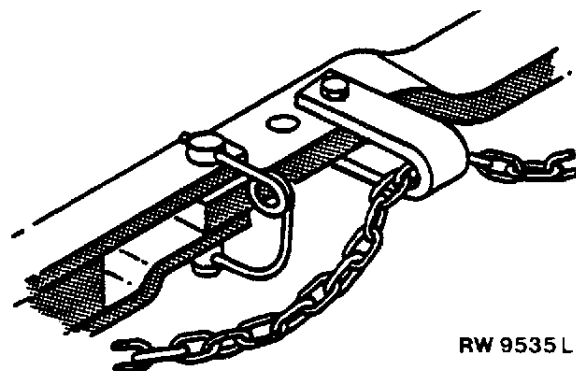

RW9535L-2350ALE-091183


STAY CLEAR OF MOVING TRACTOR

Be sure everyone is clear of tractor and attached equipment before starting engine. Some movement may occur as engine starts.

Never try to get on or off a moving tractor.

Before dismounting, place the transmission in neutral (A), apply handbrake (B) and lower implements to the ground. If tractor is to be left unattended, stop the engine and remove the key.

Never attempt to start or operate tractor except from operator's station.

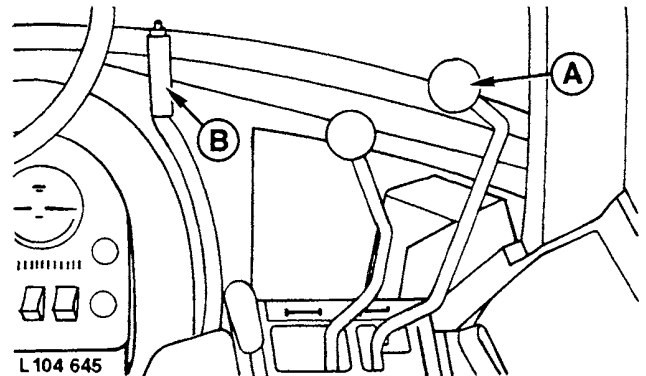

L104645-2350ALE-091183

OPERATE TRACTOR SAFELY

Never allow riders on the tractor.


Slow down for hillsides, rough ground, and sharp turns.

Couple the brake pedals together before driving at transport speeds.

When implements or attachments are used with the tractor, always follow safety precautions listed in implement operator's manual or operating instructions. When raising a heavy object with a loader, be sure the object is secure from falling. It could fall on and seriously injure a bystander or the operator.

Keep all shields in place.

Always apply handbrake before dismounting. Leaving transmission in gear with engine stopped will NOT prevent tractor from moving.

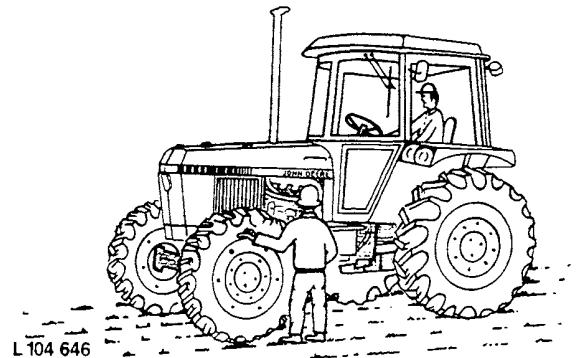

L104646-2350ALE-091183

AVOID TIP-OVERS

Avoid holes, ditches, and obstructions which may cause the tractor to tip – especially on hillsides.



Front-wheel drive (A) greatly increases traction. When this option is used, extra caution is needed on slopes. Compared to 2-wheel drive, a front-wheel drive tractor maintains traction on steeper slopes, increasing the possibility of a tip over.

Never drive near the edge of a gully or steep embankment – it might cave in.

Driving forward out of a ditch or mired condition or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible (B).

Be especially careful when using single wheels. Danger of overturn increases greatly with narrow 1.50 m (60 in.) tread at high speed.

Hitch towed loads only to drawbar. When using a chain, take up the slack slowly.

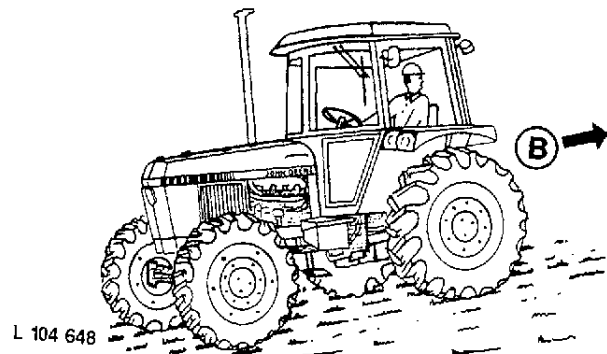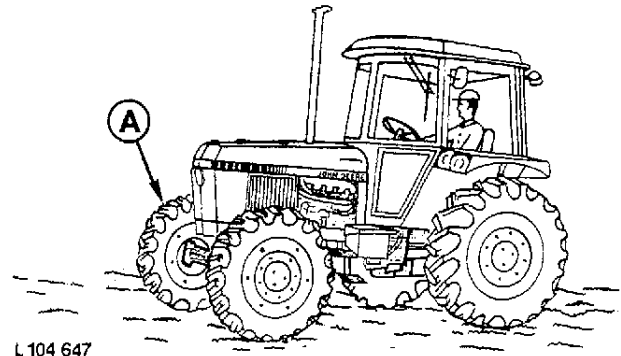

L104647, L104648-2350ALE-091183



TRANSPORT TRACTOR SAFELY

Before descending a steep hill (A), shift to a low gear (B) to control the tractor with little or no braking. Never coast downhill.

When transporting downhill on icy or graveled grades, be alert for skids which could result in loss of steering control. To decrease chance of skids, reduce speed and be sure tractor is properly ballasted. Engage front-wheel drive for four wheel braking.

Additional ballast may be needed for transporting heavy integral implements. When implement is raised, drive slowly over rough ground, regardless of how much ballast is used.

Never tow tractor faster than 8 km/h (5 mph). Before towing tractor, see instructions in Transporting section.

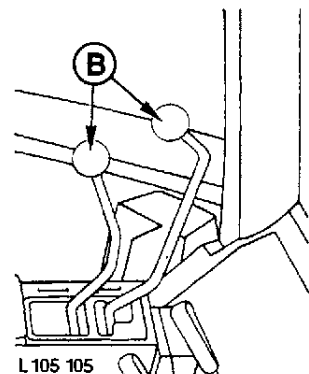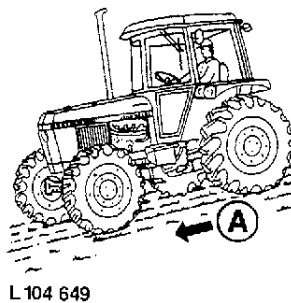


L104649, L105105-2350ALE-091183

MAKE TRACTOR VISIBLE ON HIGHWAY

Turn light switch to "H" position. Never use white lights which are visible from the rear. Always dim headlights before meeting another vehicle. Keep headlights properly adjusted.

Add reflectors, and auxiliary lighting to equipment as required for safety and by local regulations. Before operating tractor on highway, be sure flashing warning lamps (A) work properly. Adjust rear view mirror (B), and clean windows.

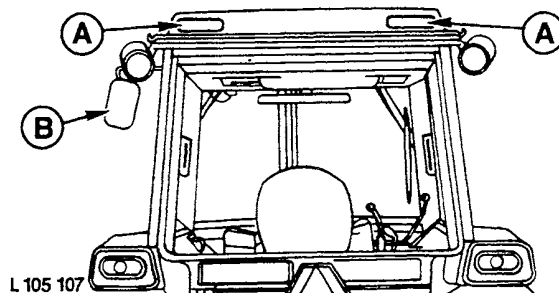


L105107-2350ALE-091183

SERVICE – GENERAL

Do not service the tractor while engine is running.

Reinstall all shields and guards removed for servicing and make sure they are in good condition.

Have adjustments carried out by trained personnel only.

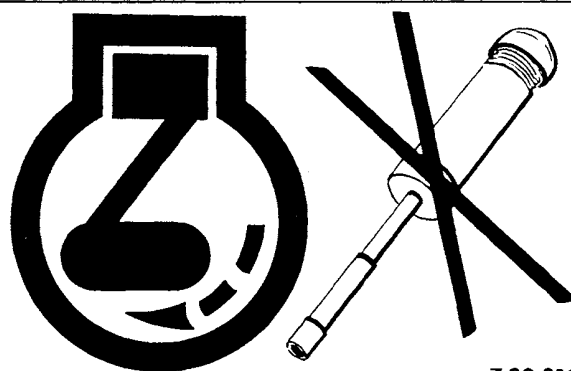


L20919-2350ALE-070384

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pin holes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If any fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type of injury or gangrene may result.


The air conditioning system is pressurized. Improper servicing may cause refrigerant to penetrate eyes and skin or cause burns. Special equipment and procedures are required to service air conditioning system. (See your JOHN DEERE dealer).

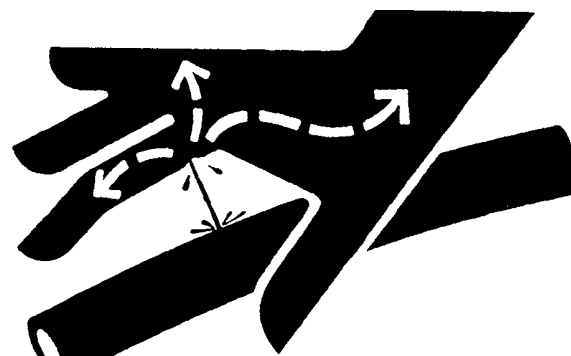

L102134-2350ALE-091183

SERVICE COOLING SYSTEM SAFELY

 Do not remove radiator cap (A) when engine is hot. Shut the engine off and wait until it cools. Then turn the cap slowly to the first stop to relieve pressure before removing it completely.



L 105 108

L105108-2350ALE-091183


SERVICE TIRES SAFELY

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death. Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Have it done by your JOHN DEERE dealer or a qualified repair service.

When sealing tire beads on rims, never exceed 240 kPa (2.4 bar; 35 psi) or maximum inflation pressures specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when maximum recommended pressure is reached, deflate, reposition tire, relubricate bead and reinflate.

Detailed agricultural tire mounting instructions, including necessary safety precautions, are contained in JOHN DEERE Fundamentals of Service (FOS) Manual 55, Tires and Tracks, available through your JOHN DEERE dealer. Such information is also available from the Rubber Manufacturers Association and from tire manufacturers.

A—Use a safety cage if available
B—Do not stand over tire. Use a clip-on chuck and extension hose

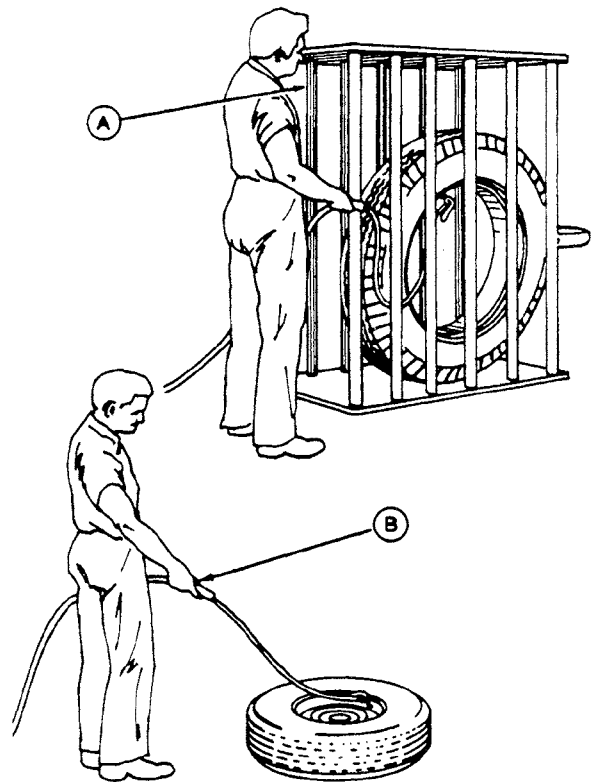


TSO123-2350ALE-280284

DISCONNECTING ELECTRICAL CIRCUIT

Disconnect battery ground strap before carrying out any electrical repairs on the tractor.

Keep all sparks and flames away from batteries, as gas given off by electrolyte is explosive. To avoid sparks, connect ground cable (A) last and disconnect it first. When using a booster battery, follow instructions in "Operating the Engine" section.

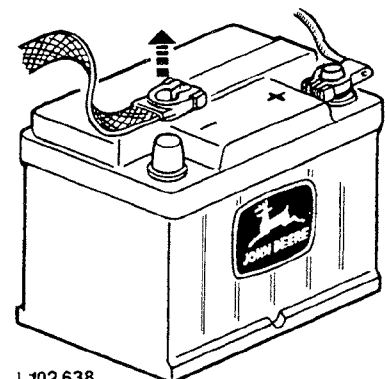

L 102 638

L102638-2350ALE-091183

Crime Prevention Tips

GOOD ADVICE

Keep your machine damage-free and YOURS!

Follow the advice on these pages to reduce vandalism, discourage theft, and help recover your machine if it is stolen.

TAKE A BITE OUT OF
CRIME

© 1979 The Advertising Council, Inc.



AB6:TS140 053:CRPRV A 181185

RECORD IDENTIFICATION NUMBERS


1. Record Product Identification Number (PIN) of unit and identification numbers of engine, component, attachment, etc. EXACTLY as they appear on the plates.
2. Check that the complete and correct numbers appear on all documentation (insurance, financial, warranty, manufacturer's certificate of origin, etc.). Keep all documents in a safe location.
3. If available, participate in an "Owner Applied Numbering Program" and mark your own machines.



AB6:TS161 053:CRPRV B 091283

MAINTAIN DOCUMENTED PROOF OF OWNERSHIP


1. Keep in a safe location all documents (invoices, warranty cards, manufacturer's certificate of origin, if available, etc.) that accompanied your machines at the time of purchase.
2. Take color photographs of each machine from several angles.
3. Maintain an up-to-date inventory of all machines. Check regularly to insure no machines have been stolen.

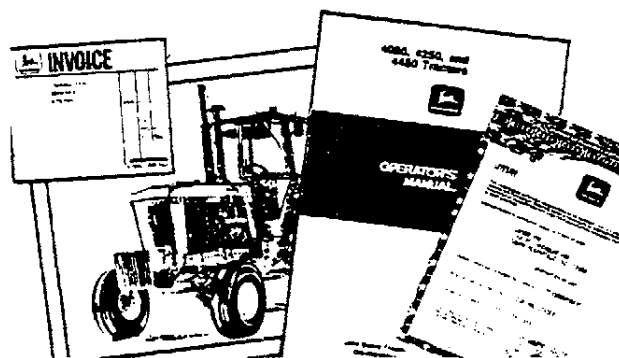

AB6:TS142 053:CRPRV C 181183

PARK INDOORS OUT OF SIGHT

1. Lower all equipment making the machine harder to move.
2. Remove ignition key. If so equipped, lock cab doors, windows and any vandal protection devices. Place hard-to-move equipment in front of exits.
3. If machine is being stored, remove the battery or any essential component in the electrical system.
4. Set wheels in widest position making loading more difficult. Secure all openings to storage buildings.

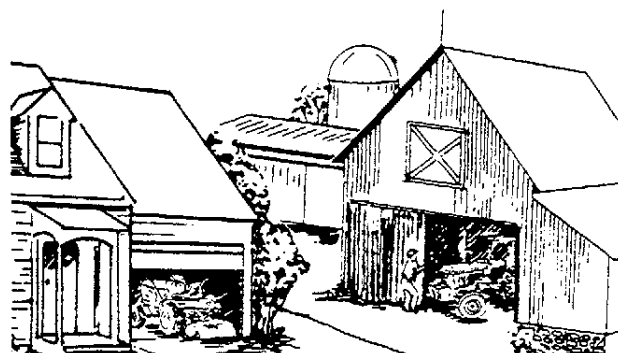


AB6:TS143 053:CRPRV D 100184

053:P01 A 181183

PARKING OUTDOORS


1. Park machine in a fenced, well-lighted, locked area. Lower equipment, remove ignition key and lock cab doors, windows, and any vandal protection devices, if so equipped.
2. Make law enforcement aware of your presence in an area and provide them with a contact person to assist them in dealing with suspicious activity.
3. Solicit assistance from neighbors or merchants who permanently reside near the parking area.

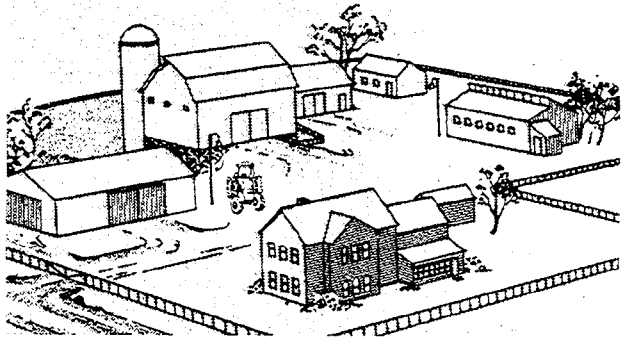

A86:TS155 053:CRPRV E 091283

REDUCE VANDALISM

1. Install vandal protection devices especially if parking machine in high-risk areas.
2. Solicit assistance for watching machine from individuals residing in the area.
3. Take written notes and report to law enforcement all suspicious vehicles or persons.
4. Participate in a "Neighborhood Watch Program."

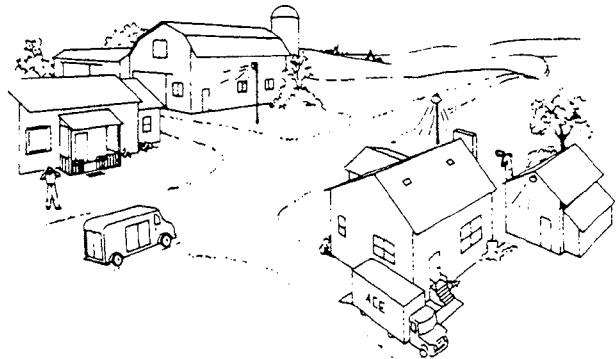

A86:TS145 053:CRPRV F 100184

REPORT THEFT

1. If a theft occurs, notify the law enforcement agency having jurisdiction and the insurance carrier immediately.
2. Give a full description and a complete identification number(s) to the investigating officer and insurance carrier.
3. If available, provide the investigating officer with photographs of the actual machine, manufacturer's literature and knowledge of any identifiable marks that would assist in identifying the machine.
4. Ask for verification that the stolen machine has been entered into the National Crime Information Center (NCIC) operated by the FBI in Washington D.C.
5. Notify your John Deere dealer of the theft and request that, if possible, a notice be posted that provides the description and identification information.
6. Regularly check the identification plates on all machines and report any removed plates to law enforcement immediately. Promptly contact your dealer and order a duplicate identification plate.




A86:TS146 053:CRPRV G 181183

053:P02 A 181183


Controls and Instruments

- A-Handbrake
- B-Clutch pedal
- C-PTO control lever
- D-Turn signal switch
- E-Speed-hour meter
- F-Engine shut-off knob
- G-Hand throttle lever
- H-Key switch
- I-Brake pedals
- J-Gear shift lever
- K-Range shift lever
- L-Rockshaft control lever
- M-Selective control valve lever
- N-Foot throttle

1-Tractor without SOUND-GARD Body

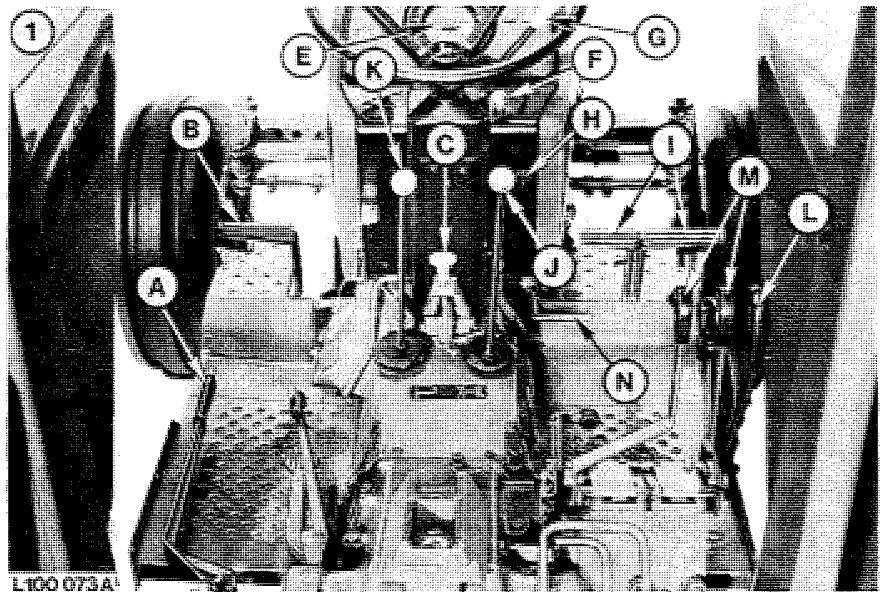


2-Tractor with SOUND-GARD Body

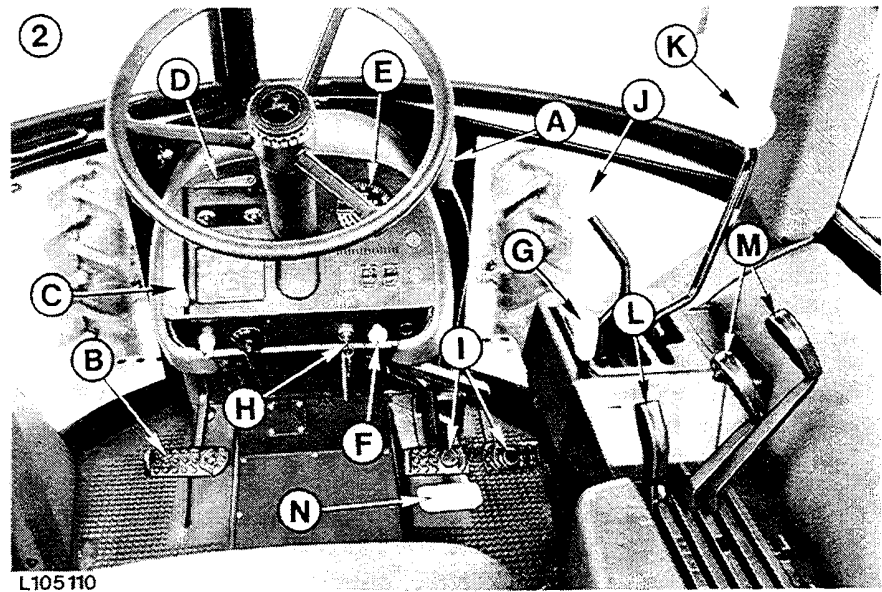


L100073A, L105110-2750ALE-020384

- A-Windshield wiper switch, left-hand
- B-Air conditioning switch
- C-Fan switch
- D-Heater switch
- E-Windshield wiper switch, right-hand

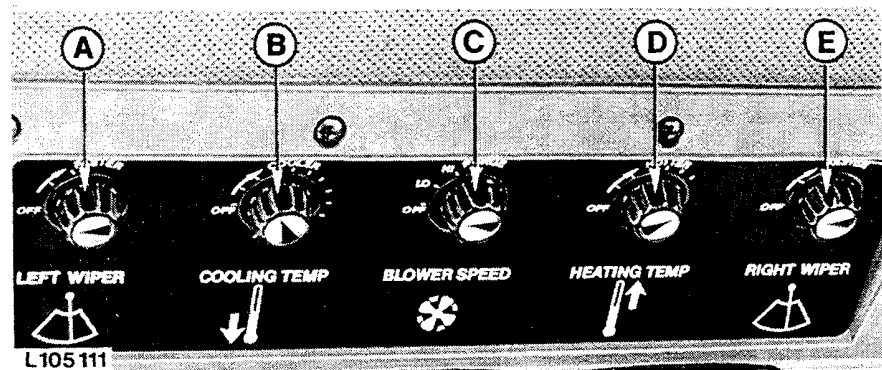

L105111-2350ALE-101183

CONTROL LIGHTS

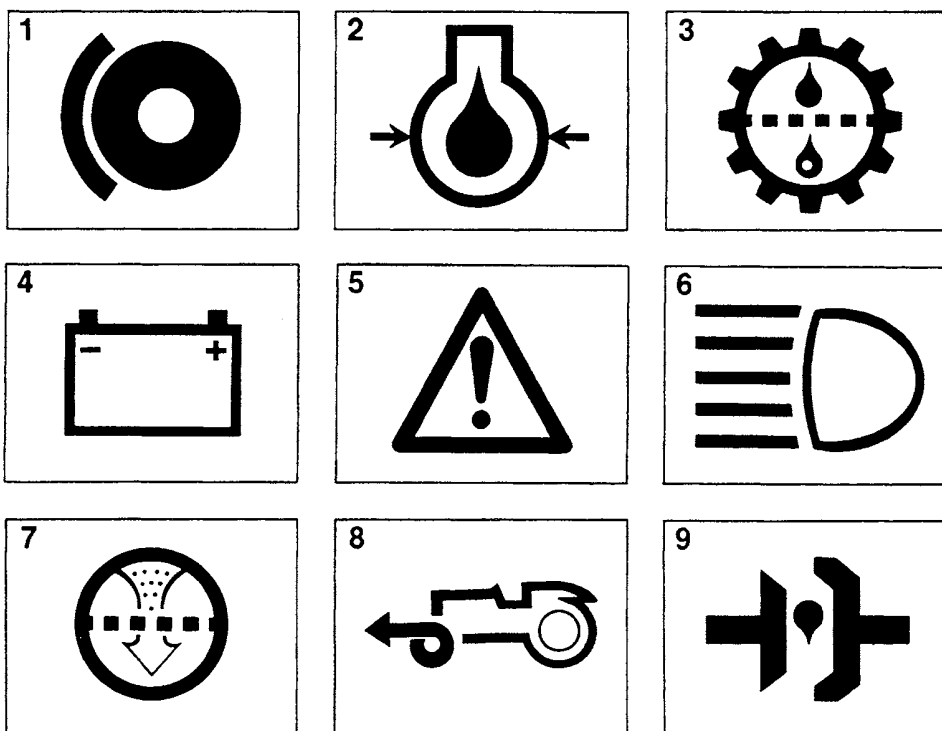

L102 775

1-The handbrake indicator light glows when handbrake is applied and key switch is turned on. Handbrake warning horn will sound if handbrake is applied and transmission engaged.

2-If engine oil pressure indicator light glows with engine running, shut-off engine and check oil level.

3-If transmission oil pressure indicator light glows during tractor operation, stop tractor and check transmission/hydraulic oil level. Should indicator light glow and oil level is correct, then oil filter is clogged. Replace filter.

4-If alternator indicator light glows with engine running, check electrical connections and tension of V-belt. If necessary, have alternator checked by your JOHN DEERE dealer.

5-The warning light blinks when indicator lights 2, 3 or 4 glow or when the range shift lever is moved with the handbrake applied.

6-The high-beam indicator light glows when the headlights are switched to high-beam.

7-If air cleaner indicator light glows with engine running, the air cleaner element must be cleaned or replaced.

8-The front-wheel drive indicator light glows when the front-wheel drive is engaged.

9-If indicator light glows, add brake fluid to clutch reservoir.

NOTE: Indicator lights 2, 3, 4 and 7 should glow as soon as key switch is turned on. If light fails to glow, check for defective bulb.

The indicator lights should go out as soon as the engine is running.

L102775-2350ALE-170383



Suggest:

If the above button click is invalid.

Please download this document first, and then click the above link to download the complete manual.


Thank you so much for reading

FUEL GAUGE

Fuel gauge shows amount of fuel in tank, from "full" (4/4) to "empty" (0).

Refuel before gauge shows "empty". Use diesel fuel specified in "Fuel and Lubricants" section.

Should tractor run out of fuel and not start in several tries, air must be bled from fuel system (see "Bleeding Fuel System" in Service section).

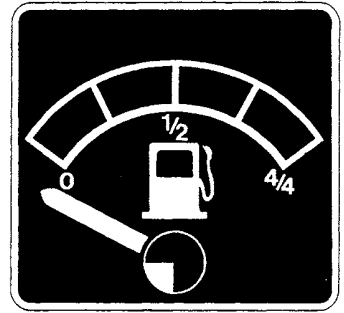


L102 646

L102646-2350ALE-070384

COOLANT TEMPERATURE GAUGE

Should the coolant gauge needle move into the red zone (A) the engine is overheating. Immediately shut-off engine and determine cause of (coolant level low, dirty radiator or grille screens).

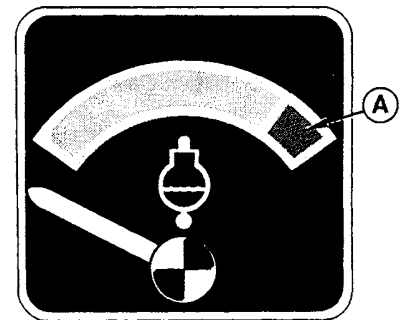

L102 647

L102647-2350ALE-251183

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>