

4650 AND 4850 TRACTORS



OPERATORS MANUAL 4650 AND 4850 TRACTORS

OMRW16854 G8 English

**JOHN DEERE WATERLOO WORKS
OMRW16854 G8**

LITHO IN THE U.S.A.
ENGLISH



Introduction

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents.

Right-hand and left-hand sides are determined by facing in the direction of forward travel.

Write product identification numbers in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

Warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

The tire manufacturer's warranty supplied with your machine may not apply outside the U.S.



All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT® 1988. DEERE & COMPANY, Moline, Illinois. All rights reserved. A John Deere ILLUSTRATION™ Manual.
PREVIOUS EDITIONS COPYRIGHT® 1986

U01;COV2 4650 180388

2U2;JFC 2 170388

Contents

Safety	05-1	Remote Hydraulic Cylinders	
Safety Signs	10-1	Hose Tips	55-1
Controls and Instruments		Identifying SCV	55-1
Control Location	15-1	Connecting Cylinder Hoses	55-2
Instrument Identification	15-2	Operating SCV	55-4
Gauges and Indicators Description	15-3	Setting Remote Cylinder Stroke	55-7
Tachometer	15-9	Disconnecting Cylinder Hoses	55-8
Lighting and Signals		Adjusting SCV Linkage	55-8
Switch	20-1	Drawbar and PTO	
Lamps and Signals	20-1	Drawbar Adjustments	60-2
Electrical Outlets	20-3	Power Take-Off (PTO)	60-5
Operator's Station		Ballast	
SOUND-GARD® Body Temperature		Importance of Ballast	65-1
Controls	25-1	Measuring Wheel Slip	65-2
Window Wipers and Washers	25-3	Rear Ballast	65-3
Windows	25-4	Front Ballast	65-6
Radio	25-5	Wheels, Tires and Treads	
Seat	25-6	Wheel Tightening	70-1
Steering Wheel	25-11	Front Wheel Tread Settings	70-2
Engine Break-in	30-1	Toe-in	70-4
Prestarting Checks	35-1	Toe-in (MFWD)	70-5
Operating the Engine		Rear Wheel Spacing	70-7
Start-up Procedure	40-3	MFWD Wheel Spacing	70-18
Cold Weather Starting	40-5	Steering Stops	70-21
Starting Aids	40-5	Front Fender Adjustment	70-27
Warm-Up and Operation	40-9	Tire Combinations	70-35
Stopping the Engine	40-11	Transporting	
Operating the Tractor		Driving	75-1
Brakes	45-1	Carrier	75-3
Differential Lock	45-1	Towing	75-3
Power Shift Transmission	45-2	Fuels, Lubricants, and Coolant	
QUAD-RANGE™ Transmission	45-3	Fuel	80-1
Mechanical Front-Wheel Drive (MFWD)	45-7	Engine Oil	80-4
Rockshaft and 3-Point Hitch		Engine Coolant	80-5
Component Identification	50-2	Transmission-Hydraulic Oil	80-6
Rockshaft Control Lever	50-2	Lubricants	80-7
Rockshaft Selector Lever	50-4	Lubricant Storage	80-8
Speed of Drop	50-6	Lubrication and Maintenance	
Sway Blocks	50-6	First 100 Hours	85-2
Hitch Conversion	50-7	10 Hour Service	90-1
Attaching Implement Hitch	50-9	200 Hour Service	95-1
Adjusting Implement Level	50-11	600 Hour Service	100-1
Removing Implement	50-11	1200 Hour Service	105-1
		Annual Service	110-1
		2 Year Service	115-1
		As Required	120-1

Continued on next page

U01;CONX2 A 290388

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents


Troubleshooting		Crime Prevention Tips	140-1
Engine	125-1	Specifications	
Transmission	125-4	General	145-1
Hydraulic System	125-5	Ground Speeds	145-4
Brakes	125-6	Identification Numbers	
Rockshaft 3-Point Hitch	125-6	Identification Plates	150-1
Remote Hydraulic Cylinders	125-7	Daily Maintenance	155-1
Electrical	125-8	Lubrication and Maintenance Records	
SOUND-GARD Body	125-10	200 Hour Service	160-1
Service		600 Hour Service	160-5
Access	130-1	1200 Hour Service	160-6
Air Cleaner	130-4	Annual Service	160-7
Belts	130-7	Two Year Service	160-7
Fuel System	130-10	As Required Service	160-8
Cooling System	130-12	Index	165-1
Electrical	130-16	Service Literature Form	
Circuit Breakers	130-19		
Lighting	130-20		
Brakes	130-25		
Heating and Air Conditioner	130-28		
ROPS	130-31		
Storage			
Placing Tractor in Storage	135-1		
Short-Term Idle Periods	135-3		
Removing Tractor From Storage	135-4		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

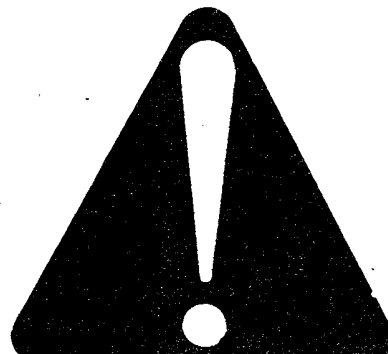

AB6;T81389 053;ALERT 160687

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



AB6;TS187 053;SIGNAL 071085

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.




AB6;TS201 053;READ 230487

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

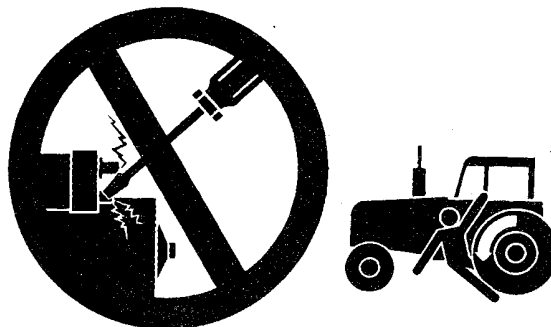

AB6;TS177 053;BYPAS1 210585





SHIFT TO LOW GEAR ON HILLS

Shift to a low gear (B) before descending a steep hill (A), to improve your control of the tractor with little or no braking. Make sure brake pedals are locked together. Never coast downhill.

When driving on icy or graveled surfaces, reduce speed and be sure tractor is properly ballasted to avoid skidding and loss of steering control.

Additional ballast (C) may be needed for transporting heavy integral implements. When implement is raised, drive slowly over rough ground, regardless of how much ballast is used.

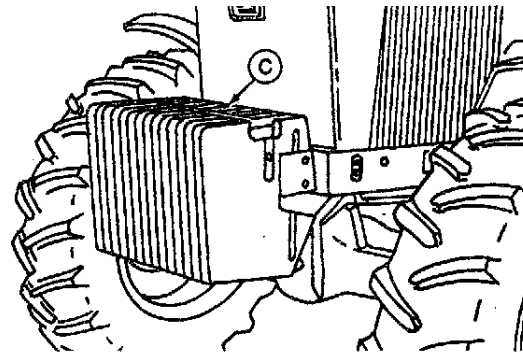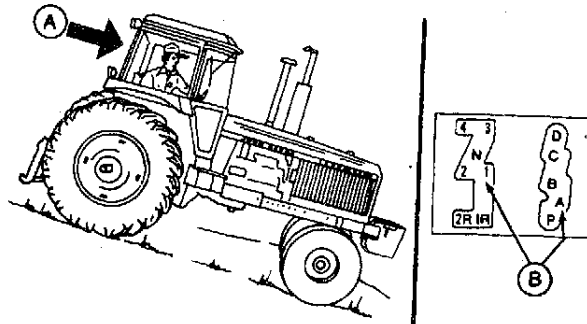

AJ7;RW5692 L,RW5693 L U01;DRIVE SAFE1 281085

USE CAUTION ON HILLSIDES

Avoid holes, ditches, and obstructions which may cause the tractor to tip - especially on hillsides.



Front-wheel drive (A) greatly increases traction. When this option is used, extra caution is needed on slopes. Compared to 2-wheel drive, a front-wheel drive tractor maintains traction on steeper slopes, increasing the possibility of a tip over.

Never drive near the edge of a gully or steep embankment—it might cave in.

Driving forward out of a ditch or mired condition or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible (B).

Be especially careful when using single wheels. Danger of overturn increases greatly with narrow tread, 60 in. (1.50 m), at high speed.

Hitch towed loads only to drawbar. When using a chain, take up the slack slowly.

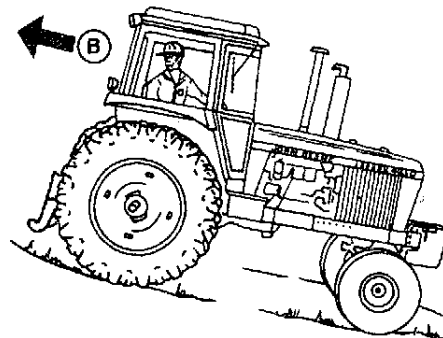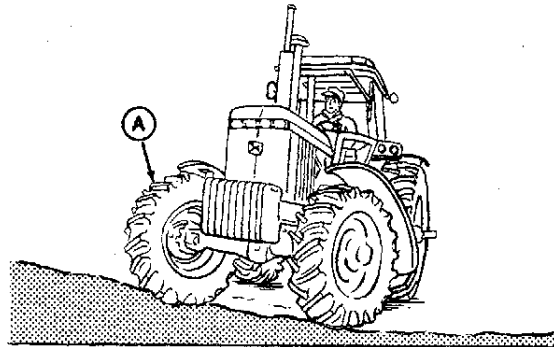


AJ7;RW5689 L,RW5690 L U01;HILL SIDE1 090585



COUPLE IMPLEMENT SECURELY

Securely couple implement by pushing sheet metal base of both hand latch controls down against turned up edge of latch rod brackets.

Secure draft link attaching pins by tightening retainer screws to 85 lb-ft (115 N·m).

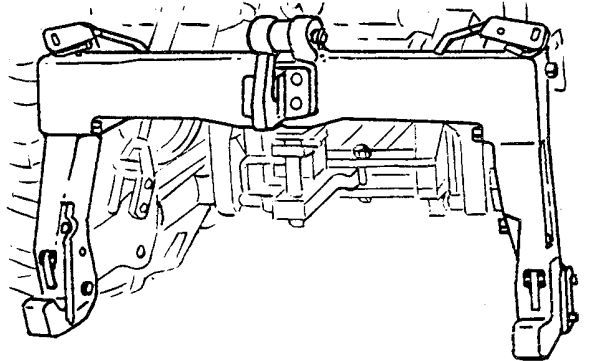


AJ7;RW1095 6 U01;COUPLE SECUR1 160688

USE SEAT BELT PROPERLY

Use a seat belt when you operate with a roll-over protective structure (ROPS) to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS.

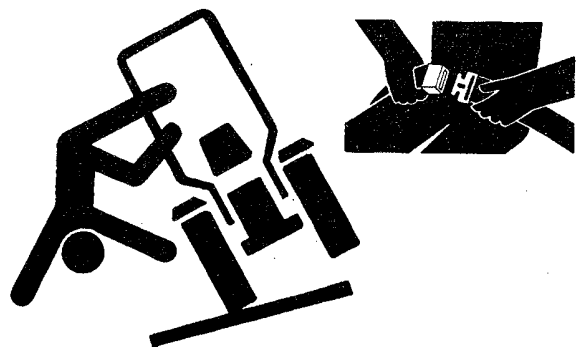


AB6;TS205 053;ROPS1 230487

AVOID EXHAUST FUMES

Never run engine in a closed building. Make sure service area is adequately ventilated.

Avoid inhaling exhaust gases produced by engine running. Exhaust gases, particularly carbon monoxide, may build up. Carbon monoxide is colorless, odorless, and potentially lethal.

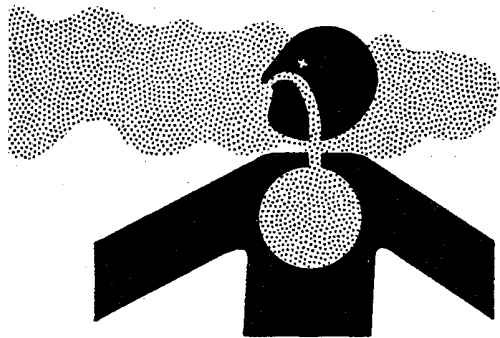

AJ7;RW1291 3 U01;AVOID FUMES3 160688

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



AB6;TS213 053;RIDER 160687



HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.




AB6;TS202 053;FIRE1 230487

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

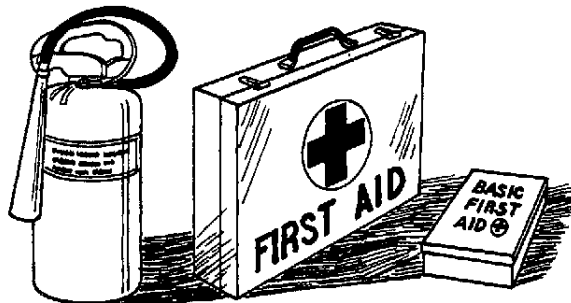

AB6;TS186 053;FIRE2 080785

HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.




AB6;T6089A U 053;FIRE3 010288

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

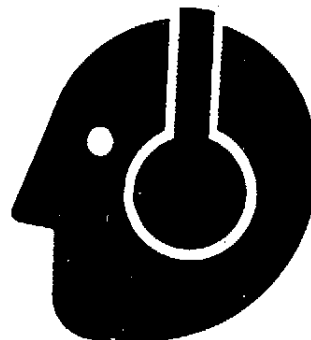


AB6;TS207 U01;NOISE 150388



HANDLE CHEMICALS PROPERLY

Know hazards of fertilizers, insecticides, herbicides, and other chemicals you use during tillage and planting operations. Avoid any contact with dust, spray mixes, and vapors, especially from deadly organic phosphates, which are fast-acting nerve poisons.


SOUND-GARD body air filters (A) are not designed to filter out harmful chemicals. Follow instructions given in the implement operator's manual and those given by the chemical manufacturer when using agricultural chemicals.

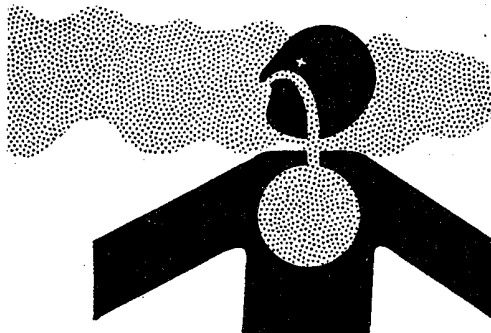

AJ7;RW1291 3 U01;HANDLE CHEM2 160688

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

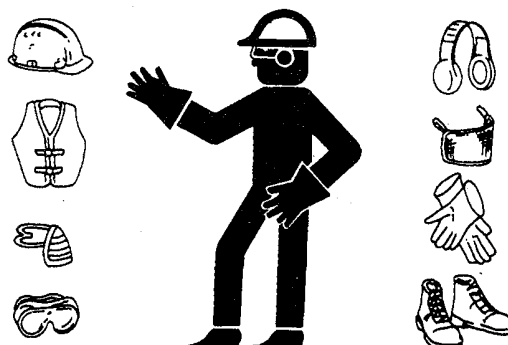

AB6;TS206 053;WEAR2 230487


STAY CLEAR OF MOVING TRACTOR

Always place transmission in PARK (A) before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.

Be sure everyone is clear of tractor and attached equipment before starting engine. Some movement may occur as engine starts.

Never try to get on or off a moving tractor.

When tractor is left unattended, lower implements to the ground (B), stop the engine, and remove the key.

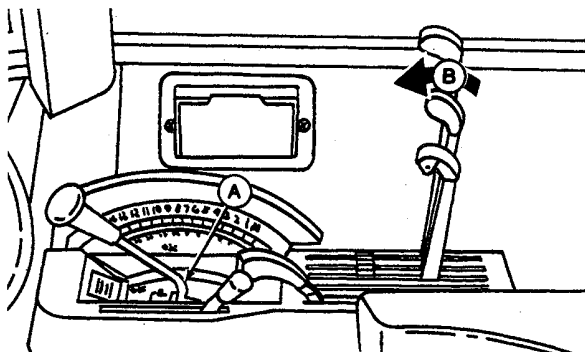

AJ7;RW5696L U01;STAY CLEAR2 200585



STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




AB6;TS198 053;PTO 160687

MAKE TRACTOR VISIBLE ON HIGHWAY

Turn light switch to "H" position. Never use white lights which are visible from the rear. Always dim head lamps before meeting another vehicle. Keep head lamps properly adjusted.

Add SMV emblem, reflectors, and auxiliary lighting to equipment as required for safety and by local regulations.

Before operating tractor on highway, be sure flashing warning lamps work properly. Adjust rear view mirror, and clean windows and SMV emblem.

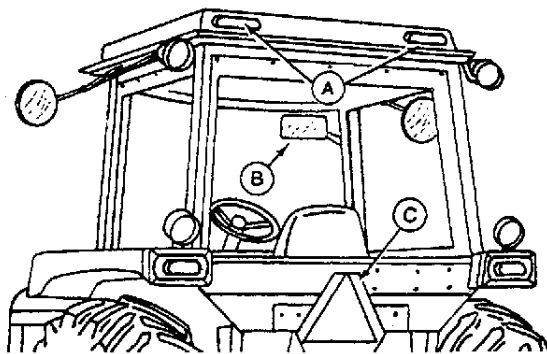


AJ7;RW1099 0 U01;USE LIGHTS 190788

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

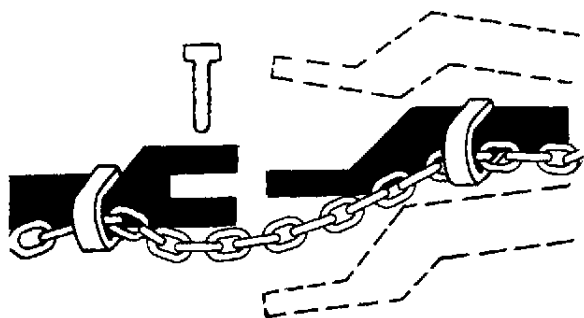


AB6;TS217 053;CHAIN 171287



TRANSPORT TRACTOR SAFELY

The best method for transporting a disabled tractor is to haul it on a flatbed carrier. Chain tractor to carrier securely. Do not chain around mechanical-front-wheel-drive shaft or axle housing.

If towing a tractor, never tow faster than 20 mph (32 km/h). Have an operator steer and brake tractor.

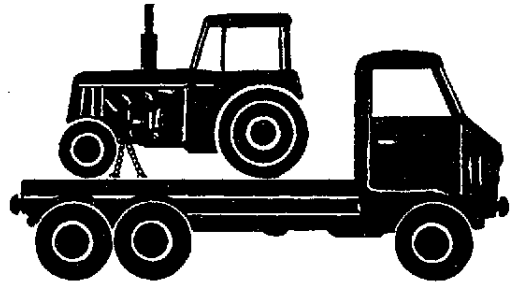


AJ7;RW1309 0 U01;HAUL IT2 220488

REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 20 mph (32 km/h) when towing load equal to or less in weight than the tractor.
- Reduce speed to 10 mph (16 km/h) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

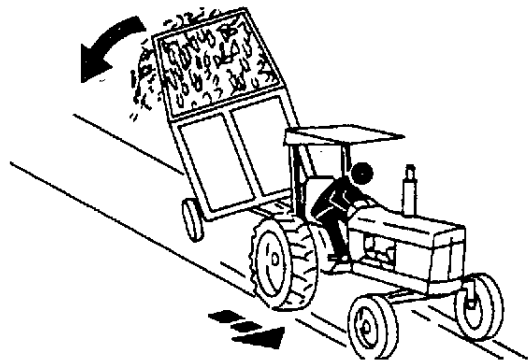


AB6;TS216 053;TOW 080689

KEEP ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

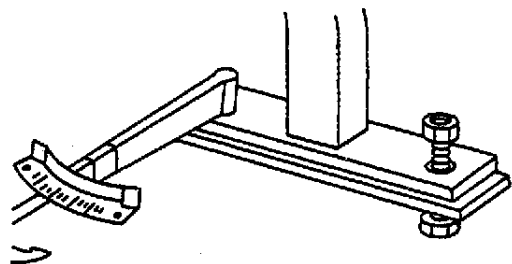

AB6;TS212 053;ROPS3 230487



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.




AB6;TS218 053;SERV 211287

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before unhooking hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard to search for leaks.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

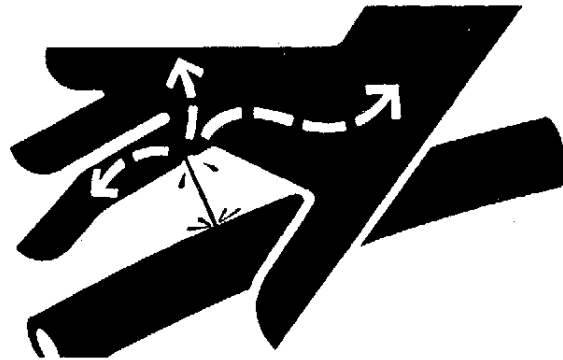

AB6;X9811 053;FLUID 180987




AVOID HARMFUL ASBESTOS DUST

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in John Deere products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding of asbestos containing materials. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, wet the asbestos containing materials with a mist of oil or water.


Keep bystanders away from the area.

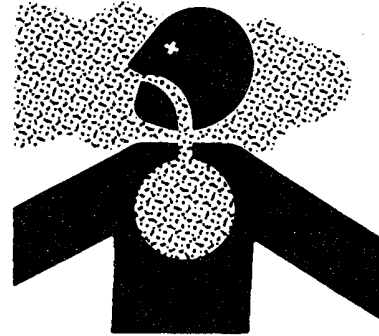

AB6;TS220 053;DUST 140488

SERVICE COOLING SYSTEM SAFELY

Do not remove radiator cap when engine is hot. Shut the engine off and wait until it cools. Then turn the cap slowly to the first stop to relieve pressure before removing it completely.

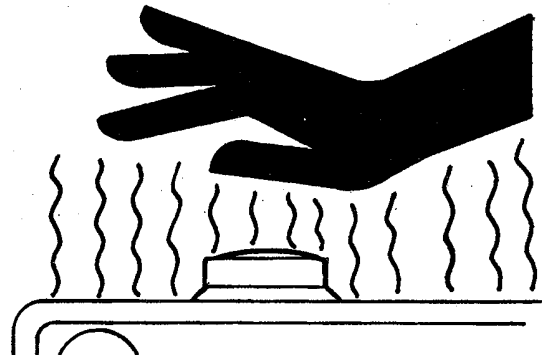


AJ7;RW1304 9 U01;COOL IT3 160688

SERVICE BRAKE ACCUMULATOR SAFELY

Accumulator contains gas and oil under pressure. To avoid injury from escaping fluid, relieve all pressure from accumulator before disconnecting brake accumulator or brake valve. To do so open bleed screws and pump brake pedal with engine stopped, until pedal easily goes all the way down.

The accumulator is charged with dry nitrogen to a pressure of 500 psi (3450 kPa) (35 bar). If it needs recharging, have job done only by a qualified service person and only with dry nitrogen.

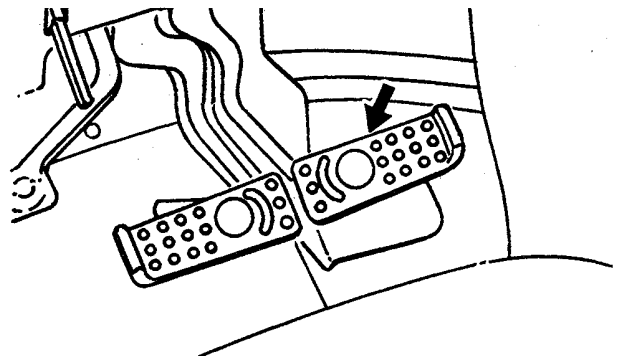


AJ7;RW8630 L U01;FIX BRAKE 311085



DO NOT MODIFY TRACTOR

Never modify structural members of the roll-over protective structure (ROPS) (A) of the SOUND-GARD body or ROLL-GARD protective frame by welding, bending, drilling or cutting as this might weaken the structure. If any structural member is damaged, replace the entire structure. Do not attempt repairs.

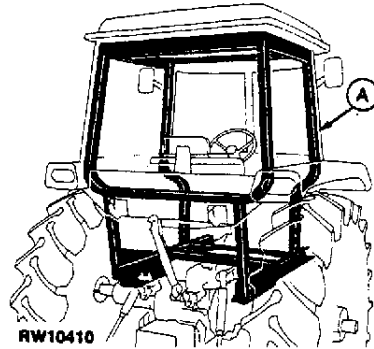


RW10410

AJ7;RW1041 0 U01;MODIFY RC 131285

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.


Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

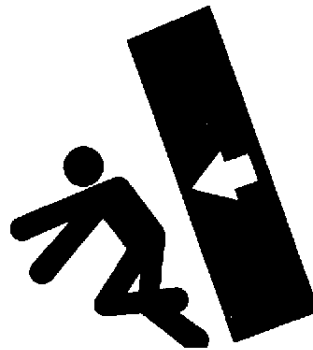

AB6;T5219 053;STORE 120487

Safety Signs

PREVENT MACHINE RUNAWAY

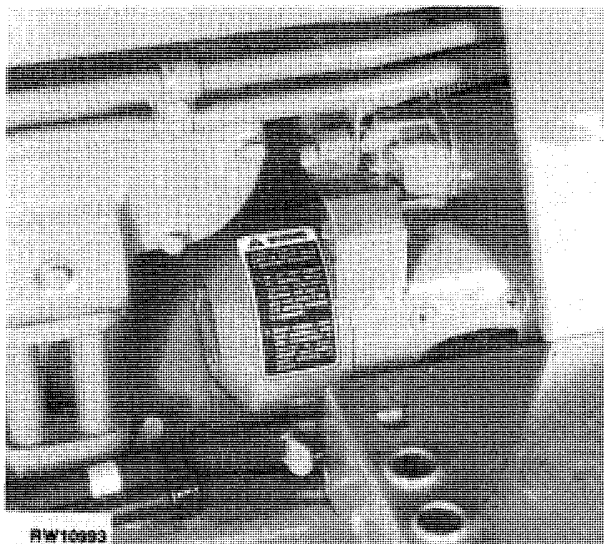


WARNING

AVOID POSSIBLE INJURY OR DEATH FROM A MACHINE RUNAWAY.

1. Do not start engine by shorting across starter terminals. Machine will start in gear if normal starting circuitry is bypassed.
2. Start engine only from operator's seat with transmission in neutral or park. NEVER start engine while standing on ground.

AJ7;RW1099 3,RW1095 1,U01;READ SIGN9B 310386

DO NOT MODIFY ROPS

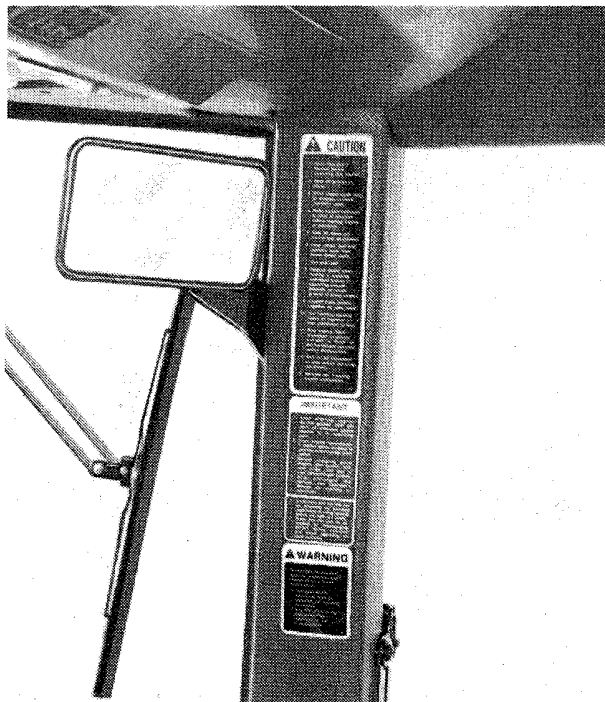

WARNING


To maintain unimpaired operator protection and manufacturer's ROPS certification:

- Damaged ROPS structures must be replaced, not repaired or revised.
- Any alteration to the ROPS must be approved by the manufacturer.

S

AJ7RW1169 5,RW1169 6 U01;READ SIGN18 100386

STAY CLEAR OF PTO

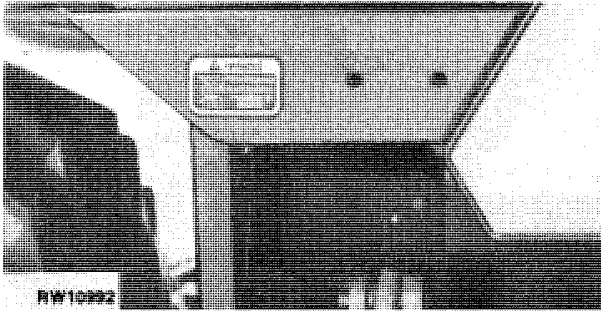

WARNING

TO AVOID BODILY INJURY:

1. Keep PTO master shield and all power drive system safety shields in place.
2. When operating PTO driven implements, install drawbar in the down position if offset, and use the following drawbar instructions:

PTO Shaft	PTO Shaft End to Hitch Pin Hole
540 rpm - 6 spline	14.00 in. (356 mm)
1000 rpm - 21 spline	16.00 in. (407 mm)
*1000 rpm - 20 spline	20.00 in. (508 mm)
*1.75 in. (44.5 mm) dia. shaft	

AJ7;RW1099 2,RW1095 0 U01;READ SIGN8 040685

AVOID HIGH-PRESSURE FLUID

Safety sign is located on brake accumulator line inside control support on right-hand side.



WARNING

Avoid injury from escaping fluid.

Escaping fluid under pressure can penetrate the skin causing serious injury. Accumulator contains gas and oil under pressure. Before removing accumulator, associated lines, plugs, fittings or tightening loose connections:

1. Relieve oil pressure from accumulator by actuating brakes with a brake bleed screw open.
2. Consult machine model technical and service manuals.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

R78080

Printed in USA

AJ7;RW1095 3 U01;READ SIGN5 010885

AVOID ESCAPING FLUID

Safety sign is located on brake accumulator inside control support on right-hand side.



WARNING


Avoid injury from escaping fluid. Contents of this accumulator are under pressure.

1. Refer to proper Machine Model Technical Manual for disassembly or charging instructions and equipment required.
2. Charge with DRY NITROGEN only.

Maximum Working Pressure
22060 kPa (3200 PSI)

AJ7;RW1101 1 U01;READ SIGN12 080885

COUPLE IMPLEMENT SECURELY

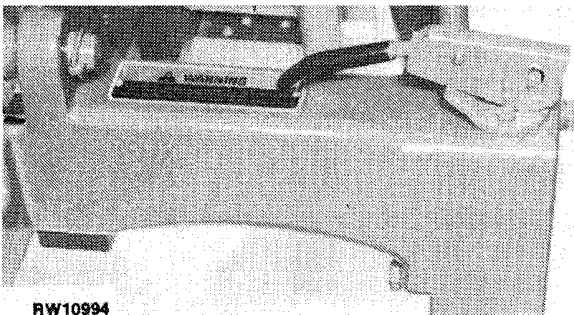


WARNING

1. Securely couple implement by pushing sheet metal base of both hand latch controls down against turned up edge of latch rod brackets.
2. Secure draft link attaching pins by tightening retainer screws to 85 lb ft torque.

AJ7;RW1099 4,RW1095 4 U01;READ SIGN10 100386

OPERATE TRACTOR SAFELY

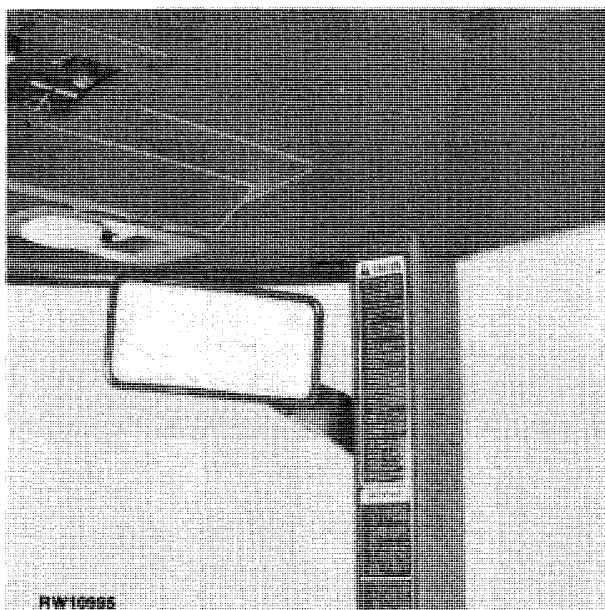

CAUTION


1. Read Operator's Manual before operating this tractor.
2. Keep all shields in place.
3. Hitch towed loads only to drawbar to avoid rearward upset.
4. Make certain everyone is clear of machine before starting engine or operation.
5. Keep all riders off tractor and equipment.
6. Keep hands, feet and clothing away from power-driven parts.
7. Use seat belt.
8. Reduce speed when turning or applying individual brakes or operating around hazards, on rough ground or steep slopes.
9. Couple brake pedals together for road travel.
10. Use flashing warning lights on highway unless prohibited by law.
11. Stop engine, lower implement to ground and shift to "PARK" or set handbrake securely before dismounting.
12. Wait for all movement to stop before servicing machinery.
13. Remove key if leaving tractor unattended.

AJ7/RW1099 5, RW1113 8 U01/READ SIGN13 110386

Controls and Instruments

SOUND-GARD® BODY CONTROLS


- | | |
|--|---------------------------------------|
| A—Left Wiper Switch | I—Radio Tuning Knob |
| B—Air Conditioning Temperature Control | J—Radio Tuning Push Buttons |
| C—Blower Switch | K—AM/FM Selection Bar |
| D—Heater Temperature Control | L—Radio On-Off/Volume/Balance Control |
| E—Right Wiper Switch | M—Radio Tone Control |
| F—Console Lamp | N—Air Louver |
| G—Dome Lamp Switch | |
| H—Dome Lamp | |

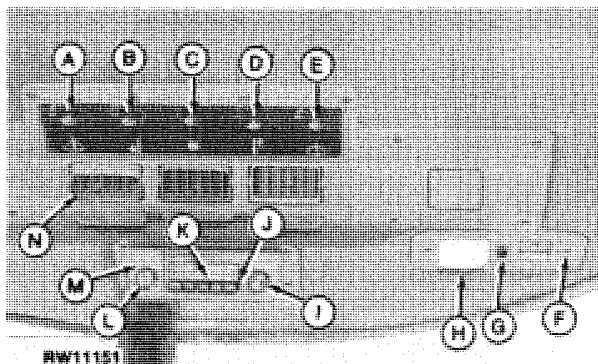

AJ8/RW1115 1 U01/CIX1 01 311085

TRACTOR CONTROLS

- | | |
|---|---------------------------------|
| A—PTO Lever | L—Remote Hydraulic Levers |
| B—Steering Wheel Telescope Release | M—Accessory Electrical Outlet |
| C—Turn Signal Control | N—Rockshaft Depth Stop Knob |
| D—Steering Wheel | O—Rockshaft Control Lever |
| E—Lighter | P—Rockshaft Load Selector Lever |
| F—Mechanical Front-Wheel Drive Control Switch | Q—Brake Pedals |
| G—Key Switch | R—Steering Wheel Tilt Release |
| H—Engine Stop Knob | S—Differential Lock |
| I—Horn Button | T—Dimmer Switch |
| J—Hand Throttle | U—Clutch Pedal |
| K—Shift Lever | V—Light Switch |
| | W—Starting Aid Button |

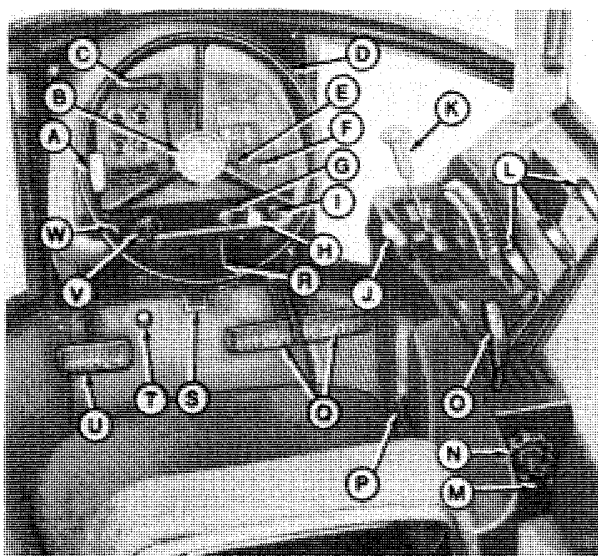


Tractor shown is equipped with Power-Shift Transmission, Mechanical Front-Wheel Drive (MFWD), INVESTIGATOR II™, and Digital Tachometer

AJ8/RW8608 U01/CIX1 02 151283

GAUGES AND INSTRUMENTS


- | |
|--|
| A—Engine Oil Pressure Gauge |
| B—Voltmeter |
| C—Fuel Gauge |
| D—Engine Temperature Gauge |
| E—Tachometer Display |
| F—Hourmeter |
| G—Head Lamp Hi-Beam Indicator |
| H—Stop Engine Indicator |
| I—Service Alert Indicator |
| J—INVESTIGATOR II™ Warning Indicator Lamps |

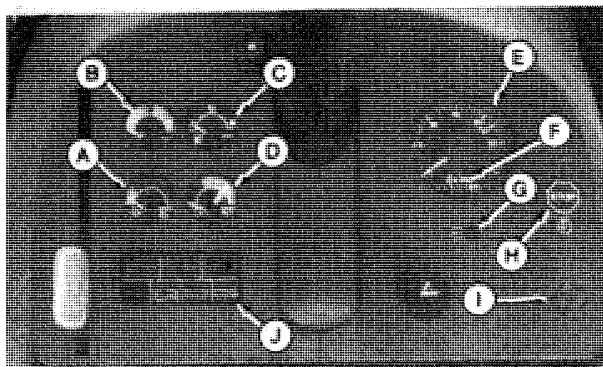

AJ8/RW1162 4 U01/CIX1 03 121285

INVESTIGATOR II WARNING INDICATOR LAMPS


- A—Transmission Oil Pressure Indicator
- B—Engine Oil Pressure Indicator
- C—Engine Water Temperature Indicator
- D—Hydraulic Oil Temperature Indicator
- E—Air Filter Restriction Indicator
- F—Transmission Filter Restriction Indicator

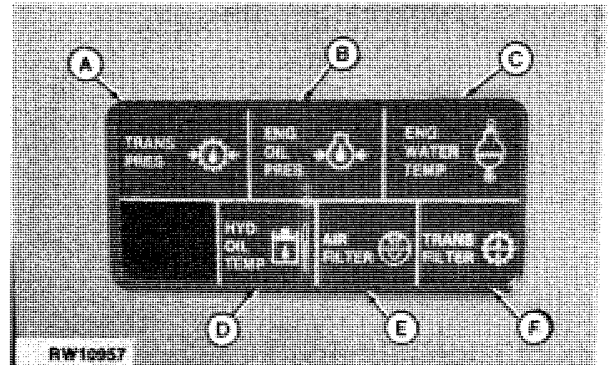

AJ8/RW1095 7 U01;CIX1 04 010885

DIGITAL TACHOMETER—OPTIONAL


- A—Digital Display
- B—Engine RPM Touch Pad
- C—PTO RPM Touch Pad
- D—Travel Speed Touch Pad
- E—Clock Touch Pad
- F—Display Identification
- G—Engine Speed Bar Graph
- H—Rated PTO RPM Mark
- I—Hourmeter

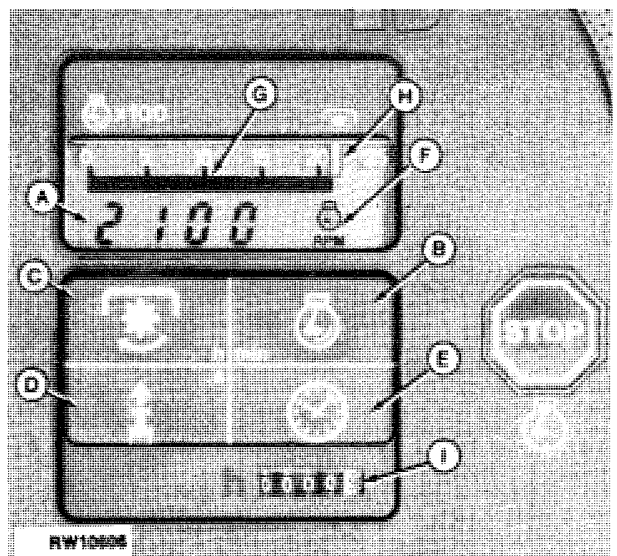

AJ8/RW1060 6 U01;CIX1 24 121285

GAUGES—WITHOUT INVESTIGATOR II WARNING SYSTEM

- A—Fuel Gauge
- B—Engine Water Temperature Gauge
- C—Engine Oil Pressure Gauge
- D—Voltmeter
- E—Transmission Oil Indicator
- F—Air Filter Restriction Indicator
- G—Tachometer
- H—Hour Meter
- I—Head Lamp Hi-Beam Indicator

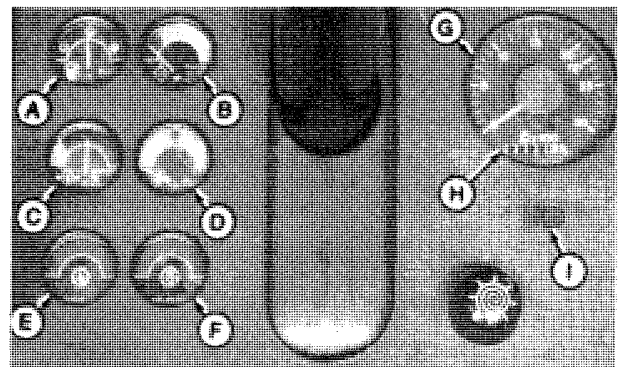

AJ8/RW5710 U01;CIX1 05 121285



Suggest:

If the above button click is invalid.

Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading


CHECK INSTRUMENTS OFTEN

IMPORTANT: See your John Deere dealer if any instrument malfunctions. Operate tractor only if all instruments work properly.

Leave key switch on while operating tractor so instruments will function. Form a habit of checking them often.

Check indicator lamps and audible warning signal each time engine is started. All INVESTIGATOR II warning indicator lamps (A), "Service Alert" (B), and red "Stop Engine" (C) signals should glow for 5 seconds when key switch is turned to first position. Audible warning tone should be heard for the first 2 seconds while lamps glow.

NOTE: On earlier tractors, if blower speed switch is on, air conditioner "Lo" and "Hi" pressure lights (D) should glow 5 seconds for bulb check. (Also see *Adjusting Air Conditioning* in *Operator's Station* section).

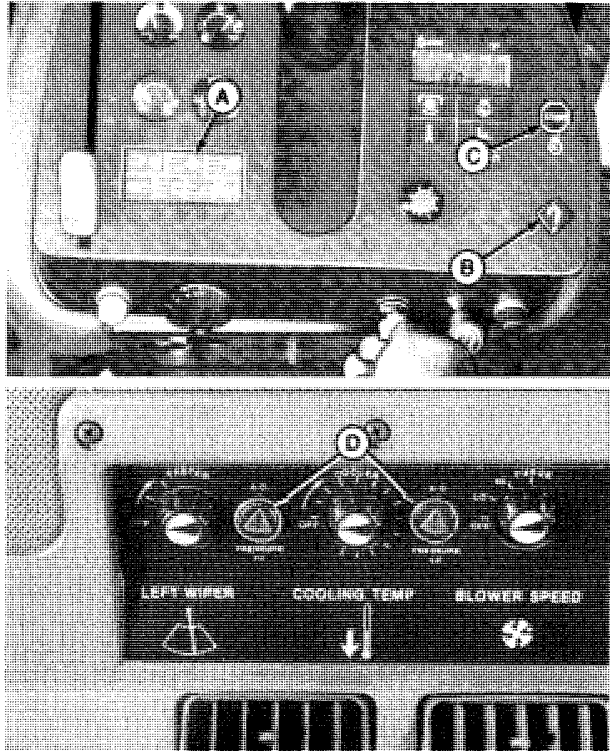


AJ8;RW4076,RW8604 U01;CIX1 06 130386

WATCH FUEL LEVEL

Stop to refuel before fuel gauge (A) reaches empty mark (B).

Use diesel fuel specified in Fuels, Lubricants, and Coolant section.

Should tractor run out of fuel and not start in several tries, air must be bled from fuel system. (See *Bleeding Fuel Lines* in *Service* section.)

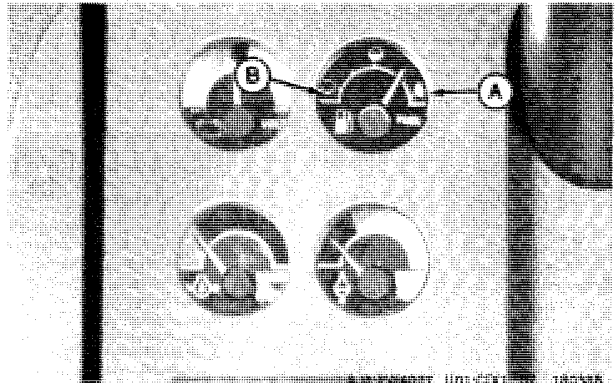

AJ8;RW4076,RW8604 U01;CIX1 07 130386

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>