

6600 AND 7700 COMBINES



OPERATORS MANUAL 6600 AND 7700 COMBINES

OMH84020 H1 English

**JOHN DEERE HARVESTER WORKS
OMH84020 H1**

LITHO IN THE U.S.A.
ENGLISH





To the Purchaser

This new combine was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication, or service. Read the Table of Contents to learn where each section is located. Use the alphabetical index for fast reference.



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

This operator's manual covers the feeder house and separator areas of the combine. For platform and corn head information, see the separate operator's manuals furnished with that equipment.


In addition to the equipment furnished with your combine, attachments are available to help you do a

better job in special crop conditions. These are described in the attachments section of this manual and can be purchased from your John Deere dealer.

"Right-hand" and "left-hand" sides are determined by facing in the direction the combine will travel when in use. The radiator end of the engine is referred to as the "front," the flywheel end as the "rear."

Record your combine serial numbers in the space provided on page 153. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments. If your combine requires replacement parts, go to your John Deere dealer where you can obtain Genuine John Deere parts—accept no substitutes.


The warranty on this combine appears on your copy of the purchase order which you should have received from your dealer when you purchased the combine.

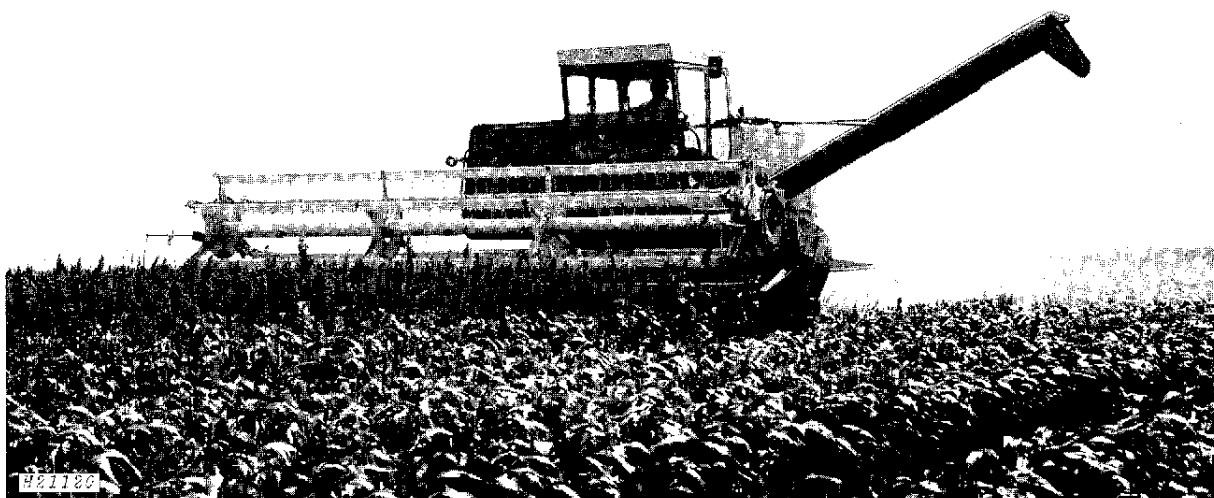



Contents

	Page
Controls and instruments	2-3
Operation	4-33
Safety suggestions	34
Fuels and lubricants	35-36
Lubrication and periodic service	37-49
Service	50-121
Trouble shooting	122-136
Storage	137-139
Attachments	140-147
Specifications	148-154
Index	155-158

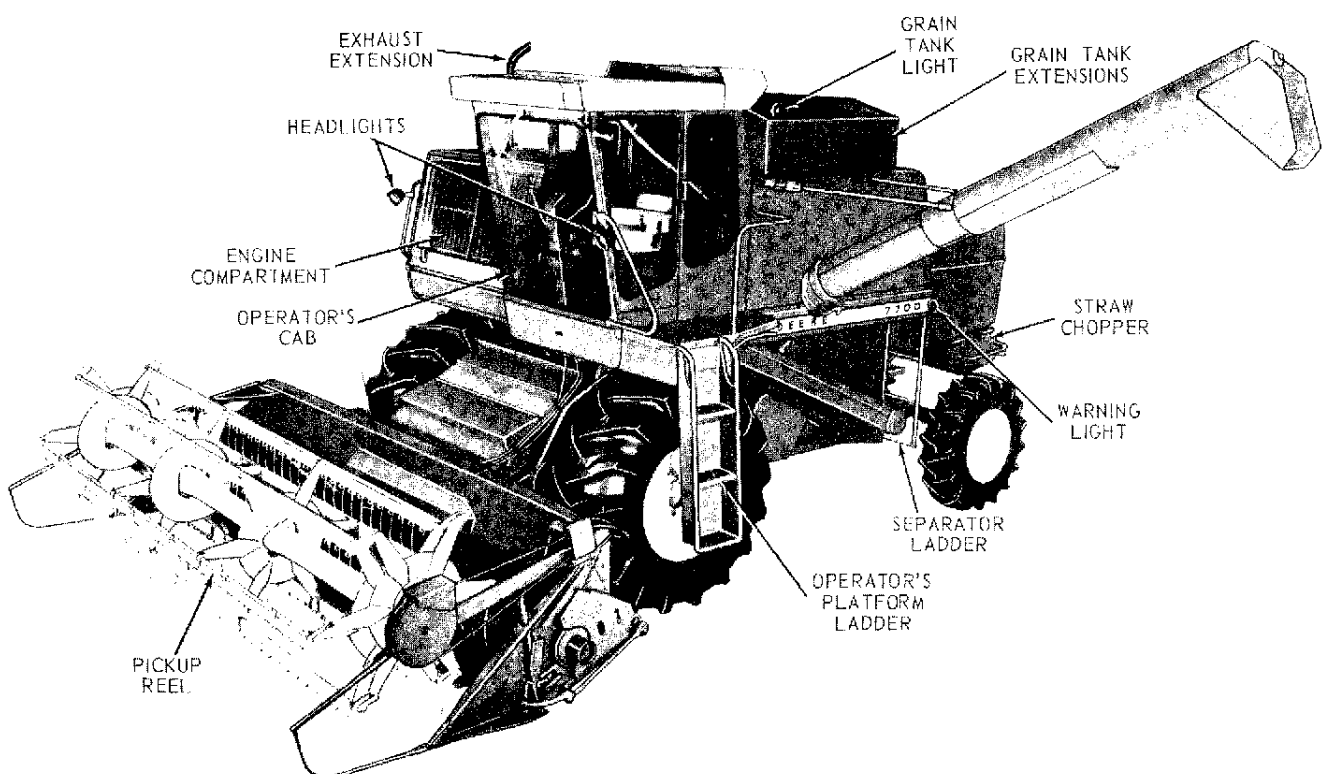

H21121

John Deere 7700 Combine

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>




RED—Combine movement controls (Throttle, Gearshift Lever, Selective Ground Speed Control)


YELLOW—Auxiliary Power Controls (Separator Control Lever, Cylinder Speed Ratchet Control, Platform or Corn Head Electromagnetic Clutch Switch)

BLACK—Miscellaneous Function Controls (Platform or Corn Head Height Control, Hydraulic Lift Reel Control, etc.)

ENGINE - AIR INTAKE


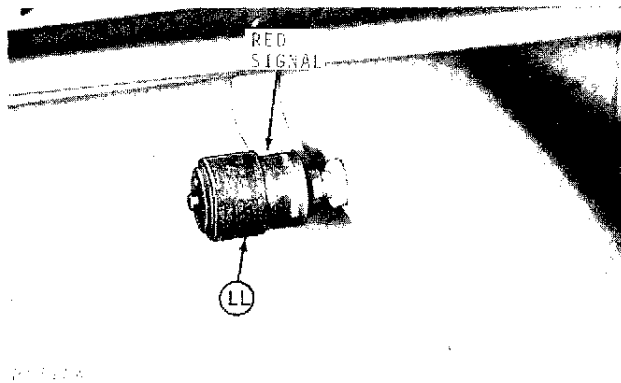


FEEDER HOUSE

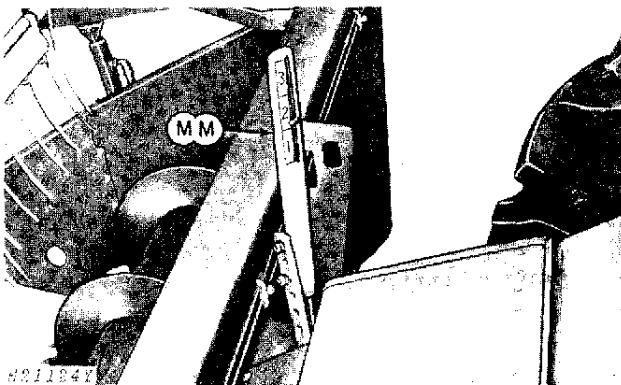

	Page
A - Truck Signal Horns	26
B - Coolant Temperature Warning Horn or Straw Walker Warning Horn (Attachments)	7, 26
C - Headlight	26
D - Hydraulic Lift Reel Control (Optional) or Variable Speed Feeder House Control (Optional)	13, 143
E - Steering Wheel	23
F - Clutch Pedal (Belt Drive Combine)	24
G - Pivoting Ladder	10
H - Grain Tank Unloading Auger Lever	21
I - Unloading Auger Hydraulic Swing Control	21
J - Operator's Seat Control	9
K - Parking Brake Lever	23
L - Steering Column Control	10
M - Gearshift Lever	22
N - Concave Opening Control Wheel	16
O - Throttle	6

SEPARATOR

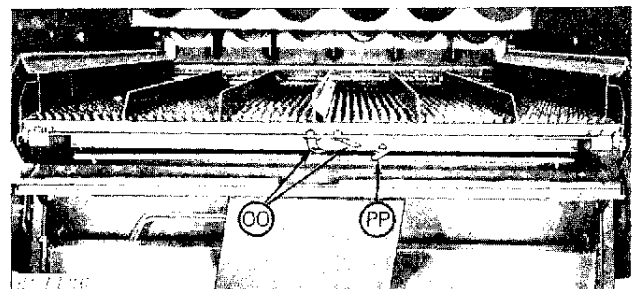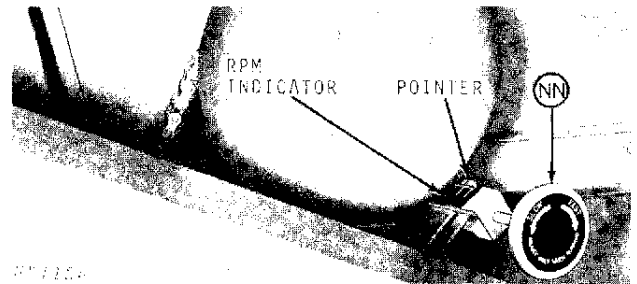

Page

P - Ground Speed Indicator (Regular on 7700; Attachment on 6600) (Belt Drive Combine)	22
Q - Brake Pedals	24
R - Selective Ground Speed Control	22
S - Platform or Corn Head Height Control	12
T - Hydrostatic Drive Speed Range Control (Optional)	23
U - Separator Control Lever	15
V - Choke (Gasoline Engine only)	6
W - Fuel Gauge	7
X - Engine Tach-Hour Meter	7
Y - Platform or Corn Head Electromagnetic Clutch Switch (Optional)	12
Z - Parking Brake Indicator Light	24
AA - Alternator Indicator Light	6
BB - Light Switch	26
CC - Horn Button	26
DD - Key Switch	6
EE - Cigarette Lighter	26
FF - Ash Tray	26
GG - Cylinder Speed Control Ratchet	15
HH - Hydrostatic Drive Reel or Hydrostatic Drive Belt Pickup Control (Optional)	143
II - Cylinder Speed Tachometer	15
JJ - Coolant Temperature Gauge	7
KK - Engine Oil Pressure Gauge	7
LL - Air Restriction Indicator (Regular on 7700; Attachment on 6600)	7
MM - Platform Float Spring Indicator (Attachment)	142
NN - Fan Speed Control Wheel	19
OO - Chaffer Opening Control	19
PP - Sieve Opening Control	19



Operation

COMBINE AND ENGINE BREAK-IN

Follow the lubrication instructions closely. See pages 37 to 49.

Check coolant level in radiator and add coolant if necessary. Do not use water containing alkali. If combine is being operated in temperatures below 32°F., refer to "Cold Weather Operation," page 5.

To promote good ring seating and to prevent cylinder wall glazing, put the engine to work as soon as possible. Do not overload.

AFTER 1 HOUR

Check torque on drive wheel bolts. Tighten bolts to 300 ft-lbs torque.

AFTER 5 HOURS

Check all V-belts for initial stretch. Tighten if necessary. Continue to check V-belts every few hours for the first 50 hours.

AFTER 20 HOURS

Drain oil from main hydraulic unit reservoir. Replace the oil filter and fill the reservoir with correct oil as specified on page 36. Thereafter, drain and replace oil and oil filter element every 500 hours of operation.

AFTER 100 HOURS

During break-in, if oil consumption warrants, add oil as specified on page 36.

After the first 100 hours of operation, drain oil from crankcase, replace oil filter, and fill crankcase to proper level with John Deere Torq-Gard engine oil or its equivalent as specified in lubricants chart on page 36.

Thereafter change the oil and filter every 100 hours of operation or every season, whichever occurs first.

COLD WEATHER OPERATION

FUEL SYSTEM

Use winter-grade fuel. Fill the fuel tank at the end of the day's run to prevent moisture from condensing in the fuel tank.

COOLING SYSTEM

Drain, flush, and fill cooling system with a recognized brand of radiator sealer and antifreeze solution. Use a permanent-type (ethylene glycol) antifreeze solution containing rust inhibitors and without stop-leak additive. This type of antifreeze is resistant to evaporation when heated.

Combine	Quarts of Ethylene Glycol Required at Lowest Expected Temperature					
	+20°F	+10°F	0°F	-10°F	-20°F	-34°F
6600	4	7	9	11	12-1/4	14
7700	5-1/4	8	10-1/2	12-1/2	14	16

After filling, check system for leaks.

BATTERIES

When the temperature drops below freezing, be sure batteries are fully charged. A badly discharged battery freezes more quickly than one that is well charged. For example, a battery with a specific gravity reading of 1.175 (discharged) will freeze at 4°F., and a battery with specific gravity reading 1.300 (fully charged) will not freeze until the temperature reaches -65°F.

In freezing weather, do not add water to the batteries unless engine is going to be run. Water will freeze as it will not mix with the electrolyte until the alternator passes a charging current through the batteries.

IMPORTANT: If booster batteries are required, see instructions on page 99.

COLD WEATHER STARTING AID

Diesel engines are equipped with an ether starting fluid adapter which injects atomized fluid into the engine air intake system. Normally ether is used for starting at temperatures below 32°F. Pressurized cans of starting fluid are available from your John Deere dealer.

To use the starting fluid, remove the safety cap and plastic spray button from the can. Remove the cap from the adapter and position the can under the adapter.



IMPORTANT: To avoid damage, turn engine with starter one or two revolutions before injecting starting fluid. Inject starting fluid only while the engine is turning.

To inject starting fluid, push up on the can.

Relax pressure on the can between "shots" of starting fluid. Stop injecting fluid after the engine starts. If the engine begins to die during the first few minutes of operation, inject another "shot" of fluid. When the engine is operating satisfactorily, remove the can from the adapter and replace the safety cap on the can.

Install the cap on the adapter when it is not in use to prevent dust from being drawn into the engine.

CAUTION: Ether starting fluid is highly flammable. Store starting fluid cans where they will not be subject to extreme cold or warm temperatures. For best results, store fluid at room temperature.

HOT WEATHER OPERATION

Protect the combine engine cooling system against corrosive action by using Summer Engine Coolant Conditioner.

The Summer Engine Coolant Conditioner is available under Part No. T19566, and may be purchased from your John Deere dealer.

To install the Summer Engine Coolant Conditioner, perform the following:

Drain and flush cooling system and add two 32-oz. cans of Summer Engine Coolant Conditioner to the cooling system following directions on the container.

IMPORTANT: Summer Engine Coolant Conditioner is **NOT AN ANTIFREEZE** or a cooling system sealer. Drain system and fill with recommended antifreeze solution as required for winter protection. When antifreeze solution is in system, it should not be necessary to use the Conditioner; however, should severely corrosive water conditions be present, the Conditioner is compatible with antifreeze solutions.

OPERATING THE ENGINE

ENGINE INSTRUMENTS AND CONTROLS

Choke (Gasoline Engine Only)



X 2228

Pull choke control all the way out when starting engine. After engine is started, and for normal operation, push choke control all the way in.

Throttle

Move throttle one quarter forward when starting engine. Move throttle all the way forward for normal operation; move throttle all the way rearward for slow idle.

Key Switch

Turn the key to "ON" to check the operation of the alternator indicator light and the transmission oil pressure indicator light. They should glow red.


Turn the key to "START" and hold until engine starts.

Release the key when the engine starts. The alternator indicator light should go out. The transmission oil pressure light will go out when the engine is at full throttle and when the clutch is engaged or when the hydrostatic speed range lever is pushed forward to the mid-point of its range.

If the lights do not go out after 10 seconds, shut off engine at once and determine the cause.

If the engine fails to start, refer to the trouble shooting charts on page 132.

Alternator Indicator Light

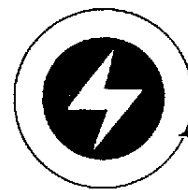


GLOWS RED IF
ALTERNATOR IS
NOT CHARGING

X 2229

This light glows red when the alternator is not charging. If the light goes on while the engine is running, stop engine and determine cause.

Check the operation of this light by turning the key to the "ON" position.

Coolant Temperature Gauge

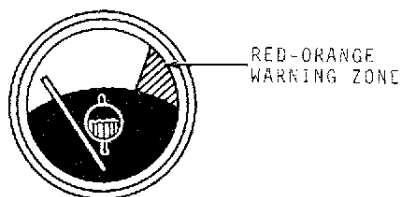

X 2231

This gauge indicates the coolant temperature in the cooling system—not the quantity. The white zone on the dial indicates normal operating temperature; the red-orange zone indicates above normal operating temperature.

If the pointer on the gauge goes into the red-orange zone, stop the engine and determine the cause.

Coolant Temperature Warning Horn

The low note horn sounds when the coolant temperature gauge registers "HOT." When the straw walker sensing unit (attachment) is activated, the horn will also sound.


If the horn sounds, stop engine and check the straw walkers for plugging and the engine for overheating.

If the straw walkers are not plugged, determine the cause of engine overheating.

Air Restriction Indicator

The red signal in the restriction indicator is locked in view whenever the air cleaner element is dirty and needs servicing. Check the indicator every 10 hours and service the element (page 121) if necessary.


Engine Oil Pressure Gauge

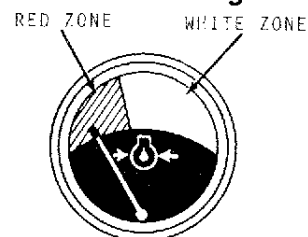

X 2232

This gauge indicates the pressure of the engine lubricating oil—not the amount of oil in the crankcase. Oil pressure will vary slightly with wear, but with recommended oil, it should read NORMAL at full governed speed (indicated by white zone on the dial). If oil pressure drops (indicated by red zone on the dial), stop immediately and determine the cause.

Fuel Gauge

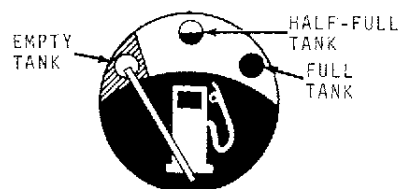

X 2233

The red-orange zone indicates that the tank is empty. A half-full mark and a full mark indicates the fuel level in the tank.

Engine Tach-Hour Meter

The tach-hour meter shows the engine speed in hundreds of rpm and accumulated engine service in hours and tenths of hours (based on an average engine operating speed of 2500 rpm). Use this hour meter to determine when lubrication and periodic services are needed.

STARTING THE GASOLINE ENGINE

1. If starting in cold weather, see "Cold Weather Operation," page 5.

2. Disengage platform or corn head electromagnetic clutch switch, separator control lever, and grain tank unloading auger lever.

3. Place gearshift lever in neutral.

4. Depress clutch pedal fully or place the hydrostatic speed range lever in neutral.

5. Move throttle lever one-quarter open.

6. Pull the choke control out.

7. Turn key to "ON." Check the operation of the alternator indicator light. It should glow red.

8. Turn key to "START."

After engine starts, release key and push the choke control in.

IMPORTANT: When starting the engine, never hold the key in start position for more than 30 seconds at a time. If the engine does not start within 30 seconds, allow at least 2 minutes for proper cooling of the starter. Be sure to pause a few seconds after a false start to make certain that the starter has stopped completely before another start is attempted.

If engine fails to start, see TROUBLE SHOOTING, page 132.

9. Make certain the oil pressure gauge registers pressure and the alternator indicator light goes off. If not, stop engine and determine the cause.

10. Warm the engine and transmission for 5 minutes at fast idle—no load.

IMPORTANT: Do NOT tow hydrostatic drive combines to start engine.

STOPPING THE GASOLINE ENGINE

Set the throttle at medium idle speed and allow the engine to run at this speed for a few minutes before stopping.

Turn key to "OFF."

STARTING THE DIESEL ENGINE

1. If the engine has not been operated for a long period of time, or if the fuel tank has run dry, bleed the entire fuel system to remove air bubbles; see page 107.

IMPORTANT: Never let the fuel tank run dry.

2. If starting in cold weather, see "Cold Weather Operation," page 5.

3. Disengage platform or corn head electromagnetic clutch switch, separator control lever, and grain tank unloading auger lever.

4. Place gearshift lever in neutral.

5. Depress clutch pedal fully or place the hydrostatic speed range lever in neutral.

6. Move throttle lever one-quarter open.

7. Turn key to "ON." Check the operation of the alternator indicator light. It should glow red.

8. Turn key to "START."

After engine starts, release key.

IMPORTANT: When starting the engine, never hold the key in start position for more than 30 seconds at a time. If the engine does not start within 30 seconds, allow at least 2 minutes for proper cooling of the starter. Be sure to pause a few seconds after a false start to make certain that the starter has stopped completely before another start is attempted.

If engine fails to start, see TROUBLE SHOOTING, page 132.

9. Make certain the oil pressure gauge registers pressure and the alternator indicator light goes off. If not, stop engine and determine the cause.

10. Warm the engine and transmission for 5 minutes at fast idle—no load.

IMPORTANT: Do NOT tow hydrostatic drive combines to start engine.


STOPPING THE DIESEL ENGINE

Set the throttle at medium idle speed and allow the engine to run at this speed until the temperature gauge drops well into the white range on dial. Move the throttle to the rear and turn key to "OFF."

IMPORTANT: Do not attempt to stop engine by turning off fuel supply at tank. Doing so will cause

OPERATOR'S PLATFORM COMPONENTS

OPERATOR'S SEAT

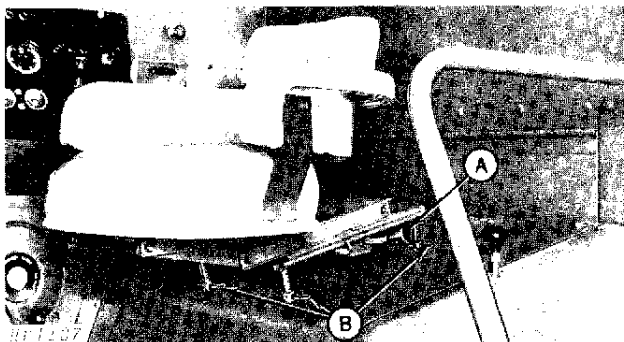


Seat in Sitting Position

The operator's seat moves forward and rearward or up and down to accommodate individual height and allow greater accessibility to all controls. If the operator wishes to stand, the seat can be positioned out of the way to allow ample leg space.

Use only warm water and mild soap to clean the seat cushions. NEVER USE SOLVENTS.

Positioning the Seat Forward or Rearward

While sitting in the seat, push lever "A" forward as far as possible and by using your weight, adjust seat to desired position and then release lever "A."

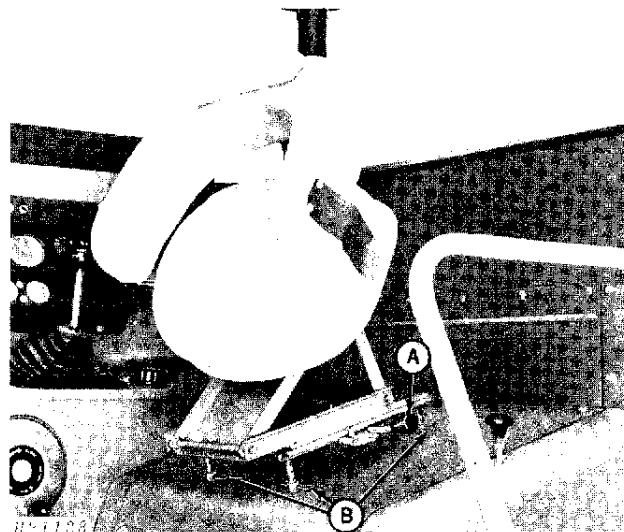

Seat in Standing Position

Positioning the Seat Up or Down

Remove four spring locking pins "B." Raise or lower the seat to the desired height. Reinsert spring locking pins "B."

Positioning the Seat for Standing


To move the seat up and back, stand up and apply pressure to the front of the seat with the back of your legs. The seat will move to the up and back position to allow standing room.

To return the seat to the sitting position, move the seat forward by pulling on the front of the seat with your hand.

STEERING COLUMN

The steering column is adjustable to one of four positions for individual arm lengths. This allows better visibility and greater accessibility to the steering wheel and controls on the steering column.

Steering Column Control

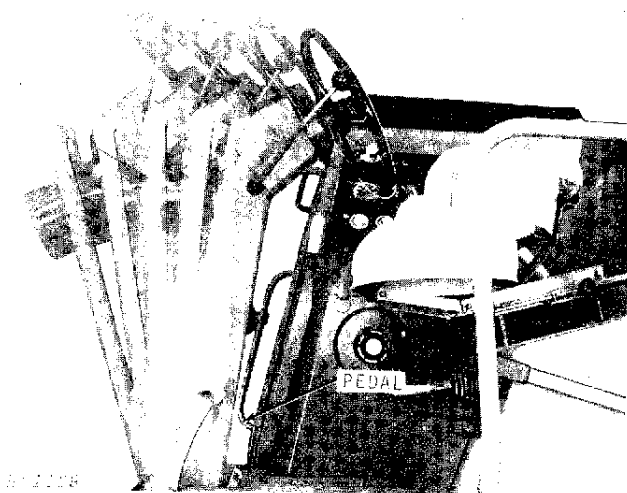


To adjust steering column, push pedal down, position column to desired setting, and release pedal.




PIVOTING LADDER

Move the pivoting ladder up out of the way of uncut grain to avoid grain loss by ladder impact.

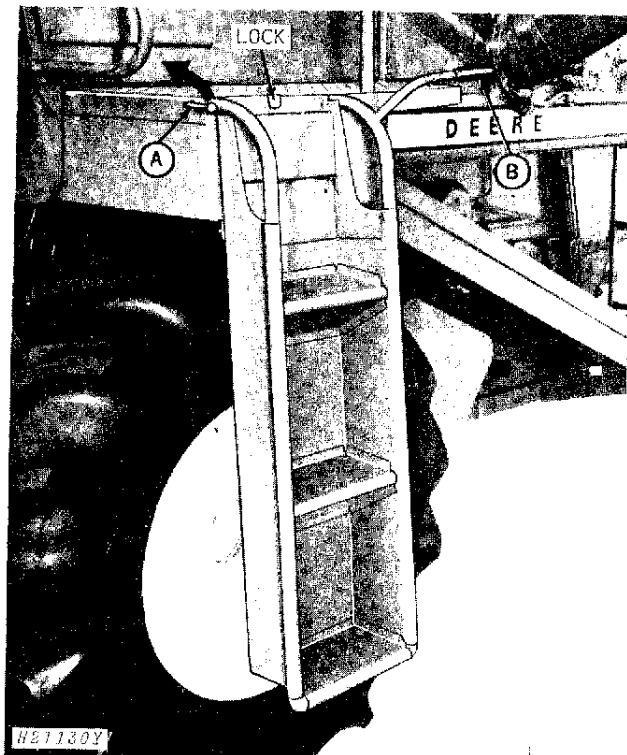

To move ladder, pull lever "A" up and to the right to release the lock.

Pull lever "B" forward until the ladder is parallel to the ground.

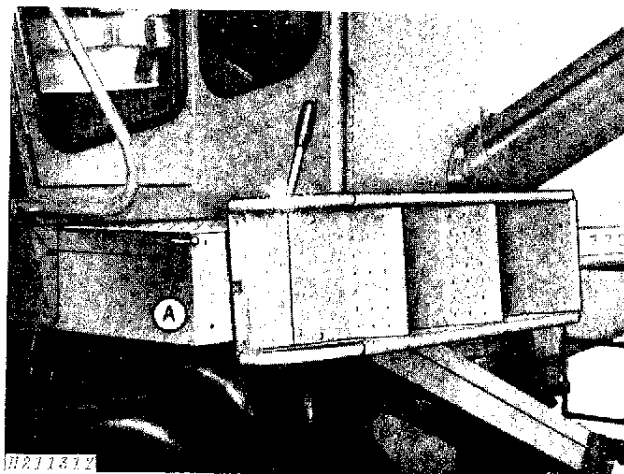


Push lever "A" to the left to lock ladder in place.

To lower the ladder, reverse above procedure.

TRANSPORTING

The combine can be transported by driving it under its own power, carrying it on a truck, or by towing it. If combine is to be towed, place the gearshift lever in its "TOW" position and tow up to a maximum speed of 20 mph.

CAUTION: If towed at higher speeds, remove the drive shafts and lock the brake drums in place by applying the parking brake.

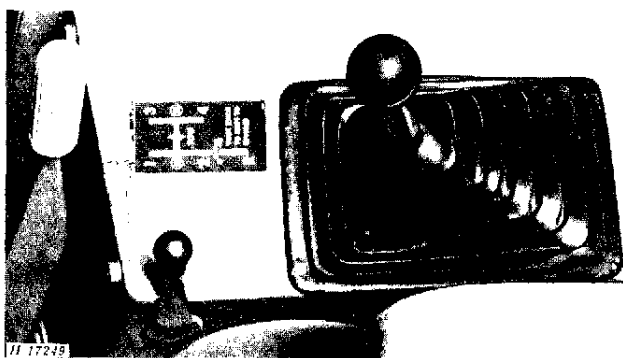

Gearshift in Tow Position

Couple the brake pedals together with the brake lock (page 24).

Reduce the width of the combine by folding the unloading auger back along the separator and removing the platform or corn head. Over-all dimensions are given on page 154.

When unloading auger is folded back along the separator the unloading auger scoop must be raised so as not to block the left-hand warning light from view of vehicles approaching from the rear.

If the platform or corn head and feeder house are removed, the hydraulic cylinders must be wired or supported by chains no closer to separator support channel than 14 inches. Damage may result to hoses if carried too close.

If the platform or corn head is left on, raise it to a position allowing good visibility.

Reduce the spread of noxious weed seeds by thoroughly cleaning the combine before leaving one field and going to the next.

Sweep trash and straw from the outside of combine. Open doors at bottom of elevators, remove grain tank drain hole cover, and run combine until all straw, trash, and grain are removed from inside. Shut off combine engine. Clean out shoe grain supply augers (page 72).


The combine is equipped with a slow moving vehicle emblem on the rear hood, lights, and grain tank reflectors for transporting protection. Keep the emblem, reflectors, and lights clean.

CAUTION: When driving the combine on a road or highway at night or during the day, use accessory lights and devices provided for adequate warning to the operators of other vehicles. In this regard, check local governmental regulations.

FIELD AND CROP OPERATING ADJUSTMENTS

This section explains adjustments which are made due to crop or field conditions. Adjustments which are made to compensate for wear or misalignment are explained in the SERVICE section, page 50. For illustrations of controls not shown in this section, see the CONTROLS AND INSTRUMENTS section, page 2.

PLATFORM OR CORN HEAD

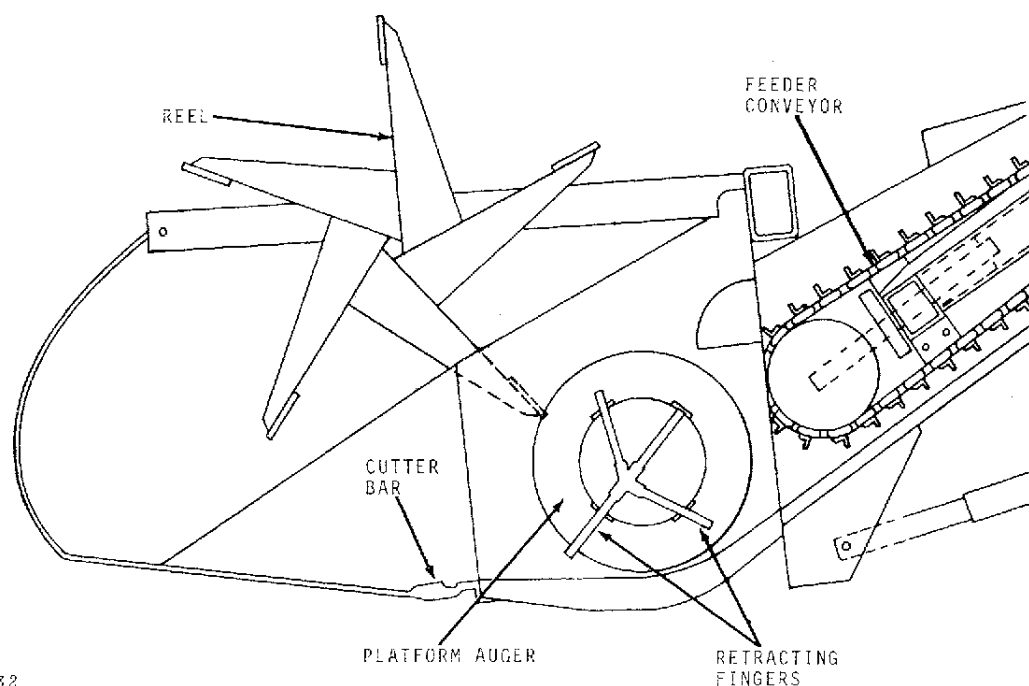

#21132

The cutting platform illustrated above is only one of the headers which can be attached to the front of the feeder house. For complete information on these headers (cutting platform, draper platform, pickup platform, belt pickup, and corn head) see the operator's manuals supplied with them.

The platform or corn head receives the crop and moves it to the front of the feeder house by means of an auger.

Height of the platform or corn head can be changed by moving the height control lever located on the steering column. As a safety measure, platform or corn head height cannot be changed unless the engine is running.


On combines so equipped, an electromagnetic clutch permits stopping the platform or corn head and feeder house while the separator continues to run. It is engaged or disengaged by operating a switch on the control panel.

While servicing the platform or corn head, always use the hydraulic cylinder safety stop (page 51).

Platform or Corn Head Electromagnetic Clutch Switch

Push switch in to disengage clutch. Push switch in again to engage clutch.

Platform or Corn Head Height Control Lever

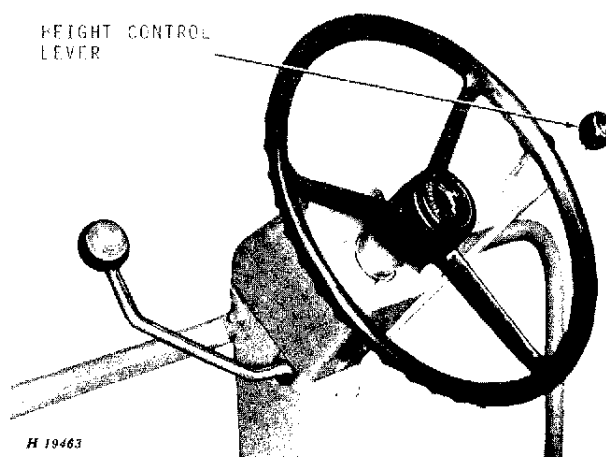


H 19463

To lower the platform or corn head, move the height control lever forward.

To raise the platform or corn head, move the lever rearward.

Regulate the speed of lowering by turning a cap screw on the control valve (page 94).

FEEDER HOUSE

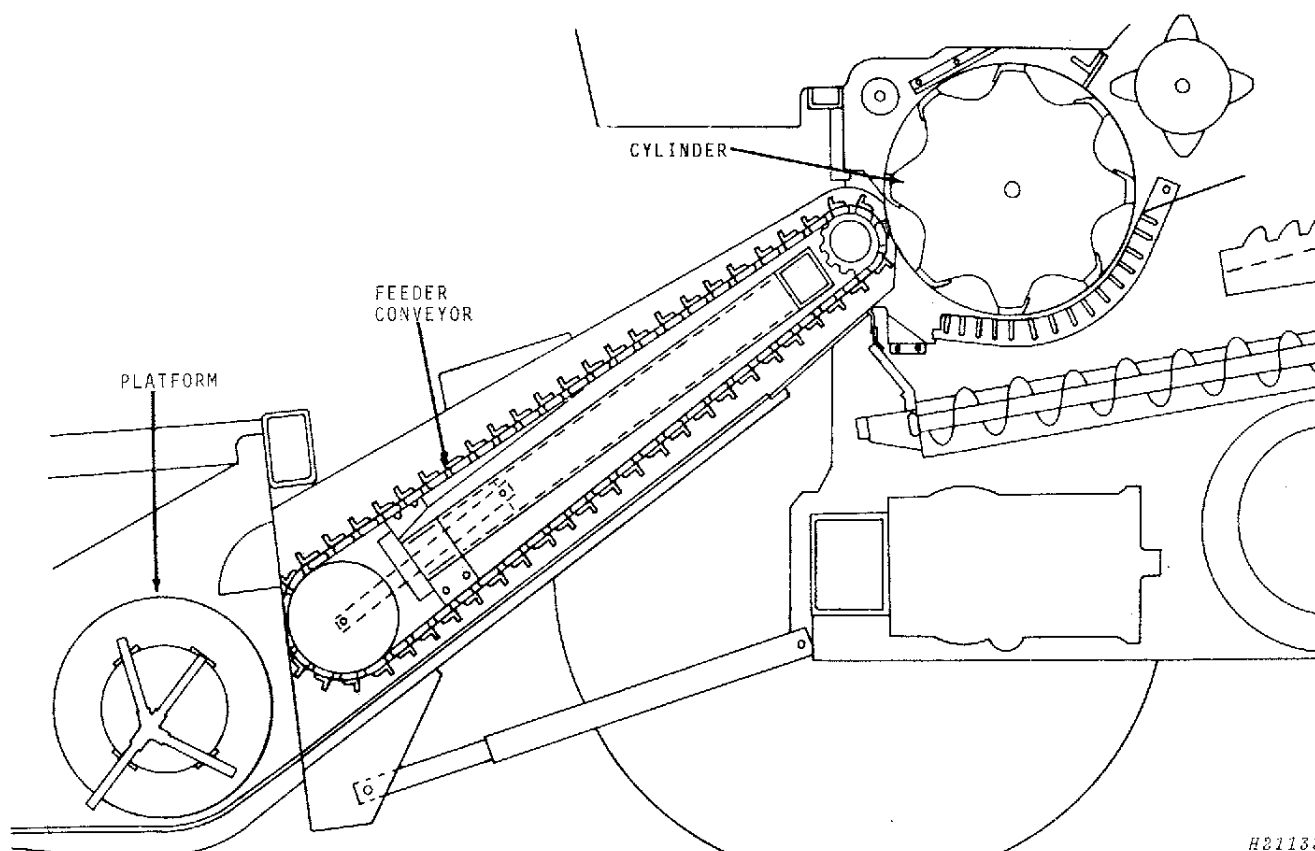

The feeder house receives the grain from the platform or corn head and force feeds it to the threshing cylinder.

The speed of the feeder house determines the speed of the platform or corn head.

When combining grain, the feeder house speeds must be as specified (page 29) to maintain correct platform speeds.

IMPORTANT: When attaching a platform to the corn feeder house, adjust the feeder house speeds as shown on page 54. Never alter speeds from these specifications when combining grain.

When combining corn, change the feeder house speeds by moving the variable speed feeder house control lever. See the corn head operator's manual for correct speeds.

Conveyor Chain


Adjust the chain so a 5-1/8-inch (6600) or 5-3/8-inch (7700) dimension exists between the top of the feeder conveyor chain and the top of the feeder house at midpoint of front door (page 56). At this dimension, the slats should just begin to rise off the rear of the feeder house bottom at the row of counter-sunk bolts. Too much slack allows the chain links to jump the sprocket teeth. Do not over-tighten the chain.

Conveyor Chain "Float"

Floating action of the conveyor accommodates varying volumes of material. Adjust the conveyor "float" so a 1/8-inch space exists between a slat and the feeder house bottom directly under the feeder drum (page 56).

Variable Speed Feeder House Control Lever (Optional)


HYDRAULIC LIFT CONTROL LEVER
OR VARIABLE SPEED FEEDER
HOUSE CONTROL LEVER

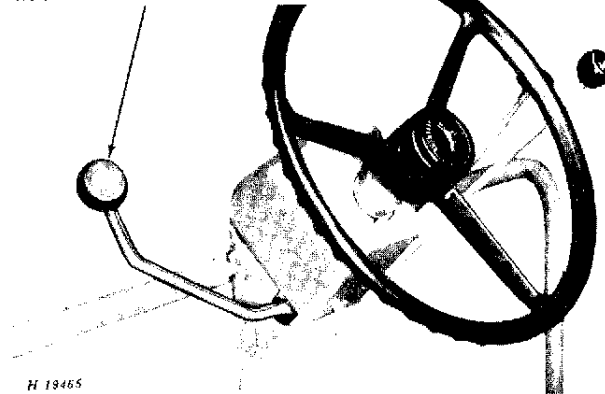

To increase the speed, push the variable speed feeder house lever forward.

To decrease the speed, pull the lever rearward.

SEPARATOR

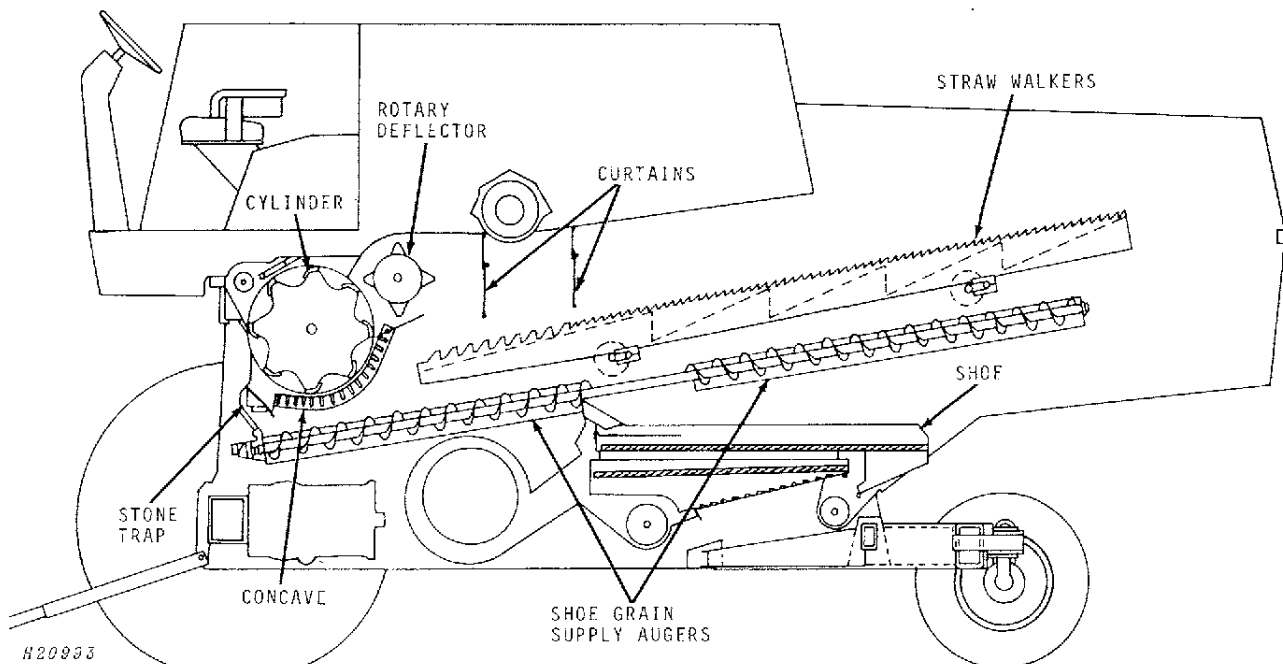

The separator receives the force-fed material from the feeder conveyor and separates up to 90 percent of the grain from the straw at the cylinder and concave. This free grain falls immediately through the concave grate into the shoe grain supply augers.

The remaining straw and grain pass under the rotary deflector and curtains which regulate the flow of straw onto the straw walkers. The walkers lift and tumble the straw permitting the remaining grain to fall through the walkers into the shoe grain supply augers. The straw is carried over the walkers and out of the combine.

The shoe grain supply augers are positioned under the cylinder and concave and extend to the rear of the straw walkers. The front half of each auger conveys grain from the cylinder and concave rearward to the front of the cleaning shoe. Flights on the rear half of each auger are reversed to convey grain that falls through the straw walkers forward to the front of the cleaning shoe.

Regardless of the crop harvested, good separation is directly dependent on the speed of the separator. The separator speed is determined by the speed of the primary countershaft. Keep primary countershaft speed at 1500-1510 rpm with engine at full throttle-no load (page 70).

Reducing the primary countershaft speed reduces the speed of the platform or corn head, straw walkers, cleaning shoe, elevators, and augers. This sluggishness can result in clogging and grain loss.


Increasing the primary countershaft speed causes material to pass through the combine too rapidly, causing grain loss and strain and wear on all moving parts.

The separator is engaged or disengaged by moving the separator control lever on the operator's platform.



CAUTION: Do not engage separator until everyone is standing away from moving parts or belts.

Separator Control Lever

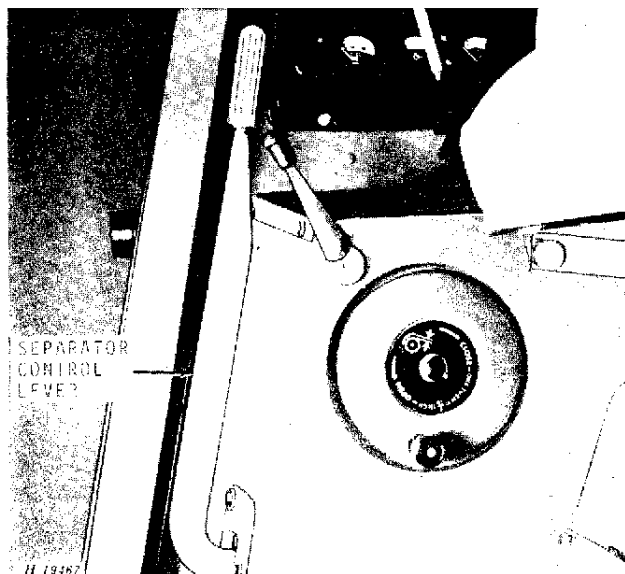

To engage the separator, push lever forward.

To disengage the separator, pull lever rearward.

Cylinder (Rasp-Bar and Spike-Tooth)


Good threshing depends on proper relationship between the cylinder speed and the cylinder-concave spacing. A large seed requires low speed and a wide spacing to prevent cracking; a small seed requires high speed and a close spacing so the seed will be rubbed out.

Between these two extremes are the many crops a combine is expected to handle. Carefully select the best relationship for each crop (page 32). Neglect or carelessness can mean heavy crop losses.

These combines are equipped with a variable speed cylinder with a speed range from 407 to 1228 rpm. A special drive sheave may be purchased from your John Deere dealer to provide a slower speed range (280 to 845 rpm) for combining large seed (page 65).

Change cylinder speed by moving the cylinder speed control ratchet shown above at right. A tachometer in the instrument panel registers the cylinder rpm's by hundreds.

Cylinder Speed Control Ratchet

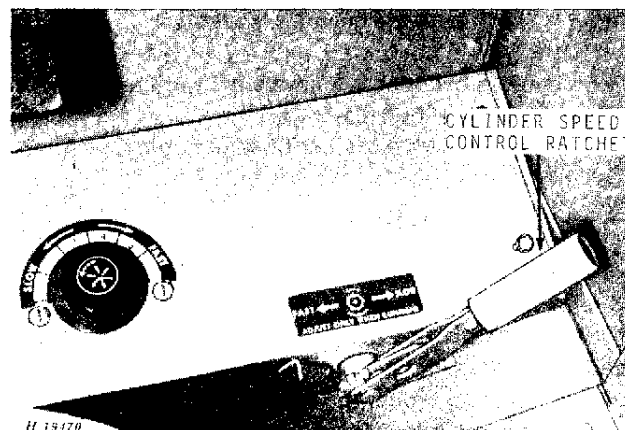

Before increasing or decreasing cylinder speed, place ratchet pawl in the proper position.

To increase the cylinder speed, move the ratchet toward "FAST."

To decrease the cylinder speed, move the ratchet toward "SLOW."


IMPORTANT: Adjust the cylinder speed only when the separator is running.

See Suggested Settings Chart, page 32.

Cylinder Speed Tachometer

The tachometer registers cylinder rpm's by hundreds. It aids in maintaining the correct cylinder speed for a particular crop.

Choked Cylinder

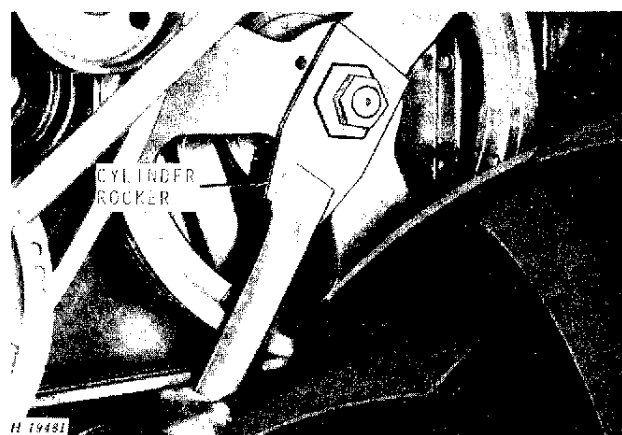

If the cylinder becomes choked, open concave and run separator to clean cylinder.

If cylinder remains choked, shut off engine, leave concave fully open, and remove all straw and other material from front of concave through the cylinder



Suggest:

If the above button click is invalid.

Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

front door. Place the cylinder rocker on the nut on the right-hand end of the cylinder shaft. Rock the cylinder back and forth until the cylinder is clear.

IMPORTANT: Continued running of the separator with a choked cylinder will cause damage to sheaves and V-belts due to belt slippage.

Be certain to adjust the concave to original position after the cylinder has been cleared.

Concave (Rasp-Bar)

The concave may be adjusted from almost no spacing to a front spacing of 1-1/2 inches measured at the fourth grate bar. It is designed so the rear spacing automatically increases or decreases to half the front spacing. Thus, the rear of the concave never needs adjusting unless the concave is replaced or the rear spacing is disturbed (page 67). Adjust the concave with the concave opening control wheel located on the console.

Concave (Spike-Tooth)

The combine is shipped from the factory with two grate concaves and one tooth concave installed to the front.

An extra tooth concave is provided, to be used only if raising the concaves and speeding up the cylinder have failed to achieve the desired results. It is usually better to use one tooth concave set fairly high than two tooth concaves set low. The use of two tooth concaves requires increased power, is likely to crack grain, and will break up the straw excessively, which could overload the shoe. However, when operating in a light crop, damp grain, or varieties that are difficult to thresh, it may be advisable to install the extra tooth concave.


The tooth concaves are installed to the front with the grate concaves to the rear.

There should be equal spacing between the cylinder and concave teeth on each side with the concave in high position and the teeth straight and properly adjusted (page 68).

If concave teeth are set closer to the cylinder teeth on one side in the front row, than on the opposite side in the second row, the opening will be too large on one side, thus permitting grain heads to pass through unthreshed. The opening on the other side will be too small, resulting in grain being cracked and straw being broken up too much. Level concave (page 69).

The spike-tooth concave is designed so the rear spacing increases or decreases proportionally with the front spacing. Thus, the rear of the concave never needs adjusting unless the concave is replaced or the rear spacing is disturbed (page 69). Adjust the front of the concave with the concave opening control wheel located on the console. See illustration above at right.

Concave Opening Control Wheel (Rasp-Bar and Spike-Tooth)

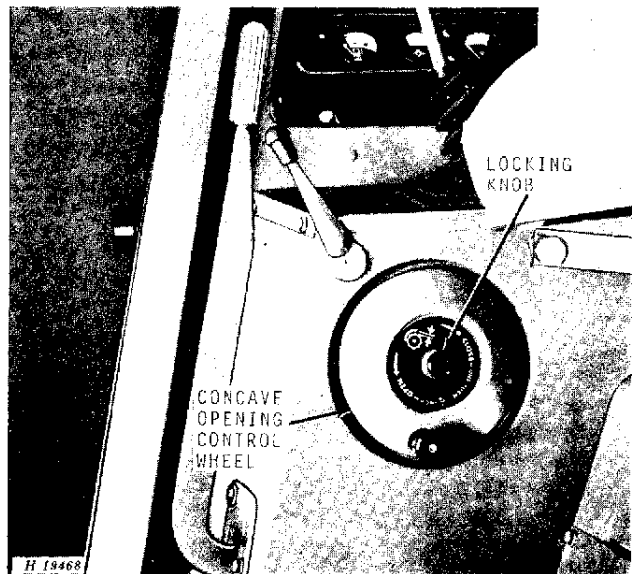

Loosen locking knob.

To open the concave, turn the wheel toward "OPEN."

To close the concave, turn the wheel toward "CLOSE."

Tighten locking knob.



The timed sector located on the worm gear to the right of the cylinder is calibrated to indicate the setting at the front of the rasp-bar concave.

See Suggested Settings Chart, page 32.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>