

8560
(P.I.N. 003101-)

8760
(P.I.N. 005101-)

8960
(P.I.N. 004101-)

Tractors

John Deere Waterloo Works
OMAR111204 Issue A2
(Mark old manual OMAR110222G1 for
machines up to Serial No. above.)
North American Version
LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT AND LEFT sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



RW19971
-JN-10OCT91

RX,IFC,1114WD -19-02OCT91

Contents

	Page		Page
Safety	05-1	12-Speed Syncro and 24-Speed POWRSYNC® Transmission	45-2
Safety Signs	10-1	Power Shift Transmission	45-6
Controls and Instruments		Three-Point Hitch	
Control Location	15-1	Component Identification	50-1
Instrument Identification	15-3	Hitch Control Lever	50-1
Gauges and Indicators Description	15-3	Sway Blocks	50-8
Tachometer	15-7	Attaching Implement Hitch	50-8
Performance Monitor	15-10	Adjusting Implement Level	50-10
Radar Sensor	15-16	Removing Implement	50-11
Lighting and Signals		Remote Hydraulic Cylinders	
Switch	20-1	Hose Tips	55-1
Lamps and Signals	20-1	Identifying SCV	55-2
Electrical Outlets	20-4	Connecting Cylinder Hoses	55-3
Load Center	20-6	Operating SCV	55-5
Operator's Station		Setting Remote Cylinder Stroke	55-7
SOUND-GARD® Body Temperature Controls	25-1	Disconnecting Cylinder Hoses	55-8
Window Wipers	25-3	Drawbar and PTO	
Windows	25-3	Drawbar Adjustments	60-1
Radio	25-4	Power Take-Off (PTO)	60-3
Seat	25-7	Ballast	
Steering Wheel	25-10	Importance of Ballast	65-1
Engine Break-in	30-1	Measuring Wheel Slip	65-2
Prestarting Checks	35-1	Determining Ballast	65-5
Operating the Engine		Wheels, Tires, and Treads	
Start-up Procedures	40-1	Wheel Tightening	70-1
Cold Weather Starting	40-4	Tread Width Limitations	70-3
Starting Aids	40-5	Adjusting Tread Width (Steel)	70-7
Warm-up and Operation	40-7	Adjusting Tread Width (Cast)	70-9
Stopping the Engine	40-10	Steering Stops	70-11
Operating the Tractor		Inflation Pressure	70-12
Brakes	45-1	Transporting	
Differential Lock	45-1	Driving	75-1
		Carrier	75-3
		Towing	75-4

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR111204 A2-19-04DEC91

COPYRIGHT© 1992
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

Page	Page
Fuels, Lubricants, and Coolant	Electrical 140-21
Fuel 80-1	Fuses 140-26
Engine Oil 80-4	Lighting 140-27
Coolant 80-5	Brakes 140-32
Transmission/Hydraulic Oil 80-7	Heating 140-35
Lubricants 80-8	Air Conditioner 140-36
Lubricant Storage 80-9	Rollover Protective Structure 140-39
Lubrication and Maintenance/10 Hour 85-1	Storage
Lubrication and Maintenance/After 100 Hours 90-1	Placing Tractor in Storage 145-1
Lubrication and Maintenance/250 Hours 95-1	Removing Tractor From Storage 145-3
Lubrication and Maintenance/500 Hours 100-1	Crime Prevention Tips 150-1
Lubrication and Maintenance/750 Hours 105-1	Specifications
Lubrication and Maintenance/1000 Hour 110-1	General 155-1
Lubrication and Maintenance/1500 Hour 115-1	Ground Speeds 155-4
Lubrication and Maintenance/Annually 120-1	Identification Numbers
Lubrication and Maintenance/2 Year 125-1	Identification Plates 160-1
Lubrication and Maintenance/As Required 130-1	Daily Maintenance 165-1
Troubleshooting	Lubrication and Maintenance Records 170-1
Engine 135-1	Index
Transmission 135-4	
Drive Line 135-4	
Hydraulic System 135-5	
Brakes 135-6	
Axles 135-6	
3-Point Hitch and Quick-Coupler 135-7	
Remote Hydraulic Cylinders 135-9	
Electrical 135-10	
SOUND-GARD® Body 135-12	
Service	
Access 140-1	
Air Cleaner 140-3	
Fuel System 140-6	
Cooling System 140-11	
Belts 140-17	

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

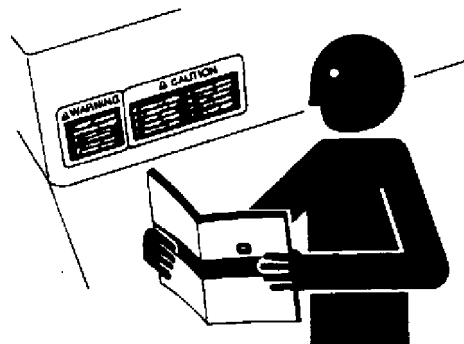

DX,READ -19-04JUN90

TS201 -UN-23AUG88



Be sure everyone is clear of tractor and attached equipment before starting engine or moving steering wheel. Tractor and equipment move, even with transmission in PARK or with park brake applied. Some steering movement often occurs as engine starts.

RX, CRUSH -19-14JUN91

USE HAND HOLDS AND STEPS

Clean off slippery mud, grease, and any crop residue that may have accumulated on the steps and operator's platform of your tractor. Remember that chains and tools carried on the platform may interfere with pedal operation or cause a slip or fall from the tractor. Remove them.



RX, SLIP -19-05MAY88


RW13092 -UN-07DEC88

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

 NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

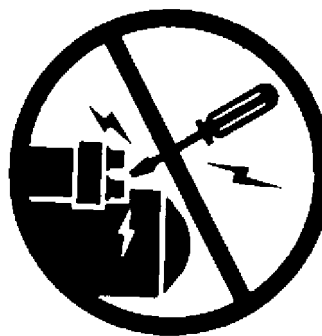

DX, BYPAS1 -19-04JUN90

TS177 -UN-11JAN89

USE SEAT BELT PROPERLY

Use a seat belt when you operate with a roll-over protective structure (ROPS) to minimize chance of injury from an accident such as an overturn.



RX, 4WDBELT -19-19FEB90

RW16064 -UN-05JAN89

 


OPERATE TRACTOR SAFELY

Features designed into your tractor make operation safer and let it perform a wide variety of jobs. Use your tractor only for specific jobs it was designed to perform: implement carrier, load mover, remote power source, or transport unit—not a recreational vehicle.

Careless use or misuse can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor upsets
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Getting entangled in PTO shafts
- Falls from tractors

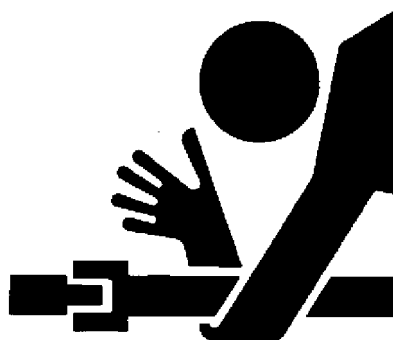

RX,HAZARD,S -19-01NOV90


TS276 -UN-23AUG88

SHIFT TO LOW GEAR ON HILLS

Shift to a low gear before descending a steep hill to improve your control of the tractor with little or no braking. Use engine braking to reduce speed before applying tractor brakes. Run-away tractors often tip over. Never coast downhill.

When driving on icy, wet, or graveled surfaces, reduce speed and be sure tractor is properly ballasted to avoid skidding and loss of steering control. For best control, engage front-wheel drive, if equipped, by using “ON” mode, rather than “AUTO” mode, for four-wheel braking.

 Additional ballast may be needed for transporting heavy integral implements. When implement is raised, drive slowly over rough ground, regardless of how much ballast is used.

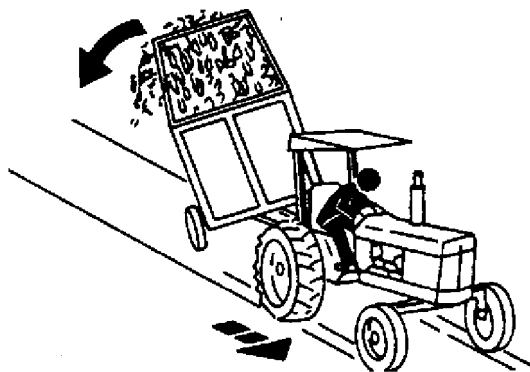

RX,DRIVE,SAFE -19-13NOV90

TS216 -UN-23AUG88



USE CAUTION ON HILLSIDES

Avoid holes, ditches, and obstructions which may cause the tractor to tip, especially on hillsides.

 
Never drive near the edge of a gully or steep embankment—it might cave in.

Be especially careful when using single wheels. Danger of overturn increases greatly with narrow tread, 80 in. (2032 mm), or less and high speed.

For hillside operation, always use front and rear dual wheels. Avoid sharp, uphill turns.

Keep transmission and hydraulic oil level at upper mark on sight-gauge and dipstick when operating on hillsides. Low oil level might result in loss of steering and clutch engagement. If this should happen, hold tractor with brakes, shift to PARK or apply park brake, stop engine, and add hydraulic oil to proper level.

Before operating on extremely steep slopes, fill hydraulic system beyond overfill mark on dipstick 1—2 gal (4—8 L). This is particularly important when using large hydraulic cylinders, due to the volume of oil used to extend them.

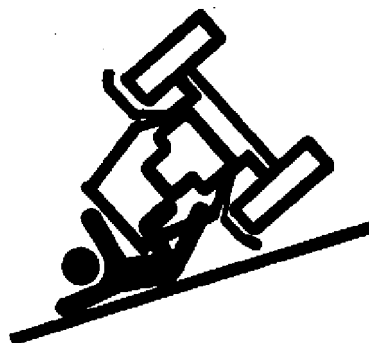

RW13093 -UN-07DEC88

RX,HILL,SIDE -19-14JUN91



 
STOPPING AND PARKING TRACTOR

Your ability to stop your tractor and park it safely is just as important as being able to get it underway safely.

Tractor upsets, collisions, runaway tractors, and people being crushed under machines and implements can happen when operators ignore safety.

To avoid these accidents, take some precautions:

- Signal before stopping, turning, or slowing down on highways
- Pull over to side of highway before stopping, if possible
- Slow down before braking
- Pump brakes when stopping on slippery surfaces like ice, snow, mud, or loose gravel
- Be careful when towing and stopping heavy loads
- Shift to park or apply parking brake
- Lower all equipment when leaving tractor
- Turn off all electrical switches and remove key

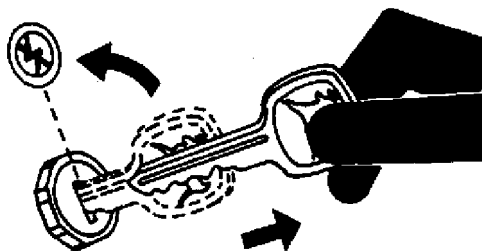


TS230 -UN-24MAY69

RX,STOP,PARK -19-14JUN91

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

 If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

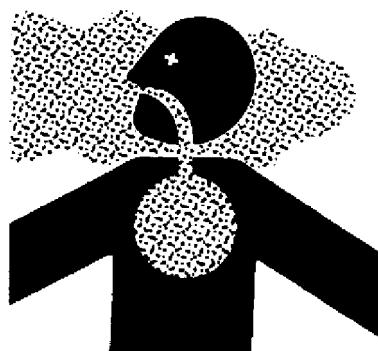

TS220 -UN-23AUG88

 
DX,AIR -19-04JUN90



KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

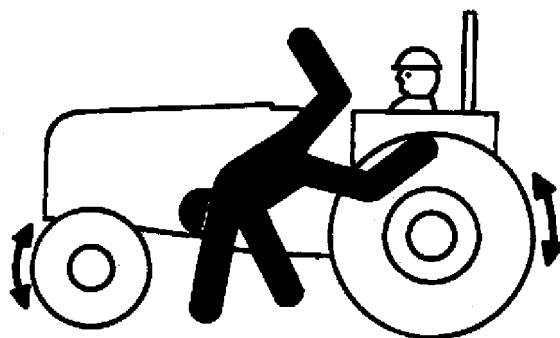


DX,RIDER -19-04JUN90

TS290
-UN-23AUG88

OPERATE RADAR UNIT SAFELY

 Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, DO NOT look directly into face of sensor while in operation, to avoid any possible eye damage.

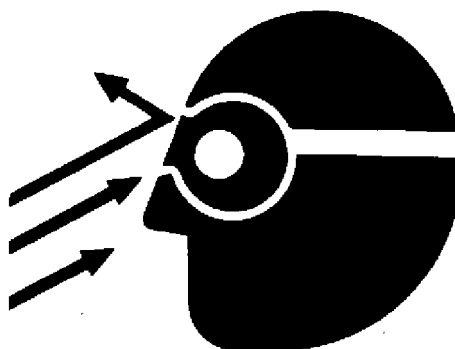

RX,SAFTY,RADAR -19-26NOV88

TS266
-UN-23AUG88

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-04JUN90


TS202
-UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

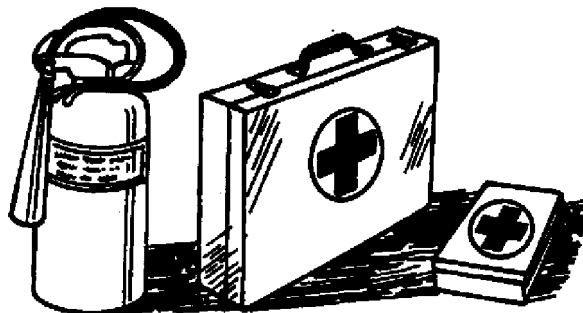

DX,FIRE2 -19-04JUN90

TS291
-UN-23AUG88



HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



 
DX,FIRE3 -19-04JUN90

T6089AU -UN-23MAR89

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

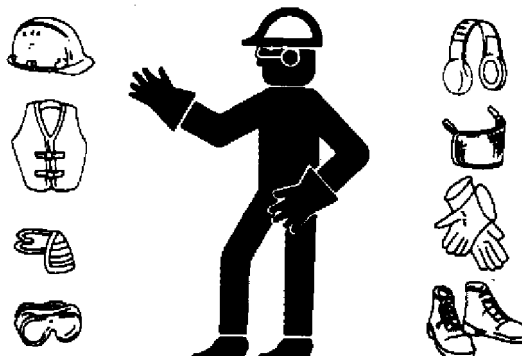

DX,WEAR2 -19-10SEP90

TS206 -UN-23AUG88

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



DX,NOISE -19-04JUN90

TS207 -UN-23AUG88



 
HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

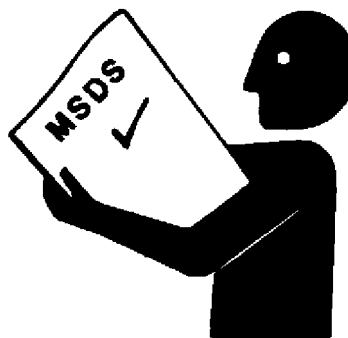

DX,MSDS,NA -19-15MAR91

TS1132 -UN-26NOV90

HANDLE CHEMICALS PROPERLY

Know hazards of fertilizers, insecticides, herbicides, and other chemicals you use during tillage and planting operations. Avoid any contact with dust, spray mixes, and vapors, especially from deadly organic phosphates, which are fast-acting nerve poisons.

SOUND-GARD body air filters are not designed to filter out harmful chemicals. Follow instructions given in the implement operator's manual and those given by the chemical manufacturer when using agricultural chemicals.



RX,HANDLE,CHEM -19-10NOV88

TS272 -UN-23AUG88

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-04JUN90

TS198 -UN-23AUG88

 


USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Flashing warning lights and turn signals are recommended whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

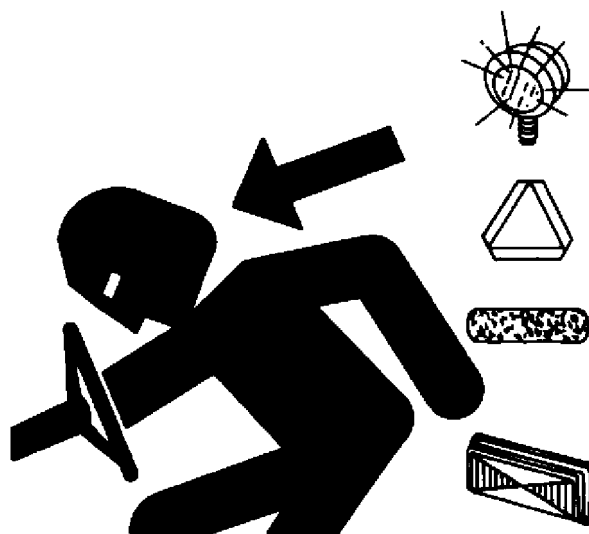

DX,FLASH -19-04JUN90


TS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

 See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

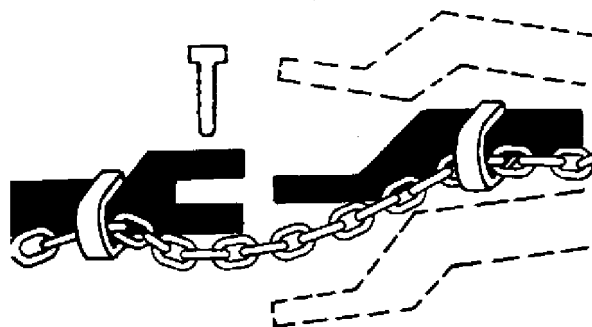


DX,CHAIN -19-04JUN90

TS217 -UN-23AUG88

TRANSPORT TRACTOR SAFELY

The best method for transporting a disabled tractor is to haul it on a flatbed carrier. Chain tractor to carrier securely.

 If towing a tractor, never tow faster than 10 mph (16 km/h) with rear wheels raised or faster than 5 mph (8 km/h) with all wheels on the ground. Have an operator steer and brake tractor.

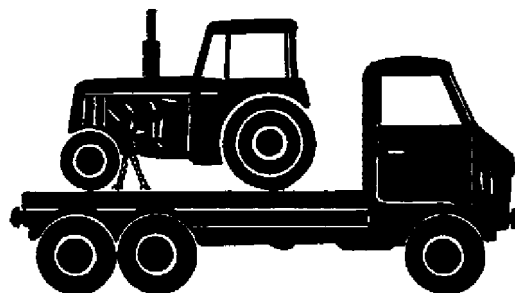

RX,HAUL,IT1 -19-05MAY88

RW13090 -UN-07DEC88

 


REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 20 mph (32 km/h) when towing load equal to or less in weight than the tractor.
- Reduce speed to 10 mph (16 km/h) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

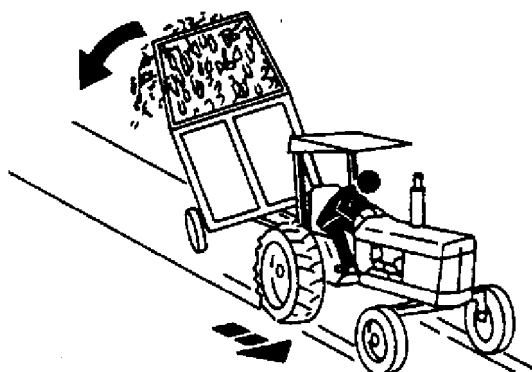


TS216 -UN-23AUG88

DX,TOW -19-04JUN90

KEEP ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

 The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

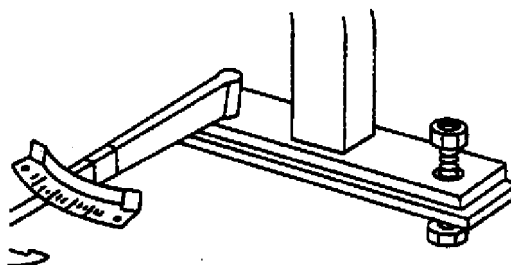

TS212 -UN-23AUG88

DX,ROPS3 -19-04JUN90



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV

-19-04JUN90

TS218
-UN-23AUG88

REMOVE PAINT BEFORE WELDING OR HEATING

 
Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

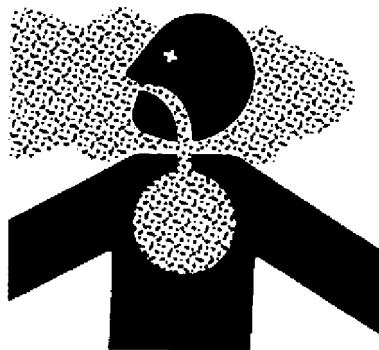

DX,PAINT

-19-04JUN90

TS220
-UN-23AUG88



AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-05OCT90

TS953 -UN-15MAY90

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

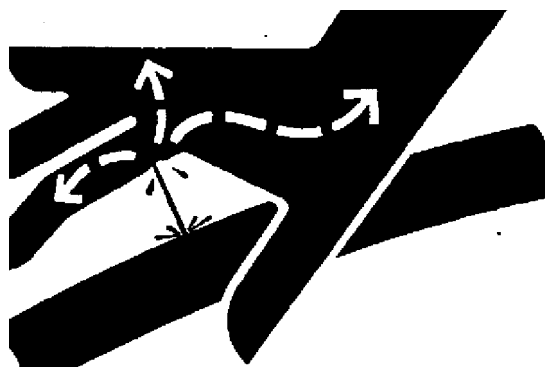

DX,FLUID -19-09AUG91

 
X9811 -UN-23AUG88



SERVICE BRAKE ACCUMULATOR SAFELY

Accumulator contains gas and oil under pressure. To avoid injury from escaping fluid, relieve all pressure from accumulator before disconnecting brake accumulator or brake valve. To do so open bleed screws and pump brake pedal with engine stopped, until pedal easily goes all the way down.

The accumulator is charged with dry nitrogen to a pressure of 500 psi (3450 kPa) (35 bar). If it needs recharging, have job done only by a qualified service person and only with dry nitrogen.

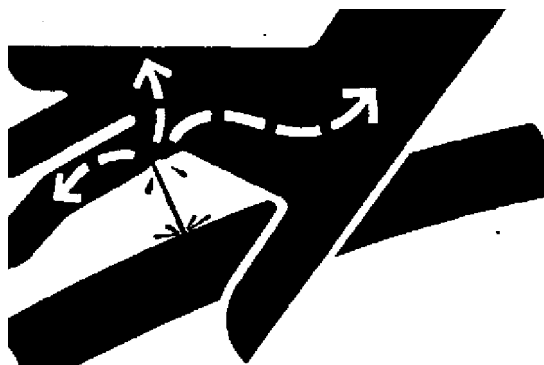

RX,BRAKE, FIX -19-26JUL89

X9811 -UN-23AUG88

 
AVOID HARMFUL ASBESTOS DUST

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding material containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos.

Keep bystanders away from the area.

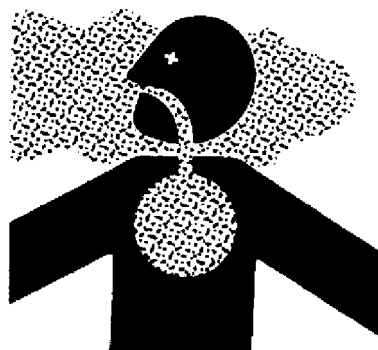

DX,DUST -19-15MAR91

TS220 -UN-23AUG88



Suggest:

If the above button click is invalid.

Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



DX,RCAP

-19-04JUN90

TS281
-UN-23AUG88

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX,STORE

-19-04JUN90

TS219
-UN-23AUG88

DISPOSE OF WASTE PROPERLY

 
Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

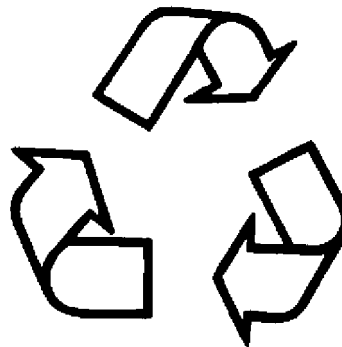

DX,DRAIN

-19-09AUG91

TS1133
-UN-26NOV90

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>