

3215 and 3235 TURF SYSTEM I & II

(Serial No. 020001 –)

OPERATOR'S MANUAL

**John Deere
Lawn & Grounds Care Division
OMMT2353 K4**

**North American Version
Litho in U.S.A
English**

INTRODUCTION

THANK YOU for purchasing a John Deere product.

Read this manual and your attachment manuals thoroughly. Failure to do so could result in personal injury or equipment damage.



This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents. RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward.

Product warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The product warranty is explained on the warranty certificate you received from your dealer.

Record identification numbers below. Be sure to record all the numbers to help in tracing the machine if it is stolen. You also need to give these numbers to your dealer when you order parts.

Date of Purchase:

Dealer Name:

Phone:

Product Identification Number:

□□□□□□□□□□□□□□

On right side of frame

Engine Serial Number:

□□□□□□□□□□□□□□



TABLE OF CONTENTS

	Page
Safety	
Safety-Alert Symbol	1
Machine Safety Labels	1
Controls	
Dash Controls	3
Foot/Platform Controls.....	3
Operating Machine	
Safety.....	5
Operator Training Required	5
Park Safely	5
Rotating Blades Are Dangerous - Prevent Accidents	6
Use Seat Belt Properly	7
Avoid Tipping.....	7
Keep Riders Off	8
Wear Appropriate Clothing	8
Stay Clear of Rotating Drivelines.....	8
Transport Safely	9
When transporting on public roads use a SMV sign An SMV kit is available from your John Deere dealer.....	9
Using Seat Belt	10
Adjusting Seat.....	10
Before Operating Mower.....	11
Start Engine Safely	12
Avoid Neutral Creep	12
Starting The Engine	13
Warming and Idling Engine.....	14
Stopping Engine	14
Indicator Lights and Gauges.....	15
Using Hydrostatic Transmission	16
Transporting 3215/3235 Turf System I & II On A Trailer	17
Anchoring Machine For Transport	18
Pushing 3215/3235 Fairway Mower	19
Using Optional Power Assist Rear Wheel Drive	20
Using Park Brake.....	20
Mount and Dismount Safely.....	21

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

TABLE OF CONTENTS

	Page
Operating Machine (Continued)	
Prevent Machine Runaway	21
Safety Interlock System	22
Daily Operating Checklist.....	23
Testing Safety Interlock Systems.....	23
Avoid Damage To Plastic And Painted Surfaces	26
Dismounting to Inspect or Unplug Reels.....	27
Engaging Reel Drive	28
Grass Deflector (ESP Units)	30
Emptying The Grasscatchers.....	31
Parts	
WE RECOMMEND JOHN DEERE quality parts and lubricants, available at your John Deere dealer.	32
Optional Equipment	
The following attachments are available from your John Deere dealer.....	33
Service Record.....	37
Service Machine Safely	
Practice Safe Maintenance	38
Wear Appropriate Clothing.....	39
Stay Clear of Rotating Drivelines	39
Handling Waste Product and Chemicals.....	39
Avoid High Pressure Fluids.....	40
Avoid Injury From Contacting Blades.....	40
Service Lubrication	
Grease	41
Grease Locations:	42
Service Engine	
Avoid Fumes	44
Engine Oil.....	44
Raising Hood.....	45
Check Air Restriction Indicator	48
Change Air Cleaner Elements.....	49

TABLE OF CONTENTS

	Page
Service Engine (Continued)	
Changing Secondary Element	50
Service Cooling System Safely	51
Engine Coolant	51
Checking Coolant Level	52
Cleaning Radiator	54
Cleaning Under Hood And Seat	55
Draining Cooling System	56
Flushing Cooling System	57
Flushing Cooling System	58
Bleeding Fuel System	59
Fuel Filter & Sediment Bowl	60
Replace/Adjust Alternator Belt	61
Replace/Adjust Fan Belt	62
Service Transmission	
Transmission Oil	63
Check Transmission Hydraulic Oil Level	63
Change Transmission Oil And Filter	64
Transmission Neutral Adjustment	66
Service Cutting Units	
Avoid Injury From Contacting Blades	68
Grease	69
Rotate For Service —Cutting Units	70
Prepare Cutting Units For Service	72
Service Complete	74
Adjusting Cutting Units	76
Mow Speed Adjustment	76
Adjusting Height-Of-Cut (22 ESP)	77
Adjusting Rear Roller (22 Standard)	82
22 Standard Height Adjustments	84
Adjusting Height Of Cut (22 Standard)	85
Adjusting Reel-To-Bed Knife Clearance (22 ESP)	86
Adjusting Reel-To-Bed Knife (22 Standard)	87
Backlapping Cutting Units	89
Readjust Reel-to-Bed Knife Clearance	92

TABLE OF CONTENTS

	Page
Service Cutting Units (Continued)	
See Adjusting Reel-to Bed Knife Clearance in this section....	92
Grinding the Bed Knife (22 Standard and 22 ESP)	92
Replacing Bed Knife (22 ESP)	92
Removing and Installing Bed Knife (22 Standard)	94
Set Top Deflector Shield (22 Standard)	95
Install Scraper Blade (22 ESP)	95
Adjustable Cutting Unit Down Pressure (Optional)	97
Service Electrical	
Cleaning or Replacing Battery	98
Checking Battery Electrolyte Level	99
Charging the Battery	100
Charging Rates	102
Using Booster Battery	103
Limited Battery Warranty.....	104
Service Miscellaneous	
Replacing Fuses	105
Replacing Indicator Light Bulbs.....	105
Checking and Adjusting Belt Tension	106
Checking Tire Pressure.....	107
John Deere Tire Warranty.....	108
Refueling Machine	108
Fuel And Containers	110
Tighten Wheel Bolts & Other Hardware.....	110
Checking Toe-In.....	111
Adjusting Toe-In.....	111
Grease Rear Lift Linkage	112
Troubleshooting	
Using Troubleshooting Chart	113
Front Mower.....	114
Electrical System.....	117
Storing Safety.....	119
Storing The Mower.....	119
Removing Mower From Storage	121

TABLE OF CONTENTS

	Page
Troubleshooting (Continued)	
Charge Battery.....	122
Assembly	
Install Front Rollers (22 Standard).....	123
Install Front Roller (22 ESP)	124
Install The Cutting Units.....	125
Install Grasscatchers	128
Install ROPS (OPTIONAL).....	129
Install Seat Belt.....	130
Specifications	
Engine.....	131
Fuel System.....	131
Electrical System	132
Capacities	132
Drive Train	132
Travel Speeds.....	132
Steering and Brakes	133
Dimensions	133
Tires.....	133

All information, illustrations and specifications in this manual are based on the latest information at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1994
John Deere Horicon Works
All rights reserved
Previous Editions
COPYRIGHT© 1993

SAFETY SIGNS

Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.

On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards. In this manual, the word CAUTION and this symbol call attention to safety messages.



Machine Safety Labels





M57431

	 WARNING AVOID INJURY FROM ROTATING BLADES • Keep hands and feet away while machine is running. • Shut off power to service, lubricate
---	---


SAFETY SIGNS

Machine Safety Labels Continued

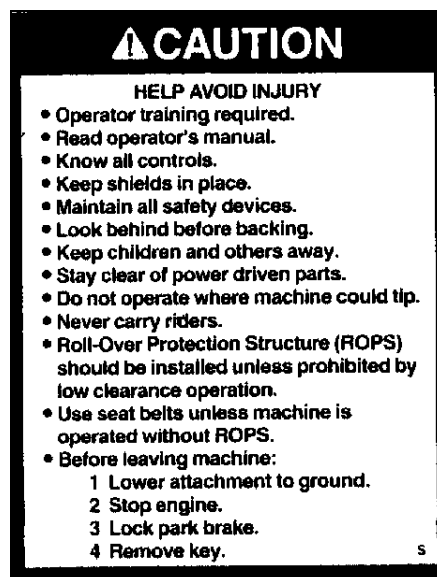
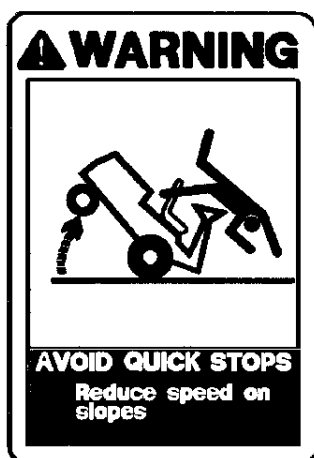


CONTROLS



Dash Controls

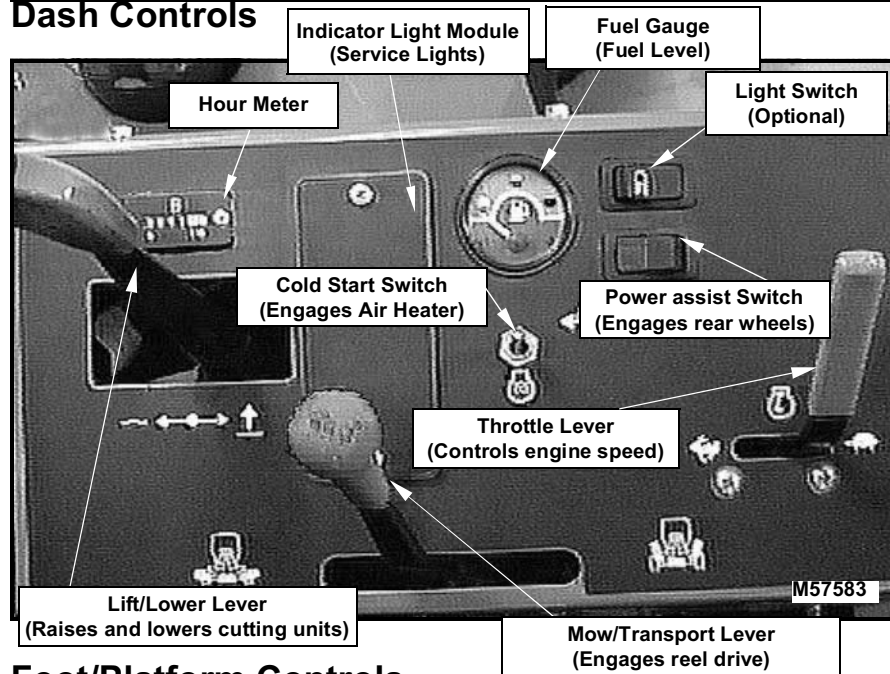

Foot/Platform Controls

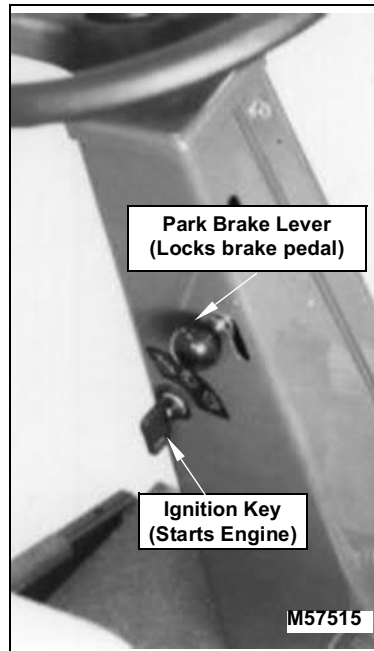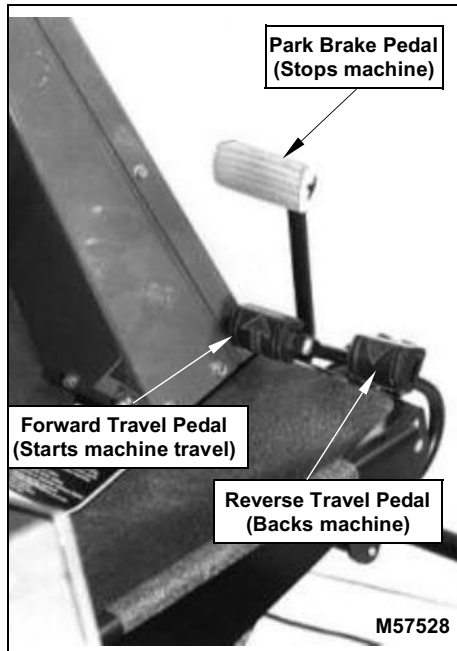

CONTROLS

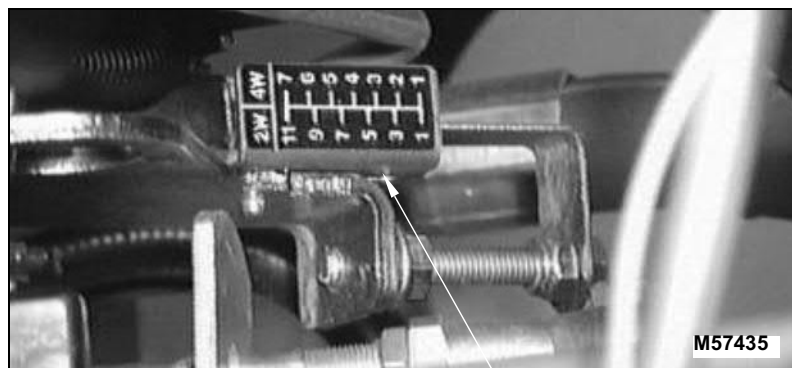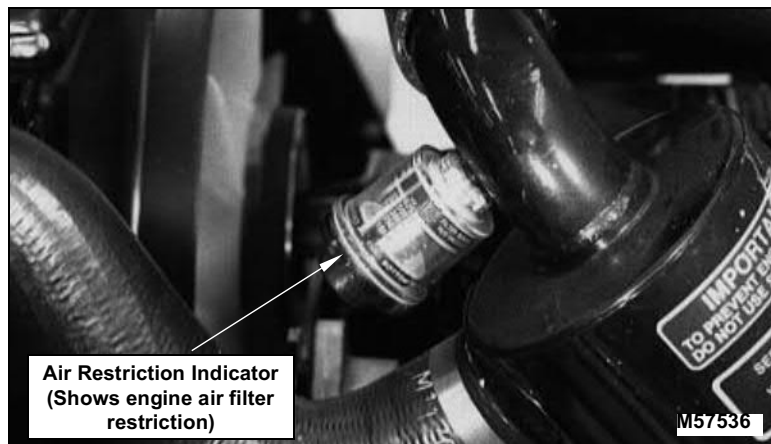

Mow Speed Adjustment (M.P.H.)
(Adjusts Maximum Mowing Travel Speed)


OPERATING

SAFETY

Operator Training Required

- Study operation section of this manual before operating the machine.
- Learn to operate the machine in an open, unobstructed area under the direction of an experienced operator.
- Learn the use of all controls.
- Operator experience is required to learn the moving, stopping, turning and other operating characteristics and service of the machine.

Park Safely

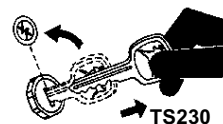

- Stop machine on a level surface, not on a slope.
- Throttle down.
- Move Mow/Transport lever to TRANSPORT.
- Lower Cutting units to the ground.
- Engage park brake.
- STOP engine.
- Remove key.
- Before you leave the operator's seat, wait for engine and all moving parts to STOP.

OPERATING

Rotating Blades Are Dangerous - Prevent Accidents



HELP PREVENT SERIOUS OR FATAL ACCIDENTS:

- Be alert at all times, drive forward carefully. People can move into the mowing area before you know it.
- Back carefully. Look behind the machine carefully before you back up.
- Use extra care when you come to blind corners, shrubs, trees, or other objects that may block your vision.
- Shut off cutting units when you are not mowing.
- Keep hands and feet away from cutting units while machine is running.
- Stop engine and wait for reels to stop turning before making any adjustments to the cutting units.

OPERATING

Use Seat Belt Properly



Use a seat belt when you operate with a roll-over protective structure (ROPS) to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS.

Avoid Tipping

- DO NOT drive where machine could slip or tip.
- Stay alert for holes and other hidden hazards in the terrain.
- Keep away from drop-offs.
- Slow down before you make a sharp turn or operate on a slope.
- Be careful when you change direction on a slope.
- DO NOT stop when going up hill or down hill. If machine stops going up hill, raise cutting units and back down slowly.

OPERATING

Keep Riders Off

- Only allow the operator on the machine. Keep riders off.
- Riders on the machine or attachment may be struck by foreign objects or thrown off the machine causing serious injury.
- Riders obstruct the operator's view resulting in the machine being operated in an unsafe manner.



Wear Appropriate Clothing



- Wear close fitting clothing and safety equipment appropriate for the job.
- Loud noise can cause impairment or loss of hearing, wear a suitable protective device such as earplugs.
- Do not wear radio or music headphones while operating the machine. Safe operation requires your full attention.

Stay Clear of Rotating Drivelines



Entanglement in rotating driveline can cause serious injury or death:


- Wear close fitting clothing.
- STOP the engine and be sure driveline is stopped before getting near it.

OPERATING

Check Wheel Bolts

- A serious accident could occur causing serious injury if wheel bolts are not tight.
- Check wheel bolt tightness often during the first 100 hours of operation. Check at 5, 50 and 100 hours.



Transport Safely

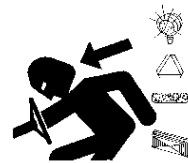

- Slow moving machines when driven on public roads are hard to see, especially at night. Avoid personal injury or death resulting from a collision with a vehicle.

When transporting on public roads use a SMV sign day or night. An SMV kit is available from your John Deere dealer.

- When transporting with front two wing cutting units up, use spring loaded mower lift locks (A) on each front outside mower, engage lock arm into footrest hole (B) on each side

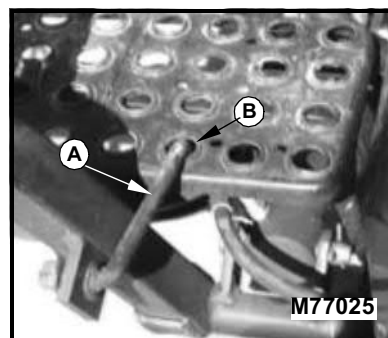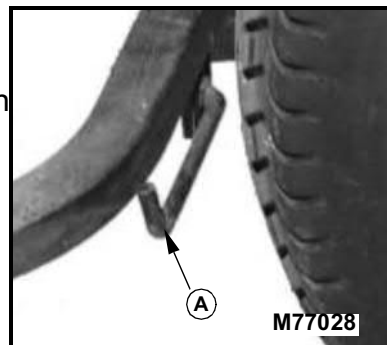

OPERATING

USING SEAT BELT

C

CAUTION: Use a seat belt when operating with a roll-over protective structure (ROPS) to minimize chance of injury from an accident such as an overturn.


DO NOT use a seat belt if operating without a ROPS.

Adjusting Seat

Move lever (A) to the left and slide seat forward or rearward to the most comfortable position.

Release lever to LOCK seat in position.

Turn knob (B) clockwise for a harder (stiffer) ride or counterclockwise for a softer ride.

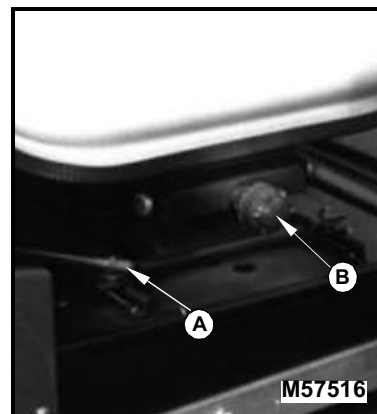


OPERATING

BEFORE OPERATING MOWER

Inspect mower carefully.

Remove foreign objects from machine.

Make sure all hardware is tightened.

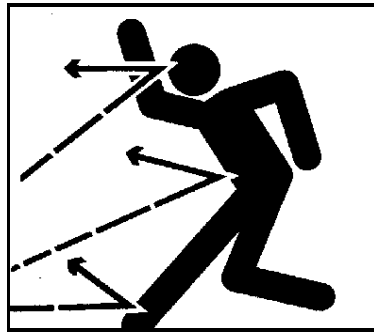

Area to be mowed must be free from wire, stones, glass, cans, or other debris to prevent these objects from being thrown.

All guards and shields must be in place and fastened.

Brakes, steering, tires, and lights must operate correctly.

Hydraulic hoses and fittings must be tight. Worn or damaged hoses may burst endangering the operator or cause turf damage.



Suggest:

If the above button click is invalid.

Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

OPERATING

START ENGINE SAFELY


Before starting engine:

Sit on seat.

Set parking brake.

Put all operating controls in neutral.

Move Mow/Transport lever to transport position.

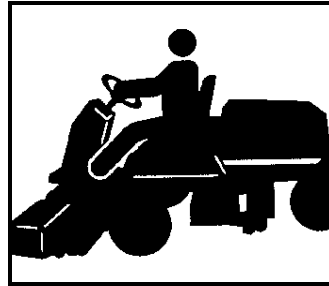

AVOID NEUTRAL CREEP

The machine may creep forward or backward while in neutral with engine running and parking brake disengaged.

After engine has started, release parking brake and with the directional speed control pedals in their Neutral position the machine should not move.

If movement is evident, neutral return mechanism is adjusted incorrectly. Shut off engine and adjust until machine does not move when directional speed control pedals are in Neutral position. (Refer to TRANSMISSION NEUTRAL ADJUSTMENT in Service Transmission Section.)

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>