

O P E R A T O R ' S M A N U A L

ROTARY TILLERS


RT 1142

RT 1157

RT 1265

RT 1149

RT 1165

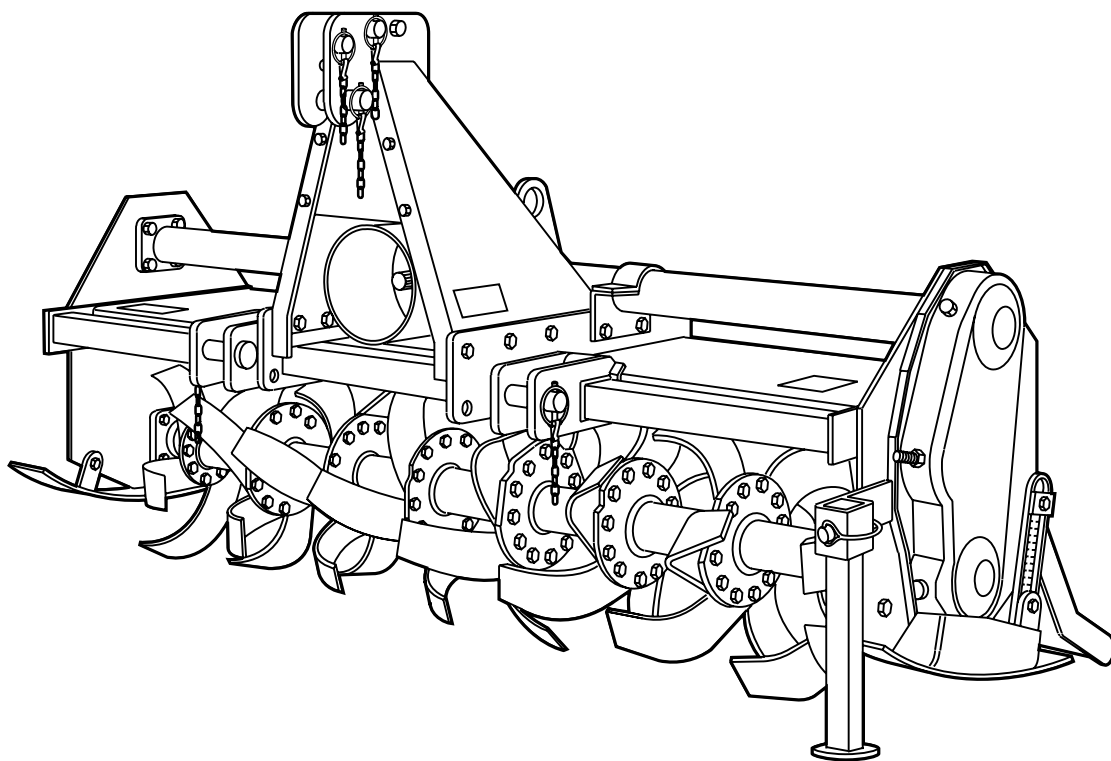

FRONTIER
EQUIPMENT

TABLE OF CONTENTS

Technical specification

Technical specification	4
Technical specification - Hitch	6

Safety signs

Safety-Alert symbol	7
Identification machine	7
Machine safety labels.....	7

Machine safety labels and positions

Machine safety labels and positions.....	8
--	---

Preparing the vehicle

Preparing the tractor	10
Park vehicle safety.....	10
Stay clear of rotating drivelines	10

Installing

Installing tiller on tractor.....	10
PTO shaft	12
PTO shaft with shear pin	13
PTO shaft with clutch	13
Quick Coupler (optional).....	14
Park vehicle safety.....	14
Stay clear of rotating drivelines	14

Removing

Removing tiller.....	15
Removing tiller with Quick Coupler.....	15

Operating

Operate safely	16
Wear appropriate clothing	17
Stay clear of rotating driveline	17
Raising parking stand.....	17
Lowering parking stand	17
Leveling attachments (side-to-side).....	17
Leveling tiller (front-to-rear)	18
Adjusting skid shoes	18
Adjusting levelling board.....	18
Adjustable offset.....	19

Tilling tips	20
During tilling	20
Replacement parts	20

Service Machine Safely

Practice safe maintenance	21
Wear appropriate clothing	21
Stay clear of rotating drivelines	21

Service lubrication

Service lubrication.....	22
Every 8 work hours.....	22
Every 50 work hours.....	22
Every 400 work hours.....	22
Every 1000 work hours.....	22
Greasing and lubricant points.....	23
Lubricants.....	23

Service

Chain stretcher	24
Service intervals.....	24
Bolts tightening torques.....	24
Replacing tines.....	24
Tines.....	25

Troubleshooting

Using troubleshooting chart	26
-----------------------------------	----

Storing machine

Storing tiller	27
Removing tiller from storage	27

Assembly / Spare parts

RT 1142-1149	28
RT 1157-1165.....	30
RT 1265	32
Installing driveline on tiller	34
Spare parts.....	34

TO THE DEALER:

Assembly and proper installation of this product is the responsibility of the Frontier dealer. Read manual instruction and safety rules. Make sure all items on the Dealer's Pre-Delivery Check List in the Operator's Manual are completed before releasing equipment to the owner.

The dealer must complete the Warranty Registration, located on the Frontier website. **Warranty claims will be denied if the Warranty Registration has not been completed.**

TO THE OWNER:

Read this manual before operating your frontier equipment. The information presented will prepare you to do a better and a safer job. Keep this manual handy for ready reference. Require all operators to read this manual carefully and become acquainted with all the adjustment and operating procedures before attempting to operate. Replacement manuals can be obtained from your selling dealer.

The equipment you have purchased has been carefully engineered and manufactured to provide dependable and satisfactory use. Like all mechanical products, it will require cleaning and upkeep. Lubricate the unit as specified. Observe all safety information in this manual and safety decals on the equipment.

For service, your authorized Frontier dealer has trained mechanics, genuine Frontier service parts, and the necessary tools and equipment to handle all your needs.

Use only genuine Frontier service parts. Substitute parts will void the warranty and may not meet standards required for safe and satisfactory operation. Record the model number and serial number of your equipment in the spaces provided:

Model: _____

Date of Purchase _____

Serial Number: (see Safety Decal section for location) _____

Provide this information to your dealer to obtain correct repair parts.

Throghout this manual, the term **IMPORTANT** is used to indicate that failure to observe can cause damage to equipment. The terms **CAUTION**, **WARNING** and **DANGER** are used in conjunction with the Safety-Alert Symbol, (a triangle with an esclamation mark), to indicate the degree of hazard for items of personal safety.



This Safety-Alert Simbol indicates a hazard and means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed.



CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury.

IMPORTANT

Indicates that a failure to observe can cause damage to equipment.

NOTE

Indicates helpful information.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.


Enter the link into your browser.

The full manual is available for immediate download.


<https://www.ebooklibonline.com>

TECHNICAL SPECIFICATIONS



RT 1142 - 1149
(Adjustable offset)

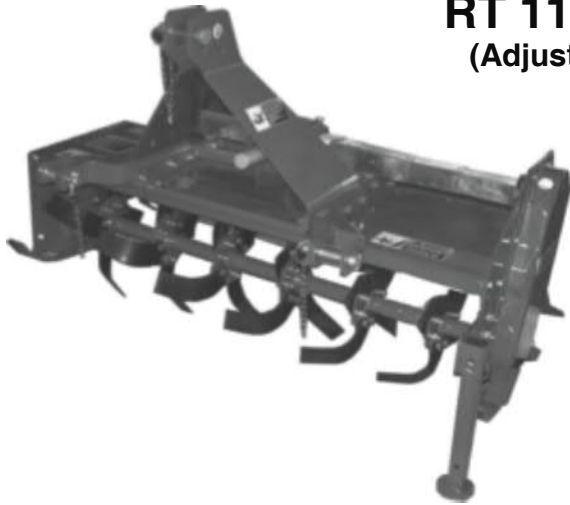

RT 1157 - 1165
(Adjustable offset)

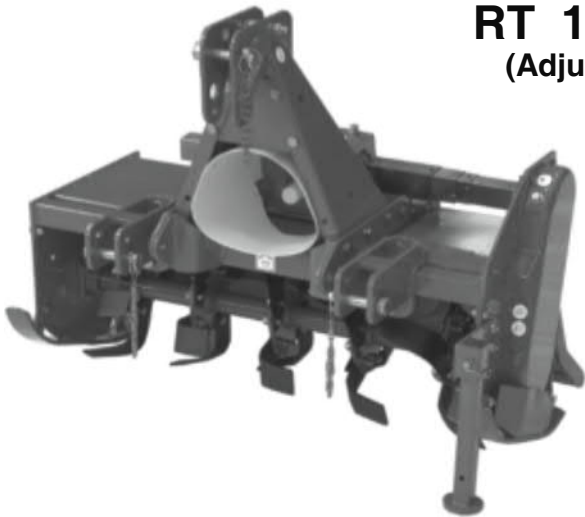

RT 1265

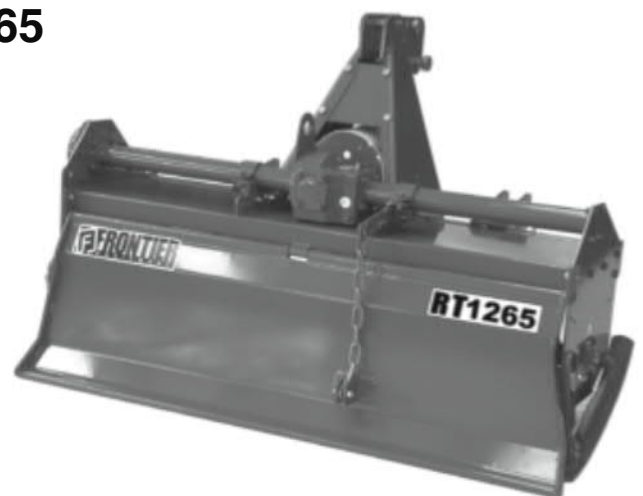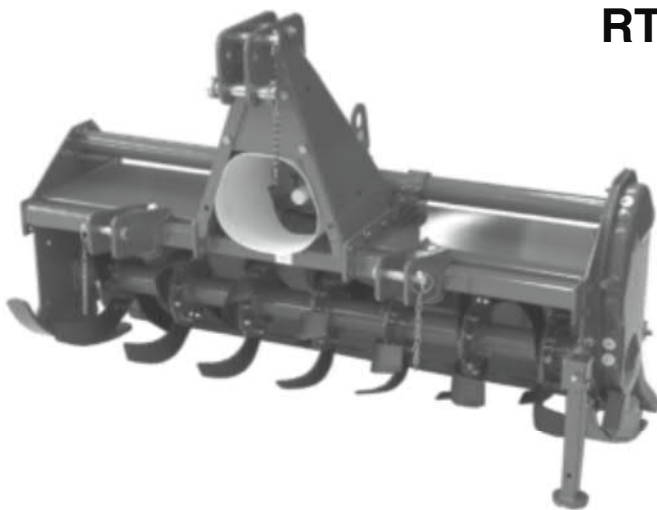

TECHNICAL SPECIFICATIONS

RT 1142 - 1149

<i>Model</i>	<i>Work/width inches</i>	<i>Tractor HP min</i>	<i>Tractor HP max</i>	<i>Weight lbs.</i>	<i>Side Drive</i>	<i>PTO shaft</i>	<i>Speeds gear box</i>	<i>Input speed</i>	<i>Hitch</i>	<i>Max offset</i>	<i>Tines STD</i>	<i>Rotor blades</i>	<i>Rotor flanges</i>
RT 1142	42	10-20	25	293	Chain ASA 80	Shear Pin	Single	540	Cat. "I" Quick coupler	3.9"	"C"	4	5
RT 1149	49	10-20	25	323	Chain ASA 80	Radial Slip Clutch	Single	540	Cat. "I" Quick coupler	7.9"	"C"	4	6

RT 1157 - 1165


<i>Model</i>	<i>Work/width inches</i>	<i>Tractor HP min</i>	<i>Tractor HP max</i>	<i>Weight lbs.</i>	<i>Side Drive</i>	<i>PTO shaft</i>	<i>Speeds gear box</i>	<i>Input speed</i>	<i>Hitch</i>	<i>Max offset</i>	<i>Tines STD</i>	<i>Rotor blades</i>	<i>Rotor flanges</i>
RT 1157	57	25	40	480	Chain ASA 80	Slip Clutch	Single	540	Cat. "I" - "II" Quick coupler	15.5"	"C"	6	7
RT 1165	65	30	40	534	Chain ASA 80	Slip Clutch	Single	540	Cat. "I" - "II" Quick coupler	18.1"	"C"	6	8

RT 1265


<i>Model</i>	<i>Work/width inches</i>	<i>Tractor HP min</i>	<i>Tractor HP max</i>	<i>Weight lbs.</i>	<i>Side Drive</i>	<i>PTO shaft</i>	<i>Speeds gear box</i>	<i>Input speed</i>	<i>Hitch</i>	<i>Tines STD</i>	<i>Rotor blades</i>	<i>Rotor flanges</i>
RT 1265	65	30-50	60	616	ASA 100	Chain Slip Clutch	Single	540	Quick coupler	Cat. "I" - "II" "C"	6	8

TECHNICAL SPECIFICATIONS - HITCH


RT 1142 and 1149: Cat. «I» Standard
RT 1142 and 1149: Cat. «I» Quick Coupler

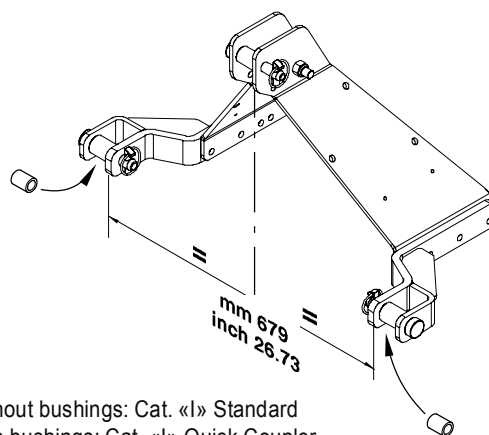


RT 1157 and 1165 : Cat. «I» and «II» Standard

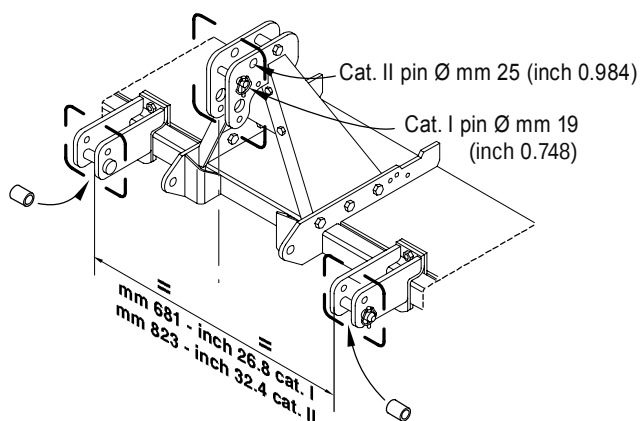


RT 1157 and 1165 : Cat. «I» and «II» Quick Coupler

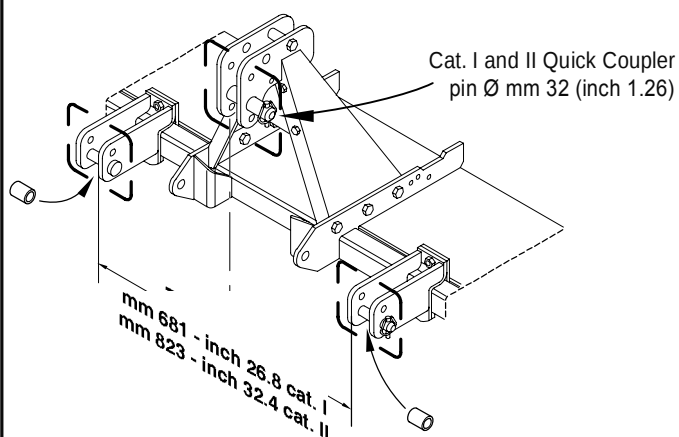

RT 1265: Cat. «I» and «II» Quick Coupler

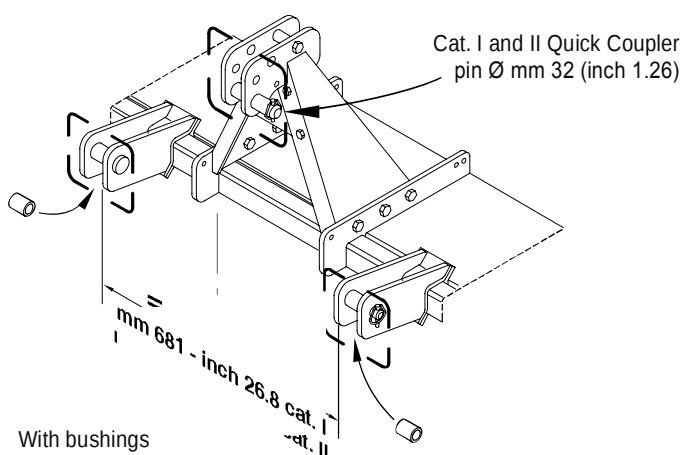

RT 1265: Cat. «I» and «II» Standard

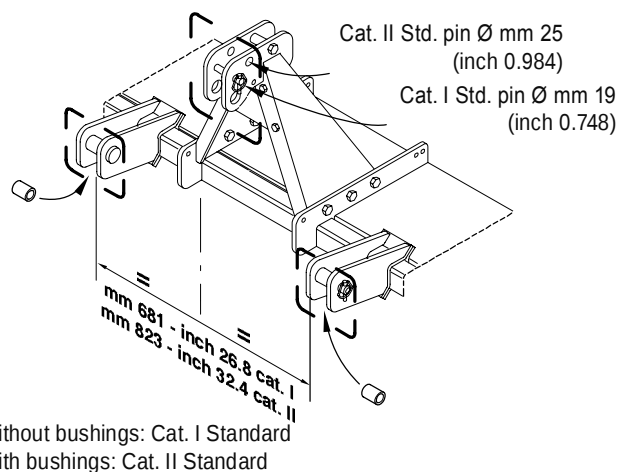

SAFETY SIGNS

Safety-alert symbol

Read and recognize safety information.

Be alert to the potential for personal injury when you see this safety-alert symbol.



On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with safety-alert symbol.

DANGER identifies the most serious hazards. In this manual, the word CAUTION and this symbol call attention to safety messages.

Identification machine

Identification plate machine

Machine safety labels

1) WARNING: AVOID INJURY FROM ROTATING KNIVES:

- Keep hands, feet and clothing away.

2) WARNING: AVOID INJURY FROM PTO:

- Keep all shields in place. Keep hands, feet and clothing away.
- Operate only with 540 RPM.

3) CAUTION: AVOID INJURY

- Read Operator's Manual
- Ballast power unit per operator's manual
- Know location and function of controls
- Keep all shields in place
- Stay clear of power driven parts
- Never carry riders
- Keep people and pets a safe distance away from machine

BEFORE DISMOUNTING OR SERVICING

- Shut off engine and remove key
- Lock brake for park
- Lower or block up machine

4) DANGER: ROTATING DRIVELINE - CONTACT CAN CAUSE DEATH - KEEP AWAY! - DO NOT OPERATE WITHOUT:

- All driveline, tractor and equipment shields in place
- Drivelines securely attached at both ends
- Drivelines shields that turn freely on driveline.


5) DANGER: SHIELD MISSING DO NOT OPERATE

Picture Note: Separate telescoping driveshaft members to locate safety label. Label attached to outer profile tube.




MACHINE SAFETY LABELS AND POSITIONS



RT 1142 - 1149

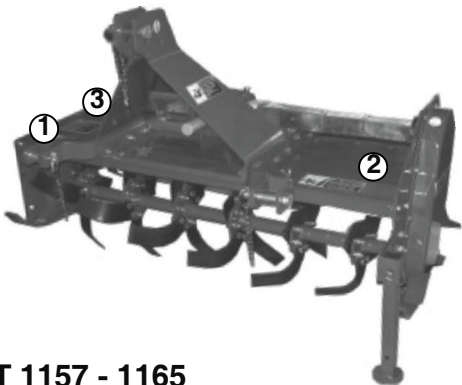

RT 1157 - 1165

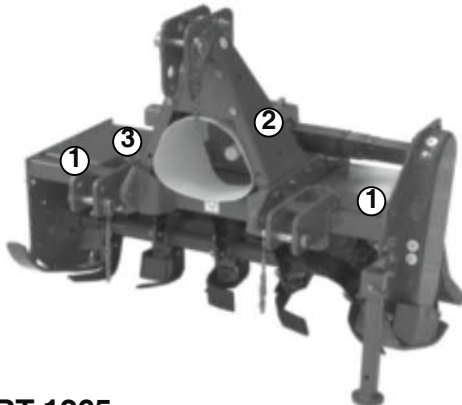

RT 1265

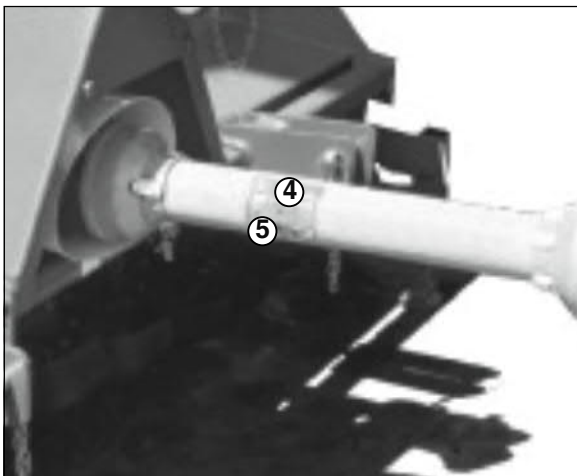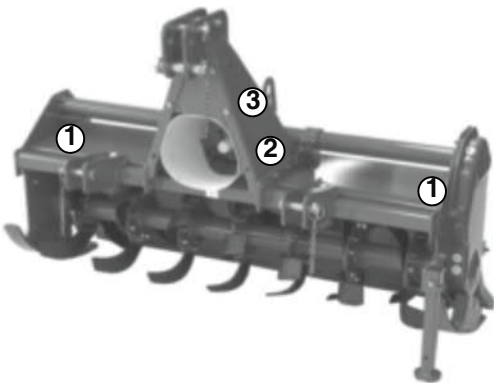

1



2



3





4



5

MACHINE SAFETY LABELS AND POSITIONS

RT 1142 - 1149


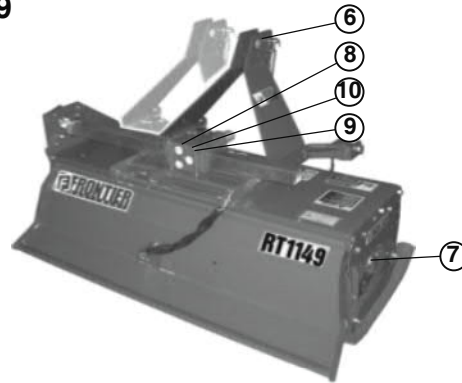
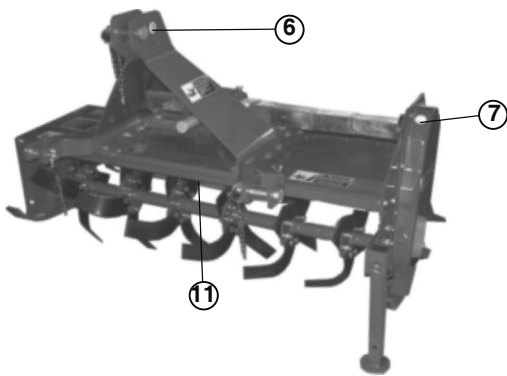


6




7

RT 1157 - 1165

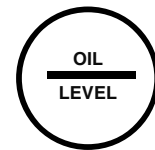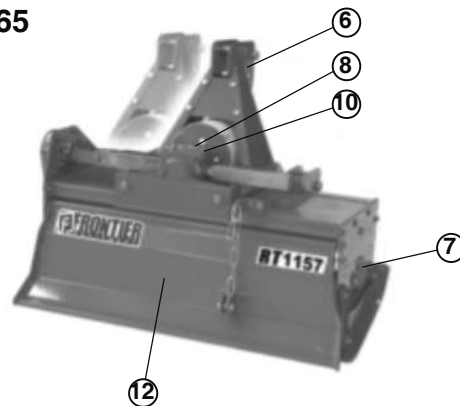
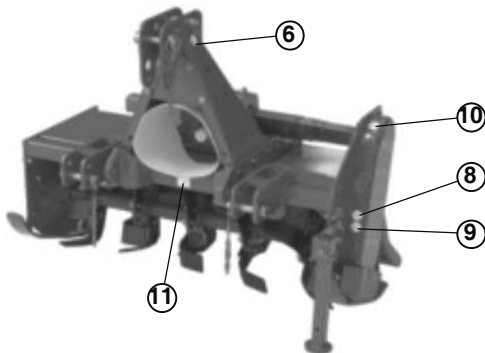


8

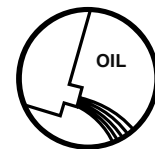

9


RT 1265

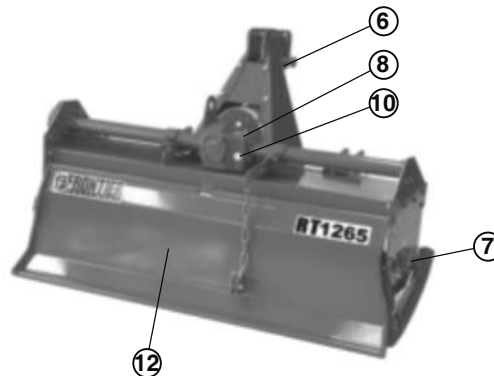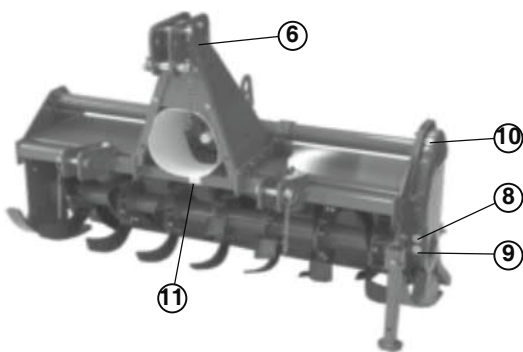

10



11

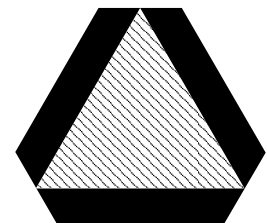

12

- 6) Coupling point for lifting (indicating the maximum capacity)
- 7) Greasing point
- 8) Oil level plug
- 9) Oil drain plug
- 10) Oil fill plug
- 11) Number of revolutions of power takeoff
- 12) Warning, slow machine (only for model: 1157 and 1265)

PREPARING THE VEHICLE

Preparing the tractor



CAUTION: Avoid injury. Proper ballasting is required for safe operation of your tiller

IMPORTANT: Refer to the tractor operator manual for proper ballasting information and tire inflation

- A 540 rpm PTO
- Refer to the tractor operator manual for correct ballasting and tire pressure, depending on installed equipment.

Park vehicle safety

- Stop vehicle on a level surface, not on a slope.
- Disengage PTO.
- Engage the park brake.
- STOP the engine.
- Remove the key.
- Before you leave the operator's seat, wait for engine and all moving parts to STOP.



Stay clear of rotating drivelines

Entanglement in rotating driveline can cause serious injury or death:

- Wear close fitting clothing.
- STOP the engine and be sure PTO driveline is stopped before getting near it.

Installing tiller on tractor

1. Back tractor into position and align draft links (A) with draft link brackets on tiller using tractor rockshaft control.

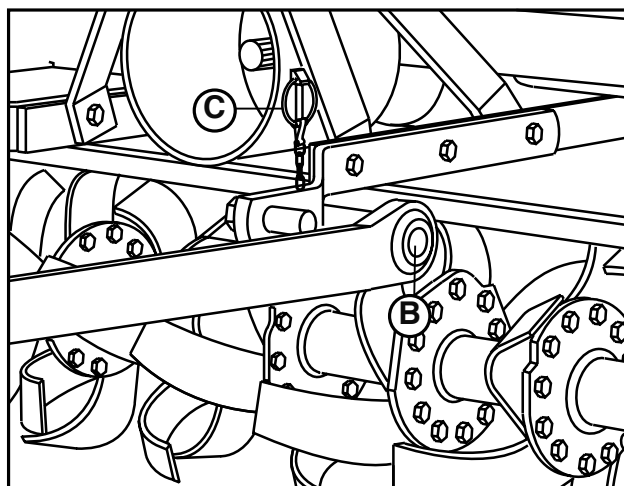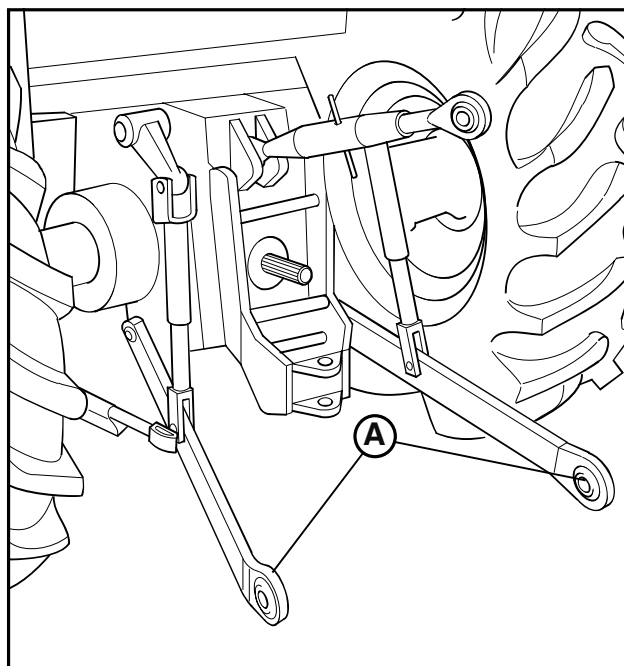

CAUTION: Before you work around hitch:

- STOP engine.
- LOCK park brake.
- FIRMLY block tiller on horizontal surface.

Locate driller pin in holes (B).

RT 1142-1149 model.

2. Fasten each draft link to draft link brackets with drilled pins and quicklock pins (C).



Suggest:

If the above button click is invalid.

Please download this document first, and then click the above link to download the complete manual.


Thank you so much for reading

INSTALLING

Locate driller pin in lower lift brackets holes (B).

RT 1157-1165 model.


2. Fasten each draft link to draft link brackets with drilled pins and quiklock pins (C).

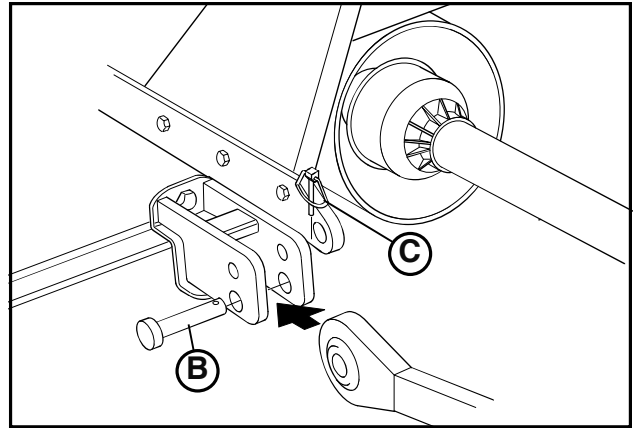

Locate driller pin in holes (B).

RT 1265 model.


2. Fasten each draft link to draft link brackets with drilled pins and quiklock pins (C).

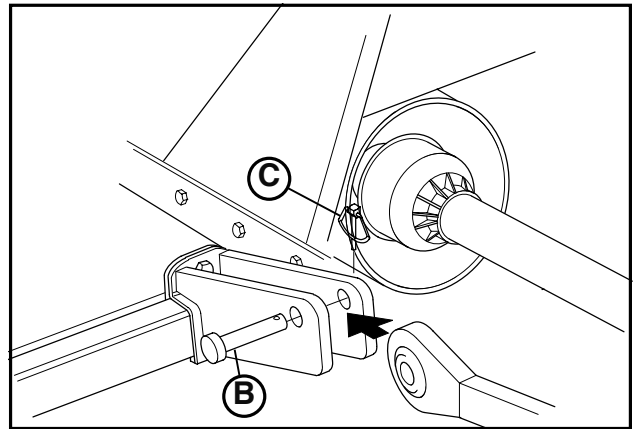

Locate driller pin in top holes (D)

RT 1142-1149 model.


3. Install center link (F) on tiller and fasten with drilled pin and quiklock pin (E).

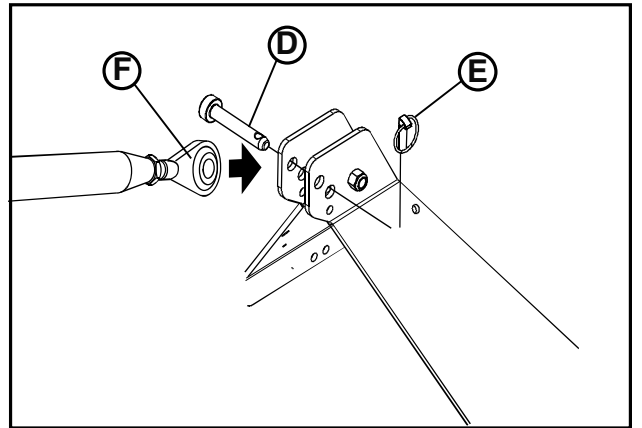

Locate driller pin in top holes (D)

RT 1157-1165 and 1265 model.

3. Install center link (F) on tiller and fasten with drilled pin and quiklock pin (E).

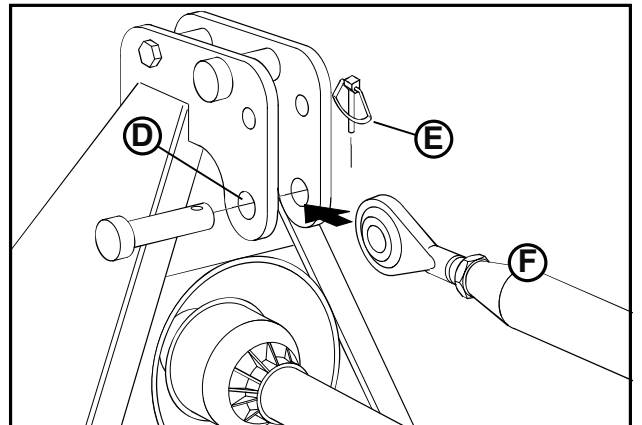

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>