 


# omar178070 - 8120, 8220, 8320, 8420, and 8520 Tractors (North American Edition)

## Using Auxiliary Power Strip- *If Equipped*

---

### Using Auxiliary Power Strip- *If Equipped*

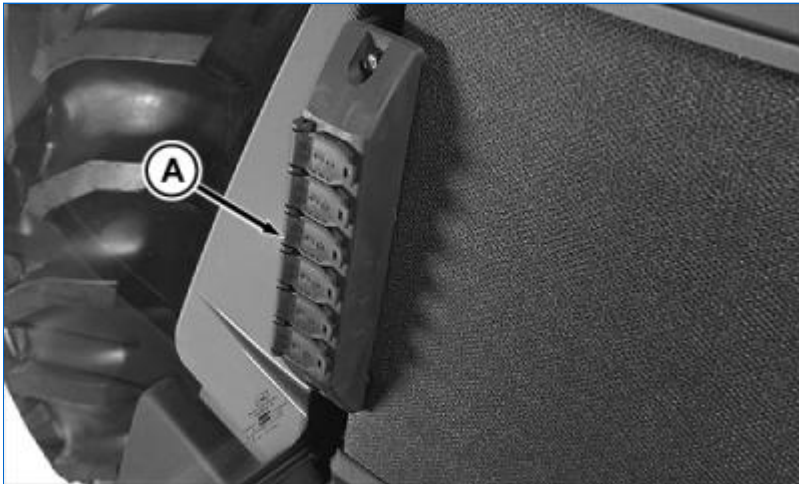

RW26240-UN: Auxiliary Power Strip

#### LEGEND:

A - Auxiliary Power Strip

#### **IMPORTANT:**

**Power strip is not a surge suppressor. Electrical equipment with program memory requires protection from damage of electrical surges and spikes.**

The power strip (A) provides six outlets, of 12-volt power with grounds. This power is 30 amp switched and 30 amp unswitched. The connectors can be used when connecting auxiliary equipment.

Adapters plug directly into power strip as unswitched power. To change to switched power on cigarette lighter adapter or standard adapter (with three wires), remove small tab at end of slot on plug and rotate plug 180°.

#### *NOTE:*


*The small white dot on adapter plug face next to the cap hinge indicates circuit is **unswitched** . If dot is opposite cap hinge, circuit is **switched** .*

Adapters are available from your John Deere Dealer for the following: cigarette lighter adapters, three-way convenience adapters, and standard adapters.

**omar178070 - 8120, 8220, 8320, 8420, and 8520 Tractors (North American Edition)**  
**Identifying GREENSTAR™ System Connections- *If Equipped***

---

**Identifying GREENSTAR™ System Connections- *If Equipped***

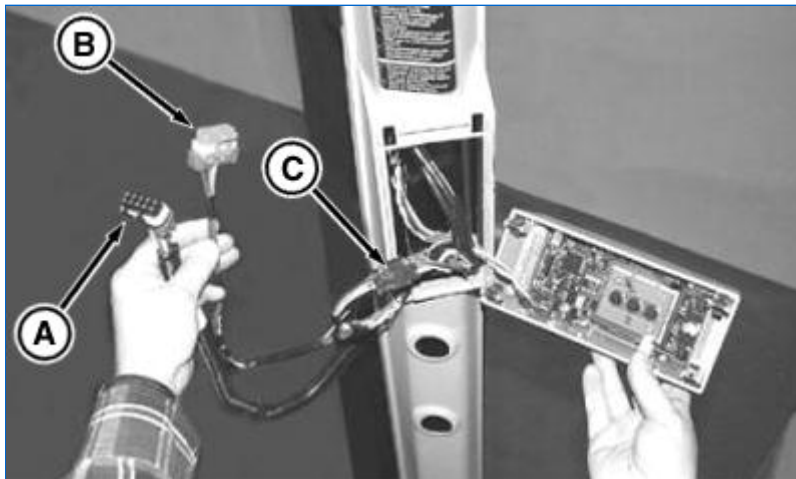

RXA0071146-UN: GreenStar Connections



RXA0071147-UN: GPS Receiver Connector

LEGEND:

- A - Display Monitor Connector
- B - Mobile Processor Connector
- C - Corner Post Display Connector
- D - GPS Receiver Connector

Connectors (A-C) are behind the corner post cover.

Connector (D) is by the front wiper motor.

Nine-Pin connector (A) located at rear of tractor.

**<https://www.ebooklibonline.com>**

 
Hello dear friend!

Thank you very much for reading.


Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

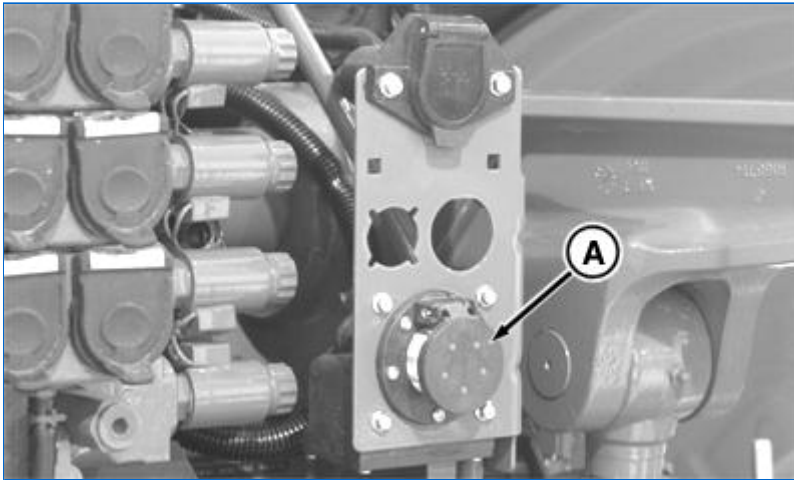

RXA0071148-UN: Early Version Implement Connector

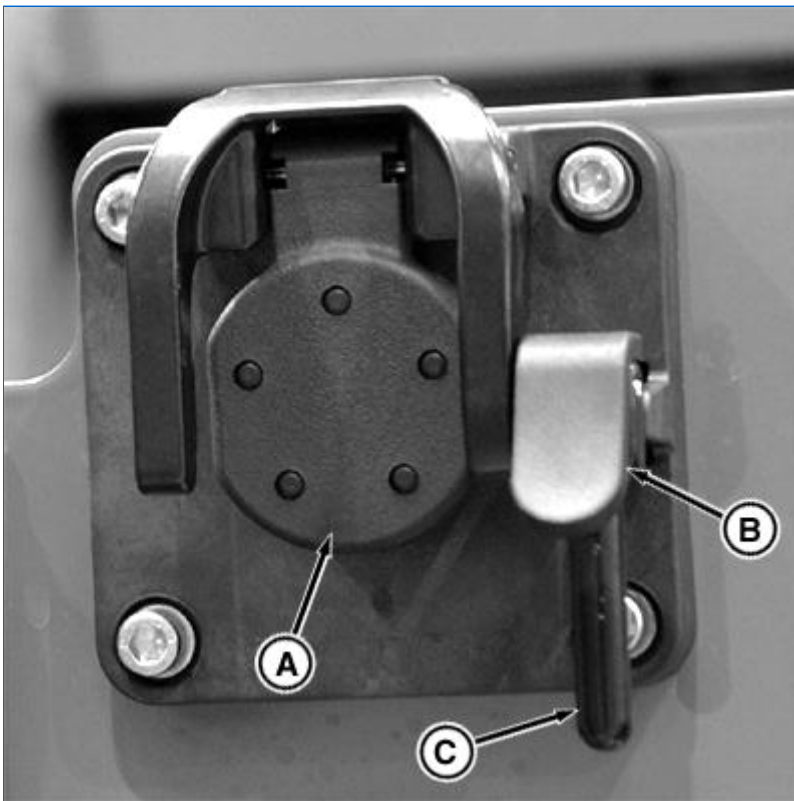 

RXA0071145-UN: Late Version Implement Connector

LEGEND:

- A - Implement Connector
- B - Release
- C - Handle

For later version tractors, push release (B) and pull handle (C) to open implement connector.


# omar178070 - 8120, 8220, 8320, 8420, and 8520 Tractors (North American Edition) Using Monitor Mounts

---


## Using Monitor Mounts



 RXA0057158-UN: Corner Post

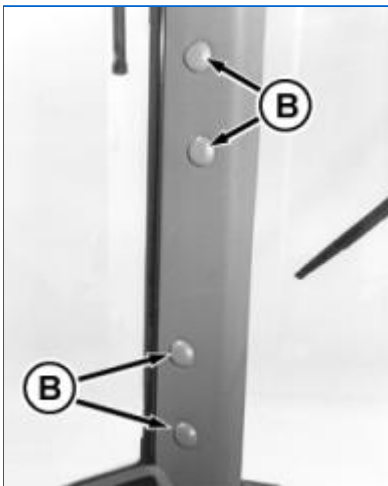

RW26659-UN: Rear Cab Post

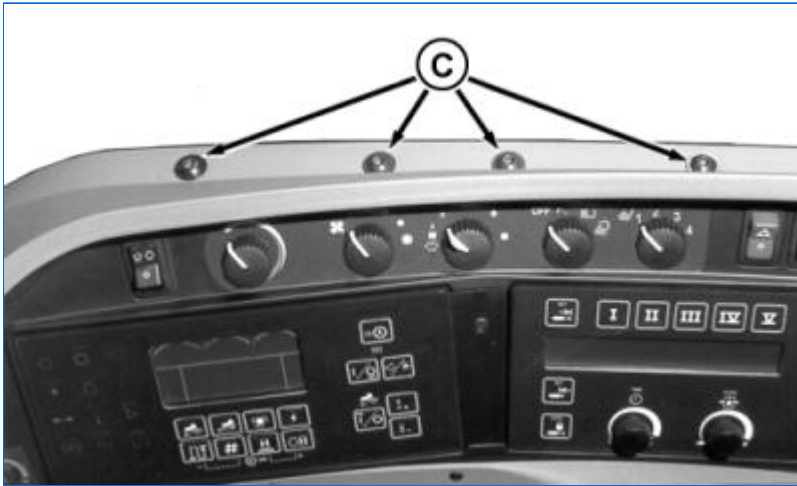 

RW26695-UN: Side Console

Monitor mounting points are used to connect implement monitors to the cab.

-: Monitor Mounting Points

**Mounting Locations**

**A-Corner Post Display**


**B-Rear Cab Post**

**C-Side Console**

**omar178070 - 8120, 8220, 8320, 8420, and 8520 Tractors (North American Edition)**  
**Using Electric Rear View Mirror- *If Equipped***

---

 **Using Electric Rear View Mirror- *If Equipped***

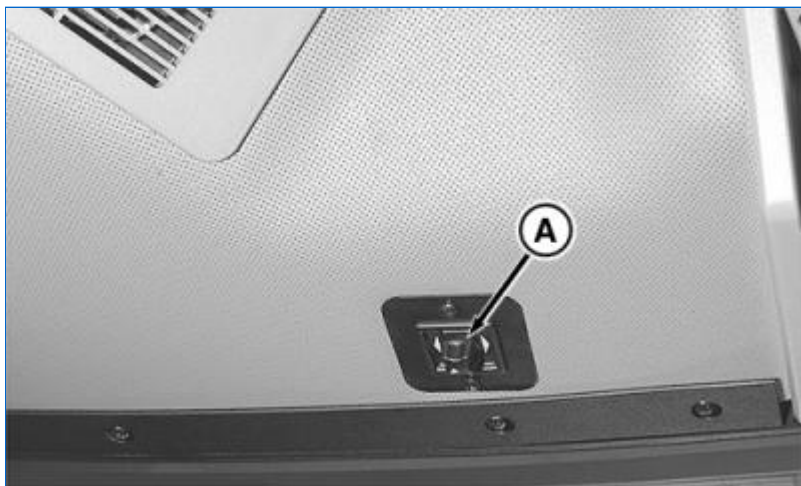

RXA0053037-UN: Rear View Mirror Switch



RXA0053034-UN: Electrical Right Rear View Mirror

**LEGEND:**

- A - Switch
- B - Rear View Mirror
- C - Knob

Push switch (A) in the direction desired to adjust right rear view mirror (B).

Loosen knob (C) to adjust distance of the mirror from cab.



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

# omar178070 - 8120, 8220, 8320, 8420, and 8520 Tractors (North American Edition)


## Using Storage Compartment-If Equipped

---

### Using Storage Compartment-If Equipped



 RXA0056378-UN: Storage Compartment Cover

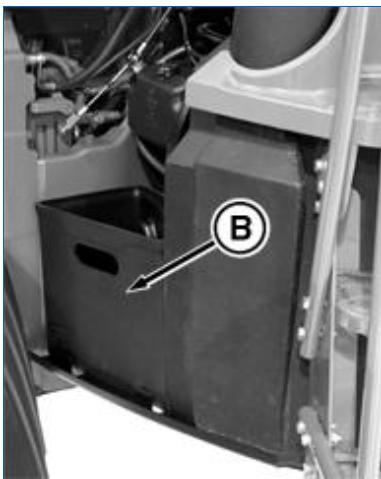

RXA0056379-UN: Storage Compartment

#### LEGEND:

- A - Retainer
- B - Storage Compartment

#### *NOTE:*

*Early models had storage capability for tools in battery compartment. Current models have tool box on left side of tractor with no storage space in battery compartment.*

 
Remove retainer (A) and cover to gain access to storage compartment (B).

# omar178070 - 8120, 8220, 8320, 8420, and 8520 Tractors (North American Edition)

## Positioning Steps and Handrails

---

### Positioning Steps and Handrails

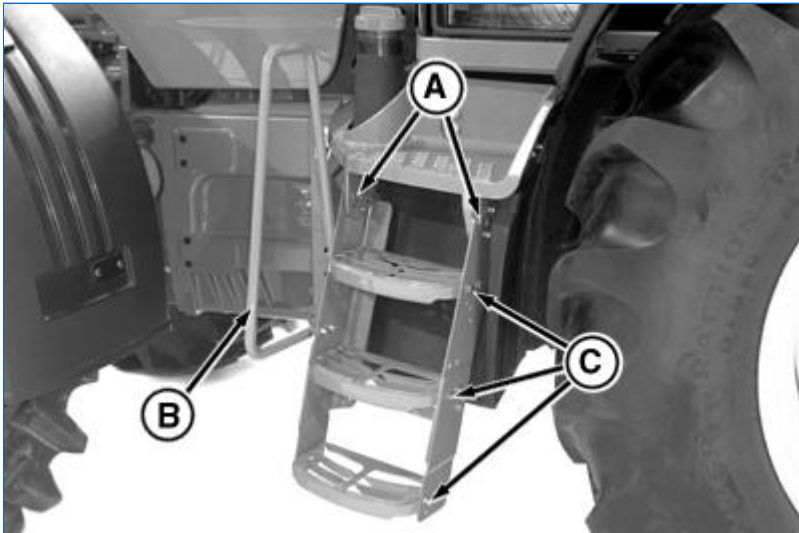

RXA0056383-UN: Position Steps and Handrails

#### LEGEND:

- A - Step Angle Bolts
- B - Handrail
- C - Step Positioning Bolts

### Steps

Step assembly can be adjusted to accommodate various row spacings, crop height or attachments.

Change step assembly angle by removing bolts (A). Move step assembly and install bolts.

### Handrail

Handrail (B) should be positioned in conjunction with the steps.

Change step position by removing bolts (C). Move step and install bolts.

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**