



omar177989 - 9100, 9200, 9300 and 9400 Tractors (040001-) Extremity Transport Warning Lights


Extremity Transport Warning Lights

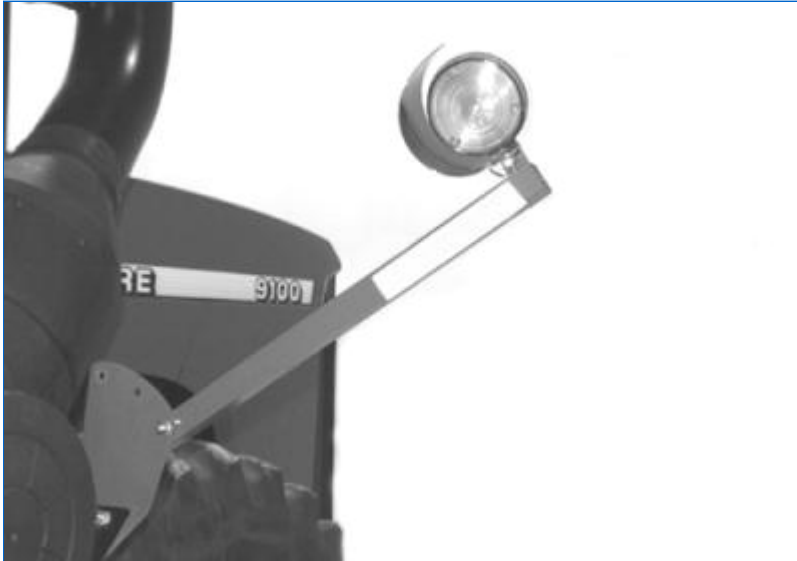

RW90146-UN: Extremity Lights

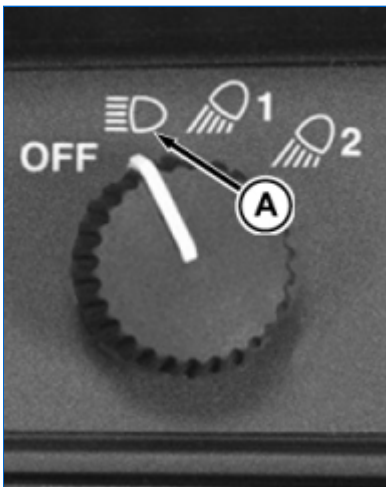

RW56043A-UN: Light Switch

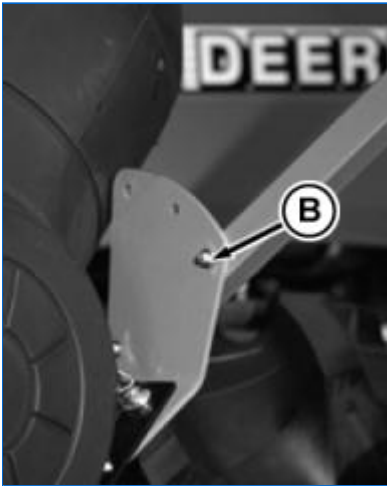

RW56044A-UN: Adjusting Lights



CAUTION:

Extremity transport warning lights are needed when tractor width exceeds 3.7 m (12 ft). Always use road lights and transport warning lights when operating tractor on a road or highway at night OR during the day. Extremity warning lights alert other vehicles of your extended tractor width.

IMPORTANT:

To avoid damage, extremity warning lights can be retracted for single tire operation, for operation in tall brush, or when parking vehicle in storage building.

Extremity transport warning lights operate with hazard light switch "ON" or light switch in "road" position (A).

Adjust warning lights to a position (B) no more than 400 mm (16 in.) from widest point of tractor.

When turn signal is activated, transport warning light on turning side flashes faster, while opposite side glows solid.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.


<https://www.ebooklibonline.com>

omar177989 - 9100, 9200, 9300 and 9400 Tractors (040001-) Seven-Terminal Outlet

Seven-Terminal Outlet



RW56045A-UN: Seven-Terminal Auxiliary Outlet

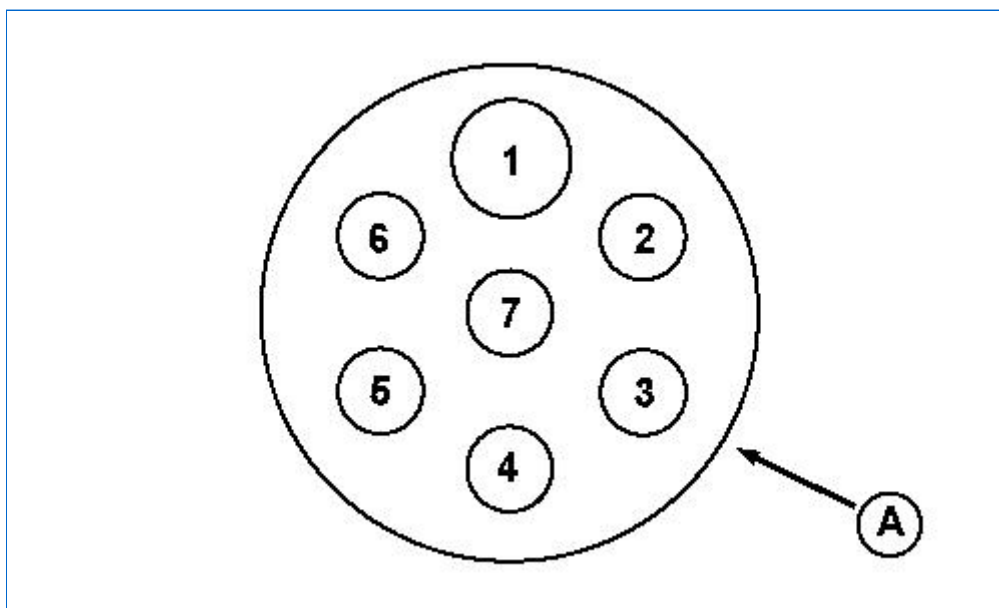

RW21249A-UN: Auxiliary Light Outlet Connector

Outlet (A) is used to connect lights, turn signals, and remote electrical equipment on trailers or implements. Always use auxiliary light on towed implement when tractor rear signals and other lights are obscured.

NOTE:

Matching plug is available through your John Deere Dealer.


-: Aux. Light Outlet Connector (7-Terminal)

Terminal Function


- 1 Ground
- 2 Flood Light
- 3 Left Turn
- 4 Accessory
- 5 Right Turn
- 6 Tail Light
- 7 Accessory

omar177989 - 9100, 9200, 9300 and 9400 Tractors (040001-) Adjusting Air Suspension Seat

Adjusting Air Suspension Seat

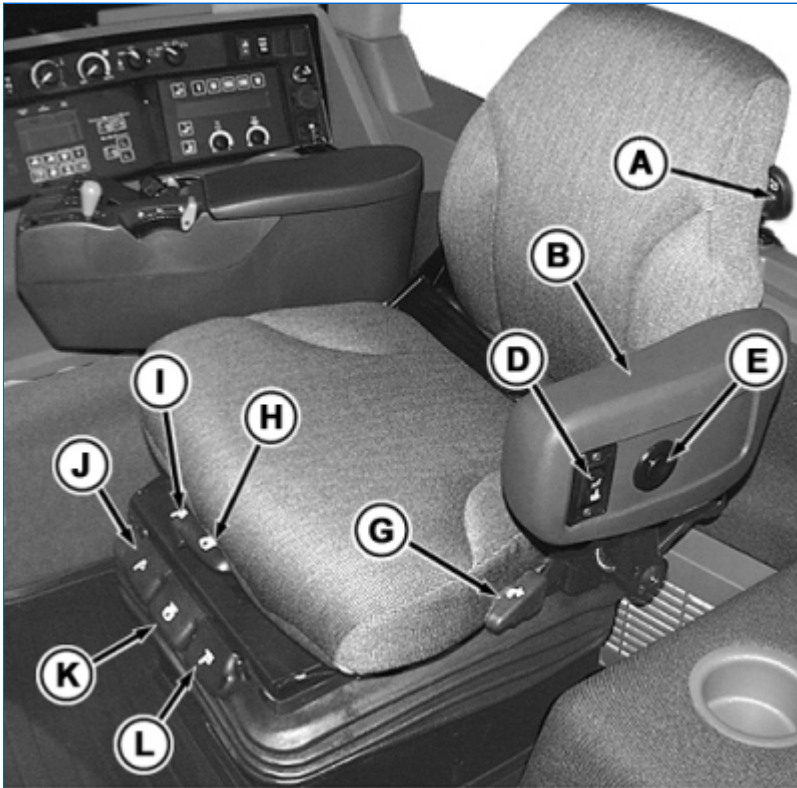

RW27099-UN: Seat with Fold-Down Armrest

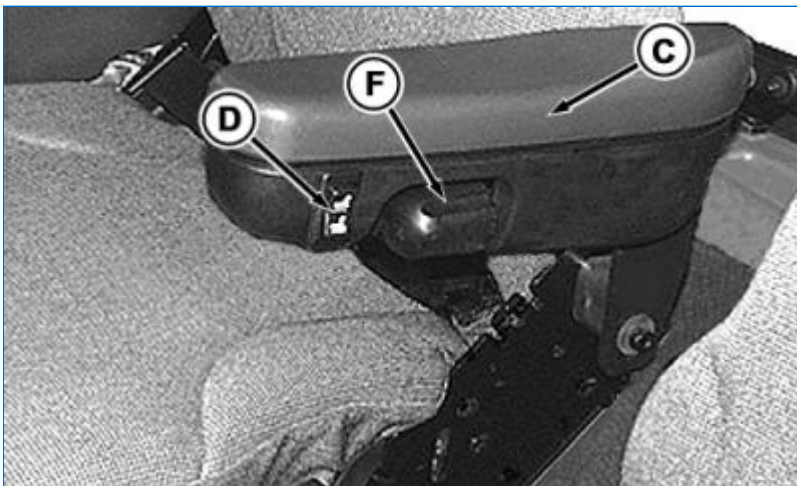

RW27060-UN: Seat with Flip-up Armrest-Used with Instructional Seat

LEGEND:

- A - Lumbar Support
- B - Fold-Down Armrest
- C - Flip-Up Armrest
- D - Seat Height Adjustment

E - Armrest Adjustment
F - Armrest Adjustment
G - Backrest Angle
H - Seat Swivel
I - Fore-Aft Adjustment
J - Suspension Shock Damping
K - Sideways Movement Lock
L - Fore-Aft Movement Lock

Lumbar Support Adjustment

Rotate lever (A) to any of five positions.

Weight and Height Adjustment

Turn key to ON position. Press lower portion of switch (D) to lower or upper portion to raise the seat to adjust for individual weight and height.

Armrest Height Adjustment

Press button (E) or turn handle (F) to adjust armrest height.

Backrest Angle

Pull up handle (G) and lean on backrest to recline seat to desired angle.

Seat Swivel

Lift up on handle (H) to detent position to allow seat to swivel. Push down on handle to lock seat in position.

Fore-Aft Seat Position

Pull up on handle (I) to allow the seat to slide forward or backward.

Damping

Handle (J) infinitely adjusts suspension shock. Moving lever to farthest down position provides the firmest ride; farthest up position provides softest ride.

Sideways Movement Lock

Push down on handle (K) to allow seat to move sideways. Pull up on handle to lock seat in position.

Fore-Aft Movement Lock

Pull up on handle (L) to allow seat to move fore and aft. Push down to prevent fore-aft movement.

omar177989 - 9100, 9200, 9300 and 9400 Tractors (040001-) Adjusting Armrest Control

Adjusting Armrest Control



RW26992-UN: Armrest Control Adjustment

Push in and turn knob (A) to move console fore or aft and up and down.



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

omar177989 - 9100, 9200, 9300 and 9400 Tractors (040001-) Operator Presence Sensor

Operator Presence Sensor

PTO and SERVICE ALERT indicators will flash for 5 seconds with an audible warning horn if operator leaves seat with PTO engaged. After 5 seconds, INFORMATION indicator will light, and PTO indicator light will stop flashing.

NOTE:

PTO does not disengage while operator is absent from the seat.


Hydraulic and SERVICE ALERT indicators will flash for 5 seconds with an audible warning horn if operator leaves seat with SCV in detented flow. After 5 seconds, INFORMATION indicators will light, and hydraulic indicator light will stop flashing.

NOTE:


SCV does not disengage while operator is absent from the seat.

omar177989 - 9100, 9200, 9300 and 9400 Tractors (040001-) Controlling Air Flow

Controlling Air Flow

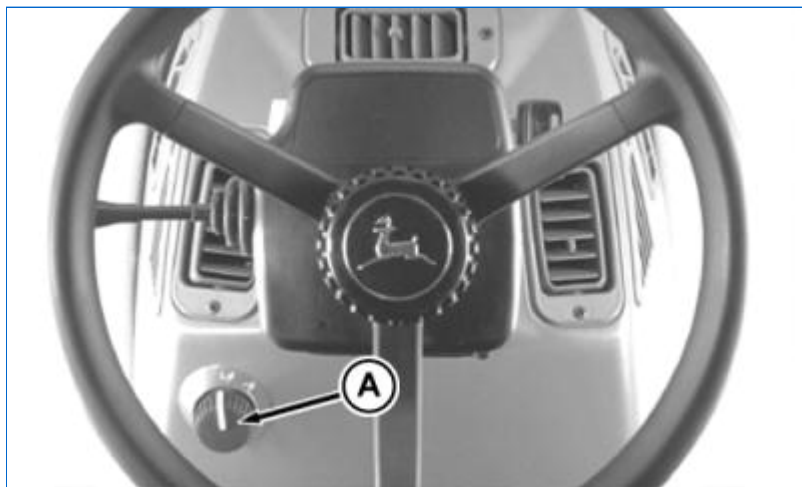

RW55204A-UN: Air Flow Knob

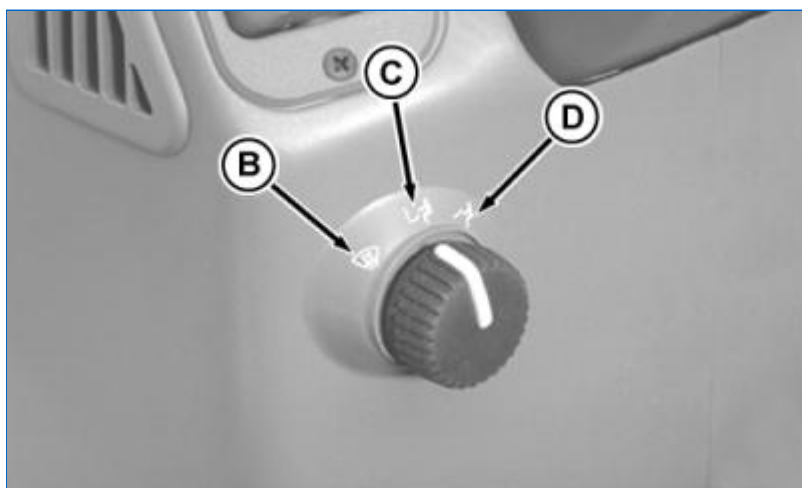

RW55236A-UN: Air Flow Knob Positions

LEGEND:

- A - Air Flow Knob
- B - Windshield
- C - Windshield and Dash
- D - Dash

Turn knob (A) to direct air flow between windshield and dash or a combination of both.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>