 


omar177997 - 9300T and 9400T Tractors (901001-) Operating Turn Signals, Horn, and High/Low Beam

Operating Turn Signals, Horn, and High/Low Beam

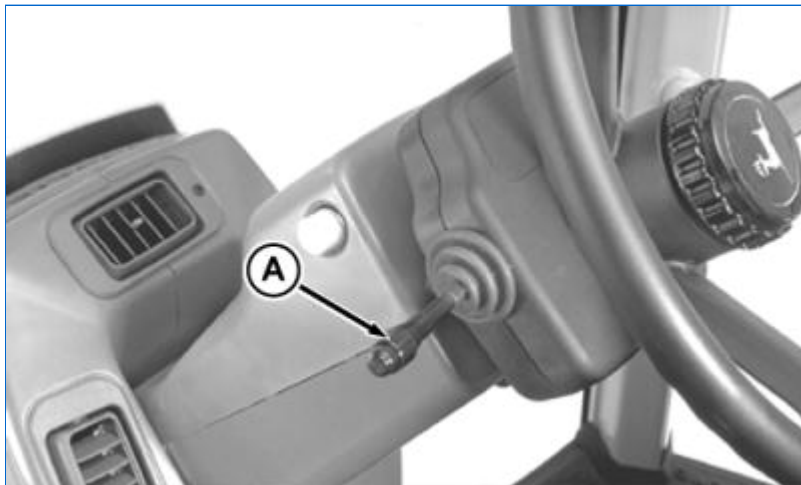

RW55225A-UN: Turn Signal, Horn and Hi/Lo Beam Lever

Turn Signals

Push lever (A) up for a right turn, or pull down for a left turn. Return lever to center position after completing turn.

Horn

Push inward on end of lever (A) to activate horn.


High/Low Beam

Push lever (A) forward to activate high beam head lights. Pull lever into center position to operate low beam. Pull lever toward you and release to flash high beam.


Dim head lights for oncoming vehicles. Adjust head lights correctly. (See Maintenance-Electrical System Section.)

omar177997 - 9300T and 9400T Tractors (901001-) Roof Mounted Field Lights and Entry Light- *Optional*

 Roof Mounted Field Lights and Entry Light- *Optional*

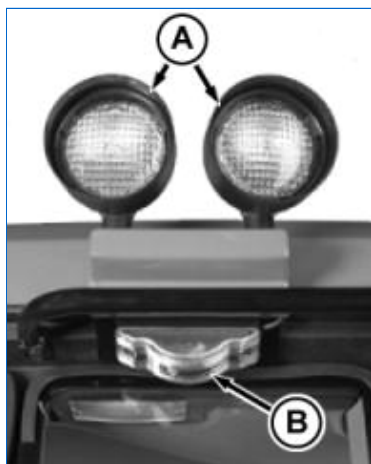

RW56040A-UN: Roof & Entry Lights

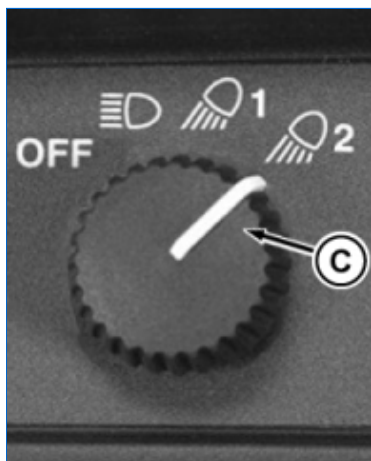 

RW56041A-UN: Light Switch



CAUTION:

Never use field lights or any lights which would blind or confuse other drivers when operating on a road.

Roof mounted field lamps (A) are available from your John Deere Dealer. These field lamps operate when light switch is in position (C) and can be switched on or off with dimmer switch.

Entry light (B) illuminates steps when door is opened.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

omar177997 - 9300T and 9400T Tractors (901001-) Extremity Transport Warning Lights

Extremity Transport Warning Lights



RW26621-UN: Extremity Light



CAUTION:

Extremity transport warning lights (A) are needed when tractor width exceeds 3.7 m (12 ft.). Always use road lights and transport warning lights when operating tractor on a road or highway at night OR during the day. Extremity transport warning lights alert other vehicles of your extended width.


IMPORTANT:

Extremity transport warning lights must be adjusted so each light is no more than 400 mm (16 in.) from widest point of tractor.


Extremity lights operate with hazard switch "on" or light switch in "road" position.

omar177997 - 9300T and 9400T Tractors (901001-) Seven-Terminal Outlet

 Seven-Terminal Outlet

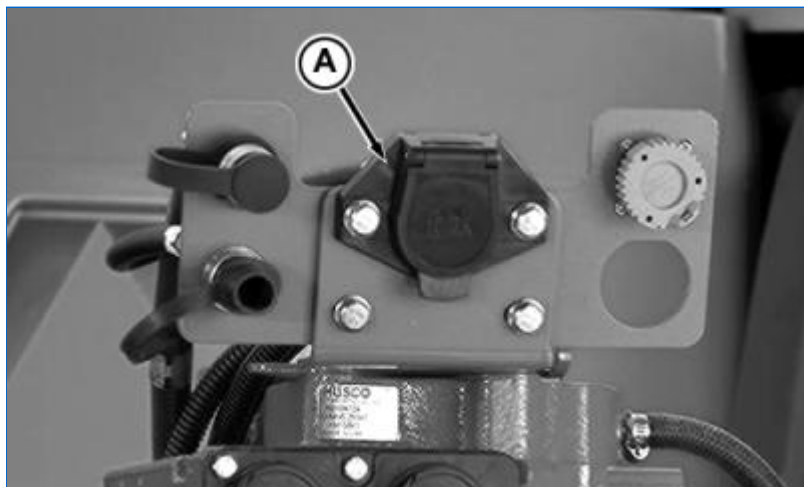

RW26092-UN: Seven-Terminal Outlet

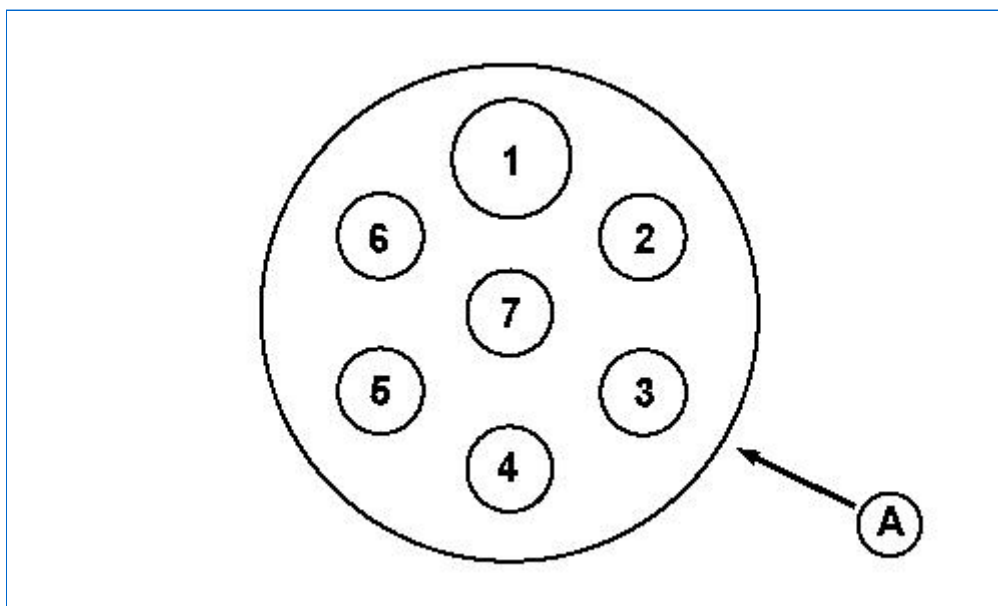 

RW21249A-UN: Outlet-Terminal Locations

Outlet (A) is used to connect lights, turn signals, and remote electrical equipment on trailers or implements. Always use auxiliary light on towed implement when tractor rear signals and other lights are obscured.

NOTE:

Matching plug is available through your John Deere Dealer.


-: Seven-Terminal Outlet

Terminal Function


- 1 Ground
- 2 Flood Light
- 3 Left Turn
- 4 Accessory
- 5 Right Turn
- 6 Tail Light
- 7 Accessory

omar177997 - 9300T and 9400T Tractors (901001-) Adjusting Air Suspension Seat

 Adjusting Air Suspension Seat

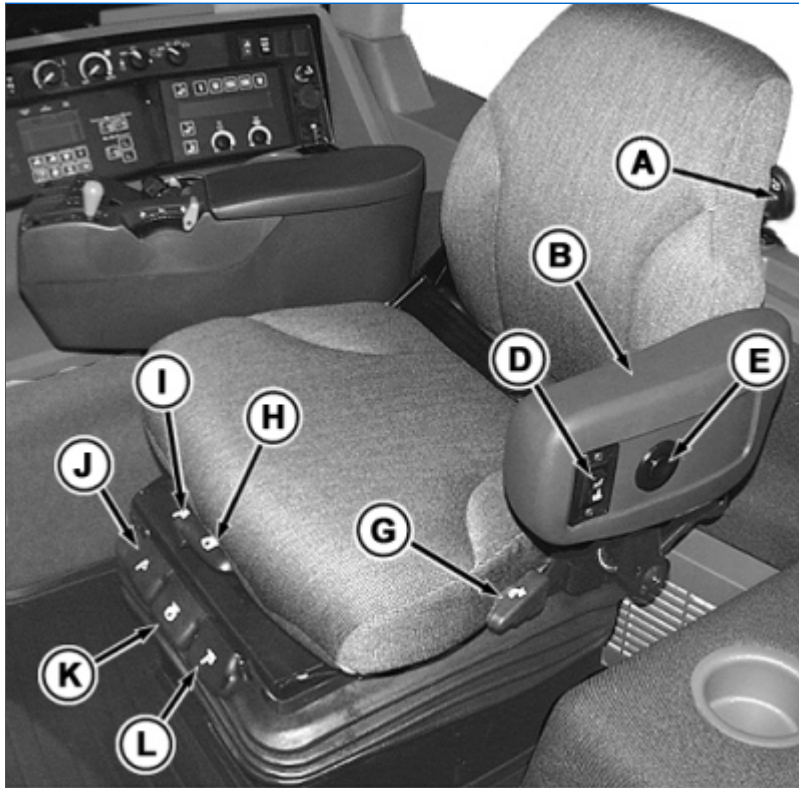

RW27099-UN: Seat with Fold-Down Armrest

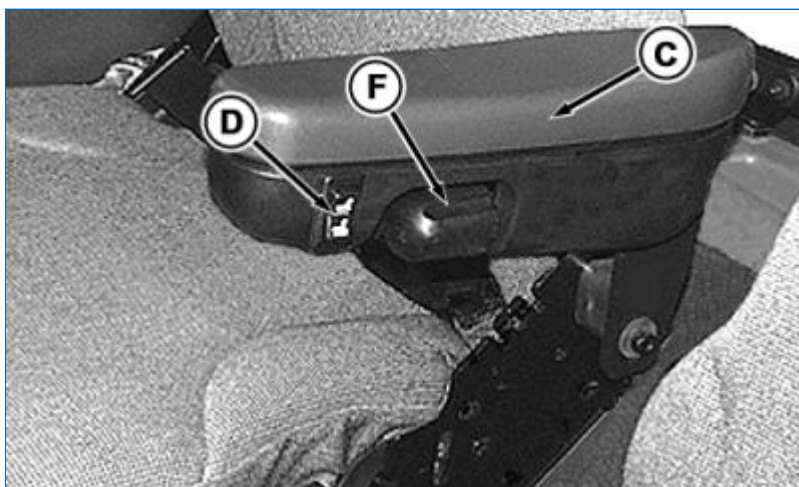 

RW27060-UN: Seat with Flip-up Armrest-Used with Instructional Seat

LEGEND:

- A - Lumbar Support
- B - Fold-Down Armrest
- C - Flip-Up Armrest
- D - Seat Height Adjustment

E - Armrest Adjustment
F - Armrest Adjustment
G - Backrest Angle
H - Seat Swivel
I - Fore-Aft Adjustment
J - Suspension Shock Damping
K - Sideways Movement Lock
L - Fore-Aft Movement Lock

Lumbar Support Adjustment

Rotate lever (A) to any of five positions.

Weight and Height Adjustment

Turn key to ON position. Press lower portion of switch (D) to lower or upper portion to raise the seat to adjust for individual weight and height.

Armrest Height Adjustment

Press button (E) or turn handle (F) to adjust armrest height.

Backrest Angle

Pull up handle (G) and lean on backrest to recline seat to desired angle.

Seat Swivel

Lift up on handle (H) to detent position to allow seat to swivel. Push down on handle to lock seat in position.

Fore-Aft Seat Position

Pull up on handle (I) to allow the seat to slide forward or backward.

Damping

Handle (J) infinitely adjusts suspension shock. Moving lever to farthest down position provides the firmest ride; farthest up position provides softest ride.

Sideways Movement Lock

Push down on handle (K) to allow seat to move sideways. Pull up on handle to lock seat in position.

Fore-Aft Movement Lock

Pull up on handle (L) to allow seat to move fore and aft. Push down to prevent fore-aft movement.



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

omar177997 - 9300T and 9400T Tractors (901001-) Adjusting Armrest Control

Adjusting Armrest Control



RW26992-UN: Armrest Control Adjustment

Push in and turn knob (A) to move console fore or aft and up and down.

omar177997 - 9300T and 9400T Tractors (901001-) Operator Presence Sensor

Operator Presence Sensor

PTO and SERVICE ALERT indicators will flash for 5 seconds with an audible warning horn if operator leaves seat with PTO engaged. After 5 seconds, INFORMATION indicator will light, and PTO indicator light will stop flashing.

NOTE:

PTO does not disengage while operator is absent from the seat.

Hydraulic and SERVICE ALERT indicators will flash for 5 seconds with an audible warning horn if operator leaves seat with SCV in detented flow. After 5 seconds, INFORMATION indicators will light, and hydraulic indicator light will stop flashing.

NOTE:

SCV does not disengage while operator is absent from the seat.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>