

320 Hooded Sprayer

John Deere Des Moines Works
OMN200532 Issue B8
(This manual replaces OMN200532 K6)

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



-UN-02DEC97

N47900

NX,OM320,IFC -19-03DEC97

Contents

	Page		Page
Safety			
Safety Information	05-1	Transporting	
Safety Signs			
General Information			
General Information	15-1	Use Safety Lights and Devices	35-1
Preparing the Tractor			
Adjusting Tractor for Machine	20-1	Keep Riders Off Machine	35-1
Determining Front Ballast	20-2	Use Warning Lights	35-1
Preparing the Machine			
Setting Hitch Pins	25-1	Transporting the Machine	35-2
Preparing Machine	25-2	Operating the Machine/Field Adjustments	
Installing and Bleeding Hydraulic		Guidelines for Use	40-1
Cylinders	25-3	Tightening Hardware	40-2
Hydraulic Hose Diagram	25-4	Control Levers	40-2
Pump Control	25-5	Before Operating	40-3
Installing		Leveling Machine Frame	40-4
/Sprayer Control	25-6	Leveling Wings	40-5
Hydraulic Motor	25-7	Adjusting	
PTO-driven Pump	25-7	Hood Height	40-5
Torque Arm and Chain	25-7	Hood Width	40-6
PTO Mounting Clips	25-8	System Pressure	40-6
Plumbing Diagrams		Typical Machine Configurations	
Centrifugal Pump with Hydraulic Drive	25-9	4-Row, 1524 mm (60 in.) Spacing, 914	
Roller Pump with Electric Motor	25-9	mm (36 in.) Hoods	45-1
Roller Pump with PTO Drive	25-10	4-Row, 1829 mm (72 in.) Spacing, 1168	
Attaching and Detaching			
Attaching Machine to Tractor	30-1	mm (46 in.) Hoods	45-2
Using External Raise/Lower Switch	30-1	8-Row, 762 mm (30 in.) Spacing, 508	
Attaching		mm (20 in.) Hoods	45-3
Machine to Tractor without		8-Row, 965 mm (38 in.) Spacing, 711	
Quick-coupler	30-2	mm (28 in.) Hoods	45-4
Machine to Tractor with Quick-coupler	30-3	Attachments	
Warning Light Cable	30-3	Solution Tanks	50-1
Hydraulic Hoses	30-4	Solution Pumps	50-2
Detaching Machine from Tractor	30-5	Post-direct Spray Attachment	50-3
		Monitor and Plumbing Bundle for	
		Post-Direct Spary Attachment	50-4
		Clean Water Tank	50-4
		Wheels	50-5
		Warning Lights	50-6
		Hood Kits	50-7

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200532 B8-19-16DEC97

COPYRIGHT© 1998
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1996 Deere & Company

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

	Page		Page
Assembly			
Post-direct Spray Attachment	55-1	Metric Bolt and Cap Screw Torque Values	80-3
Monitor and Plumbing Bundle for Post-Direct Spary Attachment	55-2	Unified Inch Bolt and Cap Screw Torque Values	80-4
Installing Quick-fill Attachment—38 mm (1-1/2 in.)	55-2	Removing Hydraulic Cylinders	80-5
Nozzles and Calibration			
Calibrating Sprayer	60-1	Installing and Bleeding Hydraulic Cylinders	80-6
Conversion Factors	60-3	Spraying Aids Available	80-7
Frequency of Calibration	60-4	Storage	
Installing TurboDrop Spray Nozzles	60-4	Preparing Machine for Storage	85-1
Installing Drift Guard Spray Nozzles	60-5	Removing Machine from Storage	85-1
Cleaning Nozzle Bodies and Check Valves	60-6	Specifications	
Checking and Replacing Worn Nozzles	60-7	Specifications	90-1
Wet System			
Spray Monitors (Redball®)	65-1	Serial Number	90-2
Use of Monitor	65-2	Tractor Requirements/Recommendations	90-2
Filling Solution Tank		Crime Prevention Tips	
Without Quick-fill Attachment	65-4	Help Prevent Crime	95-1
With Quick-fill Attachment—38 mm (1-1/2 in.)	65-5	John Deere Service Literature	
Cleaning Solution System	65-6	Index	
Troubleshooting			
Troubleshooting Solution System	70-1		
General Troubleshooting	70-2		
Lubrication and Maintenance			
Lubricating and Maintaining Machine Safely	75-1		
Grease	75-1		
Alternative and Synthetic Lubricants	75-2		
Lubrication Symbols	75-2		
Wing Hinges—Every 50 Hours	75-2		
Maintenance			
Cleaning Solution Strainers	75-3		
Hoods	75-3		
Swing Arms	75-3		
Service			
Using Safe Service Procedures	80-1		
Practice Safe Maintenance	80-1		
Replacing Sprayer Components	80-1		
Service Tires Safely	80-2		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



DX,READ -19-03MAR93

TS201 -UN-23AUG88



OPERATE MACHINE SAFELY

Clear area around machine before raising or lowering machine or wings.

Stop tractor on level ground when raising or lowering wings.

Operate the machine from the tractor seat only.

Do not operate with wings in the transport position.

Do not operate close to a ditch or creek.

Slow down when turning.

Drive slowly over rough ground.

 
Apply both tractor brakes evenly when making emergency stops. Plan ahead.

Shut off tractor, shift transmission to "Park" and set brakes when leaving tractor. Remove key when leaving tractor unattended.

For tractor stability and operator safety, tractor front end weights may be required.

Lower machine when not in use.

Always raise machine at end of rows and when turning.

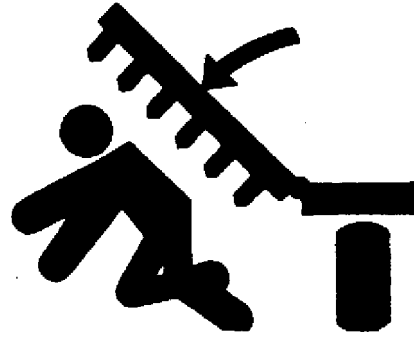


N39547 -UN-06OCT88

NXN,OM320,SAF1B-19-20SEP96



 
PARK MACHINE SAFELY

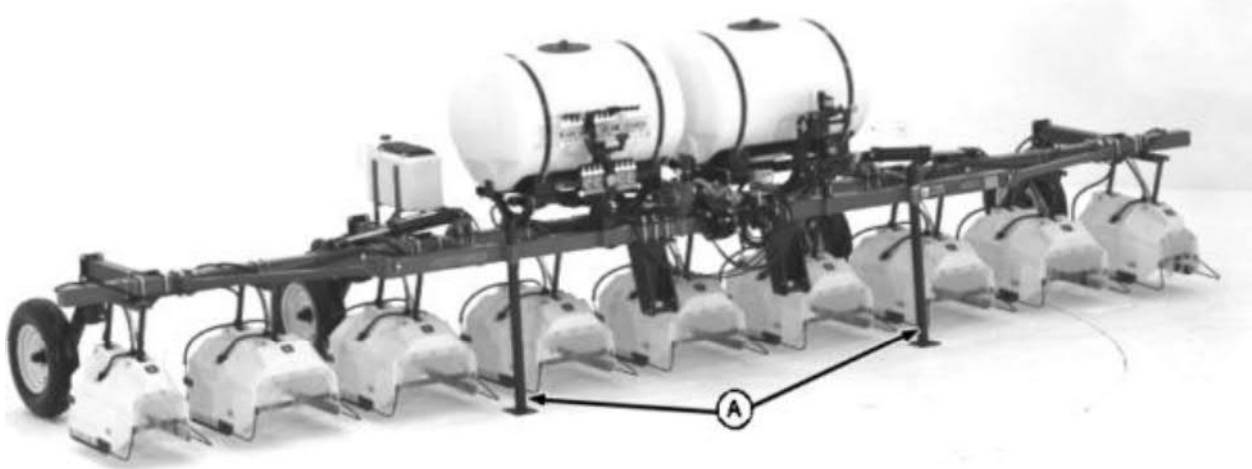

-UN-01DEC97

N47929

Park machine on a level surface.

 **CAUTION:** Before unhitching machine from tractor, block wheels and lower front


parking stands (A) and secure with pin and spring-locking pin. Make sure weight of machine is not being supported by hoods.

NX_OM320PARK97 -19-16DEC97

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

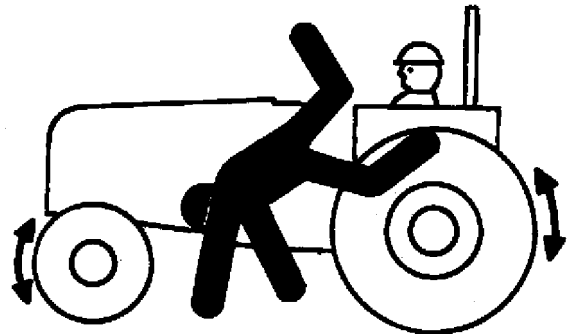

-UN-23AUG88

TS290

DX.RIDER -19-03MAR93



 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

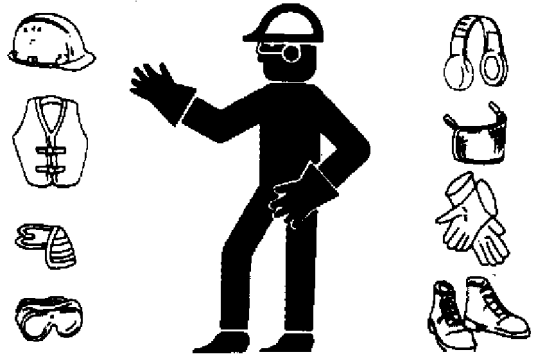

DX,WEAR -19-10SEP90

TS206 -UN-23AUG68

 
HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your chemical dealer for MSDS's on chemical products used with John Deere equipment.)

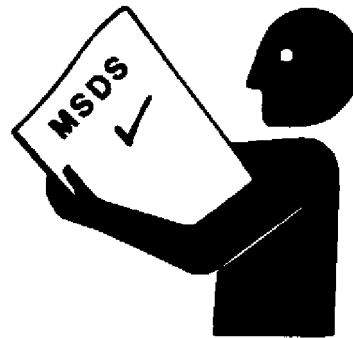

NX,OM320,CHEM -19-20SEP96

TS1132 -UN-26NOV90

 


AVOID CONTACT WITH PESTICIDES

This enclosed cab does not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

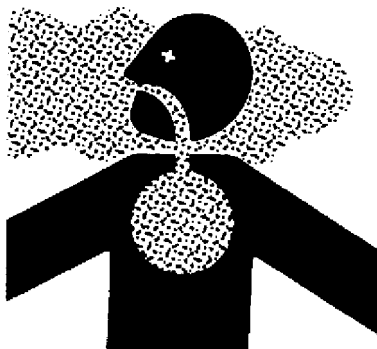

-UN-23AUG68

TS220

-UN-23AUG68

TS272

DX,CABS -19-03MAR93

HANDLE CHEMICALS SAFELY

Keep dust away from skin and hair.

Keep containers low when pouring.

Let the wind blow fumes away from you when mixing or filling.

Wear a filtered respirator if you cannot avoid dust.



-UN-04OCT88

N35988

N01,6000C,A25 -19-03NOV88



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



Wear goggles to protect your eyes.

Wash exposed skin areas frequently—do not leave chemicals on your skin.

Do not smoke while handling chemicals.

Properly dispose of chemical containers, unused chemicals and left-over treated seed and fertilizer.

Read and observe manufacturer's recommendations.



N01.250C,J -19-01OCT84

N35989 -UN-04OCT88

Store chemicals in a separate, plainly marked LOCKED building.

Store chemicals in original containers with labels intact.



N01.250C,K -19-01OCT84

N36950 -19-13MAR89



Select an area to fill, flush, calibrate and decontaminate sprayer where pesticides will not drift or run off to contaminate people, animals, vegetation, water supply, etc. Locate area to provide absolutely no opportunity for children to contact pesticides.

If spray material comes in contact with the body, wash IMMEDIATELY with clean water and detergent.

In event of nozzle clogging or other system malfunctions, stop engine, and release pressure from the system.

Never place nozzle tips or other parts to lips to blow out trash. Have spare tips available for replacement.

 
To minimize spray drift hazards:

- Use large nozzle tips operated at lower pressures.
- Do not operate machine solution system at pressure over 345 kPa (3.5 bar) (50 psi).
- Do not spray when winds exceed 11 km/h (7 mph).

Wash spray residue from outside of machine to prevent corrosion.

Properly dispose of unused pesticide and flushing solutions.

Decontaminate equipment used in mixing, transferring and applying pesticide after use.

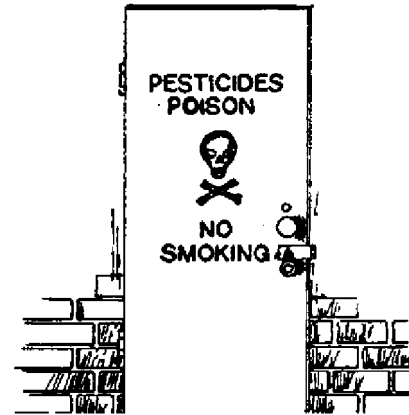

N33983 -19-31JAN89

NX,6500C,A5A -19-20SEP96

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>