

# 335 AND 375 ROUND BALERS (SERIAL NO. 915001- )

 


## OPERATORS MANUAL 335 AND 375 ROUND BALERS (SERIAL NO. 915001- )

OME81757 H1 English

JOHN DEERE OTTUMWA WORKS  
OME81757 H1

LITHO IN THE U.S.A.  
ENGLISH



# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.


WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers

when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

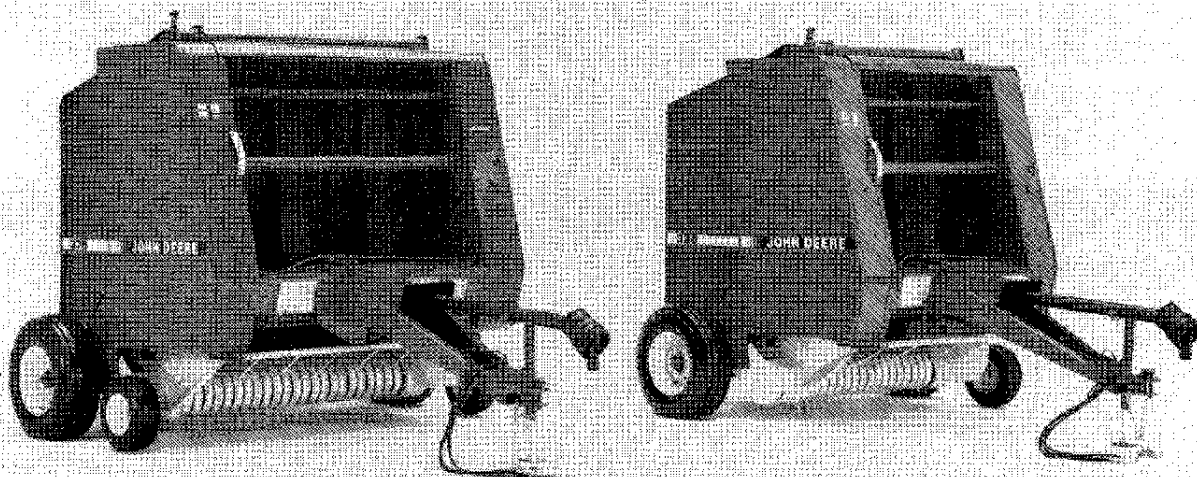

*John Deere 375 and 335 Round Balers*

E332228  
-JUN-16SEP88

# Contents

	Page		Page
<b>Safety</b> .....	05-1	<b>Operating the Baler</b>	
<b>Preparing the Tractor</b>		How the Baler Forms a Bale .....	35-1
Adjusting the Drawbar .....	10-1	Crop Preparation .....	35-2
Setting Tractor Wheels .....	10-1	Indicators for Baler Operation .....	35-3
Checking Ballast, Wheel Spacing, and Tire Inflation .....	10-2	Forming a Bale .....	35-4
Setting Hydraulic Outlets .....	10-2	Gate Lock .....	35-8
Tractor Electrical Hookup .....	10-2	Rotating Baler By Hand .....	35-8
Install Convenience Outlet On:		Adjusting	
Negative Ground Tractors Without SOUND-GARD Bodies .....	10-3	Pickup Height .....	35-9
Positive Ground Tractors Without SOUND-GARD Bodies .....	10-4	Converging Wheel Height .....	35-9
Tractors With SOUND-GARD Bodies .....	10-5	Bale Size .....	35-10
Using Right-Hand Rear View Mirror .....	10-7	Bale Size Switch .....	35-10
Using Drawbar Shield .....	10-7	Removing Compressor Rack Assembly .....	35-11
Making Drawbar Shield .....	10-7	Installing Compressor Rack Assembly .....	35-11
<b>Preparing the Baler</b>		Adjusting Compressor Rack Assembly .....	35-12
Selecting Twine .....	15-1	Starting a Bale in Difficult Conditions .....	35-13
Loading Twine Box .....	15-1	Baling Short, Dry, Slick Crops .....	35-14
Tying Sheet Bend Knot—Plastic .....	15-1	Baling Wet Hay .....	35-15
Tying Modified Square Knot—Sisal .....	15-2	Baling Cornstalks .....	35-16
Routing Twine for Single Twine Arm .....	15-2	Extinguishing a Fire .....	35-16
Routing Twine for Double Twine Arm (R-H Side-Rear Arm) .....	15-3	<b>Attachments</b> .....	40-1
Routing Twine From Left-Hand Twine Box (Front Arm) (Optional) .....	15-5	<b>Lubrication and Maintenance</b> .....	45-1
Adjusting Twine Spacing for Double Twine Wrap (Optional) .....	15-8	<b>Troubleshooting</b> .....	50-1
Tire Inflation .....	15-9	<b>Service</b>	
<b>Attaching and Detaching</b> .....	20-1	Practice Safety .....	55-1
<b>Transporting</b> .....	25-1	Mounting Tires .....	55-1
<b>Handling Round Bales</b> .....	30-1	Wiring Diagram .....	55-2
		Adjusting Chains .....	55-3
		Reversible Heat-Treated Chain Guide .....	55-3
		Replacing Shear Bolt .....	55-4
		Adjusting:	
		Pickup Float Springs .....	55-4
		Pickup Belt Idler .....	55-5
		Twine Arm Timing (375) .....	55-5

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OME91757 H1-19-'86JUL91

COPYRIGHT® 1991  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright® 1986 Deere & Company

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

## Contents

	Page
Adjusting:	
Twine Cutter Anvil .....	55-6
Twine Cutter Tension .....	55-6
Twine Distance From Right-Hand End of Bale (335) .....	55-8
Twine Cylinder Installation Dimensions .....	55-9
Checking Knife Register .....	55-10
Adjusting:	
Lower Feed Roll Scraper .....	55-10
Belt Tracking .....	55-11
Bale Shape Senders .....	55-11
Twine Indicator Retaining Strap (Double Twine Arm) .....	55-13
Bale Size Indicator .....	55-13
Removing:	
Rear Tension Arm Roll .....	55-14
Center and Front Tension Arm Rolls .....	55-14
Belt Tension Spring .....	55-15
Installing Belt Tension Spring .....	55-15
Raising Gate With Hoist .....	55-16
Checking Belt Pins .....	55-16
Installing Belts .....	55-17
Belts Eligible for Warranty Replacement .....	55-22
Belts Not Eligible for Warrantwy Replacement .....	55-23
<b>Storage</b> .....	<b>60-1</b>
<b>Crime Prevention Tips</b> .....	<b>65-1</b>
<b>Assembly</b>	
Install Wheels—375 Baler .....	70-1
Install Driveline .....	70-2
Install Safety Chain .....	70-2
Check Tire Inflation .....	70-2
Install Bale Counter (Optional) .....	70-3
Install Fire Extinguisher (Optional) .....	70-3
<b>Specifications</b> .....	<b>75-1</b>

# 335 and 375 Baler Checklists

## DEALER'S RECORD

Owner's Name \_\_\_\_\_ Date Sold \_\_\_\_\_  
Address \_\_\_\_\_ Model Number \_\_\_\_\_  
City \_\_\_\_\_ Serial Number \_\_\_\_\_  
State \_\_\_\_\_ Zip \_\_\_\_\_

EX,375U,A -19-26SEP86

## PREDELIVERY

After the baler has been completely set-up, inspect it to be sure it is in good running condition before delivering it to the customer. The following checklist is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- Baler has been assembled properly.
- Check all hydraulic hoses and connections for oil leaks.
- Baler has been lubricated.
- Gate opens and closes freely.
- Check bale shape indicator adjustment.
- Belt tracking is satisfactory.
- Cycle twine arm. Check twine cutter adjustment and knife register.
- Check bale size alert to see it functions properly.
- Check gate lock for proper function.
- Drive chains have been adjusted properly and lubricated.
- Safety chain is attached.
- Tire pressures have been checked.

\_\_\_\_\_  
(Date set up)

\_\_\_\_\_  
(Signature)

EX,357U,B -19-26SEP86



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

335 and 375 Baler Checklists

**DELIVERY**

The following checklist is a reminder of very important information which should be conveyed to the customer at the time the baler is delivered. Check off each item as it is fully explained.

- Advise customer that life expectancy of this, like any other machine, is dependent on regular lubrication as described in the operator's manual.
- Give operator's manual to the customer and explain all operating adjustments and lubrication fully.
- Explain proper bale handling procedures.
- Advise to use safety chain.
- Explain proper ASAE standard dimensions for PTO hookup.

- Advise customer of safety precautions that must be observed while using this baler.
- Advise the customer never to discharge bales on sloping ground and if moving bales with a tractor loader, the loader MUST have a grapple.
- When baler is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. Various safety lights and devices are available. In this regard, tell customers to check local governmental regulations.
- Advise customer to set front and rear wheels out on tractors having adjustable-tread width to avoid driving over hay.

(Date Delivered)

(Signature)

335 and 375 Baler Checklists

**AFTER SALE**

It is suggested the following items be checked some-time during the first season's operation.

- Go over entire machine for loose or missing hardware.
- Check belt lacing for excess wear.
- Check belt pins every 1000 bales. Replace worn or damaged pins.
- All chains are properly tightened.
- All safety shields are in place
- Check for broken or damaged parts.
- If possible, run the baler to see if it is functioning properly.
- A good quality twine is being used and is threaded properly.
- Check operating adjustments. If possible, inspect wraps on a few bales.
- Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions.

(Date Checked)

(Signature)

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**