

410A Mulch Tiller

**John Deere Werke Zweibrücken
OMZ92587 Issue B9**

European Version

Printed in Germany

ENGLISCH

Contents

	Page		Page
Identification View	00-1	Engaging parking brake	30-8
Safety	05-1	Storing wheel blocks	30-9
Safety Decals	10-1	Operating the Machine	
Operator's manual	10-1	Keep riders off machine	35-1
Maintenance and repair	10-1	Safe operating procedures	35-2
Folding wings	10-1	Tightening hardware	35-3
Locking the wings	10-2	Operating guidelines	35-4
Locking the main frame	10-2	Unlocking depth control	35-5
Preparing the Tractor		Adjusting mulch tiller front-to-rear level	35-6
For all tractors	15-1	Adjusting mulch tiller side-to-side level	35-7
Selective control valve	15-1	Setting single point depth control	35-8
Adjusting metering valves	15-2	Adjusting disk gangs depth	35-9
Securing 3-point hitch	15-4	Adjusting disk scrapers	35-10
Positioning drawbar	15-5	Adjusting rolling basket down pressure	35-11
Preparing the Machine		Adjusting spike-tooth harrow angle	35-11
Checking and lubricating mulch tiller	20-1	Adjusting spike-tooth harrow height	35-12
Installing tractor front end weights	20-1	Storing spike-tooth harrow	35-12
Checking tire pressure	20-1	Lubrication and Maintenance	
Attaching and Detaching		Grease	40-1
Attaching to Tractor	25-1	Lubrication symbol	40-2
Connecting mulch tiller to tractor	25-2	As required	40-2
Checking machine leveling	25-5	Every 10 hours	40-2
Detaching from tractor	25-6	Every 50 hours	40-3
Transporting		Troubleshooting	45-1
Positioning drawbar	30-1	Service	
Storing jackstand	30-1	Using safe service procedures	50-3
Raising and locking up mulch tiller	30-2	Servicing tires safely	50-3
Installing reflectors	30-3	Checking wheel bolts and bearings	50-4
Transporting on a road	30-4	Replacing ground engaging tools	50-5
Hydraulic trailer brake	30-5	Using special socket wrench-attachment	50-5
Trailer air brake	30-6	Setting torque on spring-reset standards	50-6
Trailer air brake valve	30-7	Setting torque on Tru-Depth™ standards	50-7
Compressed air tank	30-7	Checking standard bushings	50-8
Brake cylinder for air brake	30-8	Replacing split tension bushings	50-9
		Checking torque on disk gangs	50-10

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMZ92587 B9-19-05FEB99

COPYRIGHT© 1999
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1998, 1997 Deere & Company

Contents

	Page
Gang bolt wrenches	50-10
Tightening gang bolts	50-10
Replacing disk gang scraper blades	50-12
Preventing hydraulic system contamination	50-13
Checking hydraulic system (Single point depth control)	50-14
Checking sweeps depth control cylinders . . .	50-15
Hydraulic sweeps depth control diagnosis analyzing test	50-16
Removing and repairing hydraulic cylinders	50-17
Bleeding sweeps depth control cylinders . . .	50-18
Installing and bleeding wing fold cylinders . . .	50-19
Laying the hydraulic lines	50-20
Hydraulic circuit diagrams	50-21
 Storage	
Preparing mulch tiller for storage	55-1
Removing mulch tiller from storage	55-2
 Specifications	
Tractor recommendations	60-1
Specifications	60-1
Serial number plate	60-2

Index

<https://www.ebooklibonline.com>

Hello dear friend!

 
Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Identification View

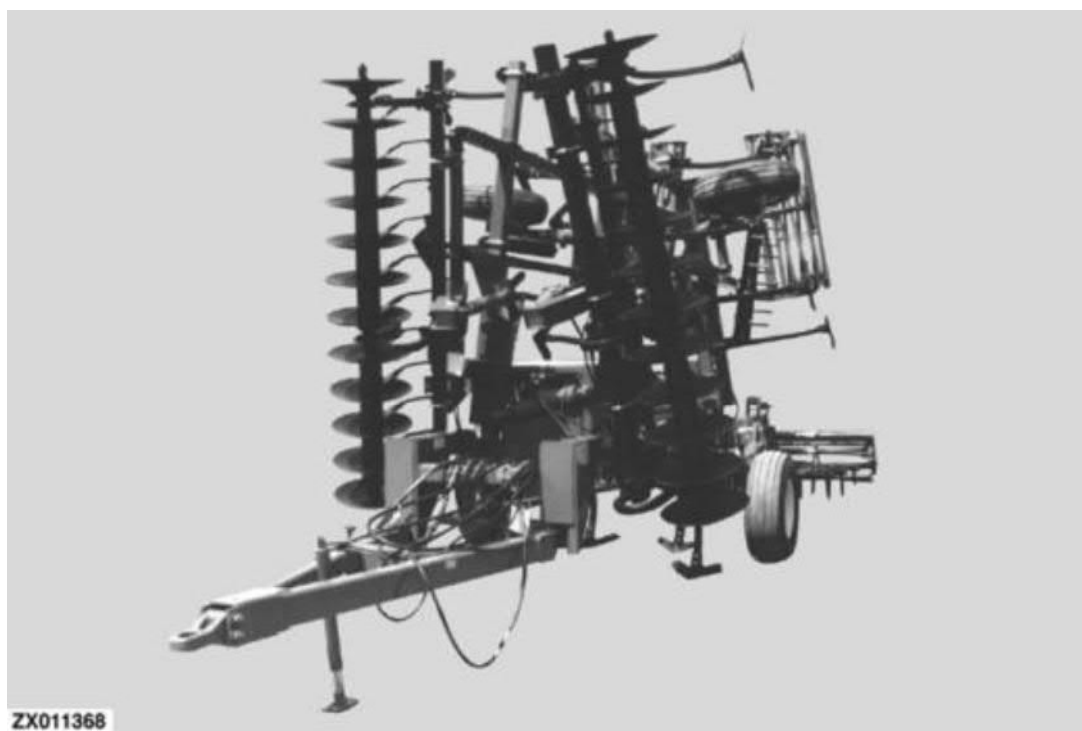

ZX011368
-UN-25JUN97

410A Mulch Tiller, 6 m Version

ZX_OM410A008618-19-10MAY97

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-29SEP98

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

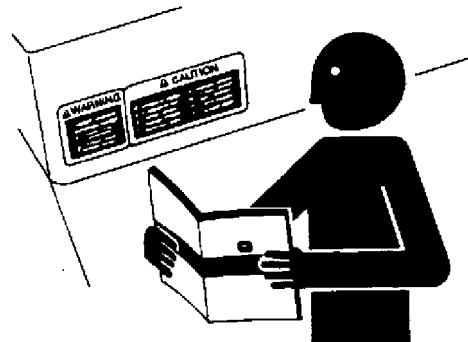

DX,READ -19-03MAR93

TS201 -UN-23AUG88



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



OPERATE SAFELY

Never ride or permit others to ride on machine.

 
Stay clear of ditches or creeks during operation.

ALWAYS operate with wings in down position.

ALWAYS lower machine to ground when not in use.

ALWAYS have tractor stopped on level ground when raising or lowering wings.

ALWAYS shut off tractor and shift to "Park" or set brakes when leaving tractor.

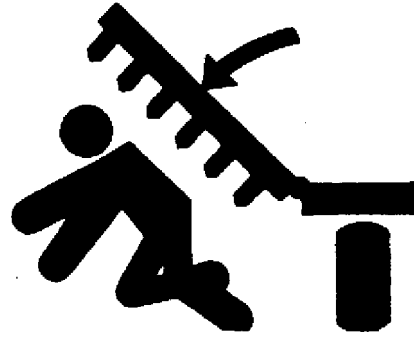


1N4,714C.A -19-30SEP96

N39547 -UN-06OCT88

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

 Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

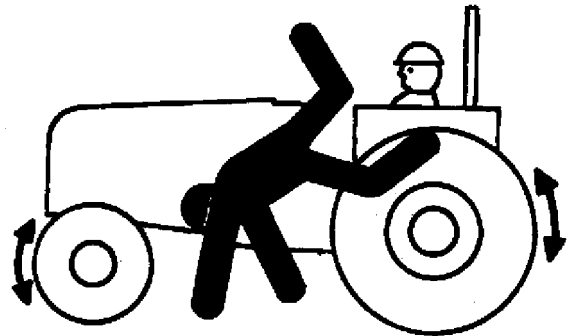

DX,RIDER -19-03MAR93


TS290 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

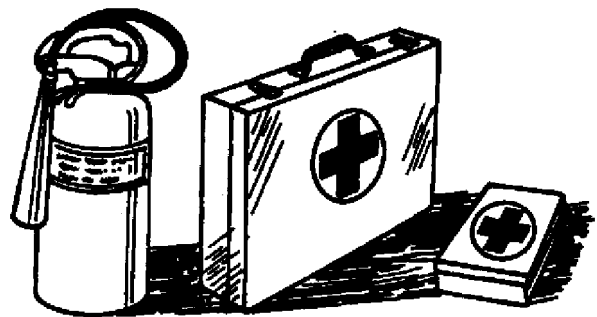

DX,FIRE2 -19-03MAR93


TS291 -UN-23AUG88



WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

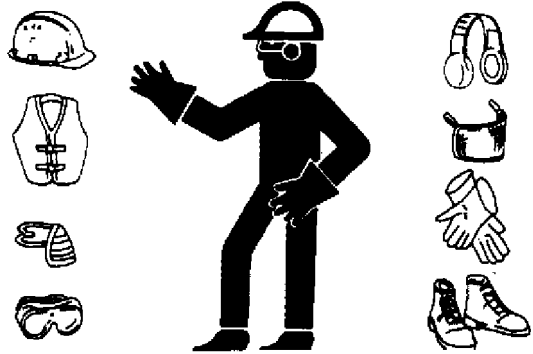


DX,WEAR2 -19-03MAR93

TS206 -UN-23AUG68

USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost.

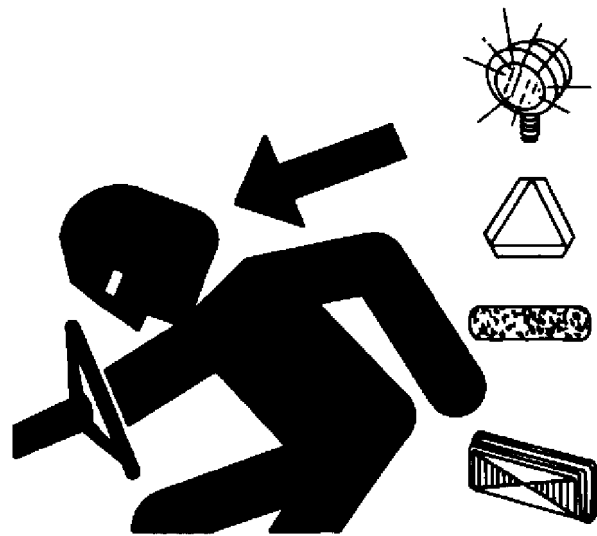

DX,FLASH -19-04FEB99

TS951 -UN-12APR90

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>