

# **680, 690, 680 MultiCut and 690 MultiCut Large Square Balers**

**John Deere Werke Zweibrücken  
OMZ92444 Issue B7**

**European Edition**

Printed in Germany

**ENGLISCH**

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 20 to 50 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS LARGE SQUARE BALER IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS LARGE SQUARE BALER SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this large square baler will relieve the manufacturer of all liability for any resulting damage or injury.

# Contents

	Page		Page
<b>Identification View</b> . . . . .	00-1	Blade check at cutting mechanism . . . . .	30-10
<b>Safety</b> . . . . .	05-1	Sensor and valve test . . . . .	30-11
<b>Safety Decals</b> . . . . .	10-1	Language entry . . . . .	30-14
<b>How the Baler Works</b> . . . . .	15-1	Checking the valves . . . . .	30-14
<b>Preparing the Baler</b>		<b>Operating the Baler</b>	
Preparation . . . . .	20-1	Adjusting pick-up working height . . . . .	35-1
Adjusting tongue height . . . . .	20-1	Bale chute . . . . .	35-2
Adapting the jointed shaft . . . . .	20-3	Baling pressure . . . . .	35-3
<b>Before Operating the Baler</b>		Adjusting bale length . . . . .	35-3
Main drive . . . . .	25-1	Twine . . . . .	35-4
Feed rake drum drive . . . . .	25-1	Electric twine fault display . . . . .	35-8
Knotter shaft drive . . . . .	25-1	Tripping the twine tying cycle by hand . . . . .	35-8
Pick-up drive . . . . .	25-2	Emptying the bale channel . . . . .	35-9
Attaching baler to tractor . . . . .	25-2	<b>Adjustments</b>	
Hydraulic connections . . . . .	25-4	General information . . . . .	40-1
Compressed air connections . . . . .	25-4	Needle adjustment . . . . .	40-1
Hydraulic brake . . . . .	25-4	Twine bar . . . . .	40-4
Jointed shaft . . . . .	25-5	Plunger adjustment . . . . .	40-5
Electrical connection . . . . .	25-6	Guide rail cleaning . . . . .	40-5
Parking brake . . . . .	25-6	Setting the rake relative to the plunger . . . . .	40-6
Hydraulic system . . . . .	25-7	Sensor adjustment - rake drum . . . . .	40-6
Pick-up . . . . .	25-8	Sensor adjustment - piston rod . . . . .	40-7
Bale discharge chute . . . . .	25-8	Adjusting flywheel cleaning mechanism . . . . .	40-7
Lighting system . . . . .	25-8	Twine brake adjustment . . . . .	40-7
Detaching the baler . . . . .	25-9	<b>Knotter</b>	
Maintenance platform . . . . .	25-11	Safety rules . . . . .	45-1
<b>Electronic Controls</b>		Knotter hook . . . . .	45-1
On-board computer . . . . .	30-1	Twine mount . . . . .	45-2
Control and indicator box . . . . .	30-2	Blade lever . . . . .	45-3
Control functions . . . . .	30-3	Knotting . . . . .	45-5
Adjusting bale density . . . . .	30-4	<b>Optional Equipment</b>	
Releasing the bale channel . . . . .	30-7	Cutting mechanism . . . . .	50-1
Bale counter . . . . .	30-7	MultiCut cutting platform . . . . .	50-2
Alarm messages . . . . .	30-8	Length of cut . . . . .	50-2
		Adjusting the length of cut . . . . .	50-3

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMZ92444 B7-19-02FEB97

COPYRIGHT© 1997  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1996 Deere & Company

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

 
The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Contents

	Page
Changing the blades . . . . .	50-4
Blade adjusting shaft . . . . .	50-6
Adjusting the blade safety mechanism . . . . .	50-7
Compressor . . . . .	50-8
<b>Lubricants and Capacities</b>	
Use of gear oil . . . . .	55-1
Use of hydraulic oil . . . . .	55-2
Grease . . . . .	55-3
<b>Lubrication</b>	
General information . . . . .	60-1
Service intervals . . . . .	60-1
Main jointed shaft . . . . .	60-1
Important lubricating points . . . . .	60-2
<b>Troubleshooting</b>	
Warning and indicator lamp . . . . .	65-1
Needle yoke . . . . .	65-1
Knotter mechanism . . . . .	65-1
Rake drum . . . . .	65-2
Electronic controls . . . . .	65-3
Other malfunctions . . . . .	65-4
<b>Service</b>	
General information . . . . .	70-1
Cleaning . . . . .	70-3
Tires . . . . .	70-3
Opening the front guard . . . . .	70-4
Hydraulic system . . . . .	70-5
Changing and checking the oil in the gearboxes . . . . .	70-6
Compressed air tanks . . . . .	70-11
Brake cylinders . . . . .	70-11
Replacing rake guide rollers . . . . .	70-11
<b>Storage</b>	
After the season . . . . .	75-1
Removing baler from storage . . . . .	75-3
<b>Specifications</b> . . . . . 80-1	
<b>Serial Number</b> . . . . . 85-1	
<b>Index</b>	

# Identification View

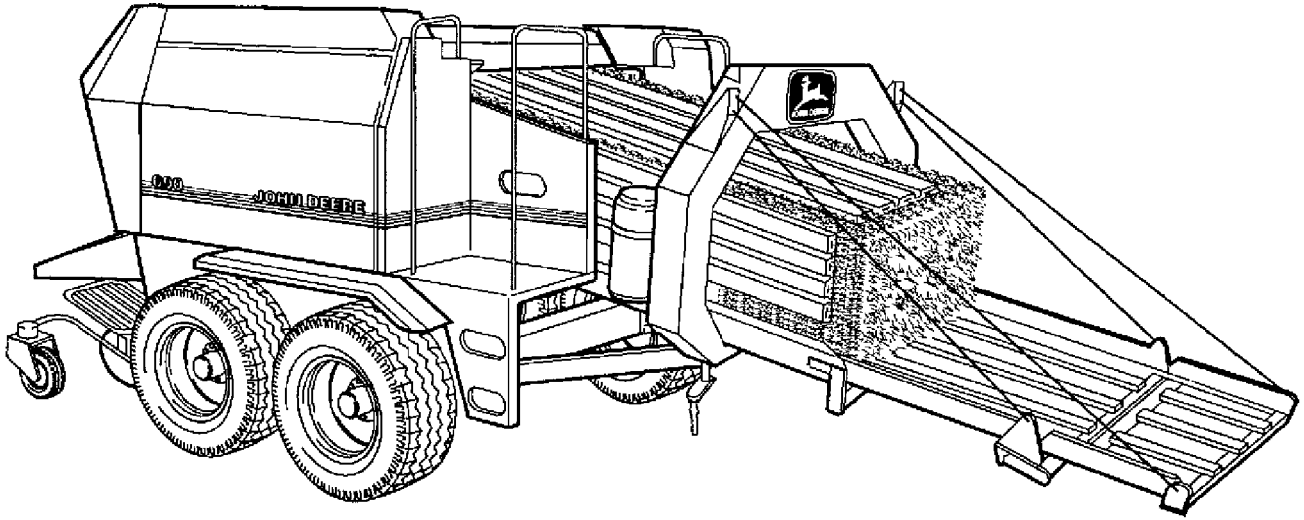

690 Large Square Baler

**ZX007934**

ZX007934 -UN-19DEC95


ZX\_OMGPP1004413-19-01FEB96

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

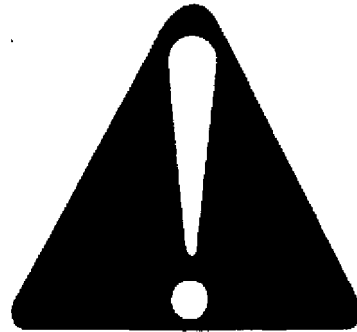

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68


## FOLLOW SAFETY INSTRUCTIONS

 Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

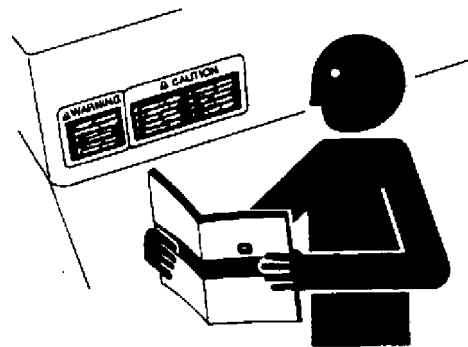

DX,READ -19-03MAR93

T5201 -UN-23AUG88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



## OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



FX,ROAD -19-01MAY91

 
H28930 -UN-30JUN89

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

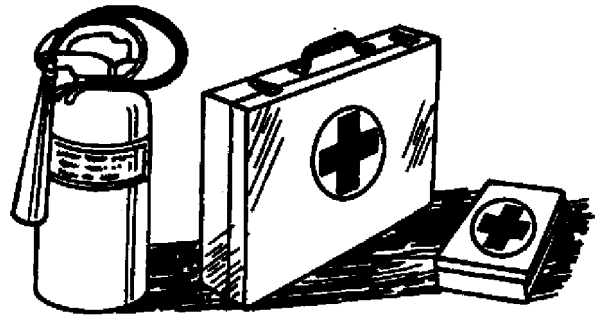

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88


## WEAR PROTECTIVE CLOTHING

 Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

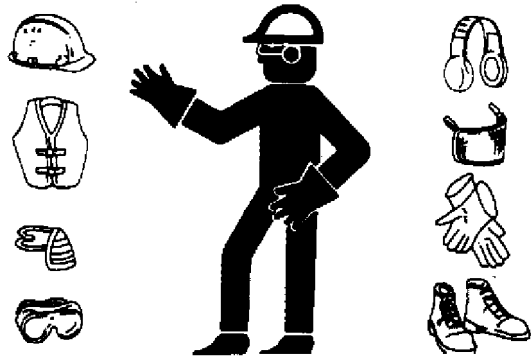

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88



## CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91

## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




TS1644 -UN-22AUG95

DX,PTO -19-12SEP95

## USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

 Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

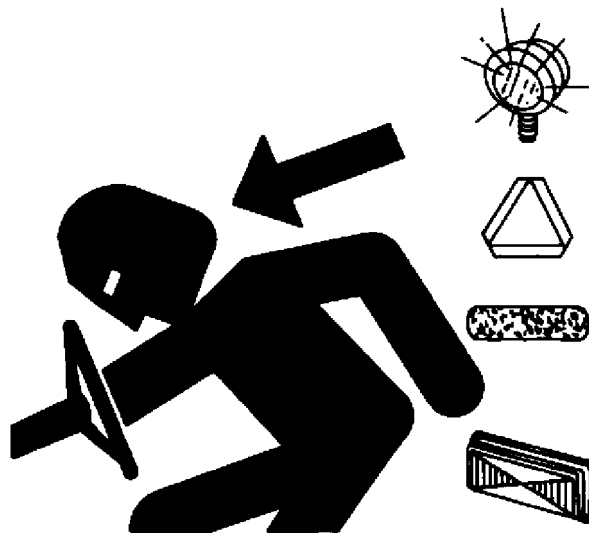

TS951 -UN-12APR90

DX,FLASH -19-12SEP95




## USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

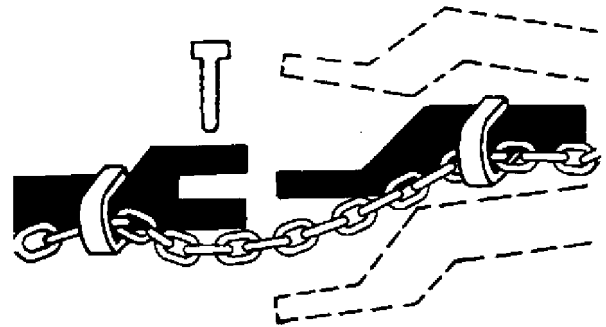

DX,CHAIN -19-03MAR93

## OPERATE BALER SAFELY

To avoid injury or death by being pulled into the machine:

- DO NOT attempt to feed crop or twine into baler or unplug feed area WHILE BALER IS RUNNING. The baler feeds material faster than you can release it.
- Disengage PTO, shut off engine and apply flywheel brake.
- Stand clear of baler at all times when machine is operating.

ZX,OMGPP1004541-19-23SEP95

## EXTINGUISHING A FIRE

1. Eject bale immediately.
2. Move tractor and baler upwind as far as possible from flammable material.
3. Fold in bale chute.
4. Use pressurized water fire extinguisher or other water supply to put out fire.

ZX,OMGPP1004665-19-23SEP95



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

-UN-23AUG88  
T5218

 
## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

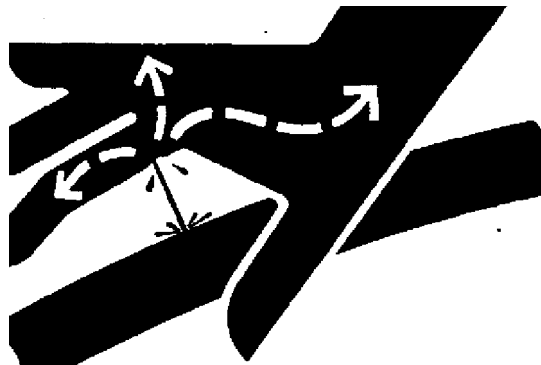

DX,FLUID -19-03MAR93


-UN-23AUG88  
X9811



## SERVICE MACHINES SAFELY

 Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

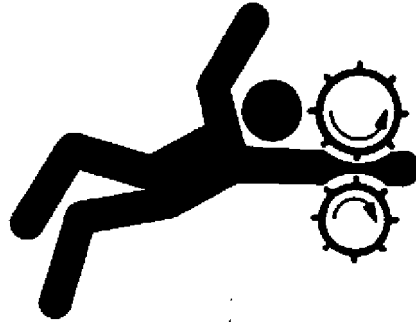


DX.LOOSE -19-04JUN90

TS228 -UN-23AUG88

## SUPPORT MACHINE PROPERLY

 Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

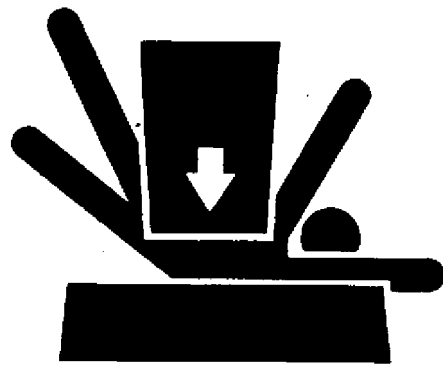

DX.LOWER -19-04JUN90

TS229 -UN-23AUG88

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**