

825 Cutting Platform

**John Deere Werke Zweibrücken
OMZ92221 Issue E3**

Printed in Germany
ENGLISCH

Contents

	Page		Page
Identification View	00-1	Adjusting Cutterbar Forward	25-17
Safety	05-1	Adjusting Cutterbar Rearward	25-19
Safety Decals	10-1	Adjusting Auger Height	25-22
Attaching and Detaching		Adjusting Auger Finger Timing	25-23
Attaching Cutting Platform	15-1	Auger forward/rearward Adjustment	25-24
Locking Cutting Platform	15-2	Adjusting Stripper	25-25
Cutting Platform Drive Shaft	15-4	Adjusting Auger Chain	25-25
Hydraulic and Electrical Connections	15-4	Auger Floor Strippers	25-26
		Stubble Lights	25-26
Transport		Periodic Service	30-1
Road Safety Switch	20-1	Lubricants, Oil and Capacities	
Supports on Cutting Platform Trailer	20-2	Gear Case Oil	35-1
Field Adjustments		Grease	35-2
Cutting Platform Controls	25-1	Alternative and Synthetic Lubricants	35-3
Securing Header Lift Cylinder	25-1	Mixing of Lubricants	35-3
Sending Unit for Reel Height Resume	25-2	Lubricant Storage	35-3
Reel fore-and-aft Resume Control	25-2	Lubrication	
Skid Plates	25-3	Lubrication Symbols	40-1
Spare Knife	25-4	Chains	40-1
Cutting Platform Stripper	25-4	Cutterbar	40-1
Feeder House Stripper Plates	25-5	Daily	40-2
Setting Reel Safety Stops	25-5	Troubleshooting	
Adjusting Reel Height and Levelling	25-6	Cutterbar	45-1
Rephasing Reel Cylinders	25-6	Down and Tangled Crops	45-2
Bleeding the System	25-7	Feeder House	45-2
Adjusting Pickup Finger Pitch	25-8	Auger	45-3
Adjusting Width between Reel Arms	25-8	Poor Cutting Action	45-3
Hydraulic Adjustment of Cylinders fore/aft	25-9	Reel	45-4
Speed Ratio Sensor Adjustment	25-9	Service	
Crop Dividers	25-10	Securing Header Lift Cylinders	50-1
Long Crop Dividers	25-10	Safe Cutting Platform Operation	50-1
Adjustments of Long Crop Divider	25-11	Replacing Cutterbar Knife	50-2
Adjustments of Short Crop Divider	25-12	Adjusting Knife	50-2
Installation of Divider Points	25-13	Setting Knife Register	50-3
Using Lifting Guards	25-13	Knife Section Service Kit	50-3
Knife Guard	25-14		
Cutterbar/Skid Plate Tilt Adjustment	25-15		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMZ92221 E3-19-24JUN93

COPYRIGHT© 1993
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

	Page
Replacing Knife Sections	50-3
Auger Fingers	50-4
Stubble Light Bulb Replacement	50-4
Replacing Cutterbar Drive Belt	50-5
Adjusting Idler Position	50-5
 Storage	
End of Season Service	55-1
Beginning of Season Service	55-2
 Fundamentals of Combine Harvesting	
Choice of Harvesting Time	60-1
Cutting Platform Operation	60-1
Reel Speed	60-1
Reel Position in Standing Crops	60-2
Reel Position in Down Crops	60-2
Feeding of Crop	60-3
 Specifications	
	65-1
 Serial Number	
	70-1
 Index	

<https://www.ebooklibonline.com>

Hello dear friend!

 
Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Identification View

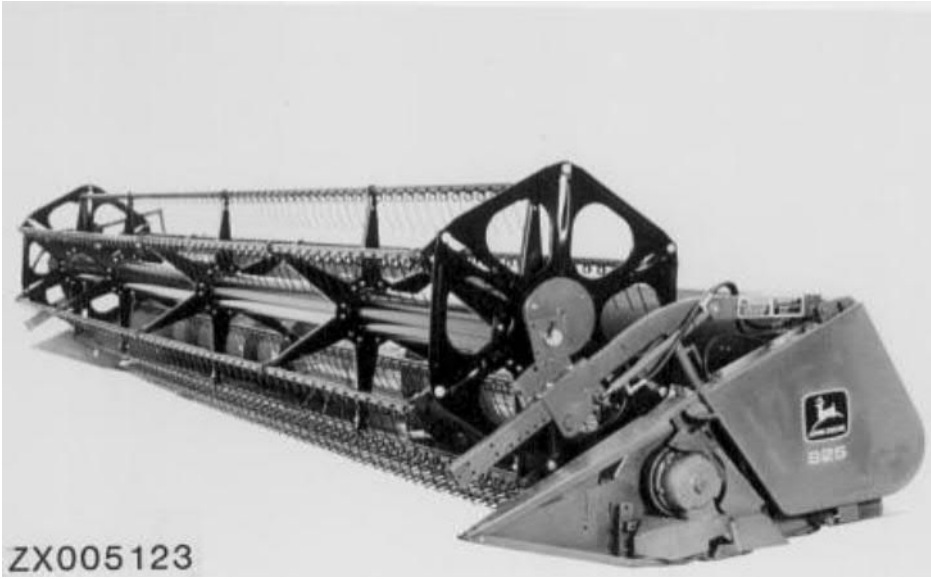


ZX,OM825 002768-19-13MAY93

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

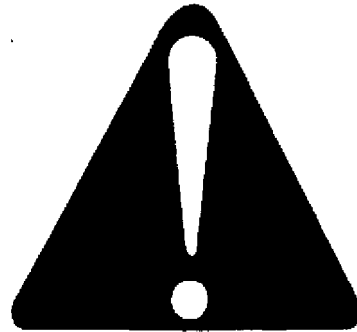

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

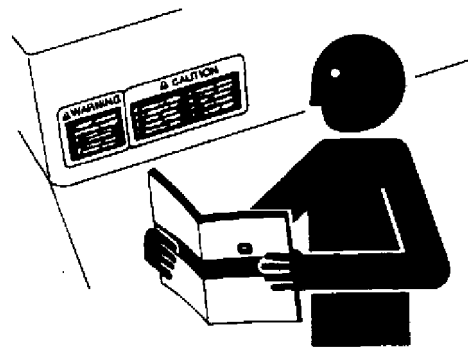

DX,READ -19-03MAR93

TS201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



H28930 -UN-30JUN89


FX,ROAD -19-01MAY91

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driving on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

If legally permitted, use flashing warning lights or rotary beacons whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install additional flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

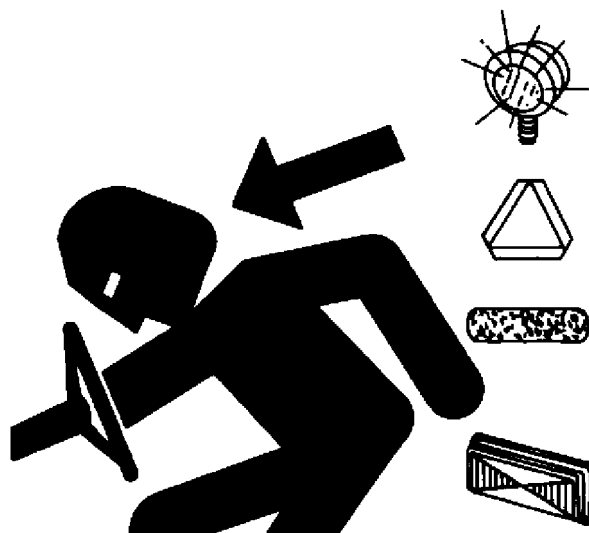

T5951 -UN-12APR90

ZX,FLASH -19-01OCT91



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading




PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

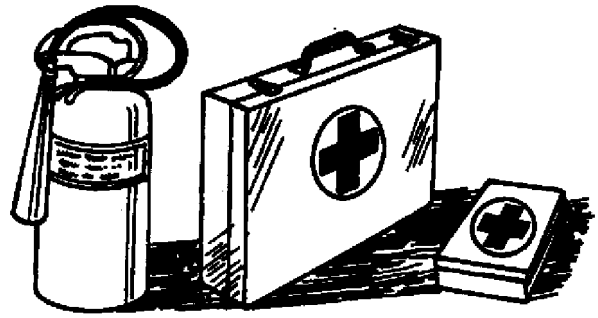

DX.FIRE2 -19-03MAR93

TS291
-UN-23AUG88


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

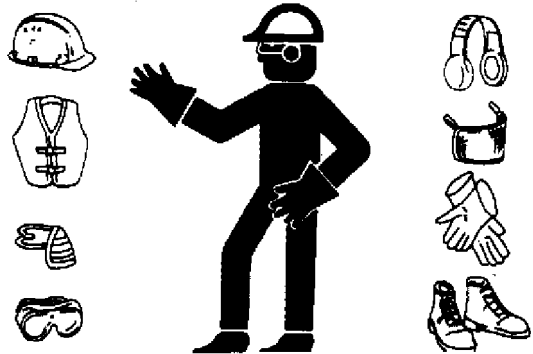

DX.WEAR -19-10SEP90

TS206
-UN-23AUG88

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX.STORE -19-03MAR93


TS219
-UN-23AUG88



ROAD SAFETY SWITCH

IMPORTANT: Before driving combine on public roads, make sure that road safety switch is in road position. Also move harvesting unit and unloading auger to transport position.

 This ensures that all hydraulic functions — with exception of the steering system — are not working.

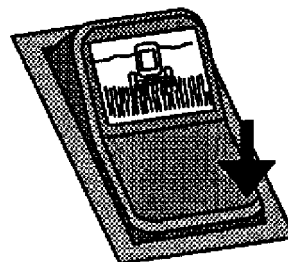

ZX 002458

ZX, SWITCHXZCO -19-27JAN92

-JUN-23OCT00
ZX002458

DRIVING THE COMBINE

Operate machine only when all guards are correctly installed.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.

 
Always adapt ground speed to road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope. Be especially careful when turning on slopes with full grain tank.

Attach harvesting units and other implements to combine with extreme care.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the combine swings out. Attachments and ground conditions affect the driving characteristics of the combine.

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches and obstructions which may cause the combine to tip, particularly on hillsides.

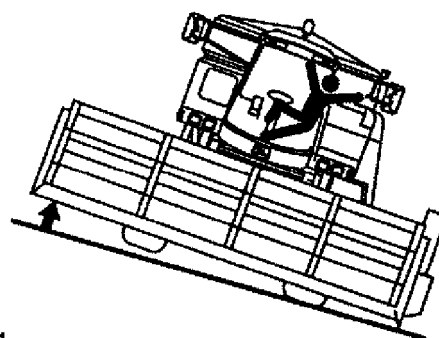

ZX002461

ZX, DRIVEXZCO -19-27JAN92

-JUN-16JUN95
ZX002461

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>