

**2254, 2256, 2258,  
2264, 2266  
and 2266 EXTRA  
Combines**  
(from serial no. 068584)

**John Deere Werke Zweibrücken  
OMZ92748 Issue A9**

European Version  
Printed in Germany  
**ENGLISCH**

# Contents

	Page		Page
<b>Identification Views</b> . . . . .	00-1	Potentiometer for reel fore-and-aft resume control . . . . .	15-29
<b>Safety</b> . . . . .	05-1	Potentiometer for header height control . . . . .	15-30
<b>Safety Decals</b> . . . . .	10-1	Header autofloat control . . . . .	15-31
<b>Controls and Instruments</b>		Response rate control for automatic functions . . . . .	15-34
General view of controls and instruments . . . . .	15-1	Dial-A-Matic™ switch . . . . .	15-35
Switch console . . . . .	15-2	Throttle lever (2254-2266) . . . . .	15-35
Multi-function lever . . . . .	15-8	Throttle switch (2266 EXTRA) . . . . .	15-36
Corner post . . . . .	15-9	Gear shift lever . . . . .	15-36
Roof switch console . . . . .	15-10	Rotary fan switch . . . . .	15-37
Roof console . . . . .	15-11	Cooling compartment switch . . . . .	15-37
Steering column . . . . .	15-12	Air conditioning/heater switch . . . . .	15-38
Right armrest — Functions - Selector switch (header/reel) . . . . .	15-13	Right armrest — Functions - Reel speed switch . . . . .	15-39
Manual leveling control switch . . . . .	15-14	Cylinder speed switch . . . . .	15-39
Automatic leveling control switch . . . . .	15-14	Fan speed switch . . . . .	15-40
Operating hillmaster leveling system switches . . . . .	15-15	Concave clearance adjusting switch . . . . .	15-40
Before driving hillmaster combine . . . . .	15-16	Unloading auger drive switch . . . . .	15-41
Operating with automatic leveling control . . . . .	15-17	Multi-function lever — Functions - Emergency cut-off switch . . . . .	15-41
Operating with manual leveling control . . . . .	15-17	Header function resume control buttons . . . . .	15-42
Hillmaster combine road travel . . . . .	15-19	Reel height switch . . . . .	15-43
Header drive switch . . . . .	15-19	Raise/lower header switch . . . . .	15-43
Separator drive switch . . . . .	15-20	Reel fore-and-aft/header parallel adjustment switch . . . . .	15-44
Unloading auger swing switch . . . . .	15-20	Roof console — Functions - Mirror heater switch . . . . .	15-45
Grain tank cover opening tumbler switch . . . . .	15-21	Electrical outside mirrors switch . . . . .	15-45
Header height/tilt control switch . . . . .	15-22	Windshield wiper switch . . . . .	15-46
Header function resume control switch . . . . .	15-23	Windshield washer switch . . . . .	15-46
Switch for automatic machine adjustments . . . . .	15-23	Road safety switch . . . . .	15-47
Chopper distributor adjustment switch . . . . .	15-24	Steering column — Functions - Horn button . . . . .	15-47
Demoisturizer switch . . . . .	15-25	Cold weather starting aid button . . . . .	15-47
Reel speed control switch . . . . .	15-25	Starter switch . . . . .	15-48
Operating range of reel speed control system . . . . .	15-27	Feeder house/header reverser . . . . .	15-49
Potentiometer for reel height resume control . . . . .	15-28		
		<b>Warning Devices and Monitors</b>	
		Indicator lights I . . . . .	20-1
		Oil pressure indicator light . . . . .	20-1

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMZ92748 A9-19-01JAN99

COPYRIGHT© 1999  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual

Contents

	<b>Page</b>		<b>Page</b>
Coolant/charge air temperature indicator light . . . . .	20-2	Combine data center setting unit . . . . .	20-29
Parking brake indicator light . . . . .	20-2	Operational diagrams . . . . .	20-30
Brake fluid indicator light . . . . .	20-2	Selecting combine data center units . . . . .	20-31
Hydraulic oil temperature indicator light . . . . .	20-3	Selecting area counter functions . . . . .	20-32
Straw warning device indicator light . . . . .	20-3	Cleaning area display . . . . .	20-33
Straw chopper/chaff spreader speed indicator light . . . . .	20-3	Changing header width . . . . .	20-34
Tailings elevator indicator light . . . . .	20-4	Setting partial header width . . . . .	20-35
Straw walker indicator light . . . . .	20-4	Selecting language . . . . .	20-36
Clean grain elevator indicator light . . . . .	20-4	Selecting crop . . . . .	20-37
Fan indicator light . . . . .	20-5	Automatic setting according to crop . . . . .	20-38
Threshing cylinder indicator light . . . . .	20-5	Clearing crops . . . . .	20-39
Indicator lights II . . . . .	20-6	Reading crop settings . . . . .	20-40
Intercooler indicator light . . . . .	20-6	Changing crop settings . . . . .	20-41
Fuel level indicator light . . . . .	20-6	Automatic settings (individual) . . . . .	20-42
Air cleaner indicator light . . . . .	20-7	Low shaft speed monitor system . . . . .	20-43
Hydraulic oil filter indicator light . . . . .	20-7	Harvest performance monitor . . . . .	20-45
Hydraulic oil level indicator light . . . . .	20-7	Preliminary adjustments . . . . .	20-46
Alternator indicator light . . . . .	20-8	Switching on harvest performance monitor . . . . .	20-46
Grain tank indicator light (1/2) . . . . .	20-8	Operational adjustment . . . . .	20-47
Grain tank indicator light (3/4) . . . . .	20-8	Sensitivity of sensors . . . . .	20-49
Grain tank indicator light (full) . . . . .	20-9	Operational check . . . . .	20-50
Unloading auger drive indicator light . . . . .	20-9	Straw warning device . . . . .	20-51
Four wheel drive indicator light . . . . .	20-10	ContourMaster description (option) . . . . .	20-52
Air conditioner indicator light . . . . .	20-10		
Leveling system indicator light . . . . .	20-10	<b>Lighting System and Signals</b>	
Tilt limit indicator light . . . . .	20-11	Parking light and low beam . . . . .	25-1
Harvest performance monitor gauge . . . . .	20-11	Full beam . . . . .	25-1
Header height gauge . . . . .	20-11	Full beam indicator light . . . . .	25-1
Distributor plate gauge . . . . .	20-12	Head lights . . . . .	25-2
Fuel gauge . . . . .	20-12	Turn signals . . . . .	25-2
Coolant temperature gauge . . . . .	20-12	Turn signals indicator lights . . . . .	25-2
Ground pressure gauge . . . . .	20-12	Front turn-signal and clearance lights . . . . .	25-3
Infotrak monitor description . . . . .	20-13	Rear turn-signal, tail and stop lights . . . . .	25-3
Infotrak monitor functions . . . . .	20-14	Registration plate light . . . . .	25-4
Setting and displaying time of day . . . . .	20-16	Work lights . . . . .	25-4
Input of specific machine data . . . . .	20-17	Grain tank lighting . . . . .	25-6
Software version . . . . .	20-17	Straw hood lighting . . . . .	25-7
Machine code . . . . .	20-18	Beacon lights . . . . .	25-7
Transmission speed ratio code . . . . .	20-18	Hazard warning lights . . . . .	25-8
Tire radius code . . . . .	20-18	Indicator light bulb test . . . . .	25-8
Determining tire radius . . . . .	20-19		
Engine impulse code . . . . .	20-19	<b>Operator's Cab</b>	
Cylinder speed alarm . . . . .	20-20	Access ladder . . . . .	30-1
Fan speed alarm . . . . .	20-20	Door . . . . .	30-3
Infotrak SERVICE information . . . . .	20-21	Operator's seat . . . . .	30-3
Automatic combine adjustments . . . . .	20-22	Lumbar support . . . . .	30-4
Combine data center . . . . .	20-23	Left armrest . . . . .	30-4
Combine data center control keys . . . . .	20-23	Right armrest . . . . .	30-4
Area counter . . . . .	20-26	Air comfort seat . . . . .	30-6
Combine data center display . . . . .	20-27		

Continued on next page

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Contents

	Page		Page
Passenger seat . . . . .	30-6	Adjusting engine speed . . . . .	45-3
Storage compartment for operator's manuals . . . . .	30-6	Raising header . . . . .	45-4
Cooling compartment . . . . .	30-7	Forward and reverse travel . . . . .	45-4
Steering column . . . . .	30-7	Ground speed . . . . .	45-5
Foot brakes . . . . .	30-8	Hydrostatic system . . . . .	45-5
Parking brake . . . . .	30-8	Transport information . . . . .	45-6
Releasing parking brake . . . . .	30-9	Four-wheel drive . . . . .	45-7
Sun visor . . . . .	30-9	Road safety switch . . . . .	45-7
Outside mirrors . . . . .	30-10	Towing the combine . . . . .	45-8
Rear window of cab . . . . .	30-10		
Switching on heater . . . . .	30-10	<b>Wheels, Axles and Additional Weights</b>	
Adjustable air louvers . . . . .	30-11	Tire maintenance . . . . .	50-1
Interior lighting . . . . .	30-12	Wheel bolts and nuts . . . . .	50-1
Radio and CB radio . . . . .	30-12	Mounting tires . . . . .	50-2
		Changing tires . . . . .	50-3
<b>Pre-Starting Checks</b>		Driven wheels . . . . .	50-3
Daily checks . . . . .	35-1	Steered wheels . . . . .	50-7
Engine oil level . . . . .	35-1	Tire pressures . . . . .	50-9
Hydraulic oil level . . . . .	35-1	Adjusting rear axle width . . . . .	50-10
Coolant level . . . . .	35-2	Adjusting the steering angle . . . . .	50-15
Fuel level . . . . .	35-2	Rear wheel weights and hood weights . . . . .	50-16
Tires . . . . .	35-2		
Fuel system . . . . .	35-3	<b>Preparations and Field Operation</b>	
Lubricating the combine . . . . .	35-3	Choice of harvesting time . . . . .	55-1
Checks in operator's cab . . . . .	35-3	Avoiding grain losses . . . . .	55-1
		Cutting platform . . . . .	55-2
<b>Operating the Engine</b>		Feeder house . . . . .	55-2
Engine break-in . . . . .	40-1	Separator . . . . .	55-2
Safety rules for starting engine . . . . .	40-1	Adjusting cylinder and concave . . . . .	55-3
Starting the engine . . . . .	40-2	Normal crops . . . . .	55-3
Engine oil pressure indicator light . . . . .	40-4	Coarse crops . . . . .	55-4
Warming up the engine . . . . .	40-4	Separating process . . . . .	55-4
Idling the engine . . . . .	40-5	Grain cleaning process . . . . .	55-5
Cold weather starting aid . . . . .	40-5	Grain recovery . . . . .	55-5
Instructions for using cold weather starting aid . . . . .	40-6	Evaluating threshing action . . . . .	55-6
Coolant preheater . . . . .	40-6	Checking straw at rear of combine . . . . .	55-6
Booster battery . . . . .	40-7	Grain tank sample . . . . .	55-6
Operating in tropical conditions . . . . .	40-7	Checking tailings . . . . .	55-7
Stopping the engine . . . . .	40-8	Identifying threshing problems . . . . .	55-7
Stalling of engine . . . . .	40-8	Overthreshing . . . . .	55-8
		Underthreshing . . . . .	55-8
<b>Driving and Transporting the Combine</b>		Adjusting fan speed . . . . .	55-9
Driving the combine . . . . .	45-1	Adjusting the chaffer . . . . .	55-10
Steering and driving . . . . .	45-1	Slope Master system . . . . .	55-11
Releasing parking brake . . . . .	45-1	Adjusting the sieve . . . . .	55-12
Operating the foot brakes . . . . .	45-2	Acceptable grain losses . . . . .	55-12
Engaging a gear . . . . .	45-2	The meaning of grain losses . . . . .	55-12
Road safety switch . . . . .	45-3	Determining grain losses . . . . .	55-13
		Causes of grain losses . . . . .	55-15
		Cutting platform losses . . . . .	55-15

Continued on next page

Contents

	Page		Page
Threshing unit losses . . . . .	55-15	De-awning plates . . . . .	65-10
Straw walker losses . . . . .	55-16	Concave settings . . . . .	65-10
Sieve losses . . . . .	55-16	Changing the concave . . . . .	65-11
General prevention of grain losses . . . . .	55-17	Adjusting the concave . . . . .	65-11
Threshing adjustments . . . . .	55-18	Second cylinder . . . . .	65-15
Combine settings and automatic adjustments . . . . .	55-19	Second concave . . . . .	65-15
Additional combine settings . . . . .	55-20	Finger rakes . . . . .	65-16
Preparations before changing crop . . . . .	55-21	Curtain . . . . .	65-16
Changing the harvesting unit . . . . .	55-22	Straw walkers . . . . .	65-17
Preparations for harvesting grain crops . . . . .	55-23	Fishbacks . . . . .	65-19
Preparations for harvesting rye . . . . .	55-23	Fan and windboard . . . . .	65-21
Preparations for harvesting peas . . . . .	55-24	Cross-shaker tines . . . . .	65-21
Preparations for harvesting corn . . . . .	55-25	Straw deflector plate . . . . .	65-22
Harvesting corn/cob mix (CCM) . . . . .	55-26	Metal sheet to separate chaff from straw . . . . .	65-23
Preparations for harvesting oil seed crops . . . . .	55-26	Side-curtain . . . . .	65-24
Preparations for harvesting sunflowers . . . . .	55-27	Sieve variants . . . . .	65-25
Operating the combine harvester . . . . .	55-27	Chaffer and sieve adjustment . . . . .	65-27
Header float control . . . . .	55-31	Chaffer extension . . . . .	65-28
Header function resume . . . . .	55-31	Chaffer extension inserts . . . . .	65-29
		Removing chaffer extension . . . . .	65-30
		Removing the chaffer . . . . .	65-30
		Removing the sieve . . . . .	65-31
<b>Feeder House</b>		<b>Chaff Spreader and Straw Chopper</b>	
Electrical and hydraulic connections . . . . .	60-1	Chaff spreader . . . . .	70-1
Header lift cylinders . . . . .	60-2	Operation . . . . .	70-1
Securing header lift cylinders . . . . .	60-2	Guard rail . . . . .	70-1
Service flaps . . . . .	60-3	Folding down the chaff spreader . . . . .	70-2
Chain tension . . . . .	60-4	Vanes on chaff spreader rotors . . . . .	70-2
Pivoting shield guide rolls . . . . .	60-4	Removing the chaff spreader . . . . .	70-3
Adjusting height of feeder drum . . . . .	60-5	Straw chopper . . . . .	70-4
Adjusting the area counter switch . . . . .	60-5	Switching chopper on and off . . . . .	70-4
Slip clutch on upper feeder shaft . . . . .	60-6	Adjusting straw distributor box . . . . .	70-5
Stripper on upper feeder shaft . . . . .	60-7	Driving on public roads . . . . .	70-5
Lower unit, feeder house variator . . . . .	60-7	Adjusting deflectors . . . . .	70-6
Reverser shifter fork and cable . . . . .	60-8	Electrical adjustments, centrally . . . . .	70-6
		Mechanical adjustments, centrally . . . . .	70-6
		Separate adjustment of deflectors . . . . .	70-7
<b>Separator and Cleaning Unit</b>		Adjusting counter-knives . . . . .	70-7
Service flaps . . . . .	65-1	Chopping corn and sunflowers . . . . .	70-8
Cylinder inspection flap stripper-crop adaptation . . . . .	65-2	Removing counter-knives . . . . .	70-8
Opening stone trap bottom plate . . . . .	65-2	Splitting and chopping . . . . .	70-9
Grain pan inserts . . . . .	65-3	Replacing rotating knives . . . . .	70-10
Cylinder rasp bars . . . . .	65-3		
Cylinder reduction gear . . . . .	65-5	<b>Grain Tank Loading and Unloading</b>	
Turning the cylinder . . . . .	65-6	Service openings . . . . .	75-1
Cylinder filler plates . . . . .	65-7	Grain tank cover . . . . .	75-3
Grain concave . . . . .	65-7	Unlocking/Opening the r.h grain tank cover . . . . .	75-5
Corn concave . . . . .	65-8	Checking and tensioning feeder chains . . . . .	75-6
Universal concave . . . . .	65-8		
Booster bar . . . . .	65-9		
Special rasp bar . . . . .	65-9		

Continued on next page

Contents

	<b>Page</b>		<b>Page</b>
Unloading drive overload protection . . . . .	75-7	Bleeding the fuel system . . . . .	90-13
Cover for unloading auger . . . . .	75-7	Access to cooling elements . . . . .	90-15
Sensor for grain tank filling gauge . . . . .	75-8	Layout of cooling elements . . . . .	90-16
Spill guard on discharge tube outlet . . . . .	75-8	Engine coolant . . . . .	90-16
<b>Fuel, Lubricants, Coolant and Capacities</b>		Flushing the cooling system . . . . .	90-17
Filling fuel tank . . . . .	80-2	Changing the thermostats . . . . .	90-20
Engine oil . . . . .	80-3	Drive belts — 6.8-L engine . . . . .	90-21
Coolant . . . . .	80-4	Drive belts — 8.1-L engine . . . . .	90-23
Cooling system capacity . . . . .	80-4	Air intake system . . . . .	90-24
Transmission oil . . . . .	80-5	Air cleaner (primary) element . . . . .	90-26
Use of transmission oil . . . . .	80-5	Cleaning air cleaner element housing . . . . .	90-27
Changing transmission oil . . . . .	80-8	Inspecting element . . . . .	90-28
Transmission and hydraulic oil . . . . .	80-9	Installing cleaner element . . . . .	90-29
Brake fluid . . . . .	80-9	Air intake lines . . . . .	90-30
Grease . . . . .	80-10	Turbocharger . . . . .	90-30
Alternative and synthetic lubricants . . . . .	80-11	Crankshaft vibration damper . . . . .	90-30
Lubricant storage . . . . .	80-11	<b>Service — Drives and Shields</b>	
<b>Lubrication Charts, Periodic Service</b>		Safety shields . . . . .	95-1
Lubrication charts . . . . .	85-1	Tool stack . . . . .	95-2
Break-in period . . . . .	85-11	Adjusting belts . . . . .	95-2
Service intervals . . . . .	85-11	Main countershaft . . . . .	95-3
Every 10 hours . . . . .	85-12	Unloading drive . . . . .	95-4
After the first 100 hours . . . . .	85-12	Cylinder drive intermediate countershaft . . . . .	95-5
Every 250 hours . . . . .	85-13	Feeder house/Header drive hydraulic clutch . . . . .	95-6
Every 500 hours . . . . .	85-13	Adjusting the fan variator . . . . .	95-7
Every 1000 hours . . . . .	85-14	Clean grain elevator, grain tank filling . . . . .	95-8
Every 1500 hours . . . . .	85-14	Slip clutch countershaft (clean grain elevator) . . . . .	95-9
Every 2000 hours . . . . .	85-14	Slip clutch for straw walker drive . . . . .	95-9
As required . . . . .	85-14	Slip clutch for tailings elevator . . . . .	95-9
Once every year . . . . .	85-15	Belt tensioners . . . . .	95-10
Every 2 years . . . . .	85-15	Drive chains . . . . .	95-11
<b>Service — Engine</b>		Tailings elevator drive chain . . . . .	95-11
Access to engine . . . . .	90-1	Tailings auger drive chain . . . . .	95-11
Engine compartment . . . . .	90-1	Unloading drive countershaft . . . . .	95-12
Adjusting engine valve tappets . . . . .	90-2	Drive chain for grain tank unloading . . . . .	95-12
Checking engine crankcase oil level . . . . .	90-2	V-belts . . . . .	95-12
Oil and filter change — 6.8-L engine . . . . .	90-3	<b>Service — Electrical System</b>	
Oil and filter change — 8.1-L engine . . . . .	90-4	Specifications . . . . .	100-1
Service — fuel system . . . . .	90-5	Battery . . . . .	100-1
Fuel system — 6.8-L engine . . . . .	90-6	Handling battery . . . . .	100-1
Fuel system — 8.1-L engine . . . . .	90-7	Checking electrolyte level . . . . .	100-2
Fuel tank filler neck . . . . .	90-8	Checking specific gravity . . . . .	100-2
Water trap in fuel system . . . . .	90-9	Battery switch . . . . .	100-3
Fuel transfer pump — 6.8-L engine . . . . .	90-10	Installing battery . . . . .	100-3
Fuel filter — 6.8-L engine . . . . .	90-11	Alternator . . . . .	100-4
Fuel filter — 8.1-L engine . . . . .	90-12	Socket . . . . .	100-4
Injection nozzles — 8.1-L engine . . . . .	90-13	<b>Continued on next page</b>	

Page	Page		
Starting motor . . . . .	100-5	<b>Service — Ground Speed Drive</b>	
Electronic boards . . . . .	100-6	Brake system . . . . .	110-1
Fuses on fuse board . . . . .	100-7	Brake fluid reservoir . . . . .	110-2
Relays on fuse board . . . . .	100-9	Adjusting the foot brakes . . . . .	110-2
Relay and diode board . . . . .	100-10	Parking brake . . . . .	110-2
Engine control unit (ECU-2266 EXTRA only) . . . . .	100-12	Hydrostatic drive components . . . . .	110-3
Chopper switch for engine control (2266 EXTRA only) . . . . .	100-13	Oil and filter change . . . . .	110-4
Electronically controlled fuel injection pump (2266 EXTRA only) . . . . .	100-13	Oil cooler by-pass valve . . . . .	110-5
Solenoid valves — standard machine . . . . .	100-14	Transmission . . . . .	110-6
Solenoid valves — Hillmaster . . . . .	100-15	Final drives . . . . .	110-7
Solenoid valves — ContourMaster . . . . .	100-16	Final drive attaching screws . . . . .	110-7
Header height potentiometer (ContourMaster) . . . . .	100-17	Final drive attaching screws, dual tires . . . . .	110-9
Skid plates with sensor straps (ContourMaster) . . . . .	100-17	Transmission attaching screws . . . . .	110-9
Sensor straps (ContourMaster) . . . . .	100-18	Rear wheel toe-in . . . . .	110-9
ECU service codes, infotrak monitor (2266 EXTRA only) . . . . .	100-20	Steering cylinder support . . . . .	110-10
General machine service codes, infotrak monitor . . . . .	100-23	Wheel motor yoke attaching screws . . . . .	110-10
ContourMaster service codes, infotrak monitor . . . . .	100-25	Rear wheel tread . . . . .	110-10
Display modes/test procedures . . . . .	100-28	Adjusting rear axle thread width . . . . .	110-11
Combine calibration procedure . . . . .	100-29	Steering components . . . . .	110-12
Header calibration procedure . . . . .	100-29		
Calibration service code chart . . . . .	100-34	<b>Service — Air Conditioning and Heating</b>	
Reel speed control board . . . . .	100-38	Air conditioning components . . . . .	115-1
Reel speed control board service codes . . . . .	100-39	Heating components . . . . .	115-2
		Air intake and distribution . . . . .	115-3
<b>Service — Hydraulic System</b>		Compressor . . . . .	115-4
Pressure relief valve . . . . .	105-1	Refrigerant level . . . . .	115-5
Description of system . . . . .	105-2	Low-pressure switch . . . . .	115-5
Hydraulic oil tank . . . . .	105-4	High-pressure switch . . . . .	115-6
Hydraulic components . . . . .	105-5	Cleaning the condenser . . . . .	115-6
Hydraulic components, chaff spreader . . . . .	105-9	Cab air filters . . . . .	115-6
Hydraulic components, hydrostatic reel drive . . . . .	105-10	Removing paper filter element . . . . .	115-7
Actuating electro-magnetic valves . . . . .	105-12	Cleaning paper filter elements . . . . .	115-7
Accumulators . . . . .	105-14	Removing recirculating filter . . . . .	115-8
Float control accumulator pressure chart . . . . .	105-16	Air intake opening . . . . .	115-8
Valve block on feeder house . . . . .	105-18	Condensation water drain hose . . . . .	115-9
Draing hydraulic oil . . . . .	105-18		
Replacing hydraulic oil filter . . . . .	105-19	<b>Storage</b>	
Refilling hydraulic oil . . . . .	105-20	After the season . . . . .	120-1
Temperature/pressure sending unit . . . . .	105-21	After the season - Engine . . . . .	120-2
		After the season - Air conditioning . . . . .	120-3
		Removing combine from storage . . . . .	120-4
		Service before start of season . . . . .	120-4
		<b>Specifications</b>	
		Operating speeds . . . . .	125-1
		Dimensions (2254, 2256) . . . . .	125-14
		Dimensions (2258, 2264) . . . . .	125-16
		Dimensions (2266, 2266 EXTRA) . . . . .	125-18

Continued on next page

Contents

Page

**Serial Numbers**

Type plates . . . . .	130-1
Product identification number . . . . .	130-2
Engine serial number . . . . .	130-2
Operator's cab serial number . . . . .	130-3
Four wheel drive motor serial number . . . . .	130-3
Three-speed transmission serial number . . . . .	130-3
Final drive serial number . . . . .	130-4
Straw chopper serial number . . . . .	130-4
Feeder house serial number . . . . .	130-4
Threshing cylinder reduction gear serial number . . . . .	130-4

**Index**

*Contents*

# Identification Views



-UN-08NOV96  
ZX009520

*Hillmaster*



-UN-08NOV96  
ZX009519

*Standard*


ZX,OMXZC0001970-19-01NOV96

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

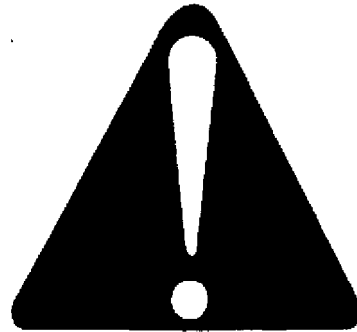

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

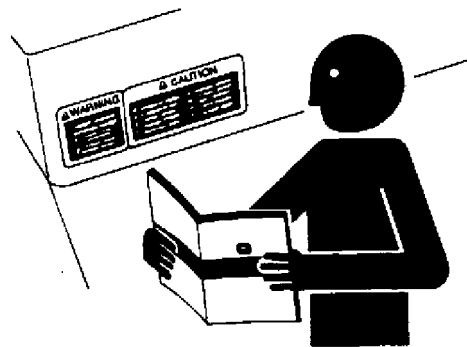

DX,READ -19-03MAR93

T5201 -UN-23AUG88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



## OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



H28930 -UN-30JUN89

FX,ROAD -19-01MAY91



**CAUTION: Avoid possible injury or death from machinery runaway.**

**Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.**


**NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.**

DX,BYPAS -19-26JAN90

## USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost.

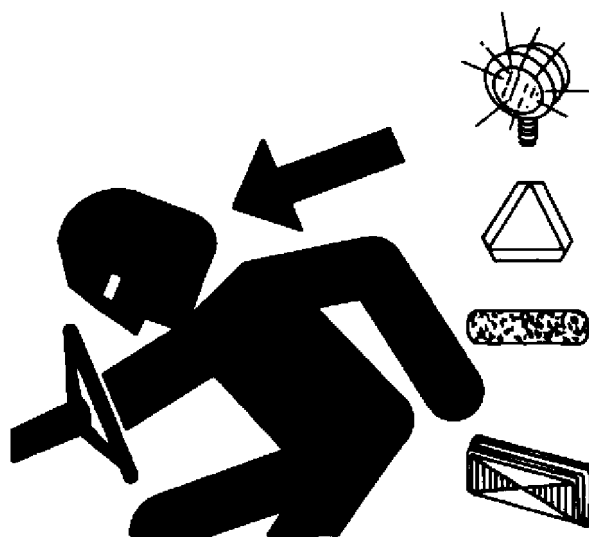

TS951 -UN-12APR90

DX,FLASH -19-04FEB99




## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

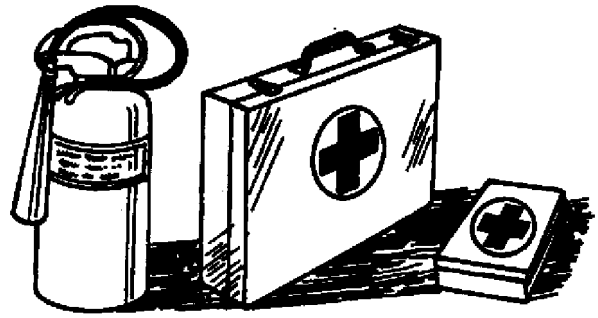

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88


## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

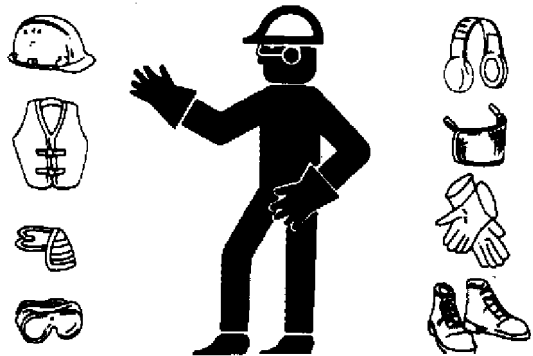

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88

## HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93


TS202 -UN-23AUG88



## STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

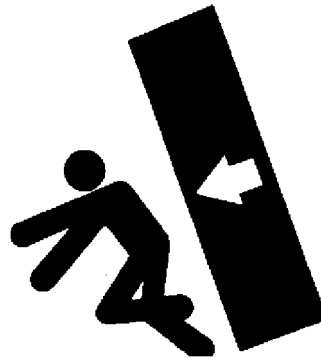

DX,STORE -19-03MAR93


TS219 -UN-23AUG68

## FIRE EXTINGUISHER

A 6 kg (13 lb) general purpose fire extinguisher meeting local legal requirements has to be installed on the left-hand side of the operator's platform.

Maintain fire extinguisher to keep it in operational condition.

Keep the engine clean and free of dust, chaff and straw to prevent the possibility of a fire.

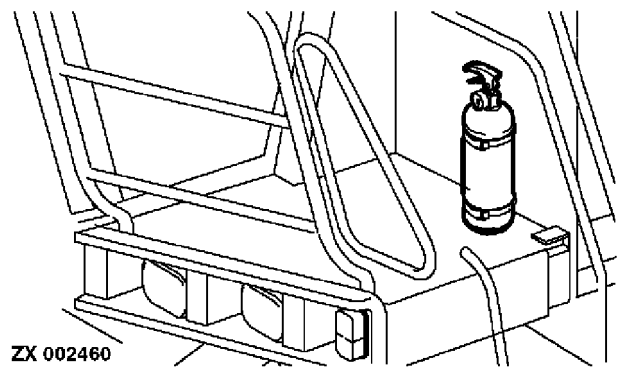

ZX 002460

ZX,FIREXZCO -19-27MAY94

ZX002460 -UN-16JUN95


## CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91

## MOUNT AND DISMOUNT SAFELY

Use handrail when mounting or dismounting the combine.

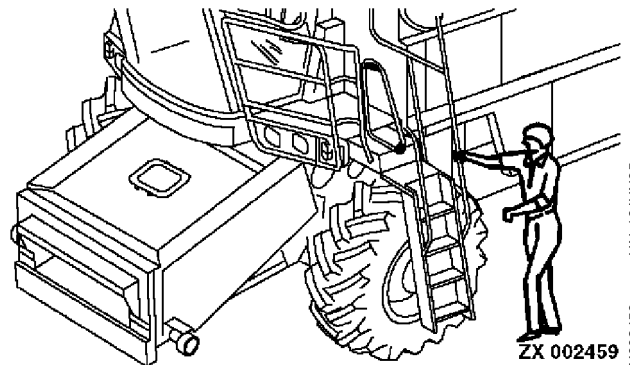

ZX 002459

ZX,HANDLEXZCO -19-27JAN92

ZX002459 -UN-16JUN95



## RIDERS

Only allow the operator and one rider on the machine.

Other riders are subject to injury such as being thrown off the machine and obstruct the operator's view resulting in the machine being operated in an unsafe manner.

One rider is permitted, since the machine is equipped with a factory-approved passenger seat.



ZX,PASSENGER -19-02OCT91


-UN-23AUG88  
TS253

## ROAD SAFETY SWITCH

**IMPORTANT:** Before driving combine on public roads, make sure that road safety switch is in road position. Also move harvesting unit and unloading auger to transport position.

This ensures that all hydraulic functions — with exception of the steering system — are not working.

ZX 002418

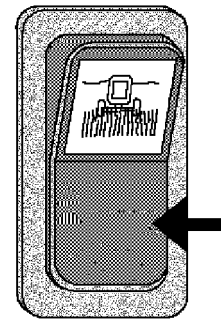


ZX,SWITCHXZCO -19-01MAR95

-UN-16JUN95  
ZX002418

## EMERGENCY EXIT

The right-hand cab window may be used as an emergency exit. Disengage the gas-filled spring on the sidewall of the cab and open the window.

ZX 006004

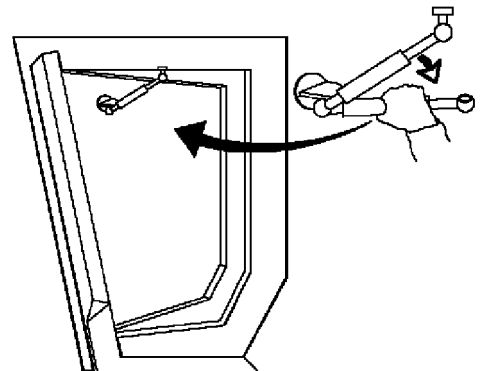

ZX,OMSPFH003293-19-01MAY94

-UN-03APR95  
ZX006004



## DRIVING THE COMBINE

Operate machine only when all guards are correctly installed.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.


Always adapt ground speed to road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope. Be especially careful when turning on slopes with full grain tank.

Attach harvesting units and other implements to combine with extreme care.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the combine swings out. Attachments and ground conditions affect the driving characteristics of the combine.

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches and obstructions which may cause the combine to tip, particularly on hillsides.

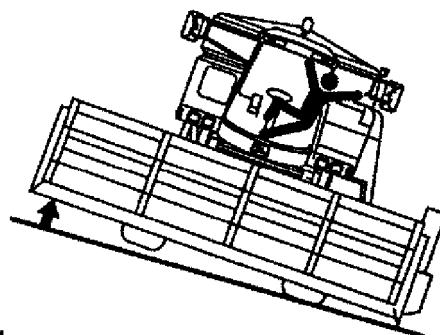

ZX002461

ZX002461 -JUN-16-JUN95


ZX,DRIVEXZCO -19-27JAN92

## GUARDS AND SHIELDS

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

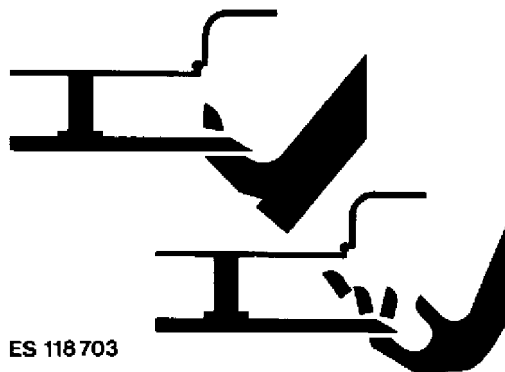

ES 118 703

ES118703 -JUN-21-MAR95

FX,DEVICE -19-04DEC90



## STAY CLEAR OF HARVESTING UNITS

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation. Always disengage main clutch, shut off engine and remove key before servicing or unclogging machine.



FX,CUT -19-21DEC90

ES118704 -UN-21MAR95

## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




DX,PTO -19-12SEP95

TS1644 -UN-22AUG95

## TRANSPORT WITH HARVESTING UNIT INSTALLED

Before driving combine on public roads, harvesting unit must be raised and secured in this position. It must not, however, obstruct operator's view of the road. Remove crop dividers (if equipped) and install protective cover.

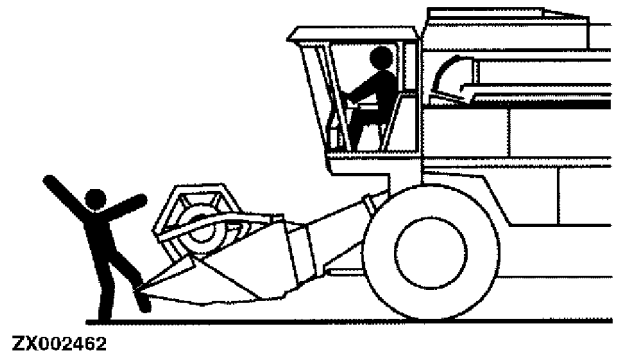


ZX,HEADERXZCO -19-27JAN92

ZX002462 -UN-16JUN95

## BALLASTING FOR SAFE GROUND CONTACT

Operating, steering and braking performance of the combine can be considerably affected by attachments which alter the center of gravity of the machine. To maintain safe ground contact, ballast the combine at the rear end as necessary. Observe the maximum permissible axle loads and total weights.

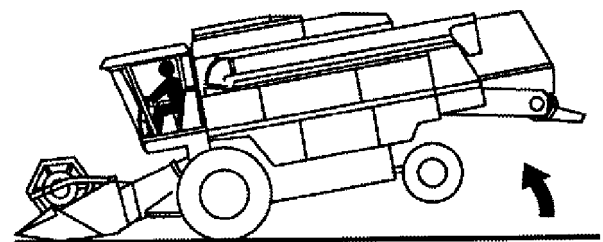

ZX,WEIGHTXZCO -19-27JAN92

ZX002463 -UN-16JUN95




## RADIO AERIAL

If radio aerial is not secured in its transport position before driving on public roads, it may come into contact with low-hanging electrical cables. This would result in the operator suffering a severe electrical shock.

To avoid electrical shock, no portion of the machine should be higher than 4 m.

Before transporting machine, bend aerial or remove it.

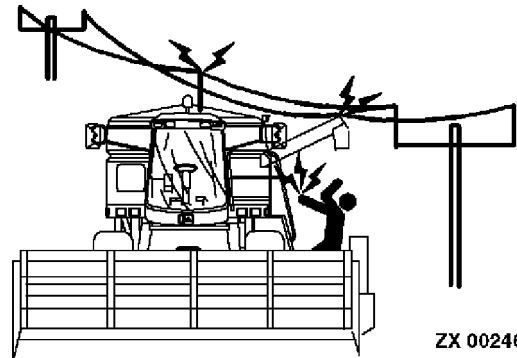

ZX002464 -UN-16JUN95

ZX,ANTENNAZCO -19-27JAN92

## PARKING AND LEAVING THE COMBINE


Lower harvesting unit to the ground.

Before leaving the combine, disengage harvesting unit and separator. Shut off engine and move gear shift lever to neutral. Apply parking brake, remove key and lock the operator's cab. Position chock blocks.

*NOTE: Use only chock blocks provided with the machine.*

Never leave combine unattended as long as engine is running.

Never leave the operator's cab when driving.

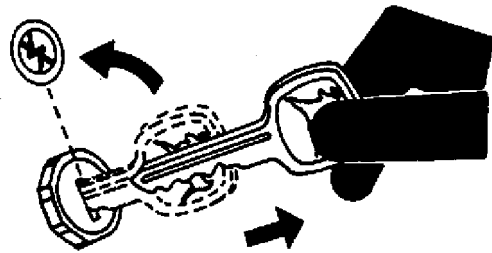


TS230 -UN-24MAY89

ZX,PARKXZCO -19-13APR92

## WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

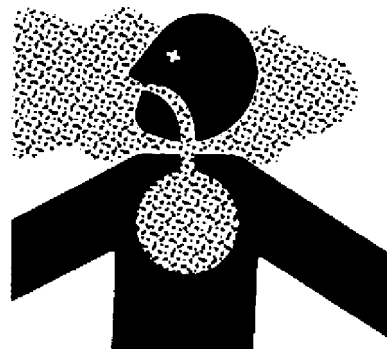

DX,AIR -UN-23AUG88

TS220 -19-04JUN90



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.



DX,SERV -19-04FEB99


-UN-23AUG88

TSS218

## SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

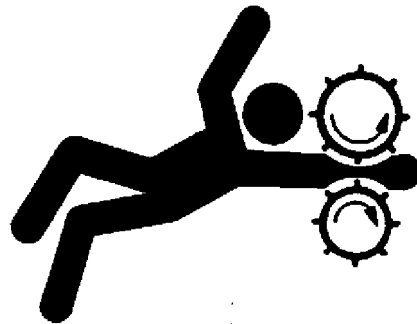

DX,LOOSE -19-04JUN90

-UN-23AUG88

TSS228




## SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a tractor, always follow safety precautions listed in the implement operator's manual.

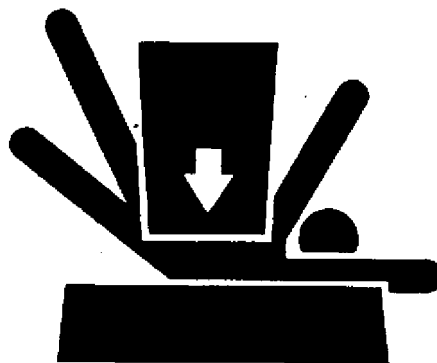


DX,LOWER -19-04FEB99

-UN-23AUG68  
TS229

## RETORQUE WHEEL NUTS

Retorque wheel nuts as specified in Sections "Wheels and Ballast" and "Lubrication, Periodic Services". Failure to do this could result in a wheel falling off during operation, causing the machine to tip over with serious injury to the operator and extensive damage to the machine.

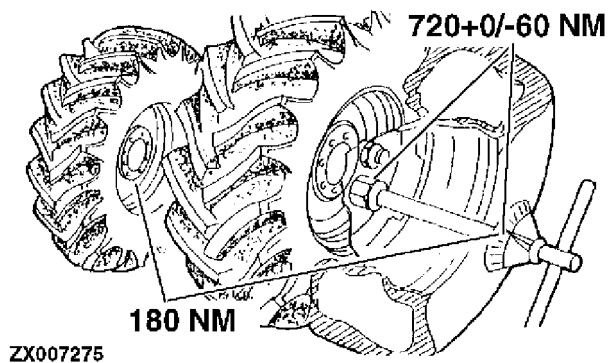

ZX,NUTS -19-01MAR95

-UN-19JUN95  
ZX007275

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**