 


omre260579 - 5225, 5325, 5425, 5525 and 5625 Tractors Operator's Manual (North American)

Recognize Safety Information

Recognize Safety Information

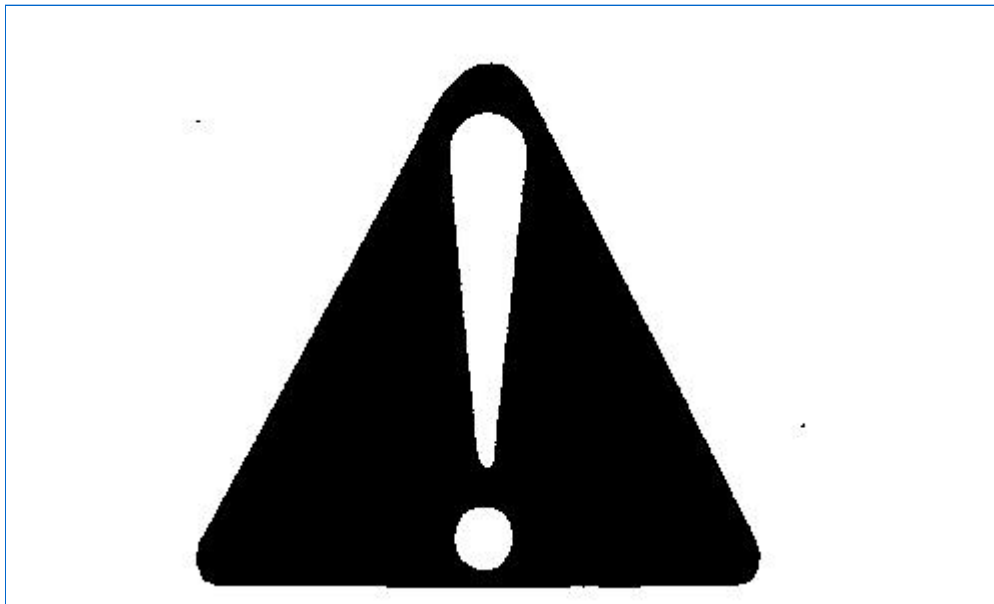

T81389-UN: Safety-alert symbol

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

omre260579 - 5225, 5325, 5425, 5525 and 5625 Tractors Operator's Manual (North American)

Understand Signal Words

Understand Signal Words




TS187-19: Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

omre260579 - 5225, 5325, 5425, 5525 and 5625 Tractors Operator's Manual (North American) Follow Safety Instructions

Follow Safety Instructions

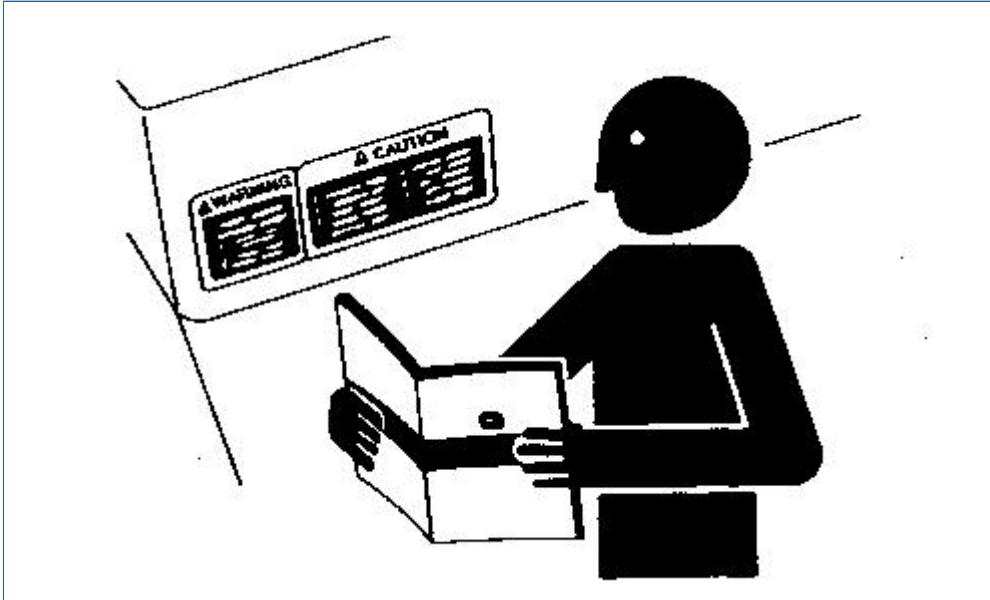

TS201-UN: Safety Messages

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.


Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

omre260579 - 5225, 5325, 5425, 5525 and 5625 Tractors Operator's Manual (North American)
Prevent Machine Runaway

 Prevent Machine Runaway

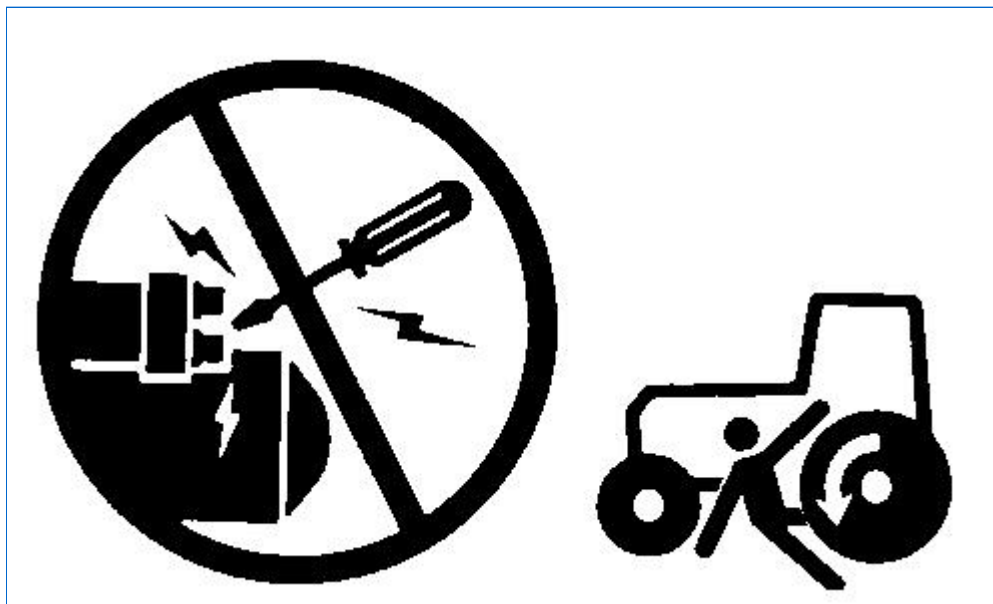

TS177-UN: Machinery Runaway

Avoid possible injury or death from machinery runaway.


Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

omre260579 - 5225, 5325, 5425, 5525 and 5625 Tractors Operator's Manual (North American)

Use Seat Belt Properly

Use Seat Belt Properly

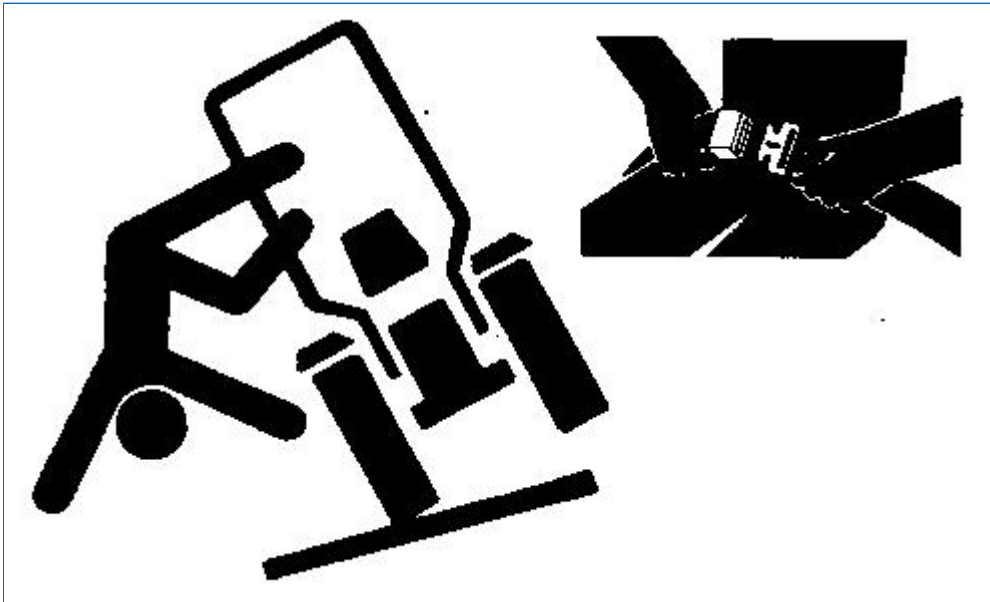

TS205-UN: Use a Seat Belt

Use a seat belt when you operate with a roll-over protective structure (ROPS) or cab to minimize chance of injury from an accident such as an overturn.


Do not use a seat belt if operating without a ROPS or cab.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

omre260579 - 5225, 5325, 5425, 5525 and 5625 Tractors Operator's Manual (North American)
Keep Riders Off Machine

 Keep Riders Off Machine

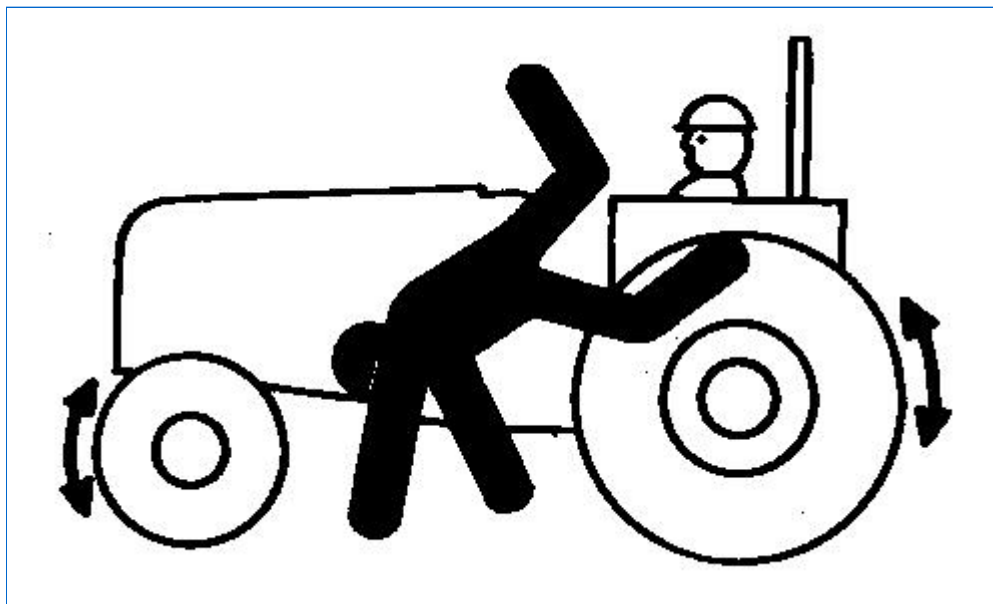

TS290-UN: Keep Riders Off

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

omre260579 - 5225, 5325, 5425, 5525 and 5625 Tractors Operator's Manual (North American)
Operating the Tractor Safely

Operating the Tractor Safely



TS213-UN: Falling from Tractor



TS276-UN: Avoid Entanglement

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles

- Entanglement in PTO shafts
- Falling from tractor


Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine off will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.
- Never go near an operating PTO or an operating implement.
- Always fasten your seat belt in a ROPS equipped tractor.

omre260579 - 5225, 5325, 5425, 5525 and 5625 Tractors Operator's Manual (North American)

Stopping and Parking Tractor

 Stopping and Parking Tractor

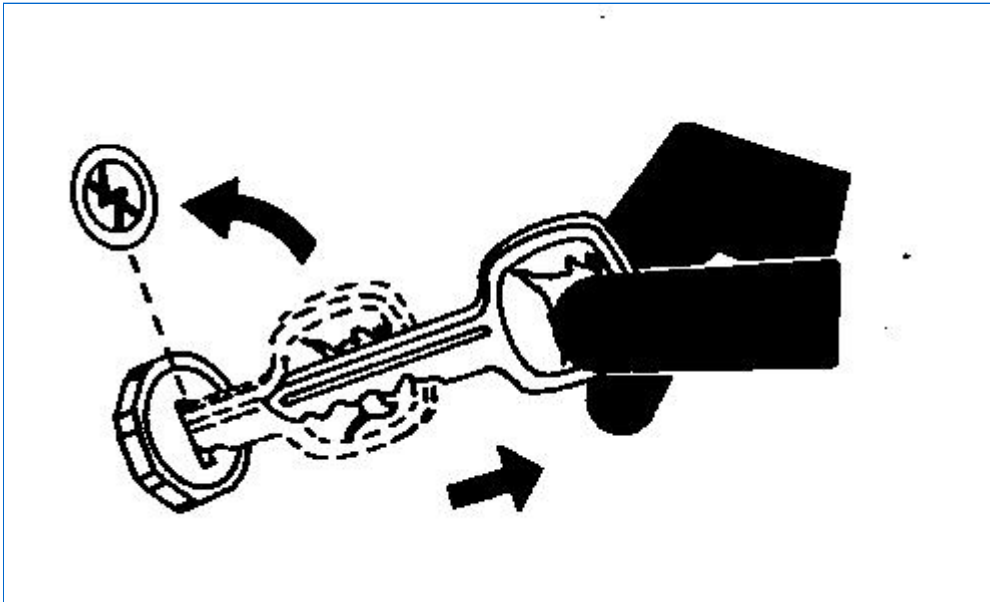

TS230-UN: Stopping and Parking Tractor

Tractor roll-over, collisions, runaway tractors, and people being crushed under machines and implements can happen when operators ignore safety.

To avoid these accidents, take some precautions:

- Signal before stopping, turning, or slowing down on public roads
- Move to side of road before stopping
- Slow down before braking
- Pump brakes when stopping on slippery surfaces
- Be careful when towing and stopping heavy loads
- Shift to PARK or apply parking brake
- Lower all equipment when leaving tractor
- Shut off all SCVs
- Disengage PTO
- Remove key



Suggest:

For more complete manuals. Please go to the home page.


<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.


Thank you so much for reading

omre260579 - 5225, 5325, 5425, 5525 and 5625 Tractors Operator's Manual (North American)
Use Caution on Hillsides

 Use Caution on Hillsides

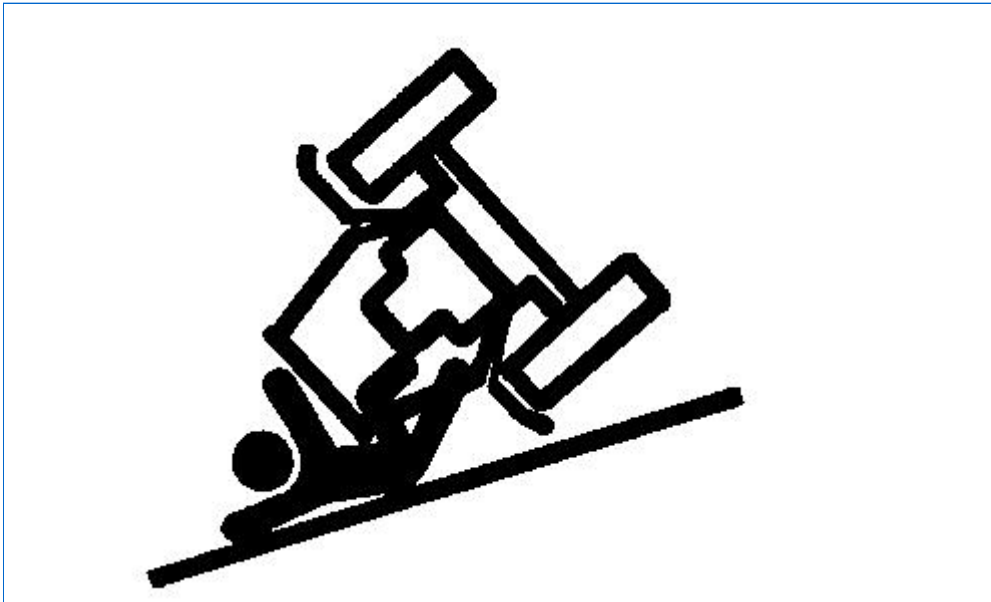

RW13093-UN: Safety—Tip Over

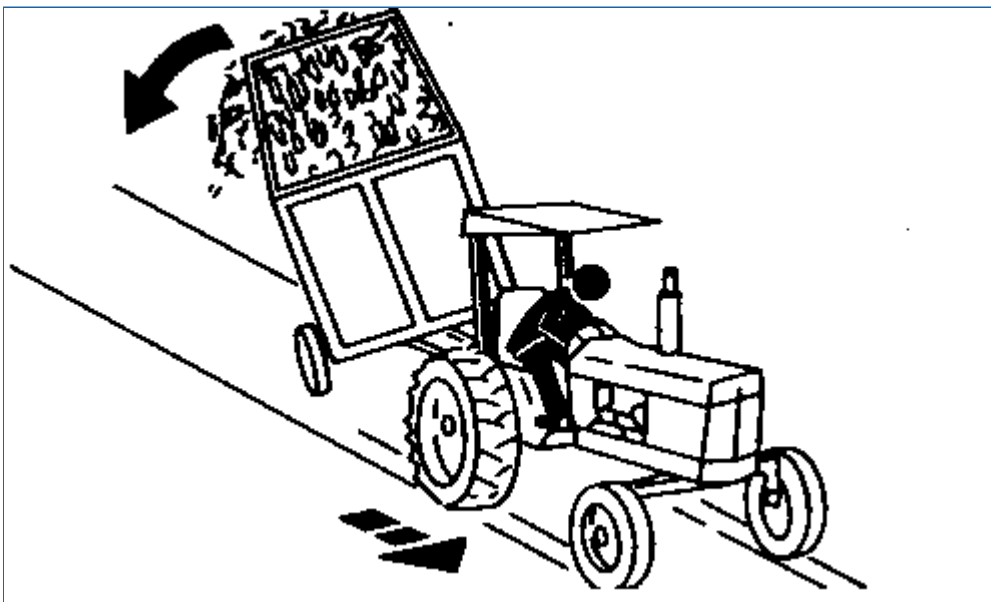 

TS216-UN: Shift to Low Gear

To improve braking on sloped, icy, wet or graveled surfaces, engage the MFWD. Add ballast to the tractor and travel at a reduced speed to avoid skidding and loss of steering control.

- Hitch towed loads only to drawbar. When using a chain, take up the slack slowly.
- Shift to a low gear before descending a steep hill to improve your control with little or no braking.
- Use engine braking to reduce speed before applying tractor brakes.
- Avoid holes, ditches, and obstructions that could cause the tractor to over turn.
- Avoid sharp, uphill turns.

- Drive up and down a hill—not across.
- Avoid starting, stopping or turning on a slope. If the tires lose traction, disengage PTO and proceed slowly, straight down the slope.
- Back out of a ditch or steep slope, if possible. Drive forward from such situations could cause the tractor to tip over rearward.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>