

**omal162071 - 6120, 6120L, 6220, 6220L, 6320, 6320L, 6420, 6420Land 6520L Tractors
398791
Identification Views**

Identification Views



LX1033458

LX1033458-UN: Tractor with Cab



LX1033460

LX1033460-UN: Tractor with Low Clearance Cab



LX1033459

LX1033459-UN: Orchard tractor

**omal162071 - 6120, 6120L, 6220, 6220L, 6320, 6320L, 6420, 6420L and
6520L Tractors 398791
Recognize Safety Information**

Recognize Safety Information



T81389-UN: Safety-alert symbol

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

**omal162071 - 6120, 6120L, 6220, 6220L, 6320, 6320L, 6420, 6420L and
6520L Tractors 398791
Understand Signal Words**

Understand Signal Words




TS187-19: Signal Words

A signal word-DANGER, WARNING, or CAUTION-is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

**oma162071 - 6120, 6120L, 6220, 6220L, 6320, 6320L, 6420, 6420L and
6520L Tractors 398791
Follow Safety Instructions**

Follow Safety Instructions

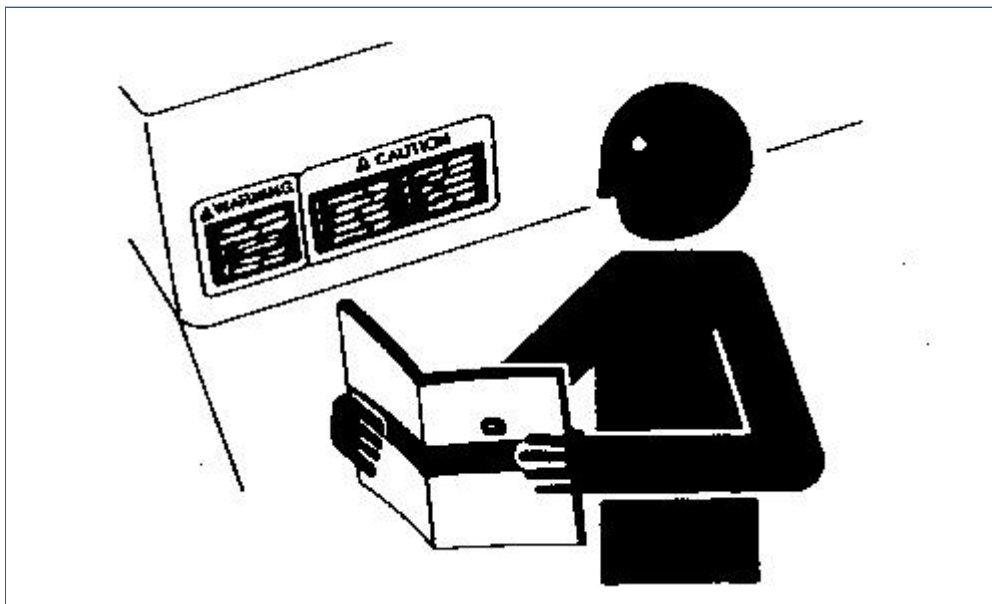

TS201-UN: Safety Messages

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

**omal162071 - 6120, 6120L, 6220, 6220L, 6320, 6320L, 6420, 6420L and
6520L Tractors 398791
Stay Clear of Moving Tractor**

Stay Clear of Moving Tractor



TS213-UN: Stay Clear of Moving Tractor

Always place transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.


Be sure everyone is clear of tractor and attached equipment before starting engine. Some movement may occur as engine starts.

Never try to get on or off a moving tractor.

When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.

**omal162071 - 6120, 6120L, 6220, 6220L, 6320, 6320L, 6420, 6420L and
6520L Tractors 398791
Prevent Machine Runaway**

Prevent Machine Runaway

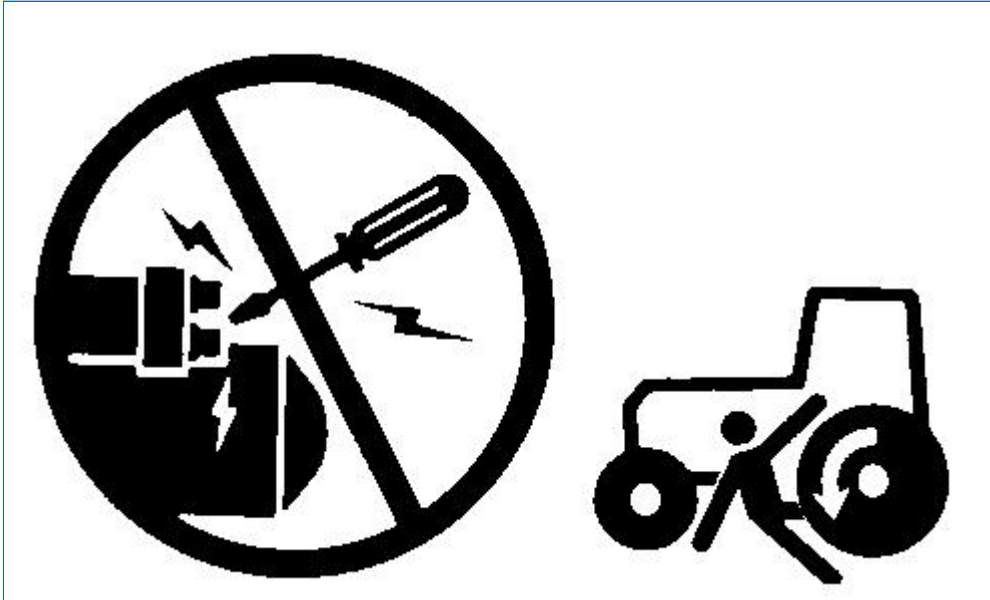

TS177-UN: Machinery Runaway


Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

**omal162071 - 6120, 6120L, 6220, 6220L, 6320, 6320L, 6420, 6420Land
6520L Tractors 398791
Use Seat Belt Properly (If Equipped)**

Use Seat Belt Properly (If Equipped)

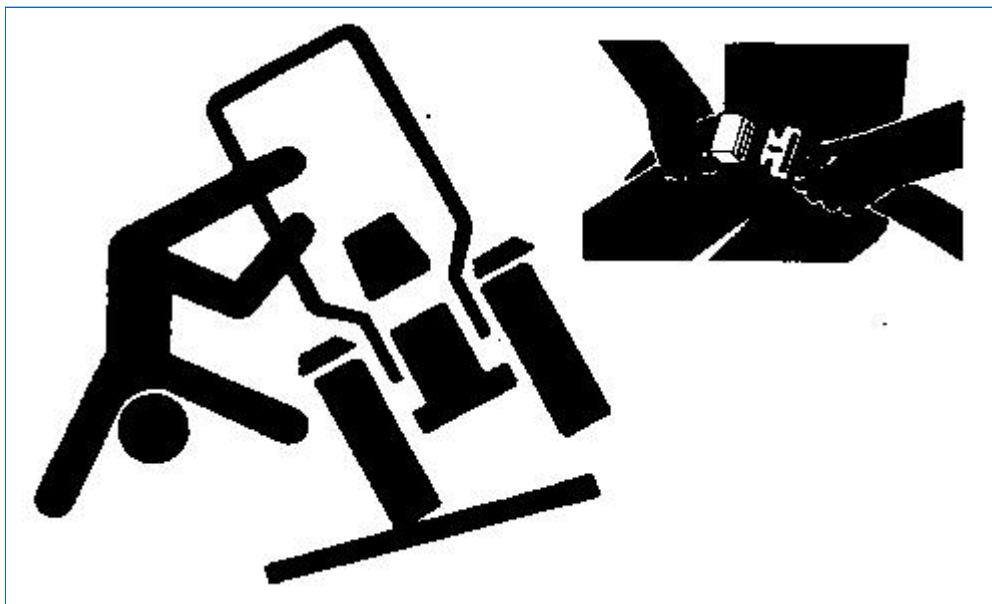

TS205-UN: Putting on the seat belt

Use a seat belt when you operate with a roll-over protective structure (ROPS) or cab to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS or cab.

Replace entire seat belt if mounting hardware, buckle, belt or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved for your machine. If there is any doubt, contact your John Deere Dealer.

**omal162071 - 6120, 6120L, 6220, 6220L, 6320, 6320L, 6420, 6420Land
6520L Tractors 398791
Operating the Tractor Safely**

Operating the Tractor Safely



TS213-UN: Falling from tractor



TS276-UN: Beware of rotating PTO shafts

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

Before leaving the tractor, apply the handbrake and put the transmission in NEUTRAL (or in PARK position, if equipped). Leaving transmission in gear with engine stopped will NOT prevent tractor from moving.

Be sure everyone is clear of tractor and attached equipment before starting engine.

Never try to get on or off a moving tractor.

When tractor is left unattended, apply the handbrake and put the transmission in NEUTRAL or PARK position, lower implements to the ground, stop the engine and remove the key.

Never go near an operating PTO or an operating implement.

If a seat belt is equipped, always fasten it in a ROPS-equipped tractor.

omal162071 - 6120, 6120L, 6220, 6220L, 6320, 6320L, 6420, 6420L and 6520L Tractors 398791
Shift to Low Gear on Hills

Shift to Low Gear on Hills



TS216-UN: Driving on Steep Hill

Shift to a low gear before descending a steep hill to improve your control of the tractor with little or no braking. Use engine braking to reduce speed before applying tractor brakes. Run-away tractors often tip over. Never coast downhill.

When driving on icy, wet, or graveled surfaces, reduce speed and be sure tractor is properly ballasted to avoid skidding and loss of steering control. For best control, engage front-wheel drive for four-wheel braking.

Additional ballast may be needed for transporting heavy integral implements. When implement is raised, drive slowly over rough ground, regardless of how much ballast is used.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>