

**omal116328 - 6605 Tractors ( -265202)**  
**Identification Views**

---

**Identification Views**



LX1019301

LX1019301-UN: 6605 Tractor

# oma116328 - 6605 Tractors ( -265202)

## Recognize Safety Information

---

### Recognize Safety Information



T81389-UN: Safety-Alert Symbol

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

# omal116328 - 6605 Tractors ( -265202)

## Understand Signal Words

---

### Understand Signal Words



TS187-19: Signal Words

A signal word-DANGER, WARNING, or CAUTION-is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

 
The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

# omal116328 - 6605 Tractors ( -265202) Follow Safety Instructions

---

## Follow Safety Instructions

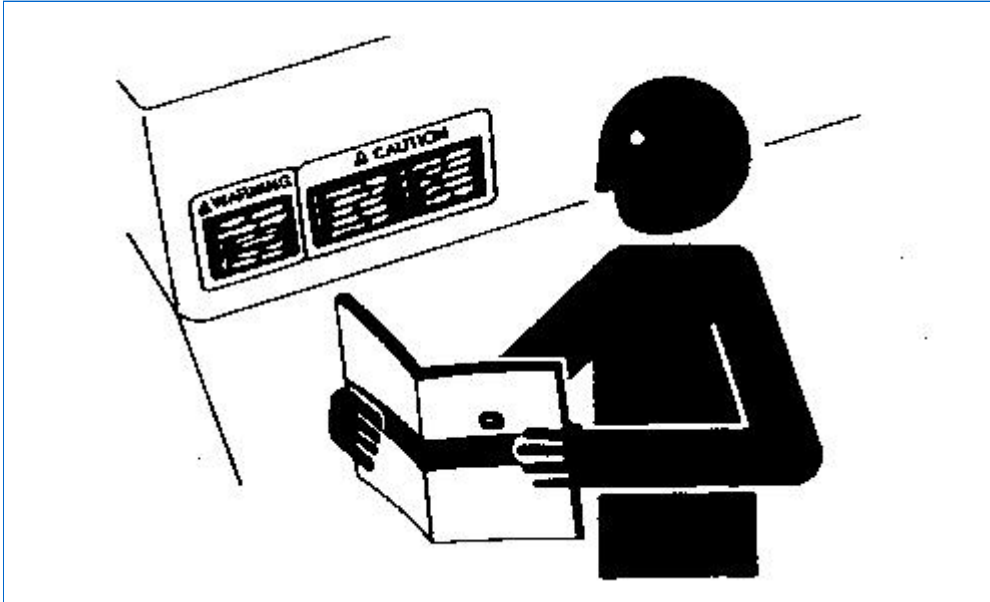

TS201-UN: Safety Messages

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

## omal116328 - 6605 Tractors ( -265202) Stay Clear of Moving Tractor

---

### Stay Clear of Moving Tractor



TS213-UN: Stay Clear of Moving Tractor

Always place transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.

Be sure everyone is clear of tractor and attached equipment before starting engine. Some movement may occur as engine starts.


Never try to get on or off a moving tractor.

When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.

## omal116328 - 6605 Tractors ( -265202) Prevent Machine Runaway

---

### Prevent Machine Runaway

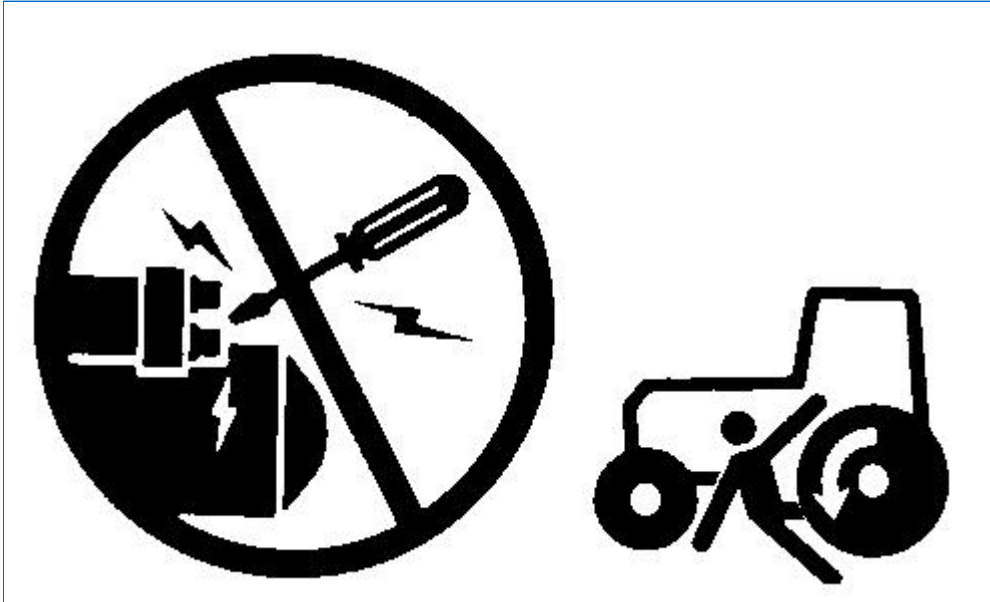

TS177-UN: Machinery Runaway

Avoid possible injury or death from machinery runaway.


Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

## omal116328 - 6605 Tractors ( -265202) Use ROPS and Seat Belt Properly

 ---

### Use ROPS and Seat Belt Properly

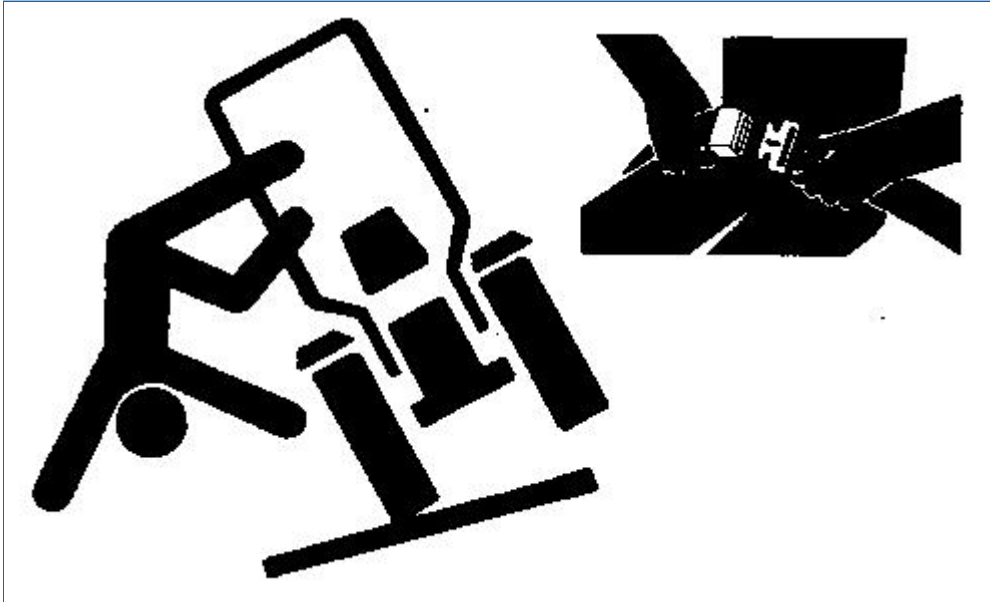

TS205-UN: ROPS and Seat Belt

If this tractor is equipped with a foldable ROPS, keep the ROPS in the fully extended and locked position. If the tractor is ever operated with ROPS folded (e.g., to enter a low building), drive with extreme caution. Do NOT use seat belt with the ROPS folded.

Return the ROPS to the raised, fully extended and locked position as soon as the tractor is operated under normal conditions.

ALWAYS fasten your seat belt when the ROPS is fully extended and locked or the tractor is equipped with a 4-post roll guard or cab.

# omal116328 - 6605 Tractors ( -265202)

## Operating the Tractor Safely

---

### Operating the Tractor Safely



TS213-UN: Falling from Tractor



TS276-UN: Avoid Entanglement

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts

- Falling from tractor

Avoid accidents by taking the following precautions:

Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.

Be sure everyone is clear of tractor and attached equipment before starting engine.

Never try to get on or off a moving tractor.

When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.

 
Never go near an operating PTO or an operating implement.

Always fasten your seat belt in a ROPS equipped tractor.

## omal116328 - 6605 Tractors ( -265202) Shift to Low Gear on Hills

---

### Shift to Low Gear on Hills

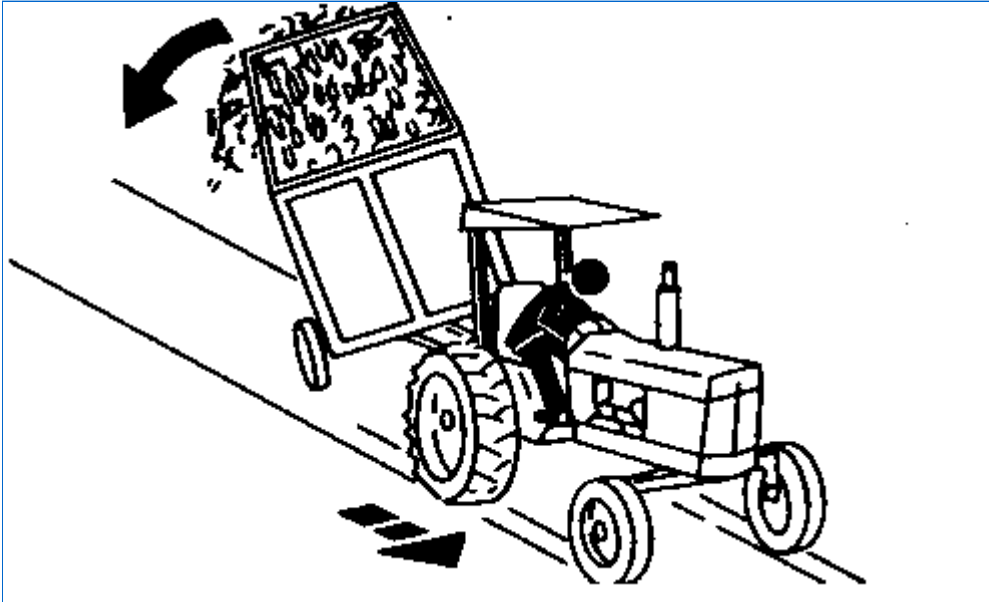

TS216-UN: Tow Loads

Shift to a low gear before descending a steep hill to improve your control of the tractor with little or no braking. Use engine braking to reduce speed before applying tractor brakes. Run-away tractors often tip over. Never coast downhill.


When driving on icy, wet, or graveled surfaces, reduce speed and be sure tractor is properly ballasted to avoid skidding and loss of steering control. For best control, engage front-wheel drive for four-wheel braking.

Additional ballast may be needed for transporting heavy integral implements. When implement is raised, drive slowly over rough ground, regardless of how much ballast is used.

**omal116328 - 6605 Tractors ( -265202)**  
**Use Caution on Hillsides**

---

**Use Caution on Hillsides**

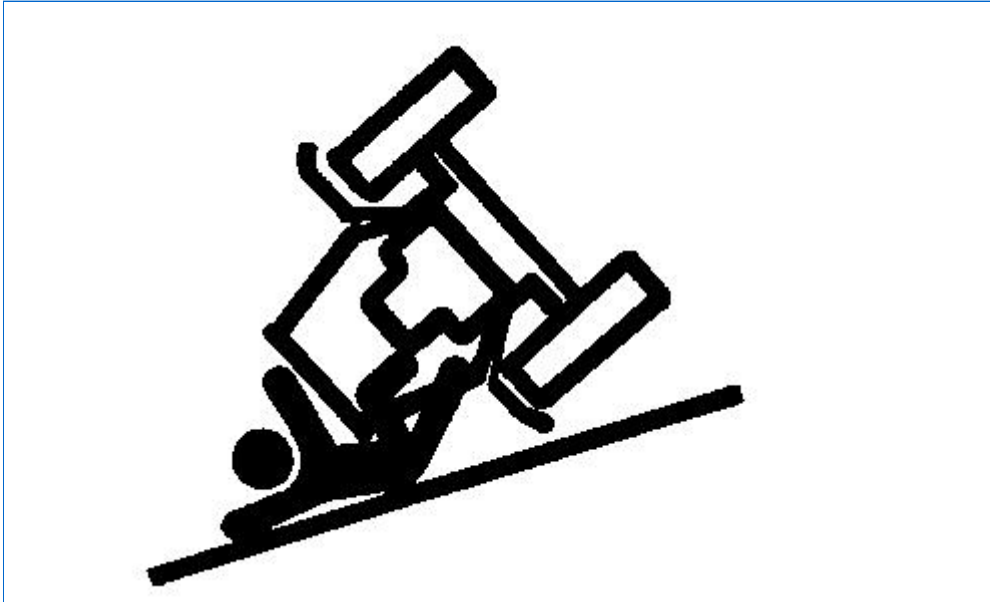 

RW13093-UN: Use Caution on Hillsides

Avoid holes, ditches, and obstructions which may cause tractor roll-over, especially on hillsides. Avoid sharp turns on hills.


Never drive near the edge of a gully or steep embankment.

Driving out of a ditch, mired condition, or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible.

## omal116328 - 6605 Tractors ( -265202) Stopping and Parking Tractor

 ---

### Stopping and Parking Tractor

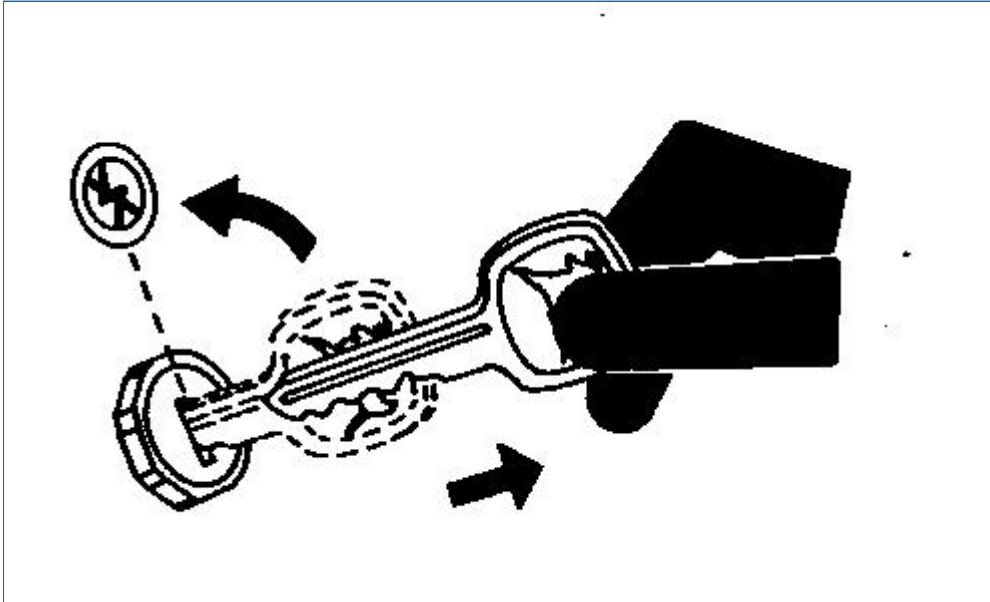

TS230-UN: Remove the Key

Tractor roll-over, collisions, runaway tractors, and people being crushed under machines and implements can happen when operators ignore safety.

To avoid these accidents, take some precautions:

- Signal before stopping, turning, or slowing down on public roads
- Pull over to side of road before stopping
- Slow down before braking
- Pump brakes when stopping on slippery surfaces
- Be careful when towing and stopping heavy loads
- Shift to park or apply parking brake
- Lower all equipment when leaving tractor
- Remove key



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**


**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

**omal116328 - 6605 Tractors ( -265202)**  
**Keep Riders Off Machine**

---

 **Keep Riders Off Machine**

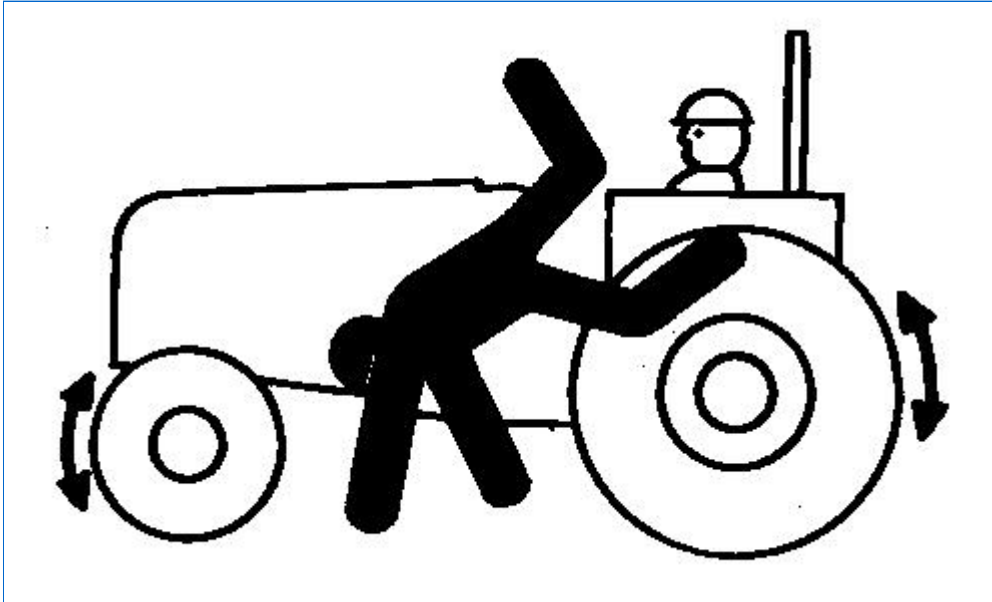

TS290-UN: Keep Riders Off

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

## omal116328 - 6605 Tractors ( -265202) Handle Fuel Safely-Avoid Fires

---

### Handle Fuel Safely-Avoid Fires



TS202-UN: Avoid Fires

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**