

**6610, 6710,  
6810 and 6910  
Self-Propelled  
Forage Harvesters**

**John Deere Werke Zweibrücken  
OMZ92152 Issue C3**

**North American Edition**

Printed in Germany

**ENGLISCH**

# Contents

	Page		Page
<b>Identification View</b> . . . . .	00-1	Manual Kernel Processor Roll Clearance . . .	20-20
<b>Safety</b> . . . . .	05-1	<b>Lighting System and Signals</b>	
<b>Safety Decals</b> . . . . .	10-1	Parking Lights/Low Beam Headlights . . . . .	25-1
<b>Controls and Instruments</b>		High Beam Headlights . . . . .	25-1
General View . . . . .	15-1	Turn Signals . . . . .	25-2
Switch Console . . . . .	15-2	Work Lights . . . . .	25-4
Multi-Function Lever . . . . .	15-5	Hazard Warning Lights . . . . .	25-4
Corner Post . . . . .	15-6	Indicator Light Test . . . . .	25-5
Roof Switch Console . . . . .	15-7	<b>Operator's Cab</b>	
Roof Console . . . . .	15-8	Cab Door . . . . .	30-1
Automatic Function Control . . . . .	15-9	Operator's Seat . . . . .	30-1
Steering Column . . . . .	15-10	Lumbar Support . . . . .	30-2
Switch Console — Functions . . . . .	15-11	Operator's Seat Safety Switch . . . . .	30-2
Multi-Function Lever — Functions . . . . .	15-16	Left-Hand Armrest . . . . .	30-2
Roof Switch Console — Functions . . . . .	15-18	Right-Hand Armrest . . . . .	30-3
Steering — Functions . . . . .	15-19	Ashtray . . . . .	30-4
<b>Warning Devices and Monitors</b>		Passenger Seat . . . . .	30-4
Indicator Lights I . . . . .	20-1	Storage Compartment for Operator's	
Indicator Lights II . . . . .	20-4	Manuals . . . . .	30-5
Fuel Gauge . . . . .	20-7	Cooling Compartment . . . . .	30-5
Coolant Temperature Gauge . . . . .	20-7	Steering Column . . . . .	30-6
Automatic Functions Control Lights . . . . .	20-7	Foot Brakes . . . . .	30-7
Infotrak Monitor . . . . .	20-8	Parking Brake . . . . .	30-7
Cutterhead Alarm Speed . . . . .	20-10	Cab Side Window . . . . .	30-7
SERVICE Information . . . . .	20-10	Sun Visor . . . . .	30-8
Automatic Function Control . . . . .	20-11	Inside Mirror . . . . .	30-8
Burnishing Electromagnetic Clutch . . . . .	20-12	Outside Mirror . . . . .	30-8
Sharpening Cycles . . . . .	20-13	Heater . . . . .	30-9
Automatic Knife Sharpening . . . . .	20-14	Adjustable Air Louvers . . . . .	30-10
Sharpening Stone Home Position		Interior Lighting . . . . .	30-11
(Manual) . . . . .	20-16	Digital Clock . . . . .	30-11
Automatic Stationary Knife Adjustment . . . . .	20-16	Radio and Citizen Band . . . . .	30-12
Manual Stationary Knife Adjustment . . . . .	20-18	<b>Pre-Starting Checks</b>	
Kernel Processor Roll Clearance . . . . .	20-19	Daily Checks . . . . .	35-1
Automatic Kernel Processor Roll		Engine Oil Level . . . . .	35-1
Clearance . . . . .	20-20	Hydraulic Oil Level . . . . .	35-1
		In Winter . . . . .	35-2
		Fuel Level . . . . .	35-2

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMZ92152 C3-19-16APR93

COPYRIGHT© 1993  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION™ Manual

Contents

	Page		Page
Tires . . . . .	35-2	Cold Weather Starting Aids . . . . .	55-5
Hydrostatic Oil Level . . . . .	35-3	Side Window Wipers . . . . .	55-5
Fuel System . . . . .	35-3	Wheel Spacer . . . . .	55-6
Lubricating Forage Harvester . . . . .	35-3	Second Spout Work Light . . . . .	55-6
Checks in Operator's Cab . . . . .	35-4	Muffler Extension . . . . .	55-6
		Recirculating Screens . . . . .	55-7
		Lateral Augers . . . . .	55-7
<b>Operating the Engine</b>		<b>Attaching and Detaching Harvesting Units</b>	
Engine Break-In . . . . .	40-1	Attaching Sequence . . . . .	60-1
Starting the Engine . . . . .	40-2	Connecting Harvesting Unit Drive Shaft . . . . .	60-3
Engine Oil Pressure Indicator Light . . . . .	40-4		
Warming up Engine . . . . .	40-4	<b>Preparations and Field Operation</b>	
Engine Idle . . . . .	40-4	Preparations for Harvesting Grass . . . . .	65-1
Ether Starting Aid . . . . .	40-5	Preparations for Harvesting Corn . . . . .	65-1
Coolant Heater . . . . .	40-8	Preparations for Harvesting Ear Corn	
Slave Battery . . . . .	40-9	Silage . . . . .	65-1
Operating in Tropical Conditions . . . . .	40-9	Preparations for Harvesting Alfalfa . . . . .	65-1
Stopping the Engine . . . . .	40-10	Optimum Harvesting Performance . . . . .	65-2
Cold Weather Operation . . . . .	40-10	Field Operation of Forage Harvester . . . . .	65-2
		Reverser Operation . . . . .	65-6
		Harvesting Unit Float System . . . . .	65-7
<b>Driving and Transporting Forage Harvester</b>		<b>Feeding System</b>	
Driving the Forage Harvester . . . . .	45-1	Electromagnetic Clutch . . . . .	70-1
Releasing Parking Brake . . . . .	45-1	Cutterhead Speed Sending Unit . . . . .	70-3
Operating Foot Brakes . . . . .	45-2	Length-of-Cut Transmission . . . . .	70-3
Engaging a Gear . . . . .	45-2	Adjusting Length of Cut . . . . .	70-4
Adjusting Engine Speed . . . . .	45-2	Harvesting Unit Speed . . . . .	70-4
Raising Harvesting Unit . . . . .	45-3	Feed Roll Slip Clutch . . . . .	70-5
Forward and Reverse Travel . . . . .	45-3	Length-of-Cut Transmission Service . . . . .	70-5
Travel Speed . . . . .	45-4	Feed Roll Drive . . . . .	70-6
Hydrostatic System . . . . .	45-5	Wear Plates . . . . .	70-7
Four Wheel Drive . . . . .	45-6	Adjusting Feed Roll Springs . . . . .	70-8
Transport Information . . . . .	45-6	Opening Feed Roll Channel . . . . .	70-8
		Smooth Roll Scraper . . . . .	70-9
		Feed Roll Channel Safety Switch . . . . .	70-10
		Hydraulic Reverser Motor . . . . .	70-11
		Troubleshooting — Feeding System . . . . .	70-12
<b>Wheels and Ballast</b>		<b>Metal Detector</b>	
Tire Maintenance . . . . .	50-1	Metal Detector Operation . . . . .	75-1
Wheel Bolts and Nuts . . . . .	50-2	Operating Metal Detector . . . . .	75-2
Mounting Tires . . . . .	50-3	Operating Forage Harvester without Metal	
Tires . . . . .	50-4	Detector . . . . .	75-3
Changing Tires . . . . .	50-4	When Ferrous Metal is Detected . . . . .	75-4
Tire Pressures . . . . .	50-5	Adjusting Locking Pawl . . . . .	75-5
Ballast . . . . .	50-5	Metal Detector Test . . . . .	75-6
Front Wheel Tread . . . . .	50-8	Relay and Electronic Box . . . . .	75-8
		Test Charts . . . . .	75-12
<b>Harvesting Units</b>			
Pickup . . . . .	55-1		
Row-Crop Units . . . . .	55-1		
Corn Heads . . . . .	55-3		
Kernel Processor . . . . .	55-3		
Power Chute . . . . .	55-4		
Power Rear Wheel Drive . . . . .	55-4		
Hydraulic Outlet . . . . .	55-4		

Continued on next page

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Contents

	<b>Page</b>		<b>Page</b>
Troubleshooting — Metal Detector . . . . .	75-14	Service and Operation . . . . .	86-4
<b>Cutterhead and Drive</b>		<b>Discharge</b>	
Main Clutch . . . . .	80-2	Blower and Discharge Spout . . . . .	90-1
Main Drive Belt . . . . .	80-4	Blower Bottom . . . . .	90-1
Replacing Main Drive Belt . . . . .	80-5	Replacing Wear Plate . . . . .	90-1
Cutterhead Knives . . . . .	80-8	Adjusting Blower Paddles . . . . .	90-6
Replacing Partial Set of Knives . . . . .	80-9	Adjusting Deflecting Edge . . . . .	90-6
Replacing Complete Set of Knives . . . . .	80-10	Spout Base Service Covers . . . . .	90-6
Replacing Clamping Bar . . . . .	80-12	Spout Service Opening . . . . .	90-7
Replacing Threaded Bar . . . . .	80-12	Spout Worm Gear and Ring Gear . . . . .	90-8
Removing/Sliding Back Knife . . . . .	80-13	<b>Fuel, Lubricants, Coolant and Capacities</b>	
Knife Torque . . . . .	80-13	Fuel . . . . .	95-1
Preparations for Sharpening Procedure . . . . .	80-13	Engine Oil . . . . .	95-2
Manual Knife Sharpening . . . . .	80-14	Engine Coolant . . . . .	95-4
Automatic Knife Sharpening Device . . . . .	80-18	Coolant Conditioner . . . . .	95-4
Replacing Sharpening Stone . . . . .	80-20	Gear Case Oil . . . . .	95-5
Stationary Knife . . . . .	80-24	Brake Fluid . . . . .	95-9
Manual Stationary Knife Adjustment . . . . .	80-24	Grease . . . . .	95-9
Checking Stationary Knife . . . . .	80-29	<b>Lubrication, Periodic Service</b>	
Removing Stationary Knife . . . . .	80-30	Break-In Service . . . . .	100-8
Installing Stationary Knife . . . . .	80-31	Service Intervals . . . . .	100-8
Eliminating End Play of Adjusting Spindle . . . . .	80-33	Every 10 Operating Hours . . . . .	100-9
Adjusting Bottom Band . . . . .	80-34	After the First 100 Operating Hours . . . . .	100-9
Adjusting Outlet Band . . . . .	80-36	Every 250 Operating Hours . . . . .	100-10
Cutterhead Service Cover . . . . .	80-37	Every 500 Operating Hours . . . . .	100-10
Transition Chute . . . . .	80-38	Every 1000 Operating Hours . . . . .	100-11
Recirculating Screens . . . . .	80-39	Every 1500 Operating Hours . . . . .	100-11
Removing Cutterhead with Harvesting Unit . . . . .	80-43	Every 2000 Operating Hours . . . . .	100-11
Installing Cutterhead with Harvesting Unit . . . . .	80-47	As Required . . . . .	100-11
Troubleshooting — Main Drive . . . . .	80-48	Every Year . . . . .	100-12
Troubleshooting — Cutterhead . . . . .	80-49	Every 2 Years . . . . .	100-12
Troubleshooting — Knife Sharpener . . . . .	80-50	V-Belts . . . . .	100-12
Troubleshooting — Stationary Knife . . . . .	80-52	<b>Service — Engine</b>	
<b>Kernel Processor</b>		Engine Access . . . . .	105-1
Installing Kernel Processor . . . . .	85-1	Engine Compartment . . . . .	105-1
Preparing Kernel Processor . . . . .	85-4	Adjusting Engine Valve Tappets . . . . .	105-2
Attaching Kernel Processor . . . . .	85-5	Rocker Arm Cover Ventilation . . . . .	105-2
Drive Belt . . . . .	85-7	Checking Engine Crankcase Oil Level . . . . .	105-4
Breaking-In Kernel Processor . . . . .	85-9	Changing Engine Oil and Filter . . . . .	105-5
Field Operation . . . . .	85-10	Service — Fuel System . . . . .	105-9
Kernel Processor Service . . . . .	85-10	Fuel Tank Filler Neck . . . . .	105-10
Troubleshooting — Kernel Processor . . . . .	85-15	Fuel Tank Water Trap . . . . .	105-11
<b>Power Chute</b>		Fuel System, John Deere Engine . . . . .	105-12
Installing Power Chute . . . . .	86-1	Fuel System, Cummins Engine . . . . .	105-13
Preparing Power Chute . . . . .	86-2	Fuel Shut-Off Valve . . . . .	105-13
Attaching Power Chute . . . . .	86-2	Water Trap, John Deere Engine . . . . .	105-14
Drive Belts . . . . .	86-4	Fuel Filter, John Deere Engine . . . . .	105-15

Continued on next page

Contents

	<b>Page</b>		<b>Page</b>
Checking Fuel Injection Nozzles . . . . .	105-15	Temperature and Pressure Sending Units . . .	115-8
Bleeding Fuel System . . . . .	105-16	<b>Service — Ground Speed Drive</b>	
Fuel Filter, Cummins Engine . . . . .	105-18	Brake System . . . . .	120-1
Bleed Line and Valve . . . . .	105-19	Brake Fluid Reservoir . . . . .	120-2
Fuel Shut-Off Valve . . . . .	105-19	Adjusting Foot Brakes . . . . .	120-2
Rotary/Stationary Radiator Screen . . . . .	105-19	Parking Brake . . . . .	120-2
Flushing Cooling System . . . . .	105-23	Hydrostatic Drive Components . . . . .	120-3
Replacing Coolant Conditioner . . . . .	105-28	Oil Cooler . . . . .	120-4
Drive Belts . . . . .	105-30	Oil and Filter Change . . . . .	120-4
Air Intake System . . . . .	105-33	Hydrostatic Drive Adjusting Cable . . . . .	120-4
Air Intake Prefilter Screen . . . . .	105-35	Transmission . . . . .	120-5
Air Cleaner . . . . .	105-35	Final Drives . . . . .	120-5
Turbocharger . . . . .	105-40	Front Axle . . . . .	120-7
Vibration Damper . . . . .	105-41	Rear Axle Toe-In . . . . .	120-7
		Rear Wheel Tread . . . . .	120-8
		Steering System Components . . . . .	120-10
<b>Service — Electrical System</b>		<b>Service — Air Conditioning System, Heater</b>	
Specifications . . . . .	110-1	Air Conditioning System Components . . . . .	125-1
Batteries . . . . .	110-1	Heater Components . . . . .	125-2
Alternators . . . . .	110-4	Operating Air Conditioning System . . . . .	125-4
Starting Motor . . . . .	110-5	Compressor . . . . .	125-5
Access to Fuse Board . . . . .	110-6	Refrigerant Level . . . . .	125-5
Fuse Tester . . . . .	110-7	Low Pressure Switch . . . . .	125-6
Access to Circuit Boards . . . . .	110-8	High Pressure Switch . . . . .	125-6
Access to Electronic Control Unit . . . . .	110-9	Cleaning Condenser . . . . .	125-7
Access to Relay and Diode Board . . . . .	110-10	Cab Filter . . . . .	125-7
Sockets . . . . .	110-10	Air Intake Opening . . . . .	125-9
Electronic System Boards . . . . .	110-11	Condensed Water Drain Hose . . . . .	125-9
Fuse Board — Fuses . . . . .	110-12		
Fuse Board — Relays . . . . .	110-14	<b>Storage</b>	
Relay and Diode Board . . . . .	110-15	After the Season . . . . .	130-1
Solenoids . . . . .	110-16	Removing Harvester from Storage . . . . .	130-3
Electronic System Operation . . . . .	110-20		
Error Codes . . . . .	110-27	<b>Crime Prevention Tips</b> . . . . .	135-1
Work Lights . . . . .	110-35		
Headlights . . . . .	110-37	<b>Specifications</b>	
Clearance and Turn Signal Lights, Front . . .	110-37	Engine . . . . .	140-3
Tail, Stop and Turn Signal Lights, Rear . . .	110-38	Dimensions . . . . .	140-8
Dome Light . . . . .	110-38	Torques . . . . .	140-9
Switch Lighting . . . . .	110-38		
Indicator Light Bulbs . . . . .	110-39	<b>Serial Numbers</b>	
		Serial Number Plates . . . . .	145-1
<b>Service — Hydraulic System</b>		Product Identification Number . . . . .	145-1
Pressure Relief Valve . . . . .	115-1	Limited Battery Warranty . . . . .	145-5
System Operation . . . . .	115-2		
Accumulator . . . . .	115-3	<b>John Deere Service Literature Available</b>	
Hydraulic Components — Neutral Oil			
Flow . . . . .	115-4	<b>Index</b>	
Draining Hydraulic Oil . . . . .	115-7		
Replacing Hydraulic Oil Filter . . . . .	115-7		
Refilling Hydraulic Oil . . . . .	115-8		

# Identification View



ZX 004524

ZX004524 -UN-24MAR95


ZX.OMUSFH,TYP -19-01JAN93

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

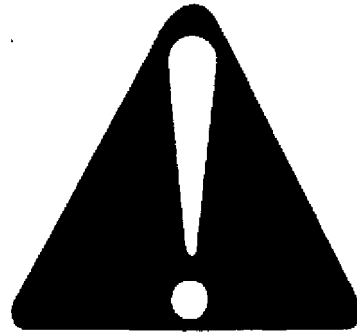

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

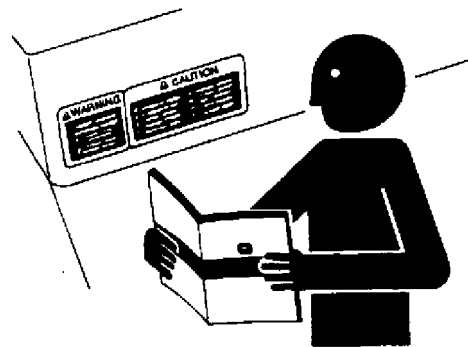

DX,READ -19-03MAR93

T5201 -UN-23AUG88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88




## PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

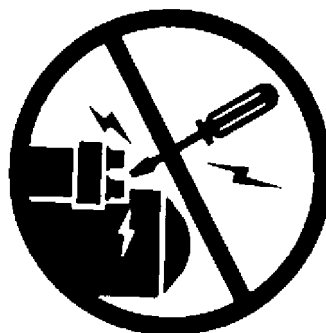

DX,BYPAS1 -19-03MAR93


TS177 -UN-11JAN89

## USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

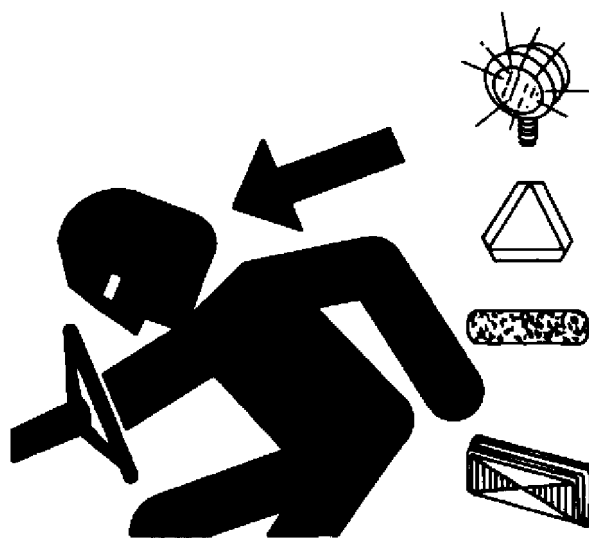

DX,FLASH -19-15MAR93

TS951 -UN-12APR90

## HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93

TS202 -UN-23AUG88




## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

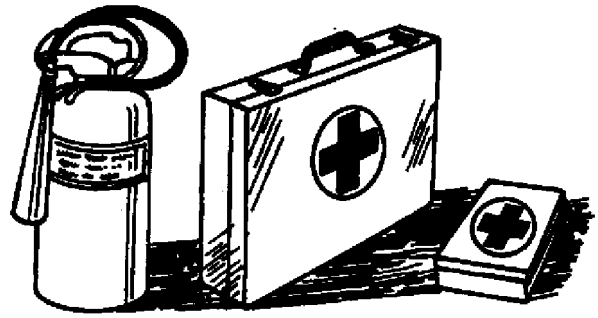

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88

## HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



DX,FIRE3 -19-16APR92

TS1356 -UN-18MAR92


## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

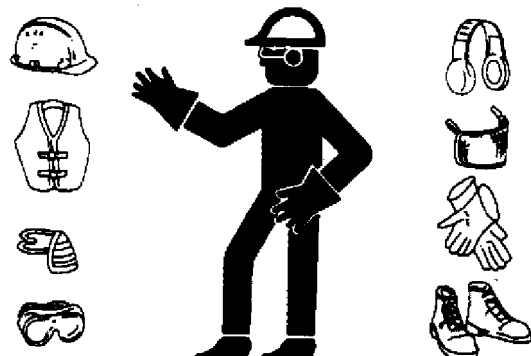

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88



## STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.




DX,STORE -19-03MAR93

TS219 -UN-23AUG68

## MOUNT AND DISMOUNT SAFELY

Use handrail when mounting or dismounting the harvester.

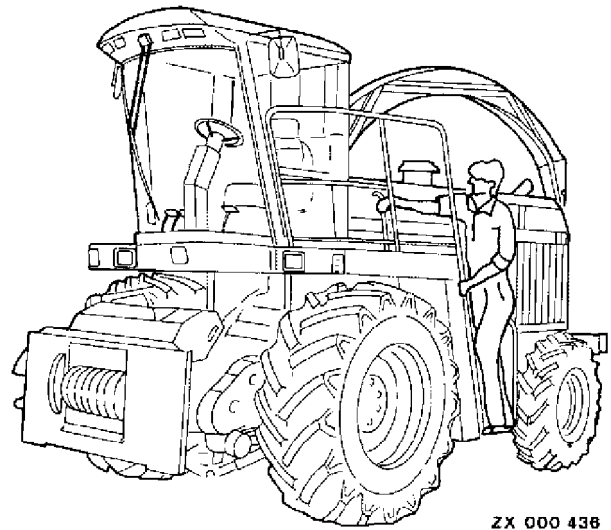

ZX 000 436

ZX,HANDLE -19-01OCT91

ZX000436 -UN-06APR95

## OPERATE FORAGE HARVESTER SAFELY

All machinery should only be operated by persons who have been properly instructed.

Never stand in the path of discharge spout while cutterhead and fan are turning.

Never open cutterhead or fan housing doors while cutterhead is turning.

Always operate machine at rated engine speed.



ZX,CAUTIONUS -19-01MAR93

TS263 -UN-23AUG68



## KEEP RIDERS OFF THE MACHINE

Only allow the operator and one rider in the operator's station.

Other riders are subject to injury such as being thrown off the machine and obstruct the operator's view resulting in the machine being operated in an unsafe manner.

One rider is permitted, since the machine is equipped with a factory-approved passenger seat.



TS253  
-UN-23AUG68

ZX,PASSENGERUS -19-01MAR93



## DRIVING THE FORAGE HARVESTER

Operate machine only when all guards are correctly installed.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.


Always adapt ground speed to road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope.

Attach harvesting units and other implements to forage harvester with extreme care.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the forage harvester swings out. Attachments and ground conditions affect the driving characteristics of the harvester.

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches and obstructions which may cause the forage harvester to tip, particularly on hillsides.

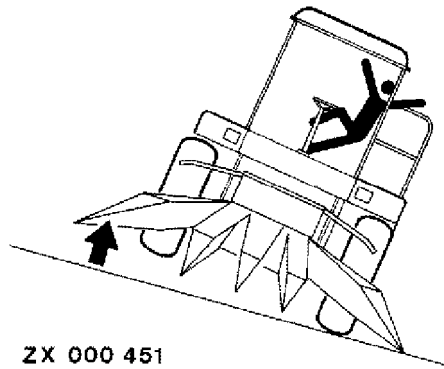

ZX 000 451

-JUN-05APR95

ZX000451


ZX,DRIVE -19-02OCT91

## GUARDS AND SHIELDS

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

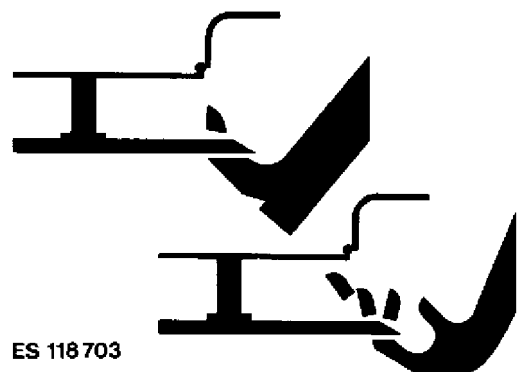

ES 118 703

-JUN-21MAR95

ES118703


FX,DEVICE -19-04DEC90



### STAY CLEAR OF HARVESTING UNIT

 Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation.

Before servicing or unclogging machine, always disengage main clutch, shut off engine and remove ignition key. Wait until all moving parts have stopped.



ZX,CUT -19-01JAN93

ES118704 -UN-

### KEEP HANDS AWAY FROM KNIVES

Never attempt to clear obstructions in front of or on harvesting unit unless main clutch is disengaged, engine shut off and key removed.

Everyone must be clear of the forage harvester before starting the engine.




FX,KNIFE -19-21DEC90

-UN-23AUG88

TS254

### AVOID ENTANGLEMENT

To avoid entanglement, do not feed crop into machine by hand or attempt to manually unplug machine while it is running. The feed rolls can feed crop material in faster than you can release your grip on the material.

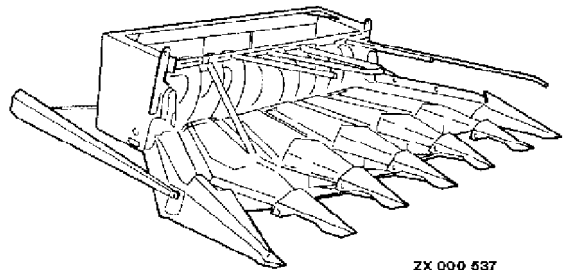

ZX 000 537


ZX,FEEDROLL -19-04DEC90

-UN-03APR95

ZX000637

### TRANSPORT WITH HARVESTING UNIT INSTALLED

Before driving forage harvester on public roads, harvesting unit must be raised. It must not, however, obstruct the operator's view of the road.

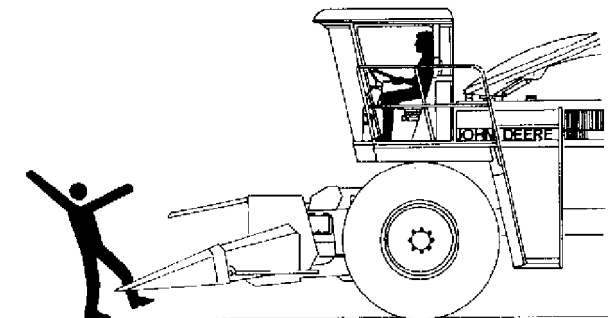

ZX 000452

ZX,HEADERUS -19-01MAR93


-UN-03APR95

ZX000452



## BALLASTING FOR SAFE GROUND CONTACT

Operating, steering and braking performance of forage harvester can be considerably affected by attachments which alter the center of gravity of the machine. To maintain safe ground contact, ballast the harvester at the rear end as necessary. Observe the maximum permissible axle loads and total weights.

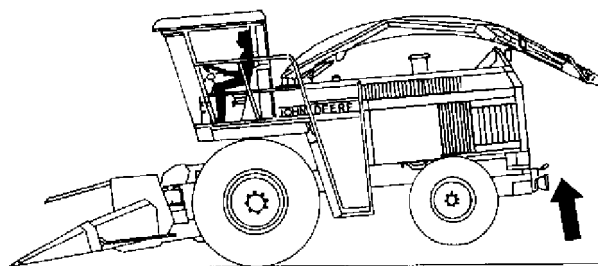

ZX 000 453

ZX,WEIGHT -19-02OCT91


ZX000453 -JUN-03APR95

## AVOID POWER LINES

If radio aerial and CB aerial (optional) are not secured in transport position before driving on public roads, they may come into contact with low-hanging electrical cables. This could result in the operator suffering a severe electrical shock.

To avoid electrical shock, no portion of the machine should be higher than 4 m (13 ft).

Before transporting machine, lower aerial or remove it.

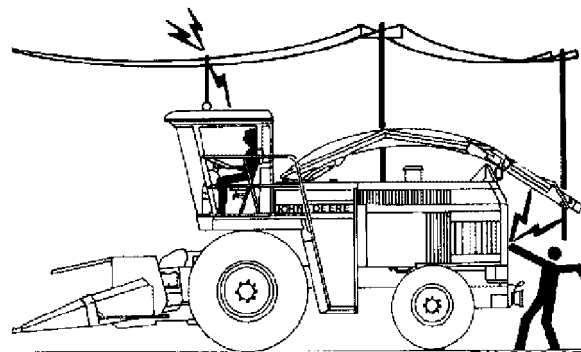

ZX 000 454

ZX,ANTENNAUS -19-01MAR93

ZX000454 -JUN-03APR95




## PARKING AND LEAVING THE FORAGE HARVESTER

Lower harvesting unit to the ground.

Before leaving the forage harvester, disengage main clutch and shut off engine. Move gear shift lever to neutral, apply parking brake, remove key and lock the operator's cab.


Never leave forage harvester unattended as long as engine is running.

Never leave the operator's cab when driving.

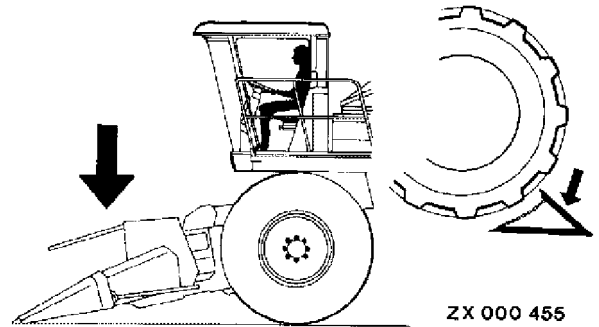

-UN-03APR95

ZX000455

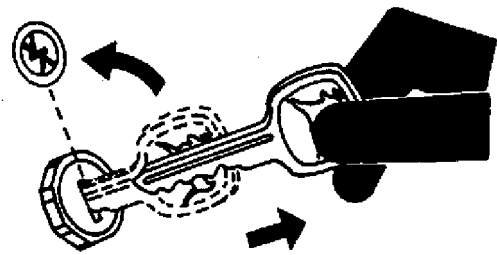

-UN-24MAY89


TS230

ZX\_PARKUS -19-01JAN93

## WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

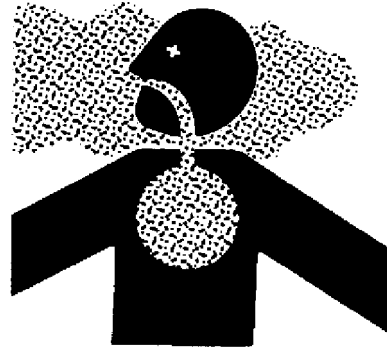

-UN-23AUG88

TS220

DX,AIR -19-04JUN90



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.




DX,SERV -19-03MAR93

TS218 -UN-23AUG88

## SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

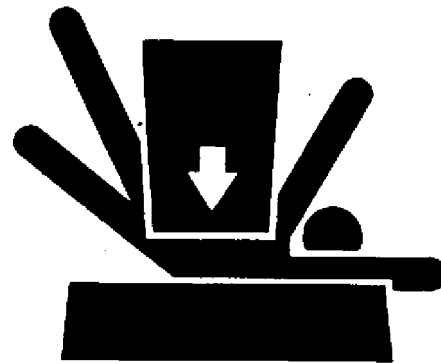

DX,LOWER -19-04JUN90

TS229 -UN-23AUG88



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**


**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**



## RETORQUE WHEEL NUTS

Retorque wheel nuts as specified in Sections "Wheels and Ballast" and "Lubrication, Periodic Services". Failure to do this could result in a wheel falling off during operation, causing the machine to tip over with serious injury to the operator and extensive damage to the machine.

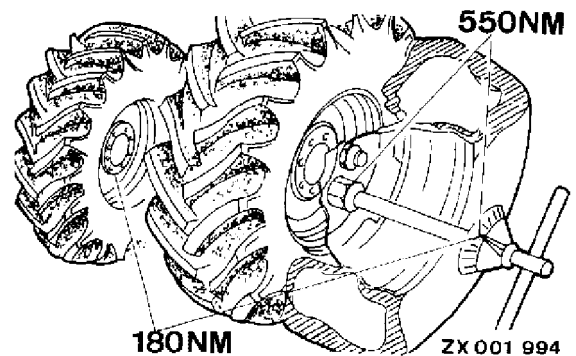

ZX,NUTS -19-11MAY92

-UN-03APR95  
ZX001994


## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

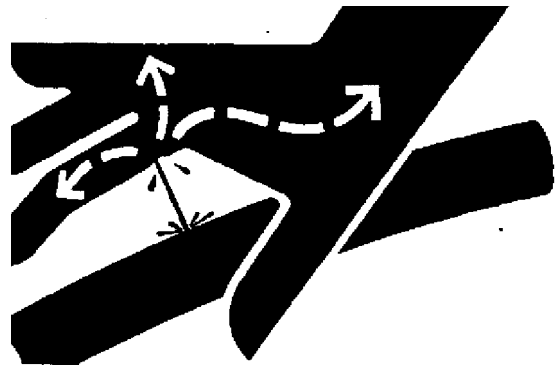

DX,FLUID -19-03MAR93

-UN-23AUG88  
X9811

## SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



DX,RCAP -19-04JUN90

-UN-23AUG88  
T5281



## DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

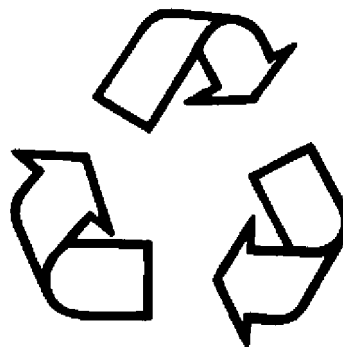

TS1133 -UN-26NOV90

DX,DRAIN -19-03MAR93

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**