

# **9930 Cotton Picker**

**John Deere Des Moines Works  
OMN200241 Issue B0  
(This manual replaces OM-N200241-J8)**

LITHO IN U.S.A.  
ENGLISH

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY on this machine is on the warranty certificate which you should have received from your dealer when making your purchase. This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Warranty and field improvements are a part of John Deere's product support program for customers who operate and maintain their equipment as described in this manual. Should the equipment be abused, or modified to change its performance beyond the original factory, specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



N8630302 -UN-27SEP88

# Contents

	Page		Page
<b>Safety</b> .....	05-1	<b>Preparing the Machine</b> .....	20-1
<b>Operator's Station</b>		<b>Prestarting Checks</b>	
Operator's Platform Controls and Instruments .....	10-1	Engine Oil Level .....	25-1
Cab Roof Controls .....	10-2	Hydraulic Oil Level .....	25-1
Air Conditioning High Pressure Switch .....	10-3	Hydrostatic Oil Level .....	25-1
Blower Usage .....	10-3	Coolant Level .....	25-2
Heater Usage .....	10-3	Fuel Filter, Draining .....	25-2
Air Conditioner Usage .....	10-4	Fuel Tank, Filling .....	25-2
Windshield Wiper Usage .....	10-4	Windows, Mirrors, and Lights .....	25-3
Air Outlet Adjustment .....	10-4	<b>Operating the Machine</b>	
Dome Light Usage .....	10-5	Engine, Starting .....	30-1
Window, Opening .....	10-5	Engine, Starting in Cold Weather .....	30-3
Indicators, Gauges, Switches .....	10-5	Starting Fluid Cans .....	30-3
Hydraulic Oil Temperature Indicator .....	10-6	Cold Weather Operation .....	30-4
Air Filter Indicator .....	10-6	Engine, Warm Up .....	30-4
Voltmeter .....	10-6	Engine, Idling .....	30-4
Engine Oil Pressure Gauge .....	10-6	Stopping Engine .....	30-5
Engine Coolant Temperature Gauge .....	10-7	Cooling System Protection .....	30-5
Fuel Gauge .....	10-7	Preparing to Drive .....	30-6
Tachometer/Hour Meter .....	10-7	Brakes, Setting and Releasing .....	30-6
Monitor .....	10-7	Brake Latch Usage .....	30-7
Basket Dump, Vane Dump Control, and Auger Compactor Lever Usage .....	10-8	Transmission .....	30-7
Steering Pedestal Tilt Adjustment .....	10-8	Throttle Lever .....	30-8
Steering Wheel Height Adjustment .....	10-8	Forward Driving .....	30-8
Guide Wheel Position Light .....	10-9	Stopping .....	30-8
Rear View Mirrors .....	10-9	Backing Up .....	30-9
Seat Adjustment .....	10-10	Parking .....	30-9
Controls (AM/FM Stereo) .....	10-11	Field and Highway Lights .....	30-10
Picker Unit and Drum Identification .....	10-12	Extra Field Lighting (Attachment) .....	30-11
<b>Break-In</b>		Driving/Transporting on Public Roads .....	30-11
Fan Control Lever .....	15-1	Towing, Short Distances .....	30-13
Engine .....	15-1	Towing, Long Distances .....	30-13
After One-Hour of Operation .....	15-3	Pushing .....	30-14
After 5 Hours of Operation .....	15-4	Fan and Unit, Starting .....	30-14
After 20 Hours .....	15-4	Picking Units, Lowering .....	30-14
After 100 Hours .....	15-4	Rows, Starting .....	30-15
		Picking Cotton .....	30-15

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMN200241 B0-19-09MAR90

COPYRIGHT© 1990  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright 1988 Deere & Company

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

Contents

	Page		Page
Dumping the Basket (Standard) . . . . .	30-16	Moistener Flush System . . . . .	50-7
Dumping the Basket—Using Vane Dump Control . . . . .	30-18	Strainers and Nozzles, Cleaning . . . . .	50-8
Dumping the Basket—Using Vane Dump (Continued) . . . . .	30-19	Water Tank Air Vent, Cleaning . . . . .	50-9
<b>Operator Presence System</b>		Moistener Pad, Replacement . . . . .	50-9
Operator Presence System Description . . . . .	35-1	Water Control Valve . . . . .	50-10
Bypass System, Preparation . . . . .	35-2		
Bypass System, Checking . . . . .	35-2	<b>Picking Units</b>	
Bypass System, Operating . . . . .	35-3	Row Spacing Changing . . . . .	55-1
Inspection Bypass, Deactivation . . . . .	35-3	Stabilizer Bar Adjustment . . . . .	55-3
		Lift Cylinder Adjustment . . . . .	55-3
<b>Lubrication and Maintenance</b>		Stalk Lifter Adjustment . . . . .	55-3
Fuels . . . . .	40-1	Tunnel Grates, Plant Guides and Grass Chain . . . . .	55-4
Diesel Engine Oil . . . . .	40-2	Stalk Lifter Rod Adjustment . . . . .	55-4
Hydraulic and Hydrostatic Oils . . . . .	40-3	Grid Bar Adjustment . . . . .	55-5
Transmission and Final Drives . . . . .	40-4	Pressure Plate Clearance Adjusting . . . . .	55-6
Picker Bar and Spindle Lubricants . . . . .	40-4	Pressure Plate Spring Tension Adjusting . . . . .	55-7
Spindle Cleaner and Wetting Agent . . . . .	40-5	Pressure Plate Rib Sections (Attachment) . . . . .	55-7
Extreme Pressure Grease . . . . .	40-5	Doffer Column Height Adjustment . . . . .	55-8
Lubricant for Unit Drive Gear Cases . . . . .	40-6	Picking Unit Belt Adjusting . . . . .	55-9
Alternative Lubricants . . . . .	40-6	Unit Drive Slip Clutch Adjusting . . . . .	55-10
Cold Weather Operation . . . . .	40-6	Plugged Picking Unit . . . . .	55-10
Storing Lubricants . . . . .	40-6	Unplugging Picking Unit . . . . .	55-11
Lubrication Symbols . . . . .	40-7	Spindle Identification . . . . .	55-11
Every Basket Dump . . . . .	40-8	Spindle Replacement . . . . .	55-12
Every 10 Hours of Operation . . . . .	40-9	Picker Bar Replacement . . . . .	55-12
Every 100 Hours of Operation . . . . .	40-14	Doffer Column Removal . . . . .	55-13
Every 200 and 500 Hours of Operation . . . . .	40-19	Doffer Column Installation . . . . .	55-15
Every 1000 Hours of Operation . . . . .	40-22	Doffer Column Alignment . . . . .	55-16
Every Year . . . . .	40-24	Front Doffer Drive Chain Adjustment . . . . .	55-18
Every Two Years . . . . .	40-25	Rear Doffer Drive Chain Adjustment . . . . .	55-18
<b>Height Sensing</b>		<b>Monitor System</b>	
Height Sensing Shoes . . . . .	45-1	Monitor Usage . . . . .	60-1
Automatic Height Control Sensing Valve . . . . .	45-1	Drum Clutch Slippage . . . . .	60-1
Automatic Height Control—Operating Height . . . . .	45-2	Clutch Monitor Adjustment . . . . .	60-2
		Indicator Light Check . . . . .	60-2
<b>Moistener System</b>		Monitor Adjustment . . . . .	60-4
Moistener System Preparation . . . . .	50-1	Light Bulb Replacement . . . . .	60-5
Water Pump Belt . . . . .	50-1		
Spindle Moistener Column Height . . . . .	50-1	<b>Air System and Basket</b>	
Spindle Moistener Column Alignment . . . . .	50-3	Cotton Fan Drive Belt Tension . . . . .	65-1
Water Tank, Filling . . . . .	50-4	Cotton Fan Belt . . . . .	65-2
Spindle Cleaner, Usage . . . . .	50-5	Cotton Fan Drive Belt Idler Sheave . . . . .	65-2
Storing John Deere Spindle Cleaner . . . . .	50-5	Upper Cotton Fan Drive Belt Keeper . . . . .	65-3
Wetting Agent, Usage . . . . .	50-6	Lower Cotton Fan Drive Belt Keeper and Guides . . . . .	65-3
Water Pressure, Adjustment . . . . .	50-6	Fan Belt, Seating . . . . .	65-3
		Air Duct . . . . .	65-4
		Basket Cylinder Lock Valve . . . . .	65-4

Continued on next page

## Contents

	<b>Page</b>		<b>Page</b>
Basket Lid Opening . . . . .	65-5	Element, Inspecting . . . . .	85-12
Basket Cylinders . . . . .	65-5	Side Access Screens and Grates . . . . .	85-12
<b>Onboard Lubrication System</b>		Radiator Compartment . . . . .	85-12
Lubrication Reservoir . . . . .	70-1	Coolant Level . . . . .	85-13
Lube System Operation . . . . .	70-2	Cooling System, Flushing . . . . .	85-15
Pump Drive Belt Adjusting . . . . .	70-3	Cooling System, Winterizing . . . . .	85-17
Onboard Lube System Failure . . . . .	70-3	Engine Coolant Thermostat Replacement . . .	85-17
Filter Replacement . . . . .	70-4	<b>Wheels and Tires</b>	
<b>Chassis</b>		Servicing Safely . . . . .	90-1
Brake Adjustment . . . . .	75-1	Checking Tires . . . . .	90-1
Lamp Bulbs . . . . .	75-1	Wheel Bolt Torque . . . . .	90-2
Head or Flood Lamp Bulb Replacement . . . . .	75-2	Liquid Ballast . . . . .	90-3
Tail or Warning Light Replacement . . . . .	75-2	Mud Scrapers . . . . .	90-4
Headlights . . . . .	75-3	Guide Wheels Toe-In . . . . .	90-5
<b>Cab and Air Conditioning</b>		Toe-In Adjustment . . . . .	90-5
Air Conditioner Belt . . . . .	80-1	<b>Batteries</b>	
Refrigerant Charge . . . . .	80-1	Precautions . . . . .	95-1
Air Conditioning High Pressure, Correction . . . . .	80-2	Preventing Damage . . . . .	95-1
Air Conditioning Low Pressure, Correction . . . . .	80-2	Servicing . . . . .	95-2
Console Cover, Removal . . . . .	80-2	Charging . . . . .	95-3
Console Light Bulbs . . . . .	80-3	Booster Battery Usage . . . . .	95-4
Dome and Console Bulbs . . . . .	80-3	<b>Troubleshooting</b> . . . . .	100-1
Signal Indicator Light Bulbs . . . . .	80-3	<b>Storage</b> . . . . .	105-1
Radio Fuse . . . . .	80-4	<b>Crime Prevention Tips</b> . . . . .	110-1
Antenna Trimmer . . . . .	80-4	<b>Specifications</b>	
Primary Filter Element . . . . .	80-5	Torque Chart . . . . .	115-1
Recirculating Air Filter . . . . .	80-5	Machine Specifications . . . . .	115-2
Cab Filters . . . . .	80-6	Machine Dimensions . . . . .	115-6
Fire Extinguishers . . . . .	80-7	Identification Numbers . . . . .	115-8
<b>Engine and Drive Train</b>		<b>Index</b>	
Hydraulic and Hydrostatic Filters . . . . .	85-1		
Alternator Drive Belts . . . . .	85-1		
Air Conditioner Belt . . . . .	85-1		
Hydraulic Pump Drive Belt . . . . .	85-2		
Alternator and Regulator, Safeguarding . . . . .	85-2		
Circuit Breakers . . . . .	85-3		
Engine Oil and Filter, Changing . . . . .	85-4		
Fuel Filter Element Replacement . . . . .	85-5		
Fuel System, Bleeding . . . . .	85-5		
Engine Fast Idle . . . . .	85-8		
Engine Slow Idle . . . . .	85-9		
Air Cleaner, Servicing . . . . .	85-9		
Air Cleaner Element, Replacement . . . . .	85-10		
Element, Cleaning . . . . .	85-11		
Element, Washing . . . . .	85-11		

*Contents*

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



O53,ALERT -19-16JUN87

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



O53,SIGNAL -19-07OCT85


TS187 -19-30SEP88

## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

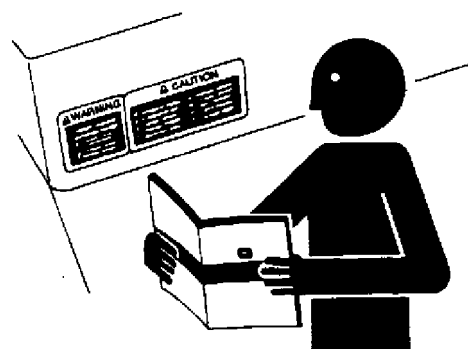

O53,READ -19-23APR87

TS201 -UN-23AUG88




## PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

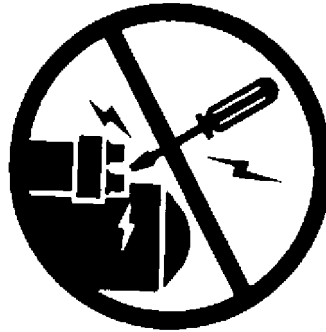

O53.BYPAS1 -19-21MAY85

TS177 -UN-11JAN89

## OPERATE SAFELY

Do not operate with more than one person in cab.

Do not start engine with gears or levers engaged.

Come to a complete stop before reversing direction.

Be sure area behind picker is clear before backing up.

Do not dump or lower basket or lid when someone is near picker.

Do not operate close to a ditch or creek.

Drive slowly over rough ground.

Do not dump on a slope or grade.

Do not dump near overhead wires.

Do not drive picker with basket raised.

Do not overload basket.

Slow down when turning.



N8630301 -UN-27SEP88


NX.9930.C1 -19-13JUL89



## KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

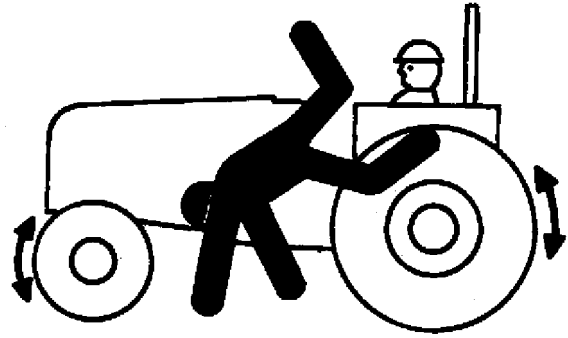

O53,RIDER -19-03MAY88

TS290  
-UN-23AUG68

## AVOID TIP-OVERS

Use a seat belt under almost all operating conditions.


Avoid holes, ditches, and obstructions which may cause the machine to tip, especially on hillsides.

Never drive near the edge of a gully or steep embankment—it might cave in.

Slow down for hillsides, rough ground, and sharp turns.

Do not turn with basket raised.

Do not dump basket toward a down slope.

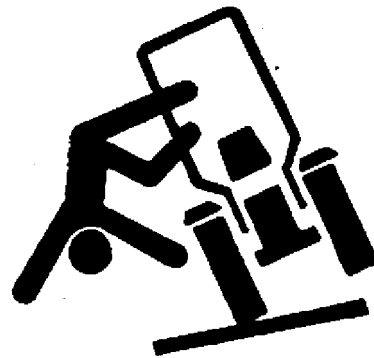

NX,9930,C2 -19-13JUL89

NG9084  
-UN-30MAR89

## AVOID CONTACT WITH MOVING PARTS

Shut off engine and remove key before unplugging picker.

Keep hands, feet, and clothing away from moving parts.



NX,9930,C3 -19-13JUL89

N82334K2  
-UN-05OCT88



## HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



O53,FIRE1 -19-23APR87


TS202  
-UN-23AUG88

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

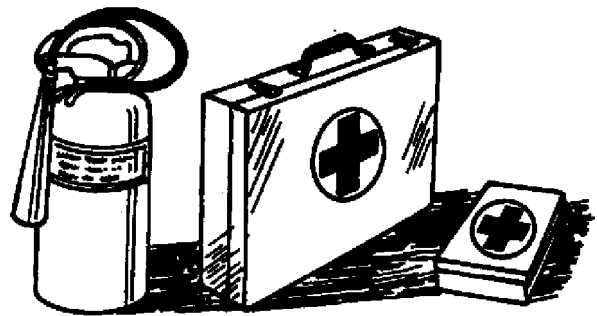

O53,FIRE2 -19-03MAR88

TS291  
-UN-23AUG88

## HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



O53,FIRE3 -19-17MAR89

T6089AU  
-UN-23MAR89



## AVOID FIRES

In case cotton ignites in basket, DUMP cotton. DO NOT dump into the wind, DO NOT attempt to extinguish burning cotton in basket.

DO NOT operate picker without two fire extinguishers near by. Fire extinguishers and mounting brackets are available. Order AT81764, T80932, and AT75387 from your John Deere dealer.

To prevent plugging, engage fan before engaging picking units.


DO NOT dump basket near electrical wires.

DO NOT dump into the wind. Wind could blow lint into a hot engine.

DO NOT refuel with the engine running.

DO NOT smoke or use a lantern when refueling.

Keep units free from trash.

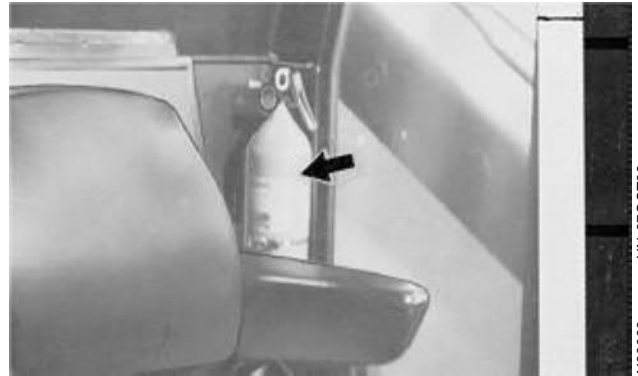

Cab Mounted


N36039 -UN-07OCT88

NX,9930,C4 -19-13JUL89

## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

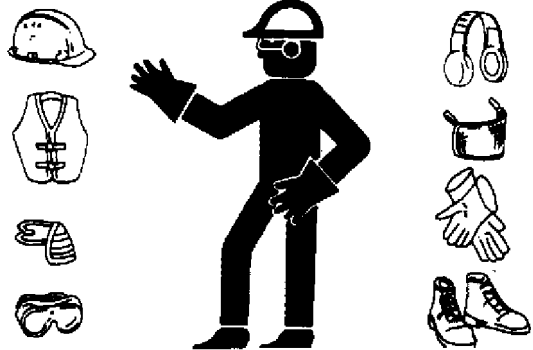

TS206 -UN-23AUG88

O53,WEAR2 -19-13OCT89

## PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



TS207 -UN-23AUG88

O53,NOISE -19-23APR87



## TRANSPORT SAFELY

Know the height of your picker and beware of overhead wires and obstacles.

Remove or lower radio antenna, if equipped.


Latch brakes together.

Stop slowly to avoid “nose-diving”.

DO NOT transport without first raising the picking units.

Keep the SMV emblem and reflectors clean and in place.

Always disengage picker units before road transport. Transporting with units engaged will cause machine to stop if operator leaves seat for more than 5 seconds.

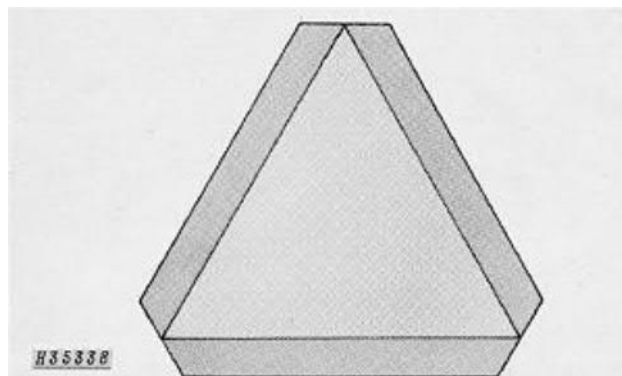

H35338 -UN-02FEB89


NX,9930,C5 -19-13JUL89

## USE SAFETY LIGHTS AND DEVICES

Use of flashing warning lights and turn signals are recommended when towing this equipment on public roads unless prohibited by state or local regulations. An implement safety lighting kit is available from your John Deere dealer.

Keep safety items in good condition. Replace missing or damaged items.

- A—Lights
- B—Slow Moving Vehicle Emblem
- C—Reflector Tape
- D—Reflectors

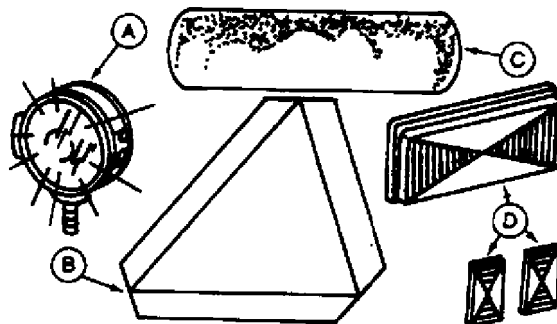

N 36564 -UN-10FEB89

O53,FLASH -19-11OCT85



## PRACTICE SAFE MAINTENANCE

Shut off engine and remove key when working on picker unless specifically told to leave engine running.

Before getting under picking units, raise units, shut off engine, set brakes, and set safety stops on both lift cylinder rods (bold arrow).



When basket is in the raised position, engage basket cylinder lock valve (A) to lock BEFORE working under the basket. When lowering basket, stand clear; then turn valve to unlock. Basket will not lower unless valve is unlocked.

DO NOT oil or adjust picker when it is in motion.

DO NOT loosen radiator cap on a hot radiator.

Replace any guards or shields removed for servicing.

Unauthorized modification to the machine may impair the function and/or safety and affect machine life.

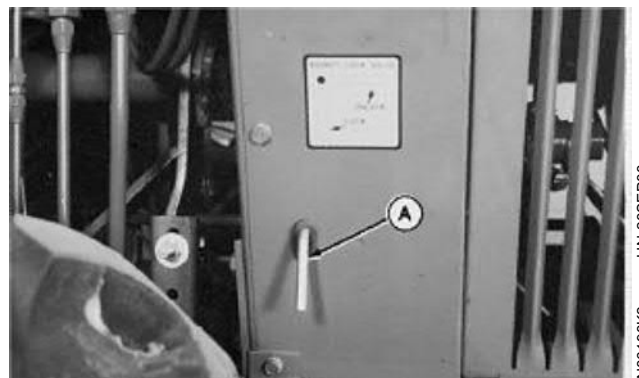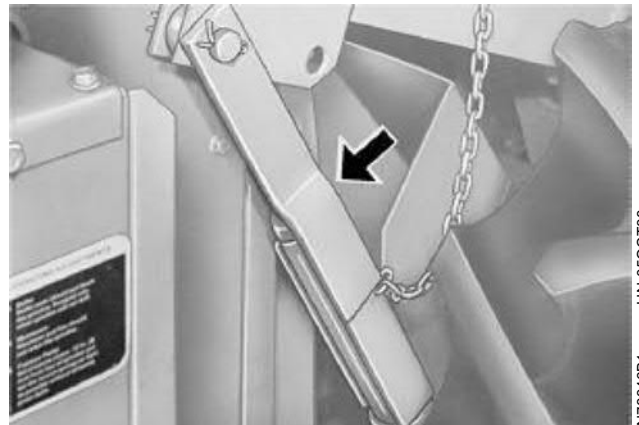


NX,9930,C6 -19-13JUL89

## BATTERY SAFETY

**!** CAUTION: Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace it last.

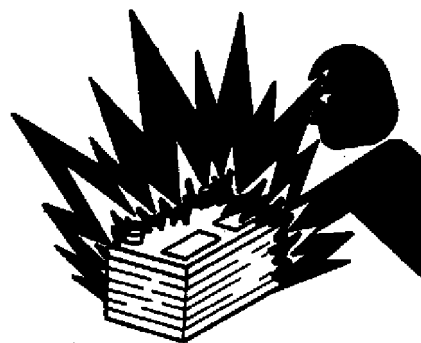

NX,9930,C7 -19-09JAN90



**CAUTION:** Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

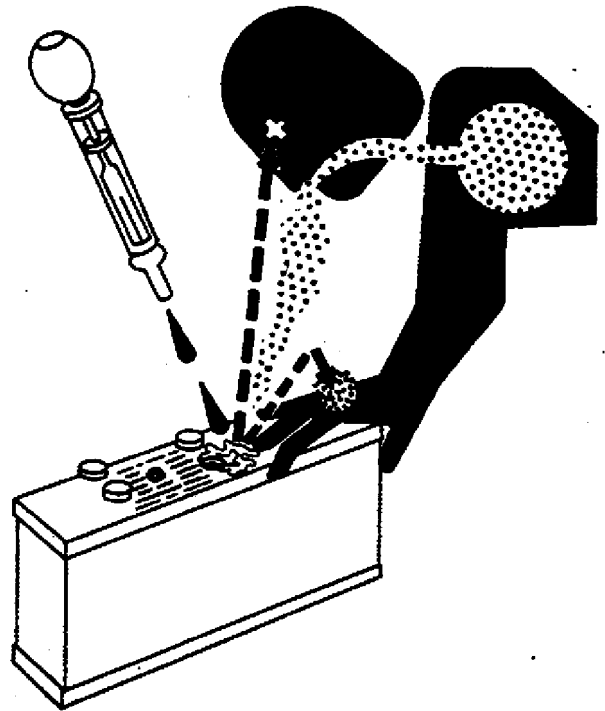

TSS203 -UN-23AUG88

NX,9930,C8 -19-09JAN90



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



O53\_SERV -19-21DEC87

-UN-23AUG88

TS218


## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.

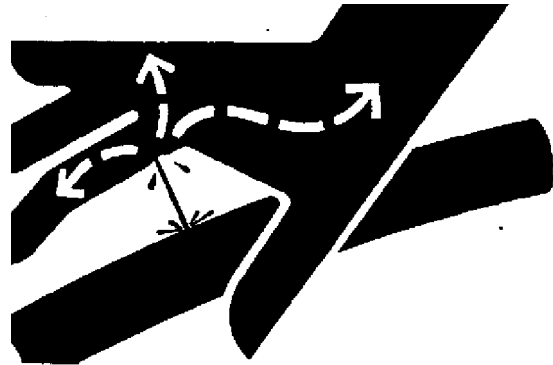

O53\_FLUID -19-01DEC88


-UN-23AUG88

X9811



## REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

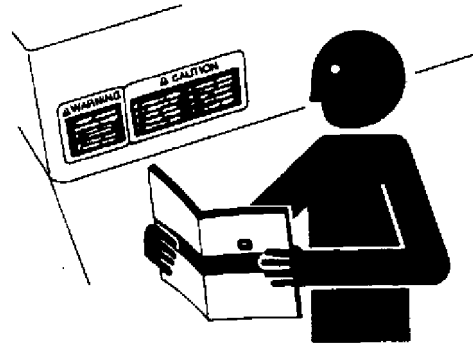


O53.SIGNS1 -19-22DEC87

TS201 -UN-23AUG88

## OPERATING BASKET CYLINDER LOCK VALVE

When basket is in the raised position, engage valve to lock position (A) BEFORE working under the basket. When lowering basket, stand clear; then turn valve to unlock position. Basket will not lower unless valve is unlocked.

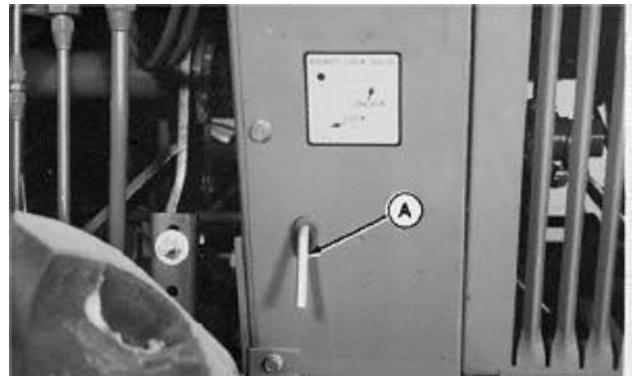

NX.9930.C9 -19-13JUL89

N86198K2 -UN-28SEP88

## READ SAFETY SIGNS

Carefully read and follow all CAUTION, WARNING, and DANGER safety signs.

Keep signs in good condition. Replace missing or damaged safety signs.




NX.9930.C10 -19-13JUL89

N38141 -UN-13MAR89



## DANGER

To avoid injury or death do not contact electric lines when moving or operating this machine.

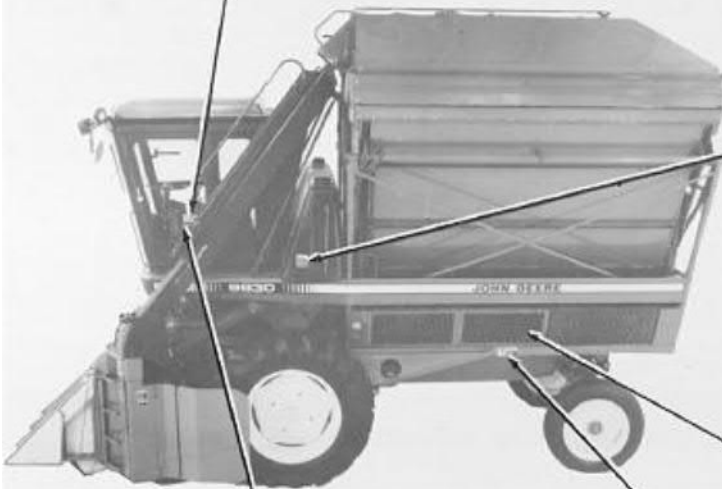

## WARNING

A fire hazard exists when flammable moistening agents are used. Use John Deere Spindle Cleaner, John Deere Wetting Agent or equivalent.

## CAUTION

1. Reduce engine speed before turning quickly or applying brakes.
2. Uneven application of brakes will draw picker to one side. Apply brakes evenly at transport speeds.
3. "Quick" stops can result in machine nosing forward. Drive with the care necessary to allow controlled application of brakes at all times.

## CAUTION

Refrigerant under pressure. Improper servicing may cause refrigerant to penetrate eyes and skin or cause burns. Wear goggles and protect skin.



## WARNING

DO NOT GET UNDER BASKET WITHOUT LOCKING BASKET CYLINDER LOCK VALVE. STAND CLEAR WHILE UNLOCKING BASKET CYLINDER LOCK VALVE.

N39395  
-19-14MAR89

NX,9930,C11 -19-13JUL89



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**



## CAUTION

1. Keep all shields in place.
2. Disengage and shut off all engine and/or motor power before servicing or unclogging machine.
3. Keep hands, feet, and clothing away from power-driven parts.



## WARNING

To avoid bodily injury from fall of raised picking units. Raise the picking units and shut off engine. Set safety stops on both lift cylinder rods before getting under the picking units.



## WARNING

AVOID POSSIBLE INJURY OR DEATH FROM A MACHINE RUNAWAY.

1. Do not start engine by shorting across starter terminals. Machine will start in gear and move if normal starting circuitry is bypassed.
2. Start engine only from operator's seat with transmission in neutral or park. NEVER start engine while standing on ground.

## DANGER



Disengage harvesting unit drive and shut off engine before unclogging machine.



N39396 -19-14MAR89

NX.9930.C12 -19-13JUL89



**WARNING**  
**Pressure cooling system**  
**Remove cap slowly**  
 CA A-29132

**WARNING**  
  
**DO NOT GET UNDER BASKET WITHOUT LOCKING BASKET CYLINDER LOCK VALVE. STAND CLEAR WHILE UNLOCKING BASKET CYLINDER LOCK VALVE.**



**WARNING**  
  
**Do Not Ride**

**DANGER**  
**EXPLOSIVE GASES**  
 Cigarettes, flames or sparks could cause battery to explode. Always shield eyes and face from battery. Do not charge or use booster cables or adjust post connections without proper instruction and training. Keep vent caps tight and level.

**POISON**  
**CAUSES SEVERE BURNS**  
 Contains sulfuric acid. Avoid contact with skin, eyes or clothing. In event of accident, flush with water and call a physician immediately. Keep out of reach of children.

N38881AA -19-23JAN90

NX.9930.C13 -19-13JUL89

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**