

9960
Cotton Picker
(PIN:N09960X004001-)

John Deere Des Moines Works
OMN200308 Issue A2
(Mark old manual OMN200308 B1 for
machines up to Serial No. N09960X004000)

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers

when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



N41590
-JUN-18MAY90

N41590

Contents

	Page		Page
Safety	05-1	After One Hour	20-3
Operator's Station		After Five Hours	20-4
Operator's Platform Controls	10-1	After Ten Hours	20-4
Cab Roof Controls	10-3	After 20 Hours	20-5
Monitor Display Panel	10-4	After 100 Hours	20-6
Blower	10-4	Prestarting Checks	
Heater	10-4	Engine Oil Level Check	25-1
Air Conditioner	10-5	Hydraulic Oil Level Check	25-1
Windshield Wiper	10-5	Checking Coolant Level	25-2
Dome Light	10-5	Draining Water From Fuel Filter	25-3
Opening Window	10-6	Filling Fuel Tank	25-3
Hydraulic Oil Temperature Indicator	10-6	Cleaning Windows, Mirrors, Lights	25-4
Air Filter Indicator	10-6	Operating the Machine	
Voltmeter	10-7	Starting the Engine	30-1
Engine Oil Pressure Gauge	10-8	Starting Engine In Cold Weather	30-3
Engine Coolant Temperature Gauge	10-8	Changing Starter Fluid Cans	30-3
Fuel Gauge	10-9	Cold Weather Operation	30-4
Tachometer/Hour Meter	10-9	Warming the Engine Up	30-4
Air Outlet Adjustment	10-9	Idling Engine	30-5
Monitor Controls	10-10	Cooling System Protection	30-5
Monitor Use	10-10	Stopping the Engine	30-6
Basket Dump, Compactors, Conveyor Lever	10-11	Preparing to Drive Machine	30-7
Personal Posture™ Seat Adjustment	10-12	Brake Latch	30-8
Steering Pedestal Tilt Adjustment	10-13	Engaging the Transmission	30-8
Steering Wheel Height Adjustment	10-13	Throttle Lever	30-9
Rear View Mirrors	10-14	Driving the Machine Forward	30-9
Air Conditioning High Pressure Switch	10-14	Stopping the Machine	30-9
Controls (AM/FM Stereo)	10-15	Backing Machine Up	30-10
Picker Unit and Drum Identification—In-Line	10-17	Parking Machine	30-11
Picker Unit and Drum Identification-Conventional	10-18	Operating Field and Highway Lights	30-12
Preparing the Machine	15-1	Extra Field Lighting Equipment (Attachment)	30-13
Break-In		Driving/Transporting Machine on Public Roads	30-14
Fan Control Lever	20-1	Towing the Machine	30-15
Breaking-In Engine	20-1	Pushing the Machine	30-16
		Starting the Fan and Units	30-17

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200308 A2-19-12DEC91

COPYRIGHT© 1992
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1991, 1990, 1989 Deere & Company

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

	Page		Page
Lowering the Picking Units	30-17	Leveling Height Sensing Shoes—In-Line Unit	45-4
Starting Down the Rows	30-18	Automatic Height Control Setting—In-Line Unit	45-5
Picking Cotton	30-18		
Dumping the Basket (Conveyor)	30-19	Moistener System	
Lowering Telescoping Basket	30-20	Preparing the Moistener System	50-1
Intermediate Basket Position	30-20	Water Pump Belt Adjustment	50-1
Raising Telescoping Basket	30-25	Moistener Column Check and Adjustment	50-2
Bleeding Telescoping Cylinders	30-30	Moistener Column Position Check	50-2
		Moistener Column Position Adjustment	50-3
Operator Presence System		Moistener Column Rotation Check	50-4
Description	35-1	Moistener Column Rotation Adjustment	50-5
Preparing Bypass System	35-1	Moistener Column Height Check	50-5
Checking Bypass System	35-2	Moistener Column Height Adjustment	50-6
Bypass System Operation	35-2	Filling the Water Tank	50-7
Deactivate Inspection Bypass	35-3	Remote Fill Attachment	50-8
Operator Presence System Check	35-4	Water Tank Air Vent Cleaning	50-8
		Spindle Cleaner	50-9
Lubrication and Maintenance		Storing John Deere Spindle Cleaner	50-10
Fuels	40-1	Wetting Agent	50-10
Diesel Engine Oil	40-2	Water Pressure Adjustment	50-11
Axle, Transmission, Hydraulic, Hydrostatic Oils	40-3	Moistener Flush System	50-12
Spindle and Picker Bar Grease	40-4	Strainer and Nozzle Cleaning	50-13
Transmission and Final Drives	40-4	Moistener Pad Replacement	50-13
Spindle Cleaner and Wetting Agent	40-5	Reacting to Spindle Buildup	50-14
General Purpose Grease	40-5		
Lubricant for Row Unit Gear Cases	40-6	Picking Units-Conventional and In-Line	
Storing Lubricants	40-6	Adjusting Tilt of Picking Units—Conventional	55-1
Lubrication Symbols	40-7	Adjusting Tilt of Picking Units—In-Line	55-2
Dispose of Fluids Properly	40-7	Picking Unit Lift Cylinder Adjusting—Conventional	55-2
Every Basket Dump	40-9	Picking Unit Lift Cylinder Adjusting—In-Line	55-3
Every 10 Hours Of Operation	40-10	Stalk Lifter Adjustment	55-3
Every 50 Hours Of Operation	40-15	Tunnel Grate, Plant Guide, Grass Chain Maintenance	55-4
Every 100 Hours Of Operation	40-16	Stalk Lifter Rod Adjusting-Conventional	55-4
Every 200 Hours Of Operation	40-22	Grid Bar Adjusting	55-5
Every 250 Hours Of Operation	40-23	Pressure Plate Clearance Adjusting—In-Line	55-6
Every 400 Hours Of Operation	40-24	Pressure Plate Clearance Adjusting—Conventional	55-7
Every Year	40-25	Pressure Plate Spring Tension Adjusting	55-8
Every 600 Hours Of Operation	40-26	Pressure Plate Rib Sections (Attachment)	55-10
Every Two Years	40-27	Doffer Column Height Adjusting	55-10
Every 2000 Hours	40-28	Doffer Height Adjusting-Extreme Conditions	55-13
		Picking Unit Belt Adjusting	55-14
Height Sensing		Unit Drive Belt Tensions	55-15
Height Sensing Adjustment	45-1		
Leveling Height Sensing Shoes	45-1		
Automatic Height Sensing Control Valve Adjustment	45-2		
Setting Automatic Height Control	45-3		

Continued on next page

Contents

	Page		Page
Plugged Picking Unit	55-16	Basket Cylinder Adjustment	75-14
Unplugging A Picking Unit	55-17	Head or Flood Lamp Replacement	75-14
Spindle Identification	55-18	Headlamp Adjustment	75-15
Spindle Replacement	55-18	Tail or Warning Light Bulb Replacement	75-16
Picker Bar Replacement	55-19	Front Warning Light Replacement	75-17
Doffer Column Removal	55-20		
Doffer Column Installation	55-22	Cab and Air Conditioning	
Doffer Column Tilt Adjusting	55-23	Adjusting Air Conditioner Belt	80-1
Tightening Doffer Drive Chains	55-26	Checking Refrigerant Charge	80-1
		Console Light Bulb Replacement	80-2
Monitor System		Signal Indicator light bulb replacement	80-2
Monitor Functions	60-1	Replacing Dome and Console Bulbs	80-2
Unit and Drum Clutch Slippage	60-2	Radio Fuse Replacement	80-3
Suction Door or Duct Restriction	60-3	Exterior Mount Radio Antenna	80-3
Fan Manifold Pressure	60-4	Primary Filter Element Replacement	80-4
Engine Water Temperature	60-4	Recirculating Air Filter Removal	80-4
Monitor Checkout Procedure	60-5	Cleaning Cab Filters	80-5
Monitor System Adjustment	60-9		
Suction Door and Duct Restriction Adjustment	60-10	Engine and Drive Train	
Fan Manifold Adjustment	60-11	Alternator Drive Belt Adjustment	85-1
Monitor Light Bulb Replacement	60-12	Fuel Filter Replacement	85-2
		Draining Fuel Filter Elements	85-2
Air System and Basket		Bleeding Fuel System	85-3
Fan Drive Belt Adjustment	65-1	Servicing Precleaner	85-5
Seating A New Fan Belt	65-3	Servicing Air Cleaner	85-5
Basket Cylinder Lock Valve Operation	65-4	Air Cleaner Element Replacement	85-5
Conveyor Chain Tension Adjustment	65-5	Cleaning Primary Element	85-6
		Washing Primary Element	85-6
Onboard Lubrication System		Primary Element Inspection	85-7
Filling Lubrication Reservoir	70-1	Engine Side Screen Cleaning	85-7
Onboard Lube System	70-1	Radiator Cleaning	85-7
Deactivate Inspection Bypass and Lube System	70-3	Coolant Level Check	85-8
Onboard Lube System Failure—Conventional	70-3	Filling Radiator	85-9
Onboard Lube System Failure—In-Line Unit	70-4	Flushing Cooling System	85-11
Lubrication System Pump Drive Belt adjustment	70-4	Winterize Cooling System	85-12
Replace Lubrication System Filters	70-5		
		Wheels and Tires	
Chassis		Servicing Tires	90-1
Stabilizer Cylinder Function Check	75-1	Checking Tires	90-1
Stabilizer Valve and Linkage Check	75-2	Liquid Ballast/R.H. Drive & Rear Guide Wheels	90-2
Stabilizer Cylinder Valve and Linkage Adjustment	75-3	Mud Scraper Adjustment	90-4
Bleeding Stabilizer Cylinder	75-6	Guide Wheels—Toe-In Check-	90-4
Bleeding Brake System	75-8	Guide Wheels—Toe-In	90-5
Brake Fluid Reservoir	75-13		
		Batteries	
		Battery Safety	95-1
		Servicing Battery	95-2
		Charging Battery	95-3

Continued on next page

Contents


	Page		Page
Starter Cable and Ground Strap Connection . . .	95-4	Changing Row Spacing—In-Line Leveling	
Preventing Battery Damage	95-5	Frames	110-55
Booster Battery	95-6	Plant Shield Installation	110-55
Troubleshooting		Reposition Stalklifters	110-56
Picking Unit	100-1	Unit Moving Tool Installation	110-57
Automatic Height Control	100-9	Storage	
Basket Extension	100-10	Storage Kit and Corrosion Inhibitor	115-1
Basket Control	100-11	Preparing Machine for Storage	115-1
Monitors	100-12	Preparing Engine for Storage	115-3
Hydrostatic Drive	100-13	Removing Machine From Storage	115-6
Operator Presence System	100-15	Crime Prevention Tips	120-1
Engine	100-16	Specifications	
Electrical System	100-22	Metric Series Torque Chart	125-1
Operator's Cab	100-23	Inch Series Torque Chart	125-2
Lubrication System	100-27	O-Ring Boss Fitting Torque Chart	125-3
Changing Row Spacing-Conventional Units		Flat Face O-Ring Seal Fitting Torque	
Row Spacing From 965 to 1016 mm (38		Chart	125-4
to 40-in.)	105-1	Machine Specifications	125-6
Row Spacing From 1016 mm (40-in.) To		Dimensions	125-9
965 mm (38-in.)	105-8	Identification Numbers	125-12
Changing Row Spacing—In-Line Units		Index	
Drive Wheel Installation/Removal	110-1		
Drive Wheel Spacers/Drive Shafts-762			
mm (30-in.) Row Spacing	110-2		
Drive Wheel Spacers/Drive Shafts-914			
mm (36-in.) Row Spacing	110-3		
Drive Wheel Spacers/Drive Shafts-965			
and 1016 mm (38-in. and 40-in.) R	110-4		
Drive Wheel Spacers/Drive Shafts-1625			
mm (64-in.) Skip Row	110-5		
Unit Frame Assembly-4-Row 762 mm			
(30-in.) Row Spacing	110-6		
Unit Frame Assembly-4-Row 965 and			
1016 mm (38- or 40-in.) Row Spacing . . .	110-6		
Unit Frame Assembly-4-Row w/1625 mm			
(64-in.) Skip Row	110-7		
Row Unit Positioning	110-9		
Row Unit Positioning-4-Row Unit			
Machines	110-10		
Row Spacing-965 and 1016 mm (38 and			
40-in.)	110-12		
Final Installation	110-31		
Row Unit Positioning-5-Row Unit Machine . .	110-32		
Air Pipes At Manifold Installation	110-51		
Liquid Ballast to Rear Guide Wheels	110-52		
Row Spacing-5-Row 762 mm (30-in.)	110-54		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

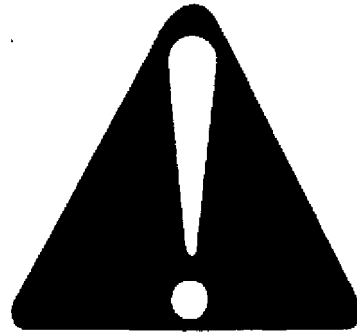

DX,ALERT -19-04JUN90

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

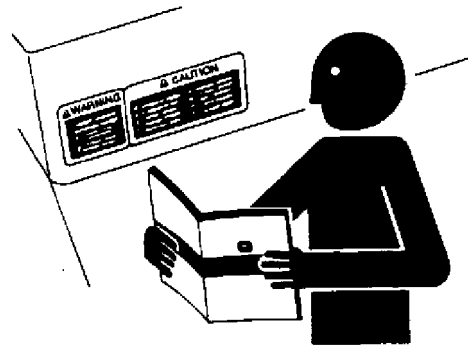

DX,READ -19-04JUN90

TS201 -UN-23AUG88




PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

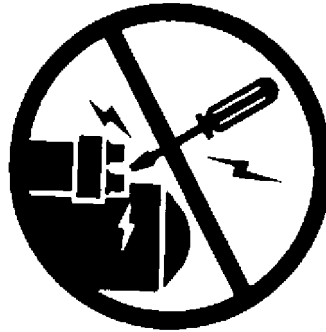

DX,BYPAS1 -19-04JUN90

TS177 -UN-11JAN89

OPERATE SAFELY

DO NOT operate picker without reading this operator's manual.

DO NOT operate picker unless you are completely familiar with your machine.

DO NOT operate picker with more than one person (the operator) on the machine.

Come to a complete stop before reversing direction.

DO NOT operate close to a ditch or creek.

Slow down when turning.

Drive slowly over rough ground.

DO NOT dump on a slope or grade.

DO NOT dump near overhead wires.

DO NOT dump unless you are certain that no one is near basket, trailer, or module builder.

DO NOT drive the picker with the basket raised.

DO NOT START ENGINE UNLESS MAIN GEAR SHIFT LEVER IS IN PARK.


DO NOT enter basket with conveyor operating.

NX,9960,C9 -19-11DEC91

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

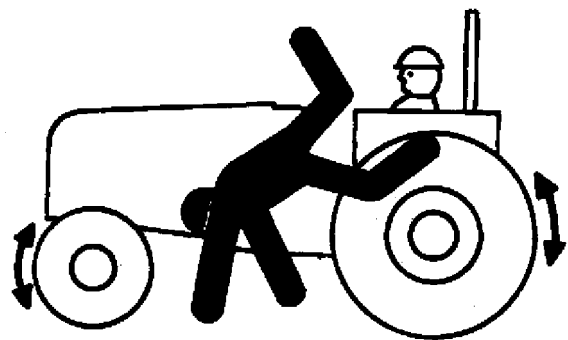

DX,RIDER -19-04JUN90

TS290 -UN-23AUG88



HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-04JUN90

TS202
-UN+23AUG68

AVOID FIRES

To prevent plugging, engage fan before engaging picking units.

DO NOT dump basket near electrical wires.

DO NOT dump into the wind. Wind could blow lint onto a hot engine.

DO NOT refuel with the engine running.

DO NOT smoke or use a lantern when refueling.

Keep the engine muffler, and units (plugged suction doors), free from trash.

In case cotton ignites in basket, DUMP cotton immediately. DO NOT dump into the wind. DO NOT attempt to extinguish burning cotton in basket.

DO NOT operate picker without two fire extinguishers nearby. Fire extinguishers and mounting brackets are available from your John Deere dealer.

NX,9960,C10X -19-11DEC91




MOUNTING AND SERVICING FIRE EXTINGUISHERS

Fire extinguishers (bold arrows) are available from your John Deere dealer.


Cab Mounted- Mount the bracket on the cab L.H. rear inside corner support and install extinguisher on bracket.

Chassis Mounted- Mount bracket on L.H. rear corner support and install extinguisher (bold arrow) on bracket.

Read and follow the instructions which are packaged with them. The extinguishers should be inspected at least every 200 hours of picker operation or once a month. Keep a record of inspections on the tag which comes with the extinguisher instruction booklet.

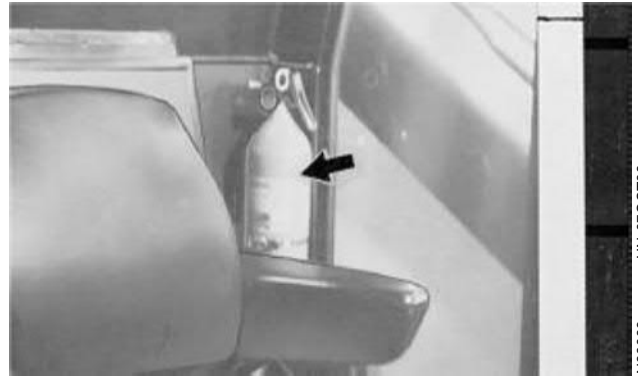

Cab Mounted

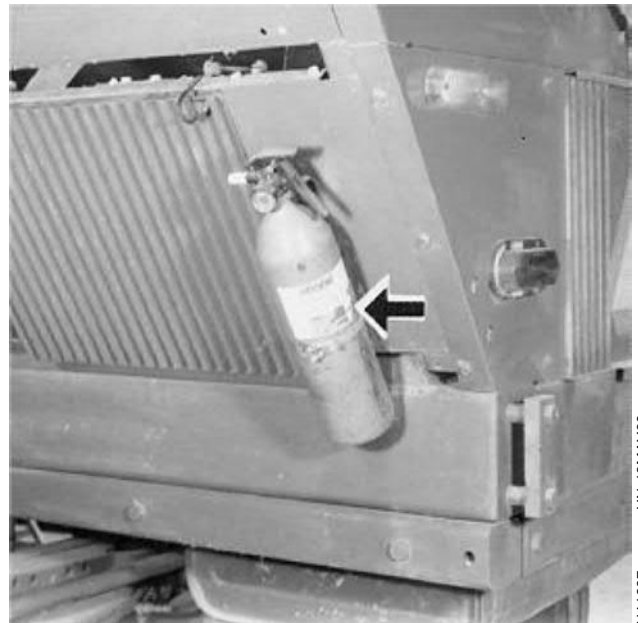

Chassis Mounted


NX,9960,C11X -19-10JAN91

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

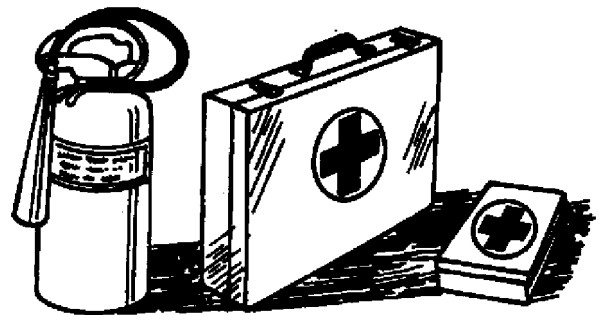

DX,FIRE2 -19-04JUN90



HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



DX,FIRE3 -19-04JUN90

T6089AU -UN-23MAR89

BATTERY SAFETY

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10-15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

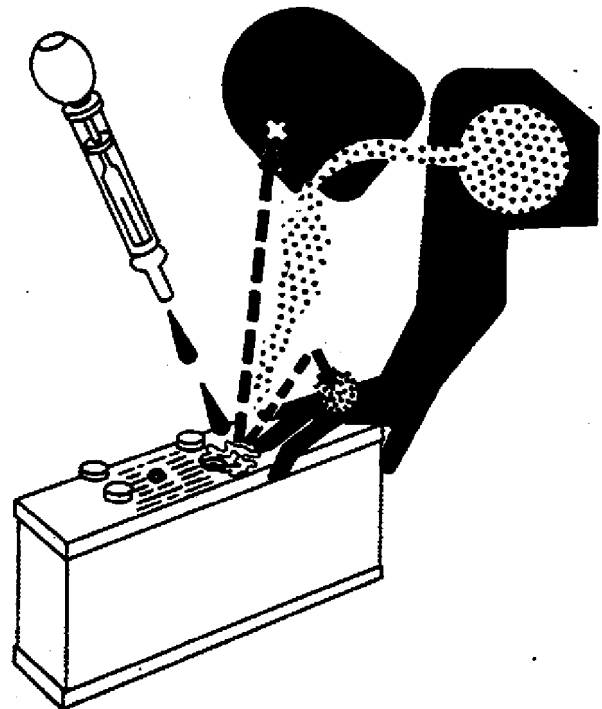

NX,9960,C13BX -19-09DEC91

TS203 -UN-23AUG88



PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



DX.NOISE -19-04JUN90

TS207 -UN-23AUG88


HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

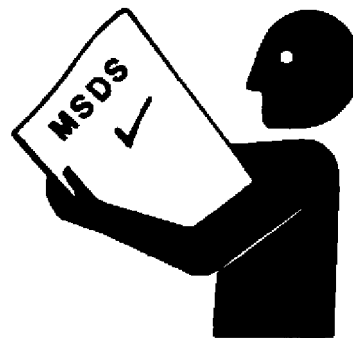


DX.MSDS.NA -19-15MAR91

TS1132 -UN-26NOV90

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

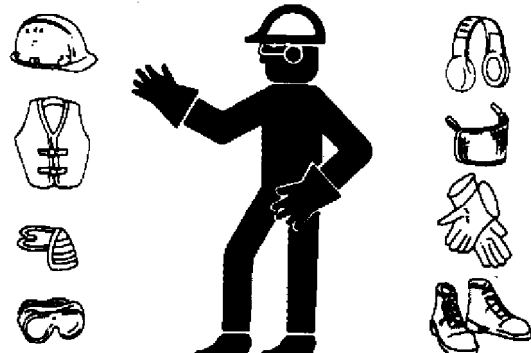

DX.WEAR2 -19-10SEP90

TS206 -UN-23AUG88



AVOID CONTACT WITH MOVING PARTS

Shut off engine and remove key before unplugging units.

Keep hands, feet, and clothing away from moving parts.



N62334K1 -JUN-30SEP88

NX.9960,C13 -19-17FEB89



TRANSPORT SAFELY



N41591
-JUN-24MAY90

DO NOT transport without first raising the picking units. Lower picking unit lock-up brackets.

When driving on a road or highway at night or during the day, use necessary lights and devices for adequate warning to operators of other vehicles. In this regard, check local governmental regulations. Various safety lights and devices are available from your John Deere dealer.

Check clearance before driving under electric wires, bridges, or through doorways. Know the height and width of the picker.

Fold radio antenna DOWN.

DO NOT fail to latch the brakes together.

Stop slowly to avoid “nose-diving.”

Keep the SMV emblem and reflectors clean and in place.

ALWAYS DISENGAGE UNITS BEFORE ROAD TRANSPORT. TRANSPORTING WITH UNITS ENGAGED WILL CAUSE MACHINE TO STOP IF OPERATOR LEAVES SEAT FOR MORE THAN 5 SECONDS.

Basket should be lowered to 3759 mm (148-in.) for safe transport. Always engage front L.H. corner basket latch pin. See Lowering Telescoping Basket in Operating Machine section.

NX,9960,C14X -19-11DEC91



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading



PRACTICE SAFE MAINTENANCE

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

DO NOT lubricate or adjust picker when it is in motion.

Fully extend unit lift cylinders (A) and place safety stops (B) over rods when working under units.


DO NOT check the water level in a hot radiator by removing cap. Check overflow tank.

Shut off engine and remove key when working on picker unless specifically told to leave engine running.

Replace any guards and shields removed for servicing.

DO NOT attempt to remove an obstruction unless:

- units are disengaged
- gear shift is in park
- ignition is off
- switch key is removed

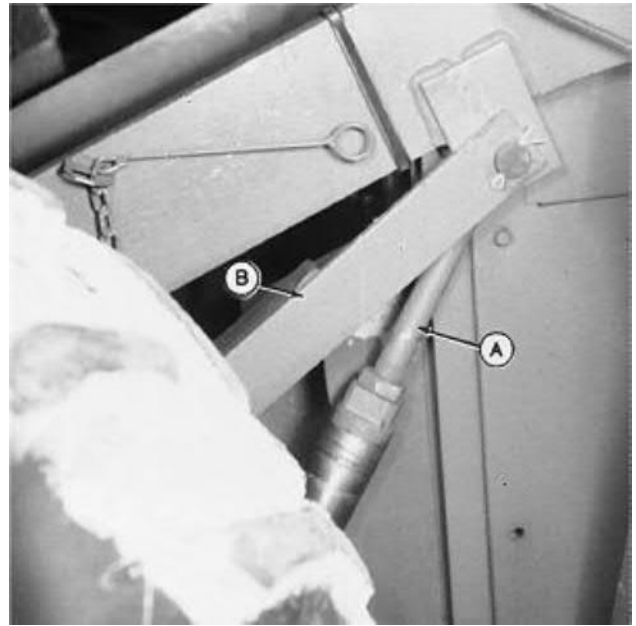

N421055 -UN-25/JAN91

NX.9960.C15X -19-10JAN91




AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

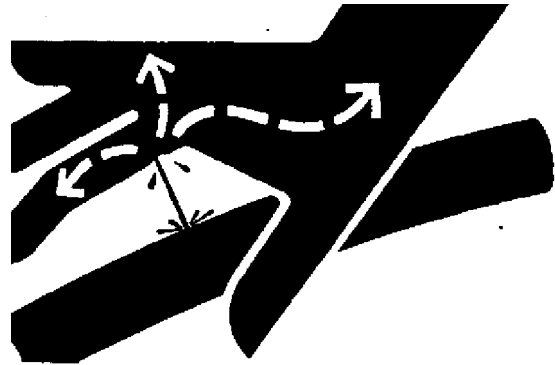

X9811 -UN-23AUG88

DX,FLUID -19-09AUG91

OPERATE BASKET CYLINDER LOCK VALVE

When basket is in the raised position, engage valve to lock (A) BEFORE working under the basket. When lowering basket, stand clear. Turn valve to unlock. Basket will not lower unless valve is unlocked.



N42121BG -UN-04DEC91

NX,9960,C16X -19-09DEC91

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>