

Surface Wrap System

(Serial No. EX880001-)

John Deere Ottumwa Works
OME87620 Issue K5
(This manual replaces OME82445 H2)

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record

all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

Checklists

DELIVERY

The following checklist is a reminder of very important information which should be conveyed to the customer at the time the surface wrap is delivered. Check off each item as it is fully explained to the customer.

- John Deere warranty.
- Safe and correct operation and service.
- Correct lubricants.
- Daily and periodic inspections.
- Servicing machine regularly and correctly.
- Advise customer of safety precautions that must be observed while operating surface wrap.
- Storing machine correctly.
- John Deere parts and service.
- Give the operator's manual to the customer and explain all operating adjustments and lubrication fully. Encourage customer to read manual.
- Have customer record machine serial number in the Specifications section of the operator's manual.
- Remove and file this page.

(Date Delivered)

(Signature)

EX,435USU,CA1 -19-25SEP95

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Checklists

AFTER-SALE

It is suggested the following items be checked sometime during the first season of operation.

- Go over entire machine for loose or missing hardware.
- Check for broken or damaged parts.
- Check operating adjustments.

- If possible, run baler to see if surface wrap is functioning properly. Inspect wraps on a few bales.
- Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions.

(Date Checked)

(Signature)

EX,435USU,DA1 -19-25SEP95

Checklists

Contents

	Page		Page
Safety	1	Service	
Preparing Baler for Surface Wrap		Practice Safety	31
Selecting Surface Wrap Material	6	Adjusting Feed Roll Pressure	31
Care of Surface Wrap Material	6	Checking Drive Belt Length	32
Additional Surface Wrap Storage	6	Removing and Installing Belt	33
Opening and Closing Surface Wrap		Removing V-Belt Idler Arms	34
Cover	7	Removing and Installing Knife	34
Threading Surface Wrap and Routing		Checking Brake	35
Through Rolls	7	Adjusting Microswitch	36
Operating Baler with Surface Wrap		Removing Wrappage From Feed Rollers	36
General Information	10	Adjusting Roll Support Brackets	38
How the Surface Wrap Attachment Works	10	Adjusting Knife Arm Stop	39
Using Surface Wrap after Extended		Increasing Brake Bar Tension	41
Storage	11	Decreasing Brake Bar Tension	42
BALE-TRAK Monitor Operation with		Servicing Lower Front Gate Roll	43
Surface Wrap	13	Bleeding Hydraulic Circuit	44
Discharging Bale with Surface Wrap	13	Surface Wrap Hydraulic System	45
Changing From Twine Wrap to Surface		Surface Wrap Assembly	46
Wrap	14	Specifications	
Adjusting Number of Surface Wraps on		Record Product Identification Number	73
the Baler	15	Bolt and Cap Screw Torque Value Charts	
Changing from Surface Wrap to Twine		Metric	74
Wrap	16	Inch	75
Operating Surface Wrap System With		Index	
Empty Baler	17		
Releasing Knife Arm Manually	18		
Lubrication and Maintenance			
Grease	19		
Alternative Lubricants	19		
Observe Lubrication Symbols	19		
Perform Lubrication and Maintenance	20		
Lubrication and Maintenance			
Every 30 Hours	20		
Annually	21		
Troubleshooting	22		

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OME87620 K5-19-30OCT95

COPYRIGHT© 1995
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1992, 1991 Deere & Company

Contents

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

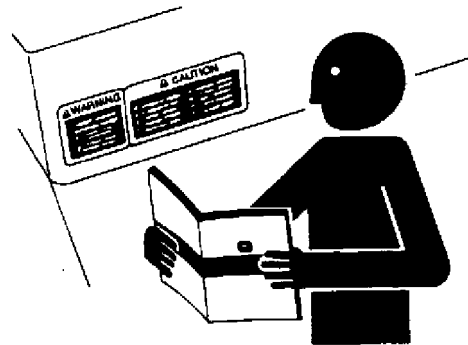

DX,READ -19-03MAR93

TS201 -UN-23AUG88



REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

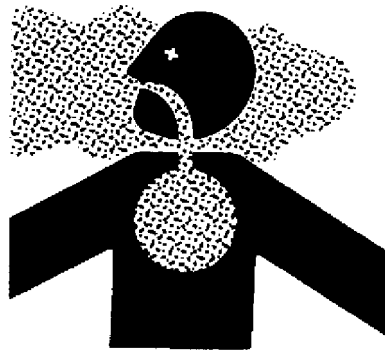

DX,PAINT -19-03MAR93

TS220 -UN-23AUG68

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading




AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

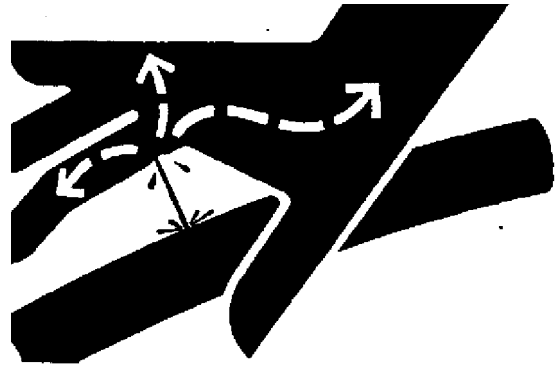

X9811 -UN-23AUG88

DX,FLUID -19-03MAR93

DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

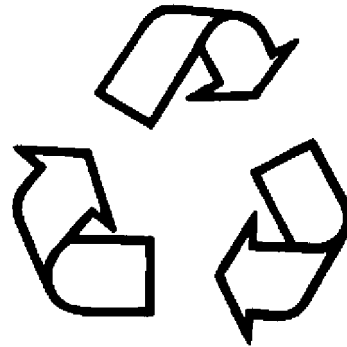

TS1133 -UN-26NOV90


DX,DRAIN -19-03MAR93



SAFETY SIGNS




E35379 -UN-21AUG90

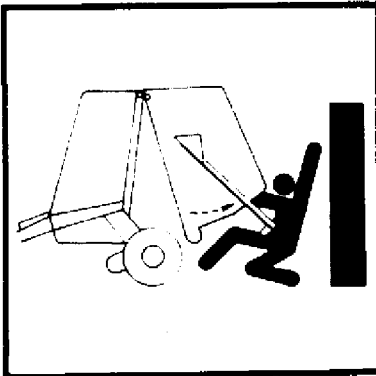

⚠ WARNING

HELP PREVENT CRUSHING INJURY:
Be sure bystanders stand clear before
operating gate and unloading bale.

STAY CLEAR OF GATE AND/OR PUSH BAR
while being raised or lowered.
WATCH FOR ROLLING BALE.

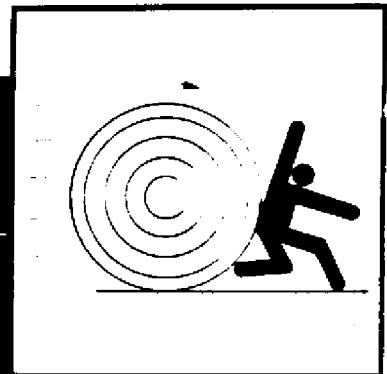

E35380 -19-21AUG90

EX,435USC,AA1 -19-25SEP95

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>