


Timberjack

# 1710D/A

F0

6 Wheel Skidder

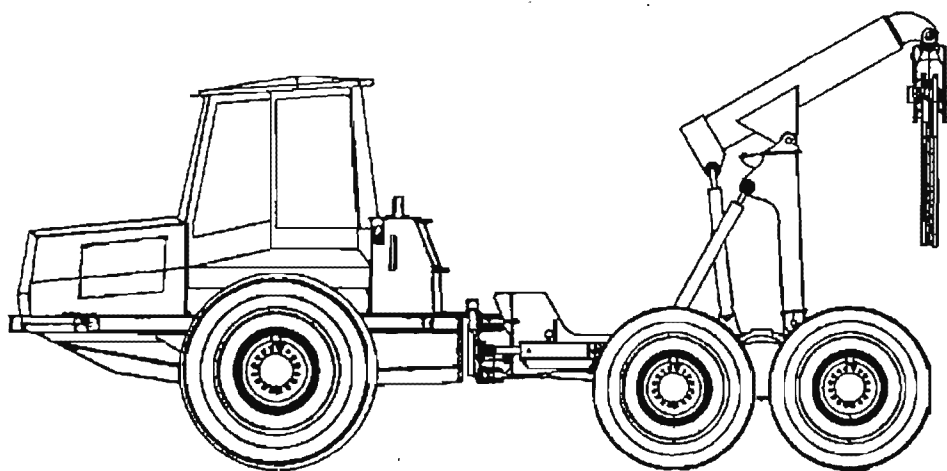

## Operator and Maintenance Manual

Serial Number 17100179 -

# Timberjack

ENG



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

---

<b>1. Introduction</b>	<b>1-1</b>
1.1 General	1-1
1.2 Timberjack Authorized Dealers and Service Centers	1-3
1.3 Timberjack Continental Distribution Centers	1-7
1.4 Where to Find Decals and Serial Number	1-8
<b>2. Warranty</b>	<b>2-1</b>
2.1 After-Sales Service	2-1
<b>3. Safety Rules</b>	<b>3-1</b>
3.1 General	3-1
3.2 Safety Symbol	3-1
3.3 Signal Words	3-1
3.4 General Safety Precautions	3-2
3.5 Operating Safety Precautions	3-4
3.6 Servicing Safety Precautions	3-8
3.7 Driving on Public Roads and Moving to New Site	3-11
3.8 Fire Prevention	3-11
3.9 What to Do if the Machine Catches Fire	3-12
<b>4. Controls and Signal Lights</b>	<b>4-1</b>
4.1 General	4-1
4.2 Front Dashboard	4-2
4.3 Start Key Positions	4-4
4.4 Windshield Washers and Wipers	4-5
4.5 Overhead Panel Switches	4-6
4.6 Warning Lights	4-7
4.7 Left Control Panel	4-8
4.8 Right Control Panel	4-9
4.9 Air Conditioner Controls	4-10
4.10 Dual Arch Grapple Controls; Left-Hand Side Lever	4-11
4.11 Dual Arch Grapple Controls; Right Hand Side Lever	4-11
4.12 Operating Instructions for the Engine Heating Timer (Opt. Eq.)	4-12

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

---

<b>5.</b>	<b>How to Operate the Forwarder</b>	<b>5-1</b>
5.1	Operation	5-1
5.1.1	Function of Seat Safety Switch	5-1
5.1.2	Emergency Stopper	5-1
5.1.3	How to Operate the Dual Arch Grapple	5-2
5.1.4	Brakes	5-3
5.1.5	Frame Brake (Opt. Eq.)	5-3
5.1.6	Steering	5-4
5.1.7	High/Low Gear and Rear-Wheel Drive	5-5
5.1.8	Using the Differential Lock-Up	5-6
5.1.9	Operating the Decking Blade (Optional Equipment)	5-7
5.1.10	Operating the Dual Arch Grapple	5-8
5.2	Driving	5-9
5.2.1	Before Starting the Engine for the First Time in a Working Day	5-9
5.2.2	How to Start the Engine	5-10
5.2.3	How to Turn Off the Engine	5-11
5.2.4	Off-Road Driving	5-12
5.2.5	Driving on Road	5-14
5.3	Transporting the 1710	5-16
5.4	How to Lift the Cab	5-17
5.5	How to Lower the Cab	5-19
5.6	Towing the Machine	5-19
<b>6.</b>	<b>Maintenance</b>	<b>6-1</b>
6.1	Bolt Torque Values (Follow-Up Checks)	6-2
6.2	Servicing Safety Precautions	6-3
6.3	Capacities	6-4
6.3.1	Engine Perkins 1306-8T1	6-5
6.3.2	Fuel	6-6
6.3.3	Cooling System	6-7
6.3.4	Hydraulic Oil	6-8
6.3.5	Gear oil	6-8
6.3.6	Grease	6-9
6.4	Service Intervals	6-10
6.5	Detailed Maintenance	6-12
6.5.1	Daily or Every Ten Hours	6-12
6.5.2	Weekly Maintenance or Every 50 hours	6-20

---

6.5.3	Every 250 Running Hours .....	6-21
6.5.4	Every 300 ... 400 Running Hours .....	6-26
6.5.5	Every 500 Running Hours .....	6-27
6.5.6	Every 1000 Running Hours .....	6-29
6.5.7	Every 2000 Running Hours .....	6-34
6.5.8	Maintenance after Every Six Months .....	6-36
6.5.9	Annual Maintenances .....	6-37
6.6	When Necessary, Service and Adjust the Following .....	6-39
6.6.1	How to Check the Induction and Exhaust Manifold for Tightness. . 6-40	
6.6.2	How to Eliminate Air from the Fuel System .....	6-40
6.6.3	How to Clean the Fuel Tank Filler Filter .....	6-41
6.6.4	How to Clean the Cab Windows .....	6-42
6.7	Check and Adjust the Hydrostatic System .....	6-43
6.7.1	Drive Pump .....	6-43
6.7.2	Drive Motor .....	6-44
6.7.3	How to Eliminate Air from the Drive Hydraulic System .....	6-46
6.8	Working Hydraulics; How to Check and Adjust the Pressures .....	6-48
6.8.1	Adjustment of Pressure Difference ( $\Delta p$ ) .....	6-48
6.8.2	Adjusting the Maximum Pressure .....	6-49
6.8.3	Adjusting the Dual Arch Grapple Pressure .....	6-50
6.8.4	Auxiliary Functions .....	6-51
6.8.5	Frame Brake .....	6-52
6.8.6	Optional Equipment .....	6-53
6.8.7	How to Eliminate Air from the Working Hydraulics .....	6-54
6.9	How to Check and Adjust the Brake System .....	6-56
6.9.1	Mechanical Adjustment of Brakes .....	6-56
6.9.2	How to Adjust the Pressure Reducing Valve of the Parking Brake 6-59	
6.9.3	How to Eliminate Air from the Brake Pedal System .....	6-59
6.9.4	Brake Charging Pressure .....	6-60
6.9.5	How to Eliminate Air from the Parking Brake .....	6-60
6.9.6	Service Brake .....	6-61
6.9.7	Drive Brake (brake pedal) .....	6-62
6.10	Quick Couplers for Pressure Measurement and Adjusting Screws ..	6-64

<b>7. Hydraulic System</b>	<b>7-1</b>
7.1 Dual Arch Grapple hydraulics	7-3
7.2 Transmission Hydraulics	7-5
7.3 Brake Hydraulics	7-7
<b>8. Electrical System</b>	<b>8-1</b>
8.1 Main Switch	8-1
8.2 Batteries	8-2
8.3 Welding	8-3
8.4 Fuses on the Left-Hand Side in the Engine Compartment	8-4
8.5 Instrument Box Fuses	8-5
8.6 Instrument Box Relays	8-6
8.7 Machine Sensors	8-7
8.7.1 Engine Speed Sensor	8-7
8.7.2 Coolant Temperature Sensor	8-7
8.7.3 Engine Oil Pressure Sensor	8-7
8.7.4 The RPM Sensor of the Drive Hydrostatics Motor	8-8
8.7.5 Hydraulic Oil Level Sensor	8-8
8.7.6 Hydraulic Oil Temperature Sensor	8-8
8.8 Wiring Diagram	8-9
<b>9. Operating Power Transmission</b>	<b>9-1</b>
9.1 High/Low Gear	9-2
9.2 Hydrostatic System	9-2
9.3 Control of Transmission	9-4
<b>10. Optional Equipment</b>	<b>10-1</b>
10.1 Air Conditioner	10-1
10.1.1 Introduction	10-1
10.1.2 Main Parts of Air Conditioning System	10-2
10.1.3 Air Conditioner	10-6
10.1.4 Air Conditioner Maintenance Instructions	10-8
10.2 Vacuum pump (Opt. Eq.)	10-12
<b>11. Technical Specifications</b>	<b>11-1</b>

**Appendix**

**Instructions for Use TMC**

Timberjack Total Machine Control

---

## 1. Introduction

This manual provides you with the instructions for the operation and maintenance of the **Timberjack 1710** Forwarder and instructions for the operation and maintenance of the Loader.

Please read the entire manual before you start operating the machine. The instructions given will assist you in becoming familiar with many features of the **Timberjack 1710** Forwarder, showing you how to operate the machine and how to carry out periodic maintenance procedures and some basic adjustments.

However, we strongly advise you to contact the nearest repair shop authorized by Timberjack when complicated maintenance tasks or repairs come up. Our service people have the experience and tools needed for the job.

### 1.1 General

We designed the **Timberjack 1710** forwarder to carry cross-cut timber on its deck from the logging site to the roadside. The maximum payload is 17 000 kg and the maximum log length 8 m. Skidding long logs is only permitted with machines specially equipped for the purpose. The machine must not be used for other purposes.

We designed the **Timberjack 1710** forwarder to operate under difficult off-road circumstances. Still it is important that you always adapt your driving speed and load to the surroundings. Use chains and tracks if necessary.

Take a good look at your forwarder always when having a short break or when maintaining the machine. It is worth bearing in mind that even a small failure, if left unattended, may soon result in major problems and a long downtime.

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**