

CALIFORNIA

Proposition 65 Warning

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.
Wash hands after handling.

8600 series tractors

Models 8650-8660-8670-8680-8690



Foreword

We would like to welcome you to the ever-growing number of people who own a Massey Ferguson tractor; people who appreciate quality. We are proud of every tractor that leaves our factories, each being technically advanced and of high quality.

This Operator Instruction Book contains the specifications for your new tractor. Please ensure that all operators read the instructions and follow them carefully. The pages that follow contain vital information on your tractor; please read them carefully.

Your Massey Ferguson dealer will guarantee you quality servicing and will provide you with all the assistance you need. When it comes to servicing, remember that your dealer knows your tractor best and that he wants you to be completely satisfied.

Please leave this Operator Instruction Book in the tractor if resold. The subsequent owner will need the information it contains.

All information and specifications in this Book are up to date at the time of publication. However, our ongoing policy to improve our products obliges us to reserve the right to make alterations at any time without notice.

Please note that this Book relates to all models and refers to both standard and optional equipment. You may therefore find details relating to equipment that is not fitted on your tractor.

Massey Ferguson, Beauvais



<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

8600 series tractors

1	Tractor identification	17
1.1	Locating serial numbers	19
1.1.1	Locating serial numbers	19
1.2	Your tractor identification details	20
1.2.1	Your tractor identification details	20
2	Safety instructions and safety points - Warranty	21
2.1	Introduction	23
2.1.1	Introduction - Safety instructions	23
2.2	Safety – Symbols and terms	24
2.2.1	Safety – Symbols and terms	24
2.3	Safety signs and instructions	25
2.3.1	Checking and replacing the safety signs and instructions	25
2.3.2	Presentation and location of the safety signs and instructions	26
2.4	General safety instructions	31
2.4.1	Awareness of the safety instructions and symbols	31
2.4.2	Operator familiarity in the use of the tractor	31
2.4.3	Filling the fuel tank	32
2.4.4	Getting into and out of the cab	33
2.4.5	Mandatory procedure before dismounting the tractor	33
2.5	Special safety instructions for preparing the tractor for use	34
2.5.1	Protective clothing	34
2.5.2	Activated carbon filter information	34
2.5.3	Safety devices and items	36
2.5.4	Checking the tractor	37
2.6	Specific safety instructions for starting the tractor	39
2.6.1	Protection of persons other than the operator	39
2.6.2	Start up safely	39
2.6.3	Checks to be carried out after start-up	40
2.7	Specific safety instructions for using the tractor	41
2.7.1	General instructions	41
2.7.2	Protection of persons other than the operator	42
2.7.3	Overturning	42
2.7.4	Tractor towing	44
2.7.5	Road use	44
2.7.6	Power take-off	46
2.7.7	Implements	46
2.7.8	Front-end loader	48
2.8	Specific safety instructions for servicing the tractor	49
2.8.1	Pollution warning to observe when servicing the tractor	49
2.8.2	General instructions	49
2.8.3	Special instructions for cleaning the tractor	49
2.9	Protective structures	51
2.9.1	Protective structures: use and accreditation	51
2.9.2	Cab or ROPS (depending on model)	51
2.9.3	Seat belt	51
2.9.4	Instructor seat	52
2.10	Warranty	53
2.10.1	General	53
2.10.2	Pre-delivery inspection and commissioning at the user's premises	53
2.10.3	Warranty procedure	53
2.10.4	Procedure to follow if changing region	53
2.10.5	Servicing during and after the warranty period	54

2.10.6	California emission control warranty statement	54
2.10.7	United States and Canada emission control warranty statement	56
3	Operation	61
3.1	Cab	63
3.1.1	Steering console	63
3.1.2	Instrument panel	64
3.1.3	Control unit	68
3.1.4	Start switch	69
3.1.5	Pedals	69
3.1.6	Steering Wheel	70
3.1.7	Seat	70
3.1.8	Right-hand console	75
3.1.9	Multifunction armrest	76
3.1.10	Work lights module	77
3.1.11	Left-hand console	78
3.1.12	Upper console	78
3.1.13	Air conditioning	80
3.1.14	Accessories sockets	84
3.1.15	Sun visor	85
3.1.16	High-visibility roof hatch	86
3.1.17	Suspended cab	86
3.2	Dash Control Center control screens on the instrument panel	88
3.2.1	Using the instrument panel control screen	88
3.2.2	Dash Control Center screens	88
3.3	Body	92
3.3.1	Opening the hood	92
3.3.2	Adjusting the external rear-view mirrors	93
3.4	Engine	96
3.4.1	Running-in	96
3.4.2	Filling with fuel	96
3.4.3	Start-up	98
3.4.4	Start-up sheet	100
3.4.5	Cold weather starting	101
3.4.6	Information on the different modes of the E3 engine with DEF technology	101
3.4.7	Stopping the engine	103
3.4.8	Engine speed	104
3.4.9	Forward speed calibration	105
3.5	Transmission	106
3.5.1	General	106
3.5.2	Coupler clutch function	106
3.5.3	Range shifting	106
3.5.4	Power Shuttle	108
3.5.5	Setting start-up speeds	110
3.5.6	Setting speeds	111
3.5.7	Engine underspeed supervisor	111
3.5.8	lever mode	113
3.5.9	pedal mode	114
3.5.10	self-propelled mode	115
3.5.11	Dyna-TM mode	116
3.5.12	Dyna-Step mode (optional)	117
3.5.13	Tractor towing	118
3.6	Brakes	123
3.6.1	Brake pedals	123
3.6.2	Hydraulic trailer brake	123
3.6.3	Pneumatic trailer brake	123
3.6.4	Electromechanically controlled brake on the steering column(ParkLock)	125
3.7	Steering	127
3.7.1	Steering	127
3.8	Front axle	129
3.8.1	Four-wheel drive front axle	129
3.8.2	Suspended front axle	130

3.8.3	Permissible load on the front axle	131
3.8.4	Using a scraper	134
3.9	Differential lock	135
3.9.1	Differential lock	135
3.10	Power take-off	136
3.10.1	Front power take-off	136
3.10.2	Rear power take-off (PTO)	137
3.10.3	Interchangeable 540 et1000 rpm PTO (flanged shaft)	138
3.10.4	Economy PTO	140
3.10.5	PTO external controls	140
3.10.6	Power take-off electronic controls	140
3.11	Linkage	142
3.11.1	Electronic controls for front and rear linkage	142
3.11.2	Rear linkage operation	143
3.11.3	Rear linkage controls on the fenders	146
3.11.4	Front linkage	146
3.12	Linkage	150
3.12.1	Three-point linkage	150
3.12.2	Three-point linkage Top link	150
3.12.3	Three-point linkage Lower links	150
3.12.4	Three-point linkage lift rods	151
3.12.5	Three-point linkage stabilizers	151
3.12.6	Swinging drawbar	152
3.13	Auxiliary hydraulics	158
3.13.1	General	158
3.13.2	Description and use of the couplers	158
3.13.3	Locking/unlocking the controls	163
3.13.4	Description and use of the cab controls	164
3.13.5	Description and use of the external controls	166
3.13.6	Setting flow rates and time delay	166
3.14	Front-end loader function	168
3.14.1	Layout of components	168
3.14.2	Using the front-end loader controls	169
3.14.3	Front-end loader	172
3.15	Wheels and tires	173
3.15.1	Wheel studs	173
3.15.2	Adjusting the front wheel track width	173
3.15.3	Adjusting the 4WD front axle stops	174
3.15.4	Adjusting the rear wheel track width	175
3.15.5	Tires	177
3.15.6	Dual wheels	177
3.15.7	Tire pressures	178
3.15.8	Liquid ballasting	178
4	Maintenance	181
4.1	Service guide	183
4.1.1	Maintenance	183
4.1.2	Lubrication chart	185
4.2	Cab	187
4.2.1	Air-conditioning system: Condenser	187
4.2.2	Air-conditioning system: Checking the air conditioning system	187
4.2.3	Air-conditioning system: dryer	188
4.2.4	Cab air filters	188
4.2.5	Cab attachment	189
4.2.6	Windshield washer	189
4.3	Engine	190
4.3.1	Recommended products	190
4.3.2	Fuel	190
4.3.3	Biodiesel fuel	192
4.3.4	DEF additive:	193
4.3.5	6-cylinder Sisu engine	194
4.3.6	Engine oil level check	195

4.3.7	Draining the engine oil	195
4.3.8	Replacing the engine oil filter	195
4.3.9	Replacing the centrifugal oil filter (models equipped with EGR)	196
4.3.10	Replacing the urea filter (models equipped with E3 engine with DEF technology)	196
4.3.11	FUEL SYSTEM Fuel prefilter	197
4.3.12	Fuel system: Fuel filter	198
4.3.13	Water filter	198
4.3.14	FUEL SYSTEM bleeding	200
4.3.15	Fuel system: Fuel injection pump, regulator and injectors	200
4.3.16	FUEL SYSTEM Injection (E3 engine with DEF technology) (optional)	200
4.3.17	Air filter	200
4.3.18	Cooling system	202
4.3.19	Checking the fan/alternator/air conditioning Poly-V belt	203
4.3.20	Replacing the fan/alternator/air conditioning belts	204
4.4	Transmission	206
4.4.1	Recommended products	206
4.4.2	Checking the transmission oil level	206
4.4.3	Draining the transmission oil	206
4.4.4	Checking the level of the rear final drive units	207
4.4.5	Draining the final drives	208
4.4.6	Filtering the transmission hydraulic system	208
4.4.7	Checking and cleaning the transmission oil cooler	210
4.4.8	Lubricating the rear PTO shaft	211
4.4.9	Clutch	211
4.5	Brakes	212
4.5.1	Bleeding the brake system	212
4.6	Front power take-off	213
4.6.1	Recommended products	213
4.6.2	Draining oil	213
4.6.3	Lubricating the front PTO shaft	213
4.7	Front axle and steering	214
4.7.1	Recommended products	214
4.7.2	Four-wheel drive front axle: Checking the front axle beam oil level	214
4.7.3	Four-wheel drive front axle: draining the oil from the front axle beam	214
4.7.4	Four-wheel drive front axle: checking the oil level in the final drives	215
4.7.5	Four-wheel drive front axle: draining the oil in the final drives	215
4.7.6	Four-wheel drive front axle: lubrication	216
4.8	Linkage	218
4.8.1	Recommended products	218
4.8.2	Check the linkage shaft oil level	218
4.9	Linkage	219
4.9.1	Recommended products	219
4.9.2	Three-point linkage LUBRICATION	219
4.9.3	Front linkage: LUBRICATION	219
4.9.4	Ball hitch: lubrication	221
4.10	Auxiliary hydraulics	223
4.10.1	Recommended products	223
4.10.2	Checking the auxiliary hydraulic system oil level	223
4.10.3	Draining the auxiliary hydraulic system	224
4.10.4	Filtering the auxiliary hydraulic system	224
4.10.5	Checking and cleaning the auxiliary hydraulic system oil cooler	225
4.11	Electrical equipment	227
4.11.1	Batteries	227
4.11.2	Alternator	227
4.11.3	Power socket (ASAE)	227
4.11.4	Adjusting the headlights	228
4.11.5	Fuse box description	229
4.11.6	Alternator protection	236
4.11.7	Battery isolator	237
4.12	Pressure washing	238
4.12.1	Pressure washing	238



4.13	Storing your tractor	239
4.13.1	Storing your tractor	239
4.13.2	Storing DEF additive	239
4.14	Faults and solutions	240
4.14.1	General table of faults	240
4.14.2	Indicator light panel	242
4.14.3	Indication of faults	246
4.14.4	Instrument panel error codes	248
4.14.5	Engine error codes	250
4.14.6	Error codes for E3 engine with AdBlue/DEF technology	252
4.14.7	Transmission error codes	253
4.14.8	Four-wheel drive front axle error codes	254
4.14.9	PTO error codes	255
4.14.10	Hydraulic valve error codes	255
4.14.11	Multifunction armrest error codes	256
4.14.12	Headlights module error codes	257
5	Technical specifications	259
5.1	General specifications	261
5.1.1	Model 8650	261
5.1.2	Model 8660	261
5.1.3	Model 8670	262
5.1.4	Model 8680	263
5.1.5	Model 8690	264
5.2	Cab	266
5.2.1	NOISE LEVELS (dBA) AT OPERATOR'S EARS	266
5.3	Engine	267
5.3.1	Engine specifications	267
5.3.2	Fuel system and air filter	267
5.3.3	COOLING	268
5.3.4	Tightening torques	268
5.4	Transmission	269
5.4.1	Forward speed for all models with transmission in Dyna-VT mode	269
5.4.2	Forward speed for all models with transmission in Stepshift mode	270
5.4.3	Gearbox	274
5.4.4	Final drives	274
5.4.5	Rear differential lock	275
5.5	Brakes	276
5.5.1	Brake system technical specifications	276
5.6	Front axle and steering	277
5.6.1	Four-wheel drive front axle	277
5.6.2	Steering	277
5.7	Power take-off	279
5.7.1	Specifications	279
5.7.2	Tightening torques	279
5.8	Linkage	280
5.8.1	Rear linkage	280
5.9	Auxiliary hydraulics	281
5.9.1	Load Sensing system: 175 l/min (46.20 gal/min (US))	281
5.10	ELECTRICAL EQUIPMENT	282
5.10.1	Electrical equipment technical specifications	282
5.11	Wheels and tires	283
5.11.1	Rim	283
5.11.2	Tires	283
5.11.3	Tightening torques	283
5.12	Capacities and dimensions	284
5.12.1	Capacities	284
5.12.2	DIMENSIONS AND WEIGHTS	284
5.12.3	Attachment points: All models with 5 t (5.51 US ton) front linkage	286
5.12.4	Attachment points: all models without front linkage	288

6	Accessories	291
6.1	Cab	293
6.1.1	Cab accessories	293
6.2	Engine	294
6.2.1	Engine accessories	294
6.3	Front axle and steering	295
6.3.1	Front axle and steering accessories	295
6.4	Power take-off	296
6.4.1	Power take-off accessories	296
6.5	Linkage	297
6.5.1	Linkage accessories	297
6.6	Auxiliary hydraulics	298
6.6.1	Auxiliary hydraulics accessories	298
6.7	Wheels and tires	299
6.7.1	Wheels and tires accessories	299
7	Appendix	301
7.1	Conversion table	303
7.1.1	Conversion table	303

1. Tractor identification


1.1	Locating serial numbers	19
1.1.1	Locating serial numbers	19
1.2	Your tractor identification details	20
1.2.1	Your tractor identification details	20

1.1 Locating serial numbers

1.1.1 Locating serial numbers

T002037

IMPORTANT: Please quote the serial number of your tractor in all correspondence with your dealer or agent.

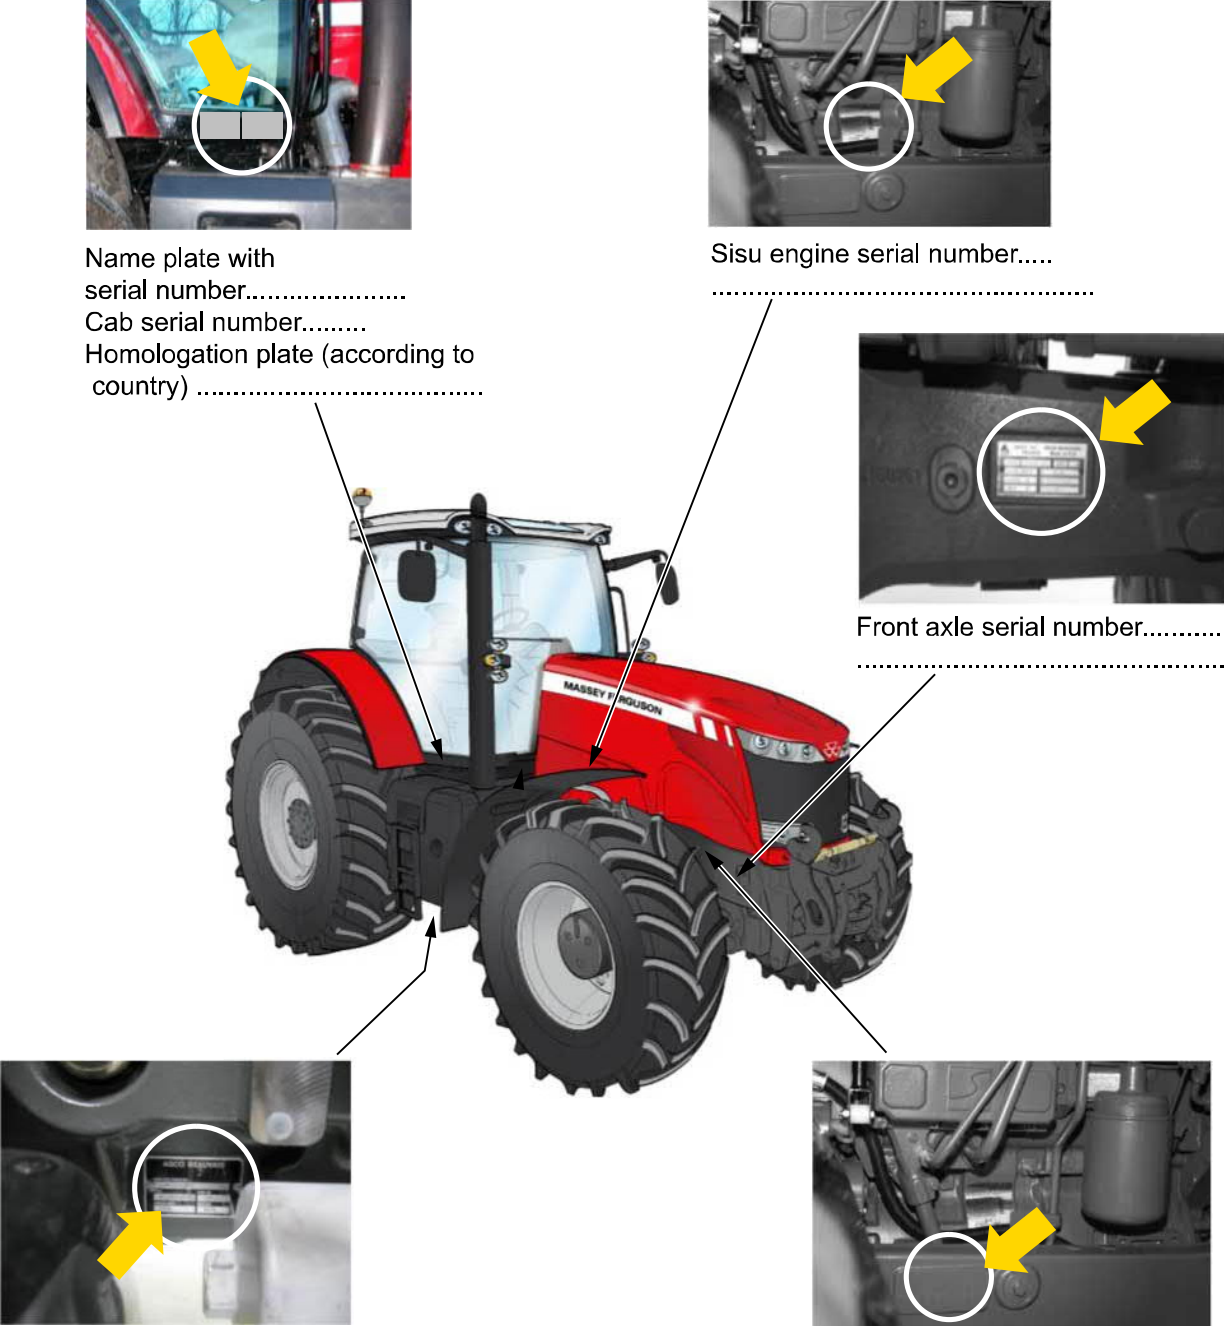

Name plate with serial number.....
 Cab serial number.....
 Homologation plate (according to country)

Sisu engine serial number.....

Front axle serial number.....

Transmission serial number.....

Chassis number.....

Fig. 1.

I006204

2. Safety instructions and safety points - Warranty

2

2.1	Introduction	23
2.1.1	Introduction - Safety instructions	23
2.2	Safety – Symbols and terms	24
2.2.1	Safety – Symbols and terms	24
2.3	Safety signs and instructions	25
2.3.1	Checking and replacing the safety signs and instructions	25
2.3.2	Presentation and location of the safety signs and instructions	26
2.4	General safety instructions	31
2.4.1	Awareness of the safety instructions and symbols	31
2.4.2	Operator familiarity in the use of the tractor	31
2.4.3	Filling the fuel tank	32
2.4.4	Getting into and out of the cab	33
2.4.5	Mandatory procedure before dismounting the tractor	33
2.5	Special safety instructions for preparing the tractor for use	34
2.5.1	Protective clothing	34
2.5.2	Activated carbon filter information	34
2.5.3	Safety devices and items	36
2.5.4	Checking the tractor	37
2.6	Specific safety instructions for starting the tractor	39
2.6.1	Protection of persons other than the operator	39
2.6.2	Start up safely	39
2.6.3	Checks to be carried out after start-up	40
2.7	Specific safety instructions for using the tractor	41
2.7.1	General instructions	41
2.7.2	Protection of persons other than the operator	42
2.7.3	Overturning	42
2.7.4	Tractor towing	44
2.7.5	Road use	44
2.7.6	Power take-off	46
2.7.7	Implements	46
2.7.8	Front-end loader	48
2.8	Specific safety instructions for servicing the tractor	49
2.8.1	Pollution warning to observe when servicing the tractor	49
2.8.2	General instructions	49
2.8.3	Special instructions for cleaning the tractor	49
2.9	Protective structures	51
2.9.1	Protective structures: use and accreditation	51
2.9.2	Cab or ROPS (depending on model)	51
2.9.3	Seat belt	51
2.9.4	Instructor seat	52
2.10	Warranty	53
2.10.1	General	53
2.10.2	Pre-delivery inspection and commissioning at the user's premises	53
2.10.3	Warranty procedure	53
2.10.4	Procedure to follow if changing region	53
2.10.5	Servicing during and after the warranty period	54
2.10.6	California emission control warranty statement	54
2.10.7	United States and Canada emission control warranty statement	56



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

2.1 Introduction

2.1.1 Introduction - Safety instructions

T000867

2

Operator Instruction Book

NOTE: This Operator Instruction Book is widely published and distributed and the availability of the attachments indicated, whether fitted to the basic tractor or as an accessory, may vary depending on the country or region in which the tractor is used. To find out which attachments are available in a given region, contact a Massey Ferguson dealer.

The purpose of this book is to enable the owner and the operator to operate the tractor appropriately under normal conditions of use. Providing they follow the instructions carefully, the tractor will give many years of service in the Massey Ferguson tradition.

The commissioning of equipment by the Massey Ferguson dealer on the user's premises enables the dealer to ensure that these operating and servicing instructions are properly understood. Always consult the Massey Ferguson dealer if there is any part of this book that you do not understand. It is important that these instructions are understood and followed.

This book does not cover all operation and safety instructions relevant to the implements and attachments that may be fitted at the time of tractor delivery or later. It is essential that operators use and understand the Operator Instruction Books relating to these implements and attachments.

IMPORTANT: This book must always be kept with the tractor. For extra copies, contact your Massey Ferguson dealer.

This chapter in the Operator Instruction Book highlights certain basic safety-related situations which may be encountered during normal operation and servicing of the tractor and provides the information needed to handle these situations.

This chapter supplements any safety instructions given in other chapters of this book.

It may be necessary to take additional precautions, depending on the implements and accessories used and the working conditions on-site or in the servicing area. Massey Ferguson can under no circumstances exercise direct control over the commissioning, operation, inspection, lubrication, or servicing of the tractor. It is therefore YOUR responsibility to take suitable safety precautions in such areas.



WARNING:

It is your responsibility to read and understand the instructions that appear in this chapter before using the tractor. They must then be strictly adhered to throughout the working day.

Servicing, spare parts, accessories and conditions of use

Daily servicing should become a routine, and a logbook of operating hours should be kept.

When spare parts are required, it is important to use only genuine Massey Ferguson parts. Massey Ferguson dealers supply genuine parts and can offer advice concerning their fitting and use. The use of lower quality parts may cause serious damage. Customers are advised to purchase their spare parts only from an approved Massey Ferguson dealer. In the same way, you must only use accessories specifically adapted to your tractor.

Owing to the considerable variation in operating conditions, it is not possible for the manufacturer to formulate complete or absolute assertions in its publications concerning the performance or operating methods of its machines or to accept liability for any loss or damage which may result from such assertions or possible errors or omissions.

If the tractor is to be used in abnormal conditions which could cause damage (use in deep water or in paddy fields for instance), you should consult your Massey Ferguson dealer to obtain special instructions to prevent the warranty from becoming void.

These tractors are designed only for usual farming activities (intended use). Use for any other activity is considered to be contrary to the intended use.

Strict compliance with repairs, servicing, and operating conditions as specified by Massey Ferguson are an essential component of the intended use.

IMPORTANT: Massey Ferguson accepts no responsibility in the event of damage to equipment or personal injury resulting from improper use.

The tractor must only be used, serviced and repaired by personnel who have full knowledge of its specific features and who are aware of the applicable safety measures (prevention of accidents).

Customers are strongly advised to contact a Massey Ferguson dealer in the event of after-sale problems and for any adjustments which may be necessary.

2.2 Safety – Symbols and terms

2.2.1 Safety – Symbols and terms

T000969

2

Signal



This safety alert symbol means CAUTION! BE ALERT! YOUR SAFETY DEPENDS ON IT!

The safety alert symbol identifies important safety notices on machines, safety signs, in instruction books or elsewhere. When you see this symbol, be alert to the risk of injury or death. Follow the instructions in the safety notice.

SAFETY is paramount! Why?

- ACCIDENTS DISABLE AND KILL
- ACCIDENTS ARE COSTLY
- ACCIDENTS CAN BE AVOIDED

Terms

The words DANGER, WARNING or CAUTION are used with the safety alert symbol. It is essential to learn how to recognize these safety messages and to follow the recommended safety measures and instructions.



DANGER:

indicates an imminently hazardous situation which, if not avoided, will result in DEATH or VERY SERIOUS INJURY.



WARNING:

indicates a potentially hazardous situation which, if not avoided, could result in DEATH or SERIOUS INJURY.



CAUTION:

indicates a potentially hazardous situation which, if not avoided, may result in MINOR or MODERATE INJURY.

The terms IMPORTANT and NOTE are not directly related to personal safety, but are used to provide additional information and advice on the operation or maintenance of equipment.

IMPORTANT: *identifies specific instructions or procedures which, if not strictly applied, could damage or destroy the tractor, its equipment or the surrounding area.*

NOTE: *identifies points of particular interest for the most effective and suitable operation or repair.*

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>