


**Workshop Service Manual**

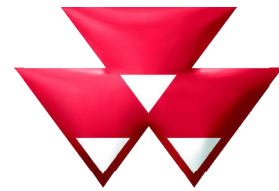

**MASSEY FERGUSON**

## **9800 Series Planter**

**9816**

**9816 VE**

**9824**

**9824 VE**

**9824 VE (70 cm)**

# 9800 Series Planter

<b>1 General</b>	1-1
<b>1.1 General information</b>	1-3
1.1.1 Introduction to this service manual	1-3
1.1.2 Units of measurement	1-3
1.1.3 Table of contents	1-3
1.1.4 Page numbers	1-3
1.1.5 Intended use	1-3
1.1.6 Proper disposal of waste	1-3
<b>1.2 Safety</b>	1-5
1.2.1 Safety symbol	1-5
1.2.2 Safety messages	1-5
1.2.3 Information messages	1-5
1.2.4 Safety signs	1-5
1.2.5 A word to the operator	1-6
1.2.6 The service manual	1-7
1.2.7 Operation	1-7
1.2.7.1 Prepare for operation	1-7
1.2.7.2 General information	1-7
1.2.7.3 Personal protective equipment	1-8
1.2.7.4 Seat instructions	1-9
1.2.7.5 Shield and guards	1-9
1.2.7.6 Exhaust warning	1-10
1.2.7.7 Flying debris	1-10
1.2.7.8 Handrails	1-10
1.2.7.9 Agricultural chemicals	1-10
1.2.8 Travel on public roads	1-11
1.2.9 Maintenance	1-12
1.2.9.1 General maintenance information	1-12
1.2.9.2 Fire prevention and first aid	1-14
1.2.9.3 High pressure leaks	1-15
1.2.9.4 Tire safety	1-15
1.2.9.5 Replacement parts	1-16
1.2.9.6 D-ring	1-16
<b>1.3 Cylinder stops</b>	1-17
1.3.1 Wheel lift cylinder stops	1-17
1.3.2 Transport pins	1-17
<b>1.4 Machine identification</b>	1-18
1.4.1 Serial number plate	1-18
1.4.2 Serial number description	1-18
<b>1.5 Main machine components</b>	1-20
<b>1.6 Specifications - vacuum planter</b>	1-21
1.6.1 9816 / 9824	1-21
1.6.1.1 Frame specifications	1-21
1.6.1.2 Tire specifications	1-21
1.6.1.3 Machine dimensions	1-22
1.6.1.4 Marker specifications	1-22
1.6.1.5 Row unit specifications	1-22
1.6.1.6 Hydraulic system specifications	1-23
1.6.1.7 Shear pin specifications	1-23
1.6.1.8 Approximate shipping weight	1-23
1.6.1.9 Special bolt torques	1-23

1.6.1.10	Tractor requirement	1-24
1.6.2	9824 export	1-25
1.6.2.1	Frame specifications	1-25
1.6.2.2	Tire specifications	1-25
1.6.2.3	Machine dimensions	1-26
1.6.2.4	Marker specifications	1-26
1.6.2.5	Row unit specifications	1-27
1.6.2.6	Hydraulic system specifications	1-27
1.6.2.7	Shear pin specifications	1-27
1.6.2.8	Approximate shipping weight	1-27
1.6.2.9	Special bolt torques	1-28
1.6.2.10	Tractor requirement	1-28
1.6.2.11	20/20 seedsense terminal specifications	1-29
<b>1.7</b>	<b>Specifications - pressure planter</b>	<b>1-30</b>
1.7.1	9816 / 9824	1-30
1.7.1.1	Frame specifications	1-30
1.7.1.2	Tire specifications	1-30
1.7.1.3	Machine dimensions	1-31
1.7.1.4	Marker specifications	1-31
1.7.1.5	Row unit specifications	1-31
1.7.1.6	Air system specifications	1-32
1.7.1.7	Hydraulic system specifications	1-32
1.7.1.8	Shear pin specifications	1-32
1.7.1.9	Electrical specifications	1-33
1.7.1.10	Approximate shipping weight	1-33
1.7.1.11	Special bolt torques	1-33
1.7.1.12	Tractor requirements	1-33
<b>1.8</b>	<b>Bolt torque values</b>	<b>1-35</b>
<b>2</b>	<b>Frame</b>	<b>2-1</b>
<b>2.1</b>	<b>Planter troubleshooting</b>	<b>2-3</b>
<b>2.2</b>	<b>Wing braces</b>	<b>2-7</b>
2.2.1	Remove the wing braces	2-7
2.2.2	Install the wing braces	2-8
<b>2.3</b>	<b>Inner wing</b>	<b>2-10</b>
2.3.1	Remove the inner wing	2-10
2.3.2	Install the inner wing	2-11
<b>2.4</b>	<b>Outer wing</b>	<b>2-13</b>
2.4.1	Remove the outer wing	2-14
2.4.2	Install the outer wing	2-15
<b>2.5</b>	<b>Tongue and inner tongue with latch</b>	<b>2-17</b>
2.5.1	Remove the tongue roller	2-18
2.5.2	Install the tongue roller	2-18
2.5.3	Remove the inner tongue roller	2-19
2.5.4	Install the inner tongue roller	2-20
2.5.5	Remove the slide buttons	2-21
2.5.6	Install the slide buttons	2-22
2.5.7	Remove the slide blocks	2-23
2.5.8	Install the slide blocks	2-23
2.5.9	Remove the tongue latch	2-24
2.5.10	Install the tongue latch	2-25
<b>2.6</b>	<b>Hitch</b>	<b>2-27</b>
2.6.1	Remove the hitch pivot	2-29
2.6.2	Install the hitch pivot	2-29
2.6.3	Remove the two-point hitch	2-30
2.6.4	Install the two-point hitch	2-31
2.6.5	Remove the drawbar hitch	2-31

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

2.6.6	Install the drawbar hitch	2-33
2.6.7	Drawbar hitch adjustment	2-36
<b>2.7</b>	<b>Rear hitch (optional)</b>	<b>2-38</b>
2.7.1	Remove the tow hitch clevis at the rear of the machine	2-38
2.7.2	Install the tow hitch clevis at the rear of the machine	2-38
<b>2.8</b>	<b>Lift wheel arm</b>	<b>2-39</b>
2.8.1	Remove a lift wheel arm	2-39
2.8.2	Install a lift wheel arm	2-39
<b>2.9</b>	<b>Markers</b>	<b>2-40</b>
2.9.1	Remove the lower marker arm - 16 row	2-40
2.9.2	Install the lower marker arm - 16 row	2-41
2.9.3	Remove the lower marker arm - 24 row	2-42
2.9.4	Install the lower marker arm - 24 row	2-44
2.9.5	Adjust the marker arm length	2-46
2.9.6	Remove the top marker arm	2-47
2.9.7	Install the top marker arm	2-49
2.9.8	Remove the gauge wheel - 16 row	2-50
2.9.9	Install the gauge wheel - 16 row	2-51
2.9.10	Remove the gauge wheel - 24 row	2-51
2.9.11	Install the gauge wheel - 24 row	2-52
2.9.12	Disassemble the gauge wheel - 16 row	2-52
2.9.13	Assemble the gauge wheel - 16 row	2-53
2.9.14	Disassemble the gauge wheel - 24 row	2-53
2.9.15	Assemble the gauge wheel - 24 row	2-54
2.9.16	Remove the marker disc	2-55
2.9.17	Install the marker disc	2-56
2.9.18	Disassemble the marker disc	2-56
2.9.19	Assemble the marker disc	2-58
2.9.20	Adjust the marker disc	2-59
<b>2.10</b>	<b>Central fill platform and ladder</b>	<b>2-60</b>
2.10.1	Remove the central fill ladder	2-60
2.10.2	Install the central fill ladder	2-61
2.10.3	Remove the platform	2-63
2.10.4	Install the platform	2-63
2.10.5	Remove the cradle	2-64
2.10.6	Install the cradle	2-66
<b>3</b>	<b>Drive system</b>	<b>3-1</b>
<b>3.1</b>	<b>Roller chains</b>	<b>3-3</b>
3.1.1	Roller chain maintenance	3-3
3.1.2	Check roller chain elongation	3-3
3.1.3	Sprocket wear	3-4
3.1.4	Sprocket position	3-4
<b>3.2</b>	<b>Flex shaft drive</b>	<b>3-5</b>
3.2.1	Install/remove the flex drive shaft	3-5
<b>3.3</b>	<b>Ground drive transmission</b>	<b>3-10</b>
3.3.1	Ground drive transmission components	3-10
3.3.2	Adjust the down pressure of the seed transmission	3-11
3.3.3	Transmission shear bolt	3-11
3.3.4	Chain routing	3-12
3.3.5	Roller chain identification	3-13
3.3.6	Remove roller chains	3-14
3.3.7	Install the roller chains	3-14
3.3.8	Front sprocket assembly	3-15
3.3.9	Remove the front sprocket assembly	3-15
3.3.10	Install the front sprocket assembly	3-16
3.3.11	Disassemble the front sprocket assembly	3-16

3.3.12	Assemble the front sprocket assembly . . . . .	3-17
3.3.13	Remove the top tensioner . . . . .	3-17
3.3.14	Install the top tensioner . . . . .	3-17
3.3.15	Disassemble the top tensioner . . . . .	3-18
3.3.16	Assemble the top tensioner . . . . .	3-18
3.3.17	Setting the torsion spring . . . . .	3-19
3.3.18	Remove the rear sprocket assembly . . . . .	3-20
3.3.19	Install the rear sprocket assembly . . . . .	3-21
3.3.20	Disassemble the rear sprocket assembly . . . . .	3-22
3.3.21	Assemble the rear sprocket assembly . . . . .	3-22
3.3.22	Remove the wheel . . . . .	3-22
3.3.23	Install the wheel . . . . .	3-23
3.3.24	Disassemble the wheel . . . . .	3-25
3.3.25	Assemble the wheel . . . . .	3-25
3.3.26	Remove the idler sprockets . . . . .	3-26
3.3.27	Install the idler sprockets . . . . .	3-26
3.3.28	Remove the idler pulleys . . . . .	3-27
3.3.29	Install the idler pulleys . . . . .	3-27
3.3.30	Disassemble the drive shaft . . . . .	3-28
3.3.31	Assemble the drive shaft . . . . .	3-31
<b>3.4</b>	<b>Point row clutch - early production . . . . .</b>	<b>3-35</b>
3.4.1	Remove the point row clutch - early production . . . . .	3-35
3.4.2	Install the point row clutch - early production . . . . .	3-35
3.4.3	Assemble the point row clutch - early production . . . . .	3-36
3.4.4	Disassemble the point row clutch - early production . . . . .	3-36
<b>3.5</b>	<b>Point row clutch - late production . . . . .</b>	<b>3-38</b>
3.5.1	Remove the point row clutch - late production . . . . .	3-38
3.5.2	Install the point row clutch - late production . . . . .	3-38
3.5.3	Point row clutch - late production . . . . .	3-39
3.5.4	Remove the support assembly drive sprocket . . . . .	3-42
3.5.5	Install the support assembly drive sprocket . . . . .	3-43
<b>3.6</b>	<b>Hydraulic drive . . . . .</b>	<b>3-44</b>
3.6.1	Hydraulic drive . . . . .	3-44
3.6.2	Remove the roller chain . . . . .	3-44
3.6.3	Install the roller chain . . . . .	3-44
3.6.4	Remove the 16 tooth sprocket . . . . .	3-44
3.6.5	Install the 16 tooth sprocket . . . . .	3-45
3.6.6	Remove the tensioner pulley . . . . .	3-46
3.6.7	Install the tensioner pulley . . . . .	3-47
3.6.8	Remove the 40 tooth sprocket . . . . .	3-48
3.6.9	Install the 40 tooth sprocket . . . . .	3-49
<b>3.7</b>	<b>Drive shaft . . . . .</b>	<b>3-50</b>
3.7.1	Remove the sprocket bearing assembly . . . . .	3-50
3.7.2	Install the sprocket bearing assembly . . . . .	3-50
3.7.3	Remove the center drive shaft . . . . .	3-50
3.7.4	Install the center drive shaft . . . . .	3-51
3.7.5	Remove the draft shaft for the inner wing - 16 row . . . . .	3-53
3.7.6	Install the draft shaft for the inner wing - 16 row . . . . .	3-54
3.7.7	Remove the draft shaft for the inner wing - 24 row . . . . .	3-55
3.7.8	Install the draft shaft for the inner wing - 24 row . . . . .	3-56
3.7.9	Remove the drive shaft for the outer wing - 16 row . . . . .	3-57
3.7.10	Install the drive shaft for the outer wing - 16 row . . . . .	3-58
3.7.11	Remove the drive shaft for the outer wing - 24 row . . . . .	3-60
3.7.12	Install the drive shaft for the outer wing - 24 row . . . . .	3-61
<b>4</b>	<b>Hydraulic system . . . . .</b>	<b>4-1</b>
<b>4.1</b>	<b>Hydraulic troubleshooting . . . . .</b>	<b>4-5</b>

<b>4.2 Hydraulic system description</b>	<b>4-7</b>
4.2.1 Hydraulic seed drive with pump	4-7
4.2.2 Seed meter blowers with tractor hydraulics	4-8
4.2.3 Central fill blower	4-9
4.2.4 Lift circuit	4-10
4.2.5 Marker and fold circuits	4-13
<b>4.3 Hydraulic oil</b>	<b>4-15</b>
4.3.1 Check the hydraulic oil	4-15
4.3.2 Changing the hydraulic oil and filter	4-15
<b>4.4 Hydraulic pump</b>	<b>4-17</b>
4.4.1 Pump components	4-17
4.4.2 Pump specifications	4-17
4.4.3 Remove the pump	4-17
4.4.4 Install the pump	4-19
4.4.5 Disassemble the pump	4-19
4.4.6 Examine the pump	4-24
4.4.7 Assemble the pump	4-25
<b>4.5 Hydraulic seed drive motor</b>	<b>4-30</b>
4.5.1 Eaton T series motor components	4-30
4.5.2 Hydraulic seed drive motor specification	4-30
4.5.3 Remove the hydraulic seed drive motor	4-30
4.5.4 Install the hydraulic seed drive motor	4-32
4.5.5 Disassemble the Eaton T series drive motor	4-32
4.5.6 Examine the Eaton T series motor	4-35
4.5.7 Assemble the Eaton T series motor	4-35
<b>4.6 Central fill blower motor</b>	<b>4-40</b>
4.6.1 Rexroth bent axis motor components	4-40
4.6.2 Motor specifications	4-40
4.6.3 Remove the motor	4-40
4.6.4 Install the motor	4-43
4.6.5 Disassemble the Rexroth bent axis motor	4-45
4.6.6 Inspect the Rexroth bent axis motor	4-45
4.6.7 Assemble the Rexroth bent axis motor	4-46
<b>4.7 Seed meter blower motor - vacuum</b>	<b>4-47</b>
4.7.1 Vacuum motor operation	4-47
4.7.2 Remove the motor	4-47
4.7.3 Install the motor	4-48
4.7.4 Test the pressure to the motor	4-49
4.7.5 Check the case drain	4-50
<b>4.8 Seed meter blower motor - pressure</b>	<b>4-51</b>
4.8.1 Motor specifications	4-51
4.8.2 Remove the motor	4-51
4.8.3 Install the motor	4-52
4.8.4 Concentric GC series motor components	4-53
4.8.5 Disassemble the Concentric GC series motor	4-54
4.8.6 Assemble the Concentric GC series motor	4-54
<b>4.9 Oil cooler</b>	<b>4-56</b>
4.9.1 Cleaning the hydraulic oil coolers	4-56
4.9.2 Examine the oil cooler	4-56
4.9.3 Remove the oil cooler	4-56
4.9.4 Install the oil cooler	4-57
<b>4.10 Fold cylinders</b>	<b>4-58</b>
4.10.1 Cylinder components	4-58
4.10.2 Cylinder specifications	4-58
4.10.3 Remove the cylinder	4-59
4.10.4 Install the cylinder	4-60

4.10.5	Disassemble the cylinder . . . . .	4-60
4.10.6	Examine the cylinder assembly . . . . .	4-61
4.10.7	Assemble the cylinder . . . . .	4-61
<b>4.11</b>	<b>Latch cylinder . . . . .</b>	<b>4-63</b>
4.11.1	Remove the cylinder . . . . .	4-63
4.11.2	Install the cylinder . . . . .	4-64
<b>4.12</b>	<b>Marker cylinder . . . . .</b>	<b>4-65</b>
4.12.1	Marker cylinder specifications . . . . .	4-66
4.12.2	Remove the cylinder . . . . .	4-67
4.12.3	Install the cylinder - 16 row . . . . .	4-68
4.12.4	Disassemble the cylinder - 16 row . . . . .	4-68
4.12.5	Examine the cylinder assembly . . . . .	4-69
4.12.6	Assemble the cylinder - 16 row . . . . .	4-69
4.12.7	Install the cylinder - 24 row . . . . .	4-70
4.12.8	Disassemble the cylinder - 24 row . . . . .	4-70
4.12.9	Examine the cylinder assembly . . . . .	4-71
4.12.10	Assemble the cylinder - 24 row . . . . .	4-71
<b>4.13</b>	<b>Lift cylinders . . . . .</b>	<b>4-73</b>
4.13.1	Lift cylinder specifications . . . . .	4-75
4.13.2	Remove the wing lift cylinder . . . . .	4-75
4.13.3	Install the lift cylinder . . . . .	4-77
4.13.4	Remove the middle lift cylinder . . . . .	4-77
4.13.5	Install the middle lift cylinder . . . . .	4-79
4.13.6	Disassemble the lift cylinder . . . . .	4-79
4.13.7	Examine the cylinder assembly . . . . .	4-80
4.13.8	Assemble the lift cylinder . . . . .	4-80
<b>4.14</b>	<b>Drawbar hitch cylinder . . . . .</b>	<b>4-82</b>
4.14.1	Drawbar hitch cylinder specifications . . . . .	4-82
4.14.2	Remove the drawbar hitch cylinder . . . . .	4-82
4.14.3	Install the drawbar hitch cylinder . . . . .	4-83
4.14.4	Disassemble the drawbar hitch cylinder . . . . .	4-84
4.14.5	Assemble the drawbar hitch cylinder . . . . .	4-84
<b>4.15</b>	<b>Marker and fold valve block . . . . .</b>	<b>4-86</b>
4.15.1	Remove the marker and fold valve block . . . . .	4-87
4.15.2	Remove the solenoids . . . . .	4-87
4.15.3	Examine the solenoid valves . . . . .	4-88
4.15.4	Install the solenoids . . . . .	4-89
4.15.5	Install the marker and fold valve block . . . . .	4-89
<b>4.16</b>	<b>Marker sequence valve . . . . .</b>	<b>4-90</b>
4.16.1	Remove the sequence valve . . . . .	4-91
4.16.2	Install the sequence valve . . . . .	4-92
4.16.3	Disassemble the sequence valve . . . . .	4-92
4.16.4	Examine the sequence valve . . . . .	4-93
4.16.5	Assemble the sequence valve . . . . .	4-93
<b>4.17</b>	<b>lift valve block . . . . .</b>	<b>4-95</b>
4.17.1	Remove the lift valve block . . . . .	4-96
4.17.2	Install the lift valve block . . . . .	4-96
4.17.3	Remove the solenoids . . . . .	4-97
4.17.4	Examine the solenoid valves . . . . .	4-97
4.17.5	Install the solenoids . . . . .	4-98
<b>4.18</b>	<b>Flow divider valve . . . . .</b>	<b>4-99</b>
4.18.1	Remove the flow divider valve . . . . .	4-99
4.18.2	Install the flow divider valve . . . . .	4-100
4.18.3	Examine the flow divider valve . . . . .	4-100
4.18.4	Disassemble the flow divider valve - pressure . . . . .	4-100
4.18.5	Assemble the flow divider valve - pressure . . . . .	4-101
4.18.6	Assemble/disassemble the flow divider valve - vacuum . . . . .	4-102

<b>4.19 Flow control valve</b>	<b>4-103</b>
4.19.1 Remove the flow control valve	4-103
4.19.2 Examine the flow control valve	4-104
4.19.3 Install the flow control valve	4-104
4.19.4 Disassemble the flow control valve	4-105
4.19.5 Assemble the flow control valve	4-105
<b>4.20 Motor control valve</b>	<b>4-106</b>
4.20.1 Remove the motor control valve	4-107
4.20.2 Disassemble the motor control valve	4-107
4.20.3 Assemble the motor control valve	4-108
4.20.4 Examine the motor control valve	4-108
4.20.5 Install the motor control valve	4-109
<b>4.21 Blower control valve</b>	<b>4-110</b>
4.21.1 Remove the blower control valve	4-111
4.21.2 Examine the blower control valve	4-111
4.21.3 Disassemble the blower control valve	4-111
4.21.4 Assemble the blower control valve	4-112
4.21.5 Install the blower control valve	4-113
<b>4.22 Fertilizer pump valve</b>	<b>4-114</b>
4.22.1 Remove the fertilizer pump valve	4-114
4.22.2 Install the fertilizer pump valve	4-115
4.22.3 Disassemble the fertilizer pump valve	4-115
4.22.4 Assemble the fertilizer pump valve	4-116
<b>4.23 DeltaForce</b>	<b>4-117</b>
4.23.1 Hydraulic system overview	4-118
4.23.2 Remove the load pin	4-119
4.23.3 Install the load pin	4-120
4.23.4 Remove a DeltaForce cylinder	4-121
4.23.5 Install a DeltaForce cylinder	4-121
4.23.6 Remove a DeltaForce cylinder valve	4-122
4.23.7 Install a DeltaForce cylinder valve	4-122
4.23.8 Remove/install the DeltaForce valve	4-123
4.23.9 Replace the filter in the DeltaForce valve	4-123
<b>4.24 Alternator</b>	<b>4-124</b>
4.24.1 Remove the alternator motor	4-124
4.24.2 Install the alternator motor	4-124
4.24.3 Remove the alternator	4-125
4.24.4 Install the alternator	4-125
<b>4.25 Hydraulic fertilizer pump</b>	<b>4-127</b>
4.25.1 Remove the hydraulic fertilizer pump	4-127
4.25.2 Install the hydraulic fertilizer pump	4-127
4.25.3 Assemble/disassemble the hydraulic motor	4-129
<b>5 Electrical system</b>	<b>5-1</b>
<b>5.1 Basic troubleshooting information</b>	<b>5-5</b>
5.1.1 Basic troubleshooting procedures	5-5
5.1.2 Tools	5-6
5.1.3 Continuity check	5-6
5.1.4 Voltage check	5-7
5.1.5 Check a connector	5-8
5.1.6 Test for open circuits	5-8
5.1.7 Find open circuit	5-9
5.1.8 Test for short circuits	5-9
5.1.9 Test for high resistance	5-10
5.1.10 Terminal numbers	5-10
5.1.11 Dielectric grease	5-10
5.1.12 Pins and sockets	5-11

5.1.13	Replace a Packard connector . . . . .	5-11
5.1.14	Replace an AMP connector . . . . .	5-12
<b>5.2</b>	<b>Transport lamps - non CE . . . . .</b>	<b>5-13</b>
5.2.1	Lamp harness . . . . .	5-13
5.2.2	Check the lighting . . . . .	5-15
5.2.3	Machine lamp plug - non CE . . . . .	5-16
5.2.4	Turn signal module . . . . .	5-16
5.2.4.1	Remove the turn signal module . . . . .	5-17
5.2.4.2	Install the turn signal module . . . . .	5-18
5.2.5	Change a bulb . . . . .	5-18
5.2.6	Remove the tow hitch harness . . . . .	5-19
5.2.7	Install the tow hitch harness . . . . .	5-20
<b>5.3</b>	<b>Transport lamps - CE . . . . .</b>	<b>5-21</b>
5.3.1	Lamp harness - CE . . . . .	5-21
5.3.2	Machine lamp plug - CE . . . . .	5-22
5.3.3	Transport lamps . . . . .	5-22
5.3.4	Change a bulb . . . . .	5-23
<b>5.4</b>	<b>Marker, fold, and lift . . . . .</b>	<b>5-25</b>
5.4.1	Marker, fold, and lift harness . . . . .	5-25
5.4.2	Test the control box voltage . . . . .	5-28
5.4.3	Lift limit switch . . . . .	5-29
5.4.3.1	Remove the lift limit switch . . . . .	5-29
5.4.3.2	Install the lift limit switch . . . . .	5-29
5.4.4	Adjust the frame height limit switch . . . . .	5-29
5.4.5	Marker position switch . . . . .	5-30
5.4.5.1	Remove the marker position switch . . . . .	5-31
5.4.5.2	Install the marker position switch . . . . .	5-31
5.4.5.3	Adjust the marker position switch . . . . .	5-31
5.4.6	Solenoid coils . . . . .	5-32
5.4.6.1	Check the solenoid coils . . . . .	5-32
5.4.6.2	Remove the solenoid coils . . . . .	5-33
5.4.6.3	Install the solenoid coils . . . . .	5-33
<b>5.5</b>	<b>ISOBUS planter controller troubleshooting . . . . .</b>	<b>5-34</b>
<b>5.6</b>	<b>ISOBUS hydraulic drive system . . . . .</b>	<b>5-35</b>
5.6.1	Fuses . . . . .	5-35
5.6.2	ISO harness diagram . . . . .	5-37
5.6.3	ISO harness layout . . . . .	5-41
5.6.4	Row unit connections - 16 row . . . . .	5-42
5.6.5	Row unit connections - 24 row . . . . .	5-44
5.6.6	ISO hitch harness . . . . .	5-46
5.6.7	ISO monitor harness . . . . .	5-47
5.6.8	ISO two channel actuator harness . . . . .	5-50
5.6.9	ISO four channel actuator harness . . . . .	5-53
5.6.10	ISO bridge module harness . . . . .	5-57
5.6.11	ISOBUS planter controller . . . . .	5-59
5.6.12	Remove the ISOBUS planter controller . . . . .	5-59
5.6.13	Install the ISOBUS planter controller . . . . .	5-60
5.6.14	PWM solenoid valve . . . . .	5-60
5.6.14.1	Remove the PWM solenoid valve . . . . .	5-61
5.6.14.2	Install the PWM solenoid valve . . . . .	5-62
5.6.15	Shaft speed sensor . . . . .	5-62
5.6.15.1	Test the shaft speed sensor . . . . .	5-63
5.6.15.2	Remove the shaft speed sensor . . . . .	5-63
5.6.15.3	Install the shaft speed sensor . . . . .	5-63
5.6.16	Lift switch, if equipped . . . . .	5-64
5.6.16.1	Remove the lift switch . . . . .	5-64
5.6.16.2	Install the lift switch . . . . .	5-65

5.6.16.3	Lift switch adjustment	5-66
<b>5.7</b>	<b>ISOBus ground drive system</b>	<b>5-67</b>
5.7.1	ISO harness layout	5-68
5.7.2	Ground speed sensor, if equipped	5-70
5.7.2.1	Test the ground speed sensor	5-70
5.7.2.2	Remove the ground speed sensor	5-71
5.7.2.3	Install the ground speed sensor	5-71
<b>5.8</b>	<b>SM 400 system</b>	<b>5-72</b>
5.8.1	SM 400 harness layout	5-73
5.8.2	Terminator adaptor harness	5-74
<b>5.9</b>	<b>Modules and sensors</b>	<b>5-76</b>
5.9.1	Bridge module	5-76
5.9.1.1	Bridge module diagnostic indicator lamps	5-77
5.9.1.2	Remove the bridge module	5-78
5.9.1.3	Install the bridge module	5-79
5.9.2	Interface module	5-79
5.9.2.1	Interface module diagnostic indicator lamps	5-80
5.9.2.2	Remove an interface module	5-81
5.9.2.3	Install an interface module	5-82
5.9.3	Row unit connections - 16 row	5-83
5.9.4	Row unit connections - 24 row	5-85
5.9.5	Seed sensors	5-87
5.9.6	Remove the seed tubes	5-87
5.9.7	Install the seed tubes	5-87
5.9.8	Clean the seed sensors	5-88
5.9.9	Test the seed sensors	5-88
5.9.10	Test with a seed sensor tester	5-89
5.9.11	Test the seed monitor	5-89
<b>5.10</b>	<b>Point row clutch</b>	<b>5-91</b>
5.10.1	Hitch harness	5-91
5.10.2	Harness extension	5-92
5.10.3	Clutch solenoid	5-92
5.10.4	Remove the clutch solenoid	5-93
5.10.5	Install the clutch solenoid	5-93
5.10.6	Clutch control box	5-93
<b>5.11</b>	<b>Vacuum system</b>	<b>5-95</b>
5.11.1	Electrical system overview	5-95
5.11.2	Status lamp for the single row module and vDrive module	5-98
5.11.3	SeedSense error list	5-99
5.11.4	Troubleshooting - no power to SRM(s)	5-101
5.11.5	Troubleshooting - SRM(s) are red	5-102
5.11.6	Troubleshooting - SRM(s) are yellow	5-103
<b>5.12</b>	<b>Power distribution module</b>	<b>5-105</b>
<b>6</b>	<b>Product containment</b>	<b>6-1</b>
<b>6.1</b>	<b>Central fill air system</b>	<b>6-3</b>
6.1.1	Central fill air pressure	6-3
6.1.2	Adjust the central fill air pressure	6-3
6.1.3	Remove the air pressure gauge	6-3
6.1.4	Install the air pressure gauge	6-4
<b>6.2</b>	<b>Central fill blower</b>	<b>6-5</b>
6.2.1	Central fill blower components	6-5
6.2.2	Remove the central fill blower	6-5
6.2.3	Install the central fill blower	6-7
6.2.4	Start a new or repaired central fill blower	6-7
6.2.5	Disassemble the central fill blower	6-7
6.2.6	Examine the central fill blower	6-9

6.2.7 Assemble the central fill blower . . . . .	6-9
<b>6.3 Central fill hoppers</b> . . . . .	<b>6-12</b>
6.3.1 Remove the central fill hoppers . . . . .	6-12
6.3.2 Install the central fill hoppers . . . . .	6-13
<b>6.4 Seed delivery hoses</b> . . . . .	<b>6-14</b>
6.4.1 Plenum . . . . .	6-14
6.4.2 Left wing - 16 row . . . . .	6-15
6.4.3 Right wing - 16 row . . . . .	6-16
6.4.4 Left wing - 24 row . . . . .	6-17
6.4.5 Right wing - 24 row . . . . .	6-18
6.4.6 Center . . . . .	6-19
6.4.7 Seed meter screens . . . . .	6-20
<b>6.5 Seed meter blower - pressure</b> . . . . .	<b>6-21</b>
6.5.1 Remove the seed meter blower . . . . .	6-21
6.5.2 Install the seed meter blower . . . . .	6-23
6.5.3 Disassemble the seed meter blower . . . . .	6-24
6.5.4 Examine the seed meter blower . . . . .	6-24
6.5.5 Assemble the seed meter blower . . . . .	6-24
<b>6.6 Seed meter blower - vacuum</b> . . . . .	<b>6-25</b>
6.6.1 Remove the seed meter blower . . . . .	6-25
6.6.2 Install the seed meter blower . . . . .	6-26
6.6.3 Disassemble the seed meter blower . . . . .	6-26
6.6.4 Assemble the seed meter blower . . . . .	6-27
<b>6.7 Air tubes</b> . . . . .	<b>6-29</b>
6.7.1 Clean the air tubes . . . . .	6-29
<b>7 Row units</b> . . . . .	<b>7-1</b>
<b>7.1 Gauge wheels</b> . . . . .	<b>7-5</b>
7.1.1 Adjust the gauge wheel to opener clearance . . . . .	7-5
7.1.2 Calibrate the gauge wheel depth . . . . .	7-5
7.1.3 Remove the gauge wheels . . . . .	7-5
7.1.4 Install the gauge wheels . . . . .	7-6
7.1.5 Gauge wheel arm components . . . . .	7-8
7.1.6 Disassemble the pivot for the gauge wheel arm . . . . .	7-9
7.1.7 Assemble the pivot for the gauge wheel arm . . . . .	7-12
7.1.8 Replace a gauge wheel tire . . . . .	7-15
<b>7.2 Opener discs</b> . . . . .	<b>7-16</b>
7.2.1 Replace the opener disc bearings . . . . .	7-16
7.2.2 Replace the opener discs . . . . .	7-17
7.2.3 Set the opener disc contact . . . . .	7-18
<b>7.3 Scraper</b> . . . . .	<b>7-20</b>
7.3.1 Replace a flat scraper - early production . . . . .	7-20
7.3.2 Replace a flat scraper - late production . . . . .	7-20
<b>7.4 Seed tubes</b> . . . . .	<b>7-22</b>
7.4.1 Remove the seed tubes . . . . .	7-22
7.4.2 Install the seed tubes . . . . .	7-22
7.4.3 Replace the tube guard . . . . .	7-22
7.4.4 Adjust the tube clip - pressure . . . . .	7-23
7.4.5 Adjust the tube clip - Vacuum . . . . .	7-23
7.4.6 Clean the seed sensors . . . . .	7-24
<b>7.5 SpeedTube™</b> . . . . .	<b>7-25</b>
7.5.1 Yearly maintenance . . . . .	7-25
7.5.2 SpeedTube™ crop change . . . . .	7-25
7.5.3 Change from SpeedTube™ to seed tube . . . . .	7-25
7.5.4 SpeedTube™ inspection . . . . .	7-26
7.5.5 Replace the belt . . . . .	7-31

<b>7.6 Depth gauge</b>	<b>7-34</b>
7.6.1 Remove the depth gauge	7-34
7.6.2 Install the depth gauge	7-35
7.6.3 Disassemble the depth gauge	7-37
7.6.4 Assemble the depth gauge	7-38
<b>7.7 Single closing wheel</b>	<b>7-40</b>
7.7.1 Remove the single closing wheel	7-40
7.7.2 Install the single closing wheel	7-40
7.7.3 Disassemble the single closing wheel	7-40
7.7.4 Assemble the single closing wheel	7-41
<b>7.8 Dual closing wheels</b>	<b>7-42</b>
7.8.1 Remove a dual closing wheel	7-42
7.8.2 Install a dual closing wheel	7-43
7.8.3 Replace the bearing in a cast iron closing wheel	7-43
7.8.4 Closing wheel spacing and offset	7-43
7.8.4.1 Adjusting the closing wheel spacing and offset	7-44
7.8.5 Centering the closing wheels	7-44
<b>7.9 Row unit linkage</b>	<b>7-45</b>
7.9.1 Remove the row unit linkage	7-45
7.9.2 Install the row unit linkage	7-46
<b>7.10 Seed meter - vacuum</b>	<b>7-47</b>
7.10.1 Seed meter	7-47
7.10.2 Seed meter components	7-47
7.10.3 Crop kits	7-48
7.10.3.1 Crop setup guide	7-48
7.10.3.2 Replacing a crop kit	7-52
7.10.4 Check the disc shims	7-56
7.10.5 Remove a seed meter	7-59
7.10.6 Install a seed meter	7-60
7.10.7 Assemble the meter to the hopper	7-61
7.10.8 Yearly maintenance	7-62
7.10.9 Replace the vacuum seal	7-63
7.10.10 Remove the drive motor	7-63
7.10.11 Install the drive motor	7-65
7.10.12 vSet 2 troubleshooting	7-67
<b>7.11 Seed meter - pressure</b>	<b>7-69</b>
7.11.1 Seed meter	7-69
7.11.2 Seed meter components	7-69
7.11.3 Remove a seed meter with a hopper	7-70
7.11.4 Install a seed meter with a hopper	7-71
7.11.5 Remove a seed meter with a mini hopper	7-71
7.11.6 Install a seed meter with a mini hopper	7-72
7.11.7 Remove a seed disc	7-73
7.11.8 Install a seed disc	7-74
7.11.9 Adjust the seed gate	7-75
7.11.10 Tickler brush	7-75
7.11.10.1 Removing the tickler brush	7-76
7.11.11 Air cutoff brush	7-77
7.11.12 Check the seed disc clearance	7-77
7.11.13 Check the seed meter clutch alignment	7-78
7.11.14 Seed discs	7-79
7.11.14.1 Seed disc identification tables	7-79
7.11.14.2 Large bean disc	7-84
7.11.14.3 Snap bean disc	7-84
7.11.15 Remove the roller chain	7-84
7.11.16 Install the roller chain	7-85
7.11.17 Remove the idler pulley	7-86

7.11.18	Install the idler pulley . . . . .	7-86
7.11.19	Remove the sprocket assembly . . . . .	7-86
7.11.20	Install the sprocket assembly . . . . .	7-87
7.11.21	Replace the drive shaft and bearing . . . . .	7-87
<b>7.12</b>	<b>Pneumatic down pressure . . . . .</b>	<b>7-88</b>
7.12.1	Test the air compressor . . . . .	7-88
7.12.2	Set the air pressure . . . . .	7-89
7.12.3	Air pressure . . . . .	7-90
7.12.4	Air compressor specifications . . . . .	7-91
7.12.5	Replace the air compressor . . . . .	7-91
7.12.6	Replace the air filter . . . . .	7-91
7.12.7	Remove the air springs . . . . .	7-91
7.12.8	Install the air springs . . . . .	7-92
<b>7.13</b>	<b>Ground drive planting rates - imperial . . . . .</b>	<b>7-93</b>
7.13.1	Ground drive planting rate . . . . .	7-93
7.13.2	Set the planting rate . . . . .	7-93
7.13.3	Seed population table - 30 seeds per disc . . . . .	7-95
7.13.4	Seed population table - 50 seeds per disc . . . . .	7-97
7.13.5	Seed population table - 60 seeds per disc . . . . .	7-99
7.13.6	Seed population table - 120 seeds per disc . . . . .	7-100
7.13.7	Planting rate chart . . . . .	7-102
<b>7.14</b>	<b>Ground drive planting rates - metric . . . . .</b>	<b>7-103</b>
7.14.1	Set the planting rate . . . . .	7-103
7.14.2	Seed population table - 30 seeds per disc . . . . .	7-104
7.14.3	Seed population table - 50 seeds per disc . . . . .	7-106
7.14.4	Seed population table - 60 seeds per disc . . . . .	7-108
7.14.5	Seed population table - 120 seeds per disc . . . . .	7-109
<b>8</b>	<b>Application system . . . . .</b>	<b>8-1</b>
<b>8.1</b>	<b>Fertilizer piston pump . . . . .</b>	<b>8-3</b>
8.1.1	Double piston pump lubrication . . . . .	8-3
8.1.2	Single piston pump lubrication . . . . .	8-3
8.1.3	Single piston pump components . . . . .	8-4
8.1.4	Double piston pump components . . . . .	8-6
8.1.5	Remove the piston pump . . . . .	8-7
8.1.6	Install the piston pump . . . . .	8-8
8.1.7	Disassemble the piston pump . . . . .	8-8
8.1.7.1	Disassemble the check valves . . . . .	8-8
8.1.7.2	Disassemble the piston . . . . .	8-9
8.1.7.3	Disassemble the rod packing . . . . .	8-10
8.1.7.4	Disassemble the outboard crankcase . . . . .	8-12
8.1.7.5	Disassemble the inboard components . . . . .	8-13
8.1.7.6	Disassemble the internal crankcase . . . . .	8-14
8.1.8	Assemble the piston pump . . . . .	8-14
8.1.8.1	Assemble the internal crankcase . . . . .	8-15
8.1.8.2	Assemble the inboard components . . . . .	8-16
8.1.8.3	Assemble the outboard crankcase . . . . .	8-17
8.1.8.4	Assemble the rod packing . . . . .	8-18
8.1.8.5	Assemble the piston . . . . .	8-19
8.1.8.6	Assemble the check valves . . . . .	8-20
8.1.9	Disassemble the pump drive assembly . . . . .	8-20
8.1.10	Assemble the pump drive assembly . . . . .	8-23
<b>8.2</b>	<b>Electric fertilizer pump . . . . .</b>	<b>8-25</b>
8.2.1	Electric pump troubleshooting . . . . .	8-25
8.2.2	Remove the pump . . . . .	8-26
8.2.3	Install the pump . . . . .	8-28
8.2.4	Disassemble the pump . . . . .	8-28



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

8.2.5 Assemble the pump . . . . .	8-29
<b>8.3 Hydraulic fertilizer pump . . . . .</b>	<b>8-30</b>
8.3.1 Centrifugal pump troubleshooting . . . . .	8-30
8.3.2 Remove the pump . . . . .	8-30
8.3.3 Install the pump . . . . .	8-32
8.3.4 Disassemble the pump . . . . .	8-33
8.3.5 Assemble the pump . . . . .	8-34
8.3.6 Disassemble the motor . . . . .	8-35
8.3.7 Assemble the motor . . . . .	8-36
<b>8.4 Flow divider valve . . . . .</b>	<b>8-40</b>
8.4.1 Flow divider troubleshooting . . . . .	8-40
8.4.2 Remove the flow divider . . . . .	8-40
8.4.3 Install the flow divider . . . . .	8-41
8.4.4 Disassemble the flow divider . . . . .	8-42
8.4.5 Assemble the flow divider . . . . .	8-42
<b>8.5 Double disc openers . . . . .</b>	<b>8-43</b>
8.5.1 Adjust the double disc opener . . . . .	8-43
8.5.2 Remove the double disc opener . . . . .	8-43
8.5.3 Install the double disc opener . . . . .	8-44
8.5.4 Disassemble the double disc opener . . . . .	8-44
8.5.5 Assemble the double disc opener . . . . .	8-45
<b>8.6 Single disc opener . . . . .</b>	<b>8-46</b>
8.6.1 Adjust the single disc opener depth . . . . .	8-46
8.6.2 Single disc fertilizer opener troubleshooting . . . . .	8-46
8.6.3 Adjust the single opener disc swivel . . . . .	8-48
8.6.4 Adjust the single spring tension . . . . .	8-48
8.6.5 Remove the single disc opener . . . . .	8-49
8.6.6 Install the single disc opener . . . . .	8-50
8.6.7 Disassemble the single disc opener . . . . .	8-50
8.6.8 Assemble the single disc opener . . . . .	8-52
<b>8.7 Opener mount location . . . . .</b>	<b>8-54</b>
8.7.1 Opener mount location - 16 row . . . . .	8-54
8.7.2 Opener mount location - 24 row . . . . .	8-56
<b>9 Spindles and wheels . . . . .</b>	<b>9-1</b>
<b>9.1 Lift wheels . . . . .</b>	<b>9-3</b>
9.1.1 Remove a wheel . . . . .	9-3
9.1.2 Install a wheel . . . . .	9-4
<b>9.2 Wheel bearings . . . . .</b>	<b>9-5</b>
9.2.1 Lubricate the wheel bearings . . . . .	9-5
9.2.2 Replace the wheel bearings . . . . .	9-5
9.2.3 Adjust the wheel bearings . . . . .	9-7
<b>10 Diagrams . . . . .</b>	<b>10-1</b>
<b>10.1 Hydraulic . . . . .</b>	<b>10-3</b>
10.1.1 Hydraulic seed drive with pump . . . . .	10-3
10.1.2 Seed meter blowers with tractor hydraulics . . . . .	10-4
10.1.3 Central fill blower . . . . .	10-5
10.1.4 Lift circuit . . . . .	10-6
10.1.5 Marker and fold circuits . . . . .	10-8
10.1.6 DeltaForce master tractor remotes option - Precision Planting . . . . .	10-11
10.1.7 DeltaForce master tractor PTO option - Precision Planting . . . . .	10-12
<b>10.2 Electrical . . . . .</b>	<b>10-13</b>
10.2.1 Electrical schematic - vacuum . . . . .	10-15
10.2.2 C1000 . . . . .	10-17
10.2.2.1 Terminal electrical schematic . . . . .	10-17

---

10.2.2.2	Major components . . . . .	10-19
10.2.3	C2100 . . . . .	10-20
10.2.3.1	Terminal electrical schematic . . . . .	10-20
10.2.3.2	Major components . . . . .	10-22
10.2.4	C3000 . . . . .	10-23
10.2.4.1	Major components . . . . .	10-23
10.2.5	20/20 SeedSense . . . . .	10-23
10.2.5.1	Terminal electrical connections . . . . .	10-23
10.2.5.2	Major components . . . . .	10-26
<b>11</b>	<b>Index . . . . .</b>	<b>Index-1</b>

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**