

Service Manual

# MF1841

Small Square Baler



VISION INNOVATION LEADERSHIP QUALITY RELIABILITY SUPPORT PRIDE COMMITMENT



MASSEY FERGUSON

---

# Massey Ferguson®

## 1841 Small Square Baler

### CONTENTS

GENERAL INFORMATION .....	01
ADJUSTMENTS.....	02
DRIVE LINE.....	03
PICKUP.....	04
HYDRAULICS .....	05
KNOTTER.....	06
MAINFRAME .....	07
TROUBLESHOOTING .....	08
SPECIFICATIONS .....	09
INDEX.....	10

---

## NOTES

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

**Massey Ferguson®**

**1841  
Small Square Baler**

**SERVICE MANUAL  
4283448M1**

**01 - General Information**

**Contents**

GENERAL INFORMATION

Introduction .....	01-3
Units of Measurement .....	01-3
Replacement Parts .....	01-3
Machine Identification .....	01-3
Model and Serial Numbers .....	01-3
Dealer Information .....	01-3
Component Identification .....	01-4
Drive Train .....	01-7
Slip Clutches .....	01-8
Pickup and Feeding .....	01-9
Shearbolts .....	01-10
Location .....	01-10
Replacement .....	01-10
Roller Chains .....	01-10
Inspection of Drive Chains and Sprockets .....	01-10
Drive Chain Adjustment and Tightening .....	01-11
Drive Chain Sprocket and Idler Alignment .....	01-11
Drive Chain Elongation and Sprocket Wear .....	01-13
Normal Tooth Wear .....	01-13
Not Normal Tooth Wear .....	01-14
Worn Chain on New Sprockets .....	01-14
Drive Chain Service Tips .....	01-14
Chain Replacement .....	01-15
Cleaning and Lubricating Chains .....	01-16
Drive Chain Lubrication .....	01-16
Drive Chain Lubricants .....	01-17
Good Drive Chain Lubrication .....	01-17
Chain Speed Calculation Formulas .....	01-17
Geometrical Formulas .....	01-18
Circumference of a Circle .....	01-18
Area of a Circle .....	01-18
Volume of a Cylinder .....	01-18
Volume of a Sphere .....	01-18
Area of a Triangle .....	01-18
Metric to Imperial and Imperial to Metric Conversion Factors .....	01-18
Measures of Temperature .....	01-18
Measures of Power .....	01-18
Measures of Pressure .....	01-18
Measures of Length .....	01-18
Measures of Area .....	01-18
Measures of Volume (Dry) .....	01-19
Measures of Volume (Liquid) .....	01-19

## Contents

---

Measures of Mass (Weight) .....	01-19
Measures of Effort (Torque) .....	01-20
Reference Tables .....	01-20
Metric Conversions .....	01-21
Fractions, Decimals, and Millimeters Conversion Chart .....	01-22
Decimal Equivalents of 8ths, 16ths, 32nds, and 64ths .....	01-27
Decimal Equivalents Of Letter Size Drills .....	01-27
Decimal Equivalents of Number Size Drills .....	01-28
American Standard Pipe Thread and Tap Drill Sizes .....	01-30
Sealed Bearings .....	01-30
Electrical .....	01-30
Wheel Bearings .....	01-30
Wheel Bolts .....	01-30
Bearing Replacement (Eccentric Self-Locking Collar) .....	01-31
Gib Key Removal And Installation .....	01-32
Service Chart .....	01-33
Grease Fittings .....	01-34
Torque Charts .....	01-38
Standard Torque Specifications .....	01-38
Metric Capscrew Markings and Torque Values .....	01-39

---

# GENERAL INFORMATION

## INTRODUCTION

The operation and maintenance instructions included in this manual are assembled from a large amount of field testing and other data. The information was written for typical conditions. Make adjustments as necessary for specific conditions.

Right-hand and left-hand, as used in this Operator's Manual, is determined by facing the direction the baler will travel when in use.

## UNITS OF MEASUREMENT

Measurements are given in metric units of measurement followed by the equivalent in U.S. units. Hardware sizes are given in millimeters for metric hardware and inches for U.S. hardware.

## REPLACEMENT PARTS

To receive efficient service, always remember to give your Massey Ferguson® Dealer the following information:

- Correct part description, or part number.
- Model number of your baler.
- Serial number of your baler.

## MACHINE IDENTIFICATION

### Model and Serial Numbers

*NOTE: Any time your baler needs service, or parts, give your Massey Ferguson® Dealer the model and serial numbers.*

Machine model No. \_\_\_\_\_

Machine serial No. \_\_\_\_\_

Date received: \_\_\_\_\_

## DEALER INFORMATION

Dealer Name and Address:

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Dealer's Telephone No. \_\_\_\_\_

Dealer's Fax No. \_\_\_\_\_

## General Information

### COMPONENT IDENTIFICATION


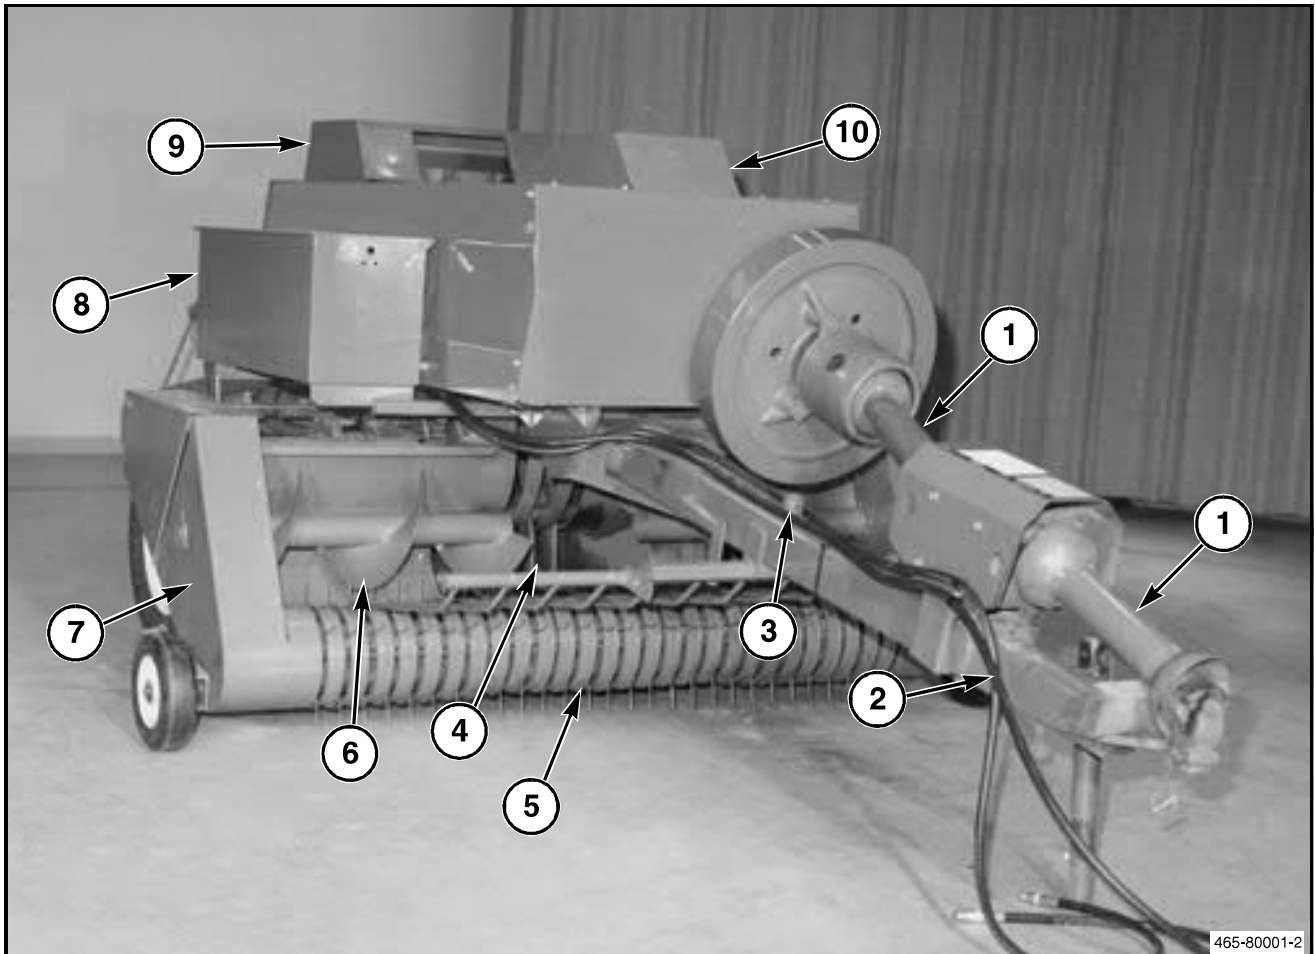


FIG. 1

FIG. 1: Front view

- (1) Two U-Joint Drive Shaft
- (2) Pickup Lift Hydraulic Hoses (optional)
- (3) Jack Stand Storage Post
- (4) Charge Chamber
- (5) Pickup Assembly
- (6) Auger (one each side)
- (7) Auger and Pickup Drive Chain Case
- (8) Right-Hand twine Storage Box
- (9) Knotter Safety Shield
- (10) Plunger Crank Safety Shield

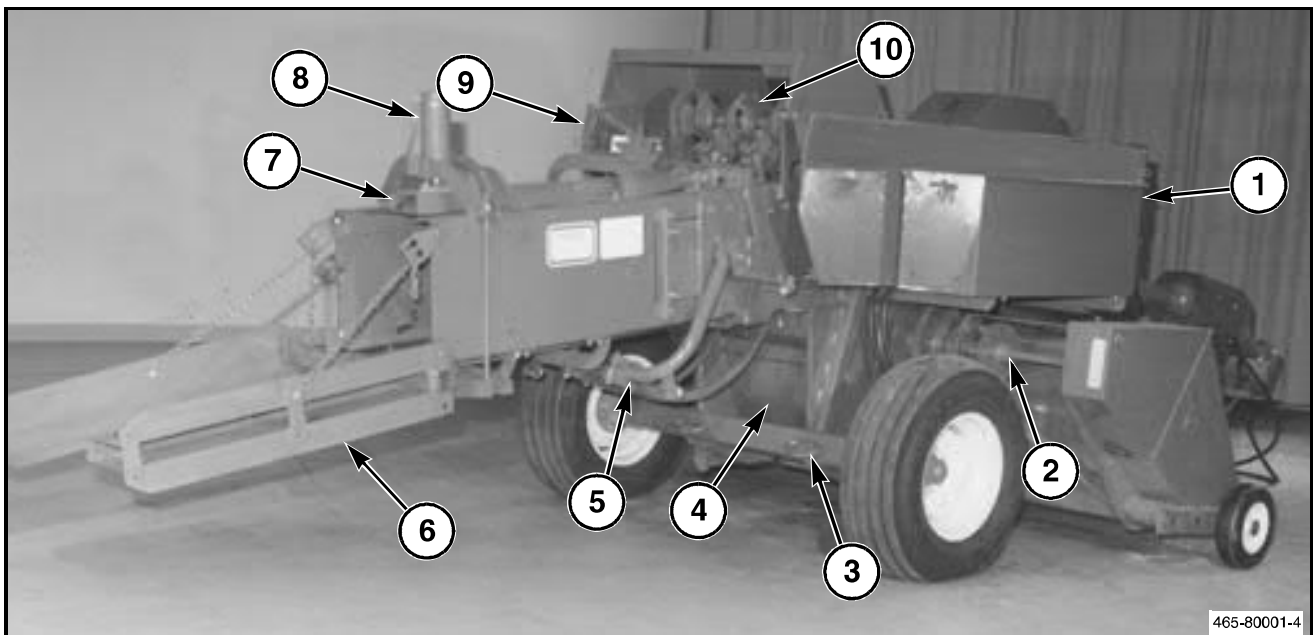


**FIG. 2**

**FIG. 2:** Right-hand side

- (1) Right-Hand Twine Storage Box
- (2) Pickup Slip and Overrunning Clutches
- (3) Tie-Down Ring
- (4) Access Panel to Charge Chamber
- (5) Needle Carriage
- (6) Quarter Turn Bale Chute
- (7) Upper Density Control Rail
- (8) Density Control Hydraulic Cylinder
- (9) Knotter Trip Arm
- (10) Knotter Assembly

## General Information

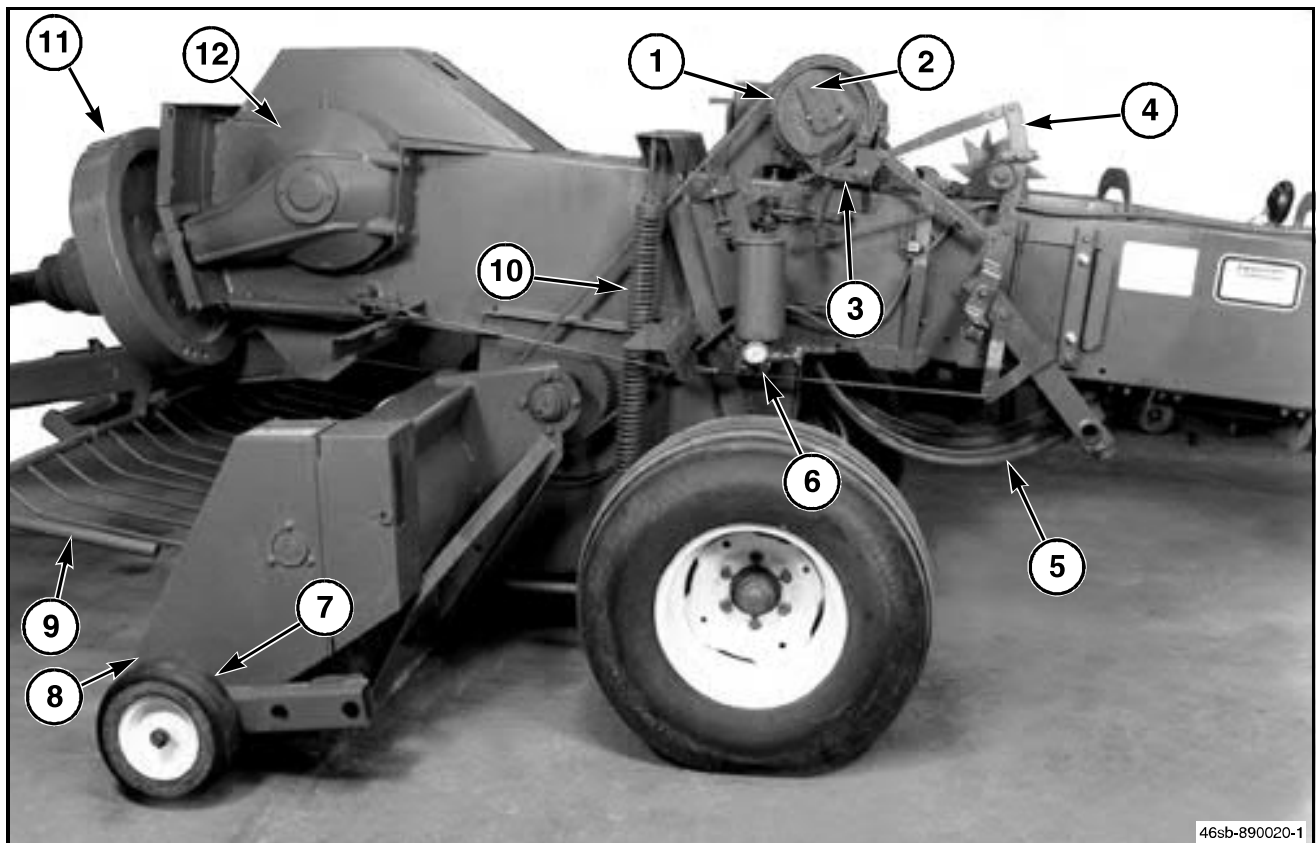

**FIG. 3**

**FIG. 3:** Left-hand side


- (1) Knotter and Needle Drive Sprocket
- (2) Knotter and Needle Shearbolt
- (3) Trip Arm Lever
- (4) Knotter Trip Arm
- (5) Needles
- (6) Density Control Hydraulic Pump
- (7) Adjustable Gauge Wheel (one each side)
- (8) Left-Hand Auger Drive Chain Case
- (9) Windguard
- (10) Pickup Flotation Spring
- (11) Flywheel
- (12) Heavy Duty Hypoid Gearbox
- (13) Knotter and Needle Drive Chain (No. 50)
- (14) Clutch Dog

**DRIVE TRAIN**

**FIG. 4:** The baler is driven by the tractor PTO system. The baler requires a standard 540 rev/min tractor PTO. The baler uses a four U-joint drive shaft between the tractor and the baler. The tractor power goes from the rear U-joint (1) of the drive shaft to the overrunning clutch (2).

The overrunning clutch permits the baler flywheel (3) to freewheel when the PTO is disengaged or the tractor engine speed is reduced. This permits the operator to change gears on the tractor without waiting for the flywheel to come to a complete stop.


From the overrunning clutch, the power goes through a slip clutch (4), and the flywheel and flywheel shearbolt (5). The flywheel shearbolt drives the gearbox, which in turn operates the other baler mechanisms. The flywheel shearbolt also protects the other components.

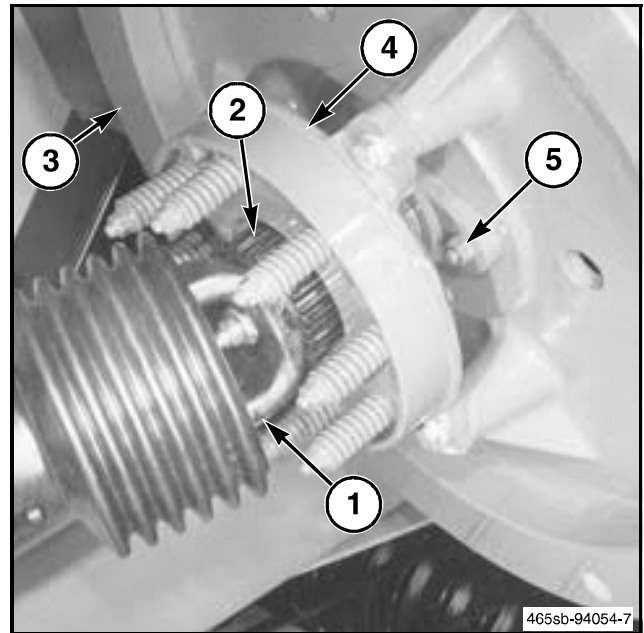

**FIG. 4**

**FIG. 5:** A crank arm on the right-hand side of the gearbox drives the plunger (1) and a sprocket (2). The sprocket is protected by a shearbolt (3).

The chain (4) drives the stuffer sprocket (5) and the pickup sprocket (6). The pickup assembly is protected by a slip clutch (7)

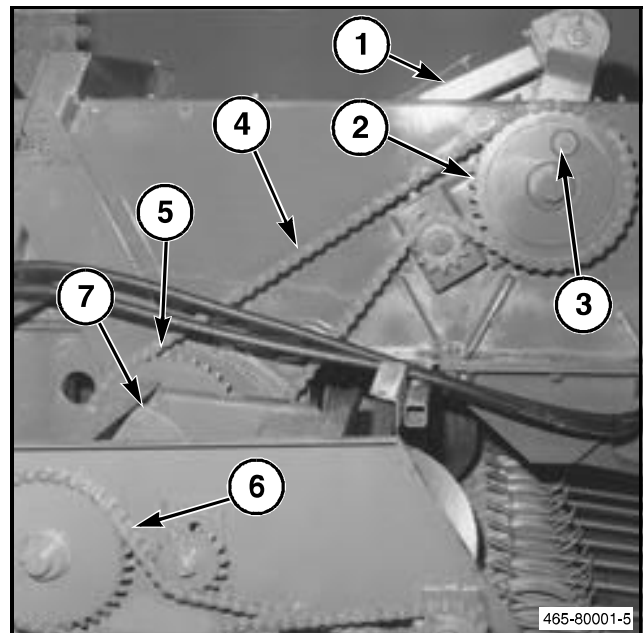


**FIG. 5**

## General Information

**FIG. 6:** A sprocket (1) on the left-hand end of the stuffer shaft drives a No. 50 chain (2). The No. 50 chain drives the knotters (3), the needles (4), and the density control hydraulic pump (5). These components are protected by a shearbolt (6).

Newer production balers have an independent No. 40 chain to drive the density control hydraulic pump.

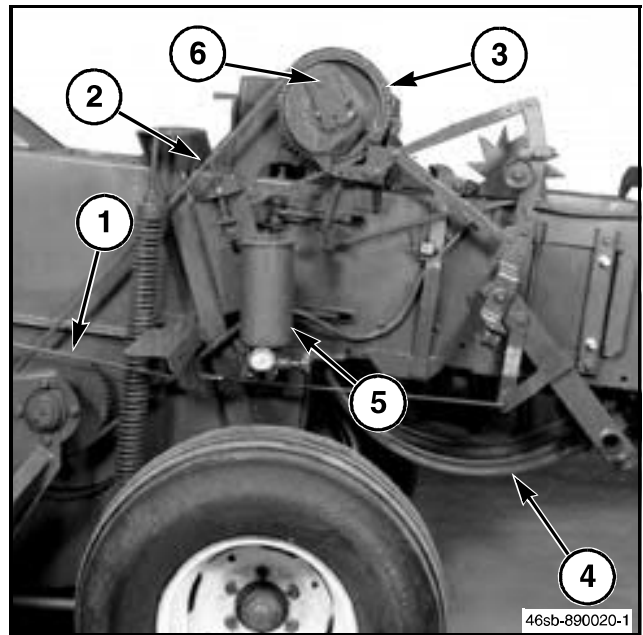

**FIG. 6**

## SLIP CLUTCHES


Slip clutches are used at two locations to protect the baler's components against damage from overloads. The slip clutches use two fibrous clutch discs between steel pressure plates. Spring tension on the plates keeps the required torque.

The slip clutch on the front of the flywheel protects the tractor PTO from stresses caused by sudden overloads. The slip clutch on the pickup assembly drive protects the baler from slugs of hay that can jam the bale chamber or hard objects that can cause damage. The slip clutches must be checked and adjusted.

### PICKUP AND FEEDING

**FIG. 7:** Continuous flow, straight through feeding is possible with the wide, low profile pickup assembly (1). Hay from the windrow is picked up by the closely located tines (2) of the pickup assembly and moved by an auger (3) into a charge chamber (4). The in line charge chamber feeds the baling chamber from the bottom.


This baler makes bales that are the same shape and the same condition in light, or heavy, windrows. As the flakes are formed, the stuffer fingers sweep the flakes into the bale chamber with each return stroke of the plunger. With the PTO operating at 540 rpm, the plunger makes 100 strokes per minute to compress the hay in the baling chamber.

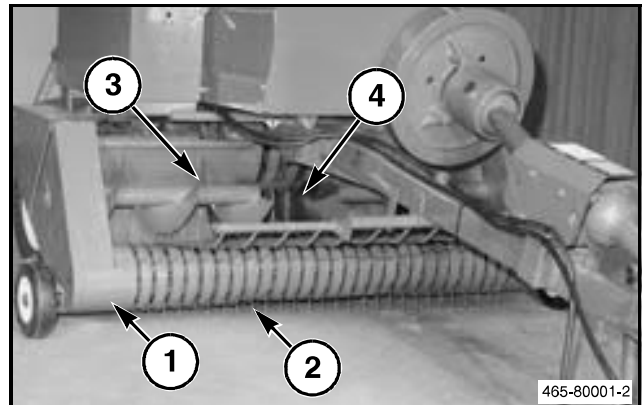

**FIG. 7**

**FIG. 8:** The pickup height adjustment gauge plate (1) controls the height of the tines above the ground. The gauge plate gives several height settings for the pickup assembly. Set tine height according to instructions in the Adjustments Section.

A flotation spring (2) supports much of the weight of the pickup assembly. Flotation spring tension is adjusted with a drawbolt (3). Set flotation spring tension according to instructions in the Adjustments Section.

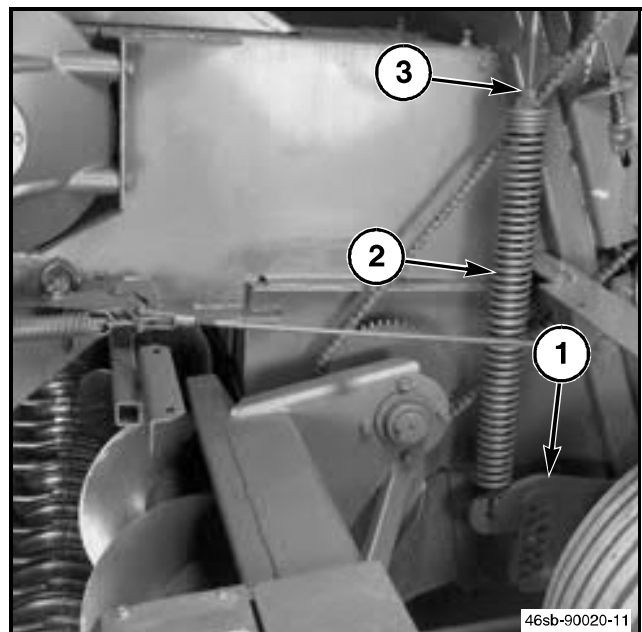

**FIG. 8**

## General Information

---

### SHEARBOLTS

#### Location

Shearbolts are used in three different locations to protect the components.

The flywheel shearbolt connects the flywheel to the other parts of the drive train. When the flywheel shearbolt breaks, only the flywheel and PTO shaft continue to run.

A stuffer and pickup shearbolt connects the main drive sprocket to a drive hub. This shearbolt protects the stuffer and pickup assembly.

The third shearbolt fastens the shear arm to the clutch dog to protect the needles and the knotters.

#### Replacement

Stop the tractor and baler immediately when a shearbolt breaks. Determine what caused the shearbolt to shear.

If the flywheel shearbolt breaks and is replaced on a tying cycle, DO NOT rotate the flywheel in the reverse direction. Rotating the baler flywheel in the counterclockwise direction (facing the direction of baler travel) will reverse the baler. This can cause damage to the knotter trip arm when the knotter trip arm contacts the clutch dog.

*NOTE: If the flywheel shearbolt breaks, check the stuffer and the knotter shearbolts too.*

The knotter drive clutch, when engaged, is of a lock up type and will reverse the knotters if the baler is reversed. Trip the knotter trip arm to permit the clutch dog to pass the knotter trip arm without interference.

Always replace broken bolts with the correct bolt as called for in the manual. Do not replace the bolt with a higher strength bolt than specified. This can result in damage to the baler.

Always make sure all shearbolts are tight. Do not tighten shearbolts too much. Refer to the manual when replacing the shearbolts.

### ROLLER CHAINS

#### Inspection of Drive Chains and Sprockets

Experience will determine how frequently drive chains will need to be inspected and serviced. Make a regular schedule and follow the schedule.

With new chains and sprockets some adjustment of the chain tension can be looked for during the first run-in period.

Inspect the chains and sprockets for the following:

1. Wear of the chain link side plates.
2. Wear on the sides of the sprocket teeth.
3. Alignment of the sprockets, idlers, and shafts.
4. Chain elongation.
5. Wear on the working faces of the sprocket teeth.

Check for interference between the drive and other parts of the equipment. If there is any interference, correct immediately. Interference can cause not normal and damaging wear on the chain and interference part. If the edges of the chain link plates hit against a rigid part, the link plate will become weak because of strain and a chain failure can result.

Check for and remove any deposit of debris or foreign material from between the chain and sprockets. A small amount of material in the sprocket roll seat can cause tensile loads large enough to break the chain if forced through the drive.

Inspect the chain for cracks, broken, or distorted parts. If any of these conditions are found, replace the complete chain. Even if the parts of the chain look in good condition, the complete chain has been damaged and must be replaced.

### Drive Chain Adjustment and Tightening

Proper adjustment and tightening is necessary for long drive chain service life.

Over tightening causes the drive chains to elongate and puts additional loading on the sprockets, shafts, and bearings.

Loose drive chains will climb on the sprocket teeth and cause excessive wear.

**FIG. 9:** To check drive chain tension, turn the drive sprocket in a direction that is opposite to the normal direction of rotation (to remove all the slack from the idler sprocket strand of the chain). Measure the slack at the middle point of the longest drive strand as shown.

As a general rule:

- Horizontal and inclined drive chains must be adjusted to have approximately 20 mm of slack per meter of distance between the center of the driver and driven shaft (0.25 inches of slack per foot of distance between the center of the driver and driven shaft) or approximately 2% of the distance between the center of the driver and the driven shaft.
- Vertical drive chains that see shock loads or changes of rotation must be adjusted to have approximately 10 mm of slack per meter of distance between the center of the driver and the center of the driven shaft (0.125 inches of slack per foot of distance between the center of both the driver and the driven shaft) or approximately 1% of the distance between the center of the driver and the center of the driven shaft.

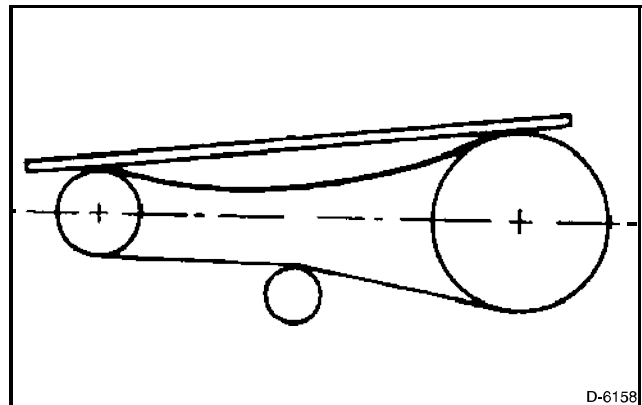


FIG. 9

D-6158

### Drive Chain Sprocket and Idler Alignment

**FIG. 10:** If there is wear on the inside surface of the chain roller link plates, the sprockets are not aligned. Make sure that:

The shafts (that the driver and driven sprockets are mounted on) are in the same location (level with each other).

Check for tilting or shafts not in alignment by using a bubble level. For proper alignment, the bubble must be in the same position as measured on each shaft.

Rotate the drive and look for excessive movement. If movement is shown inspect the sprocket and shaft. If there is no problem shown, remove and install sprocket. Not correctly mounted sprockets or out of round sprockets are from time to time the root of vibration or more severe problems. A dial indicator can be used to measure the side to side sprocket movement or diameter vibration by holding the dial indicator up to the sprocket sidewall.

**IMPORTANT:** Always turn off the machine before using the dial indicator. Rotate the drive by hand to make the measurements.

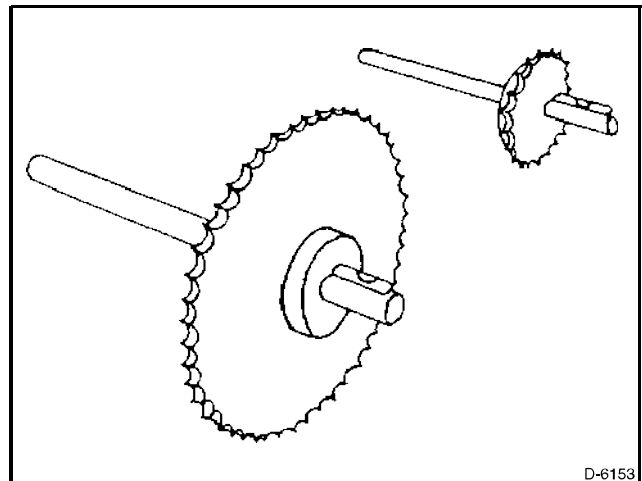


FIG. 10

D-6153



**Suggest:**

**For more complete manuals. Please go to the home page.**


**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

## General Information

**FIG. 11:** The shafts (that the driver and driven sprockets are mounted on) are parallel to each other.

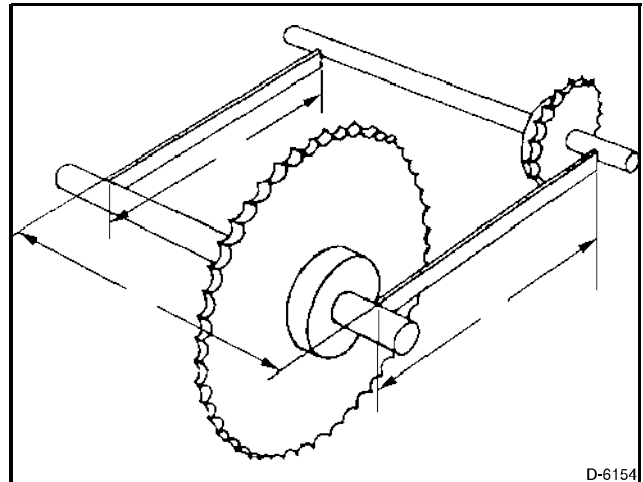


**FIG. 11**

**FIG. 12:** The driver and driven sprockets are in line (not offset).

To check the alignment use a long straight edge (1) made of wood, metal, or any rigid material. Line the straight edge along the outside face of both sprockets. If the drive is properly aligned, the straight edge will contact each sprocket evenly. The straight edge must touch the two outer edges of each sprocket for a total of four points of contact.


Shafts not aligned will show up as a gap between the outside face of the sprocket and the straight edge.

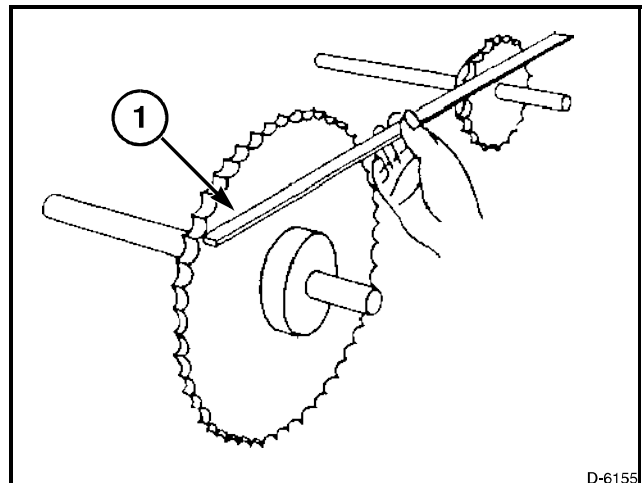

**FIG. 12**

**FIG. 13:** The idler and adjusting sprockets are in alignment with the driver and driven sprockets.

Bad alignment, especially with multiple strand chains results in not equal loading across the width of the chain and can cause an early chain failure.

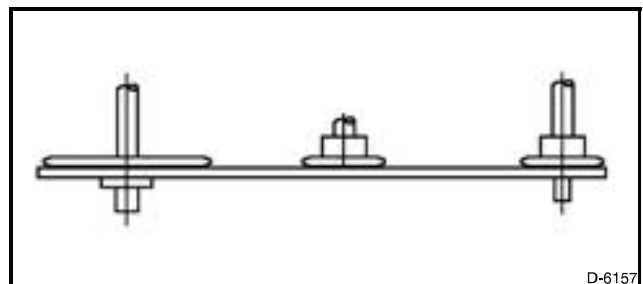

**FIG. 13**

### Drive Chain Elongation and Sprocket Wear

Drive chain wear occurs on the inside of the chain in the load bearing areas between the chain outer link hardened pins and the chain inner link bushing surfaces. This wear causes chain elongation which is referred to as chain stretch.

This wear is not seen on the outside of the chain and cannot be measured with the chain under tension. To measure chain elongation, remove the chain and select a 305 mm (1 ft) section of chain. Push the selected section of chain tightly together and measure the distance between the link pins. Then pull the same selected section of chain and measure the distance between the same link pins. If the movement (elongation) is more than 10 mm per meter (0.125 inches per foot), the chain is worn out and must be replaced.

When wear of this amount or more is seen, the hardened surfaces on the link pins are worn through. The chain is worn out, and making frequent adjustments will be necessary.


Gradual increase in chain slack is the result of normal chain wear. A sudden increase in chain slack indicates one or more of the following problems:

1. Not enough lubrication or failure of the lubricant.
2. Excessive over loading or shock loading of the chain drive.
3. Loose bearing mounting hardware or a failed drive.
4. Loose idler sprockets, chain guide blocks, or failed idler sprocket bearings.

### Normal Tooth Wear

**FIG. 14:** Normal Tooth Wear.

Worn sprockets must not be used with new roller chain.

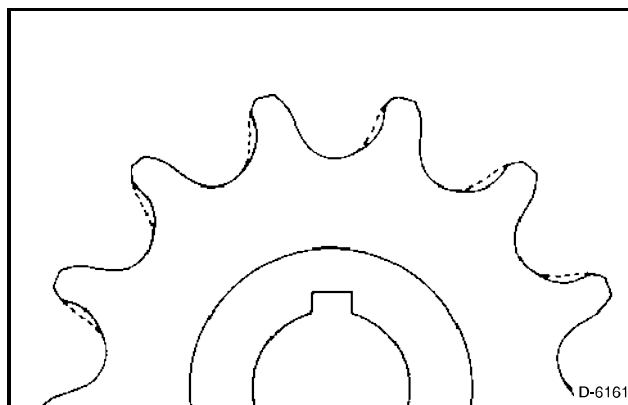

**FIG. 14**

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**