


Combine Range

CENTORA 7282

CENTORA 7280

+ Auto Level

+ Rotary Separator

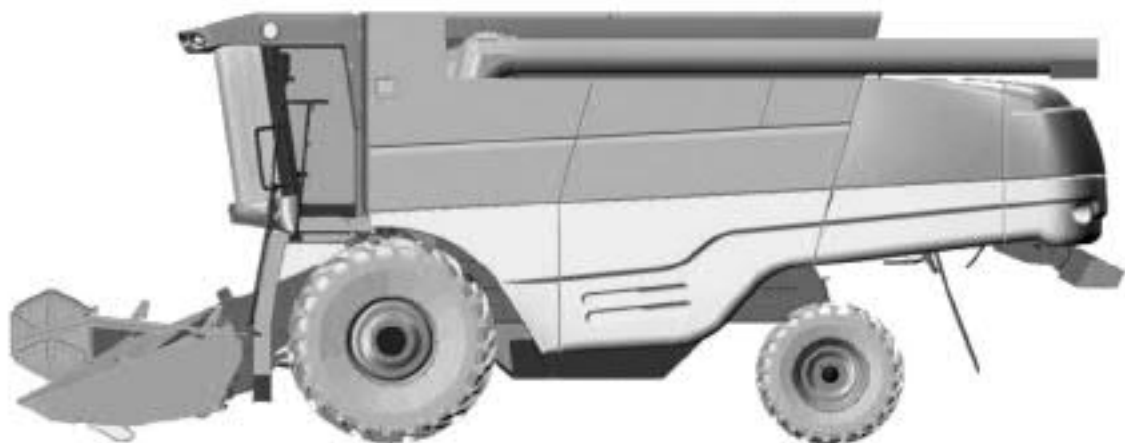

- 0 Introduction - Specifications**
- 1 Cutting table**
- 2 Reel**
- 3 Main crop elevator**
- 4 Threshing unit**
- 5 Straw walkers**
- 6 Shaker shoe - Fanning mill**
- 7 Elevators**
- 8 Engine**
- 9 Unloading auger - Grain tank**
- 10 Drive unit**
- 11 Transmissions**
- 12 Undercarriage**
- 13 Cab**
- 14 Hydraulics**
- 15 Machine housing**
- 16 Electrical system**
- 17 Straw chopper**
- 18 General assembly instructions**
- 19 Miscellaneous data**

Contents

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

Contents

0: Introduction - Specifications	1
0.1 Using the manual	3
0.2 General specifications	4
0.2.1 Tyre pressure	9
0.3 Dimensions and weight	11
0.4 Safety precautions	13
0.4.1 Safety in the workshop	13
0.4.2 Safety - a word to the mechanic	13
0.4.3 Safety - danger, warning and caution	13
0.4.4 Safety decals	13
0.4.5 General	13
0.4.6 Personal safety	13
0.4.7 Considerations with regard to equipment	14
0.4.8 General considerations	14
0.4.9 Operational considerations	15
0.4.10 Maintenance techniques	16
0.5 Practical advice	17
0.6 Start-up instructions	21
0.6.1 General	21
0.6.2 Pre-delivery checks	21
0.6.3 Instruction of combine operator	22
0.7 Conversion tables	25
0.7.1 Conventional units of measurement	25
0.8 Locking and sealing agents	27
0.9 Wheel nut torques	28
0.9.1 Wheels	28
0.9.2 Bolts with metric threads	29
0.9.3 Nuts with metric threads	30
1: Cutting table	31
1.1 General	33
1.2 Knife drive - wobble box	34
1.2.1 Removal	34
1.2.2 Assembly	35
1.2.3 Reconditioning the wobble box	36
1.2.4 Positioning the double fingers, knife and crop lifters	42
1.3 Table auger	43
1.3.1 Removal	43
1.3.2 Assembly	43
1.3.3 Replacing the shaft on the right-hand side	44
1.3.4 Replacing the shaft on the left-hand side	45
1.3.5 Replacing the crankshaft	45
1.3.6 Replacing the feathering fingers, bearings and bushes	46
1.3.7 Adjusting the table auger and feathering fingers	47
1.4 Table body	48
1.4.1 Adjusting the cut-off strips	48
1.4.2 Adjusting and positioning the ground sensor - PowerFlow	49
1.5 Slip clutch and chain drive	51
1.5.1 Removal	51
1.5.2 Assembly	51
1.5.3 Replacing the bearings and sprockets	52
1.6 Countershaft	53
1.6.1 Removal	53
1.6.2 Assembly	54
1.7 PowerFlow table	55
1.7.1 Removal, belts	56
1.7.2 Assembly, belts	58
1.7.3 Replacing the front rollers and bearings, scraper adjustment	60

Contents

1.7.4	Replacing the rear rollers and bearings, scraper adjustment	62
1.7.5	Replacing and aligning the bearing housing, rear rollers	62
1.7.6	Belt tensioning and running-in	64
2:	Reel	67
2.1	Reel	69
2.1.1	Removal	69
2.1.2	Assembly	70
2.1.3	Replacing the reel tine bar and plastic bearings	71
2.1.4	Replacing the guide rollers, eccentric, guide ring and bearings	72
2.1.5	Replacing the reel plates	73
2.1.6	Replacing the reel tube, bearings	73
2.2	Oil motor and chain drive	74
2.2.1	Replacing the oil motor	74
2.2.2	Replacing the flow divider	75
2.3	Hydraulic cylinders	78
2.3.1	Replacing the cylinder – reel up/down	78
2.3.2	Replacing the cylinder – reel forward/back	79
2.3.3	Reconditioning the hydraulic cylinders	79
3:	Main crop elevator	85
3.1	General	87
3.2	Main crop elevator	88
3.2.1	Removal	88
3.2.2	Assembly	89
3.2.3	Bearing block on machine frame	90
3.2.4	Replacing the lifting ram	90
3.2.5	Reconditioning the hydraulic cylinder	91
3.2.6	Replacing the cutting height preset sensor	92
3.3	Crop elevator chain	93
3.3.1	Removal	93
3.3.2	Assembly	93
3.3.3	Replacing the slats	94
3.3.4	Replacing the slide rails in the crop elevator	94
3.3.5	Replacing the intermediate plate	94
3.4	Elevator chain top shaft	95
3.4.1	Removal	95
3.4.2	Assembly	95
3.4.3	Replacing the bearings	96
3.4.4	Replacing sprockets	97
3.4.5	Replacing the shaft protection tube	98
3.5	Elevator chain front shaft	99
3.5.1	Removal	99
3.5.2	Assembly	99
3.5.3	Replacing the shaft, bearings and plate wheels	100
3.6	Elevator countershaft	101
3.6.1	Removal	101
3.6.2	Assembly	102
3.6.3	Replacing the bearings and sprockets	102
3.7	Table clutch and chain drive	103
3.7.1	Removal	103
3.7.2	Assembly	103
3.7.3	Reconditioning the clutch	103
3.8	Adapter	104
3.8.1	Removal	104
3.8.2	Assembly	105
3.8.3	Replacing the cylinder/connecting rod	105
3.8.4	Reconditioning the hydraulic cylinder	106
3.8.5	Replacing the angle sensor	107

3.9	Hydraulic reversing	108
3.9.1	Removal	108
3.9.2	Assembly	108
4:	Threshing unit.....	109
4.1	General	111
4.2	Stone trap	112
4.2.1	Removal	112
4.2.2	Assembly	112
4.3	Concave	113
4.3.1	Removal	113
4.3.2	Assembly	113
4.3.3	Adjusting the concave laterally	114
4.3.4	Concave setting - initial setting	114
4.3.5	Replacing the actuator	115
4.3.6	Replacing the lead-in plate	115
4.3.7	Replacing the shaft for concave setting	116
4.4	Threshing cylinder	117
4.4.1	Removal	117
4.4.2	Assembly	118
4.4.3	Replacing the bearings	119
4.4.4	Replacing the rasp bars and backing bars	120
4.4.5	Replacing the shaft and cylinder spiders	120
4.5	Cylinder variator – table clutch	121
4.5.1	Removal, hydraulic variator	121
4.5.2	Assembly, hydraulic variator	121
4.5.3	Reconditioning the hydraulic variator pulley	122
4.5.4	Removal, mechanical variator	124
4.5.5	Assembly, mechanical variator	124
4.5.6	Reconditioning the mechanical variator pulley	125
4.5.7	Removal, magnetic clutch	126
4.5.8	Assembly, magnetic clutch	127
4.5.9	Reconditioning the magnetic clutch	128
4.6	Bracket for counter drive	130
4.6.1	Removal	130
4.6.2	Assembly and alignment	130
4.7	Rear beater	131
4.7.1	Removal	131
4.7.2	Assembly	132
4.7.3	Replacing the bearings	133
4.8	Rear beater concave	134
4.8.1	Removal	134
4.8.2	Assembly	134
4.9	Rotary separator cylinder	135
4.9.1	Removal	135
4.9.2	Assembly	136
4.9.3	Replacing the bearings	137
4.9.4	Replacing the rasp bars	137
4.10	Rotary separator concave	138
4.10.1	Removal	138
4.10.2	Assembly	139
4.10.3	Concave setting - initial setting	139
4.10.4	Replacing the shaft for concave setting	140
5:	Straw walkers.....	141
5.1	General	143
5.2	Straw walkers	144
5.2.1	Removal	144
5.2.2	Assembly	144

Contents

5.3	Crank - front	145
5.3.1	Removal	145
5.3.2	Assembly	146
5.3.3	Replacing the bearings	146
5.4	Crank - rear	147
5.4.1	Removal	147
5.4.2	Assembly	147
5.4.3	Replacing the bearings	147
6:	Shaker shoe - Fanning mill	149
6.1	General	151
6.2	Fanning Mill	152
6.2.1	Removal	152
6.2.2	Assembly	153
6.2.3	Replacing the fan blades	154
6.2.4	Replacing the fanning mill deflectors	154
6.2.5	Replacing the seals	155
6.3	Main grain pan	156
6.3.1	Removal	156
6.3.2	Assembly	157
6.3.3	Replacing the swivel arm and bearings	157
6.3.4	Replacing the seals	158
6.4	Second grain pan	159
6.4.1	Removal	159
6.4.2	Assembly	159
6.4.3	Replacing the swivel arm and bearings	160
6.4.4	Adjusting second grain pan	161
6.5	Top shaker shoe	163
6.5.1	Removal	163
6.5.2	Assembly	164
6.5.3	Replacing the swivel arm and bearings	165
6.5.4	Replacing the seals	165
6.5.5	Replacing and calibrating the actuator - sieves	166
6.6	Bottom shaker shoe	167
6.6.1	Removal	167
6.6.2	Assembly	168
6.6.3	Replacing the swivel arm and bearings	168
6.6.4	Replacing the seals	169
6.6.5	Electric sieve setting – initial setting	169
6.7	Bottom augers	170
6.7.1	Removal	170
6.7.2	Assembly	170
6.8	Eccentric drive	171
6.8.1	Removal	171
6.8.2	Assembly	172
6.8.3	Adjusting the connecting rod / aligning the shaker shoes	173
6.8.4	Replacing the connecting rod bearing	174
6.8.5	Replacing the bearings and eccentric shaft	175
6.9	Transmissions	176
6.9.1	Replacing and reconditioning the fanning mill variator	176
6.9.2	Adjusting the fanning mill variator	177
6.9.3	Replacing and reconditioning the counter drive	178
7:	Elevators	179
7.1	Tank filling elevator	181
7.1.1	Removal	181
7.1.2	Assembly	182
7.1.3	Replacing the top shaft, bearings and sprockets	182
7.1.4	Replacing the bottom sprocket	183

7.1.5	Replacing the elevator chain	183
7.1.6	Moisture sensor	184
7.1.7	Yieldmeter sensor	184
7.2	Returns elevator	185
7.2.1	Removal	185
7.2.2	Assembly	185
7.2.3	Replacing the top shaft, bearings and sprockets	186
7.2.4	Replacing the bottom sprocket	186
7.2.5	Replacing the elevator chain	186
7.2.6	Returns volume sensor	186
7.3	Returns thresher	187
7.3.1	Removal	187
7.3.2	Assembly	187
7.3.3	Replacing the sprockets	187
7.3.4	Replacing the threshing cylinder	187
7.3.5	Reconditioning the right-angle gear	188
7.4	Tank filling auger	190
7.4.1	Removal	190
7.4.2	Assembly	190
7.4.3	Replacing the top bearing	190
7.4.4	Reconditioning the right-angle gear	191
7.5	Transmission	192
7.5.1	Replacing the shaft, bearings and sprockets	192
8:	Engine	193
8.1	General	195
8.2	Replacing the engine	196
8.2.1	Removing the engine assembly	196
8.2.2	Fitting the engine assembly	199
9:	Unloading auger - Grain tank	201
9.1	Unloading auger - horizontal	203
9.1.1	Removal	203
9.1.2	Assembly	203
9.2	Unloading auger - vertical	204
9.2.1	Removal	204
9.2.2	Assembly	204
9.2.3	Reconditioning the right-angle gear	205
9.3	Unloading tube - horizontal	206
9.3.1	Removal	206
9.3.2	Assembly	206
9.4	Unloading tube - vertical	207
9.4.1	Removal	207
9.4.2	Assembly	207
9.4.3	Replacing the swivel bearing	208
9.4.4	Replacing the hydraulic cylinder	209
9.4.5	Reconditioning the hydraulic cylinder	210
9.5	Unloading tube elbow	211
9.5.1	Removal	211
9.5.2	Assembly	211
9.5.3	Reconditioning the right-angle gear	211
9.6	Bottom auger and cover plate	213
9.6.1	Removal	213
9.6.2	Assembly	213
9.6.3	Replacing the bearings, safety clutch	214
9.7	Transmission	215
9.7.1	Replacing the unloading auger shaft, bearings	215
9.7.2	Replacing and reconditioning the magnetic clutch	215

Contents

9.8	Grain tank covers	218
9.8.1	Removal	218
9.8.2	Assembly	218
10:	Drive unit	219
10.1	Radiator - Intercooler	221
10.1.1	Removal	221
10.1.2	Assembly	221
10.2	Oil cooler	222
10.2.1	Removal	222
10.2.2	Assembly	222
10.3	Condenser – air conditioning	223
10.3.1	Removal	223
10.3.2	Assembly	223
10.4	Rotary screen	224
10.4.1	Removal	224
10.4.2	Assembly	225
10.4.3	Adjusting the rotary screen and cleaning blade	226
10.4.4	Replacing the drive shaft and clutch	227
10.5	Dust aspirator	230
10.5.1	Removal	230
10.5.2	Assembly	230
10.6	Hydrostatic pump	231
10.6.1	Removal	231
10.6.2	Assembly	232
10.6.3	Tensioning device	233
10.7	Auxiliary hydraulic pump	234
10.7.1	Removal	234
10.7.2	Assembly	234
10.8	Hydraulic oil tank	235
10.8.1	Removal	235
10.8.2	Assembly	235
10.9	Fuel tank	236
10.9.1	Removal	236
10.9.2	Assembly	236
10.9.3	Tank gauge	236
10.10	Compressor – air conditioning	237
10.10.1	Removal	237
10.10.2	Assembly	237
10.11	Power take-off	238
10.11.1	Removal	238
10.11.2	Assembly	239
10.11.3	Replacing the clutch disc	240
10.11.4	Replacing the output shaft, bearing and hub	241
11:	Transmissions	243
11.1	General	245
11.2	Countershaft	246
11.2.1	Removal	246
11.2.2	Assembly	247
11.2.3	Replacing the bearings	248
11.2.4	Reconditioning the safety clutch	248
11.3	Replacing the belts, right-hand side	249
11.3.1	Rear beater - counter drive, cylinder variator	249
11.3.2	Counter drive, variator - threshing cylinder	250
11.3.3	Rear beater - rotary separator	251
11.3.4	Fanning mill - fanning mill variator	251
11.3.5	Rear beater - fanning mill variator	252

11.3.6	Unloading auger shaft - unloading auger	253
11.3.7	Unloading auger shaft - rotary screen clutch	254
11.3.8	Unloading auger shaft - dust aspirator	255
11.3.9	Countershaft - counter drive, elevators	256
11.4	Replacing the chains, right-hand side	257
11.4.1	Counter drive, elevators - returns elevator	257
11.4.2	Counter drive, elevators - tank filling elevator	257
11.4.3	Counter drive, elevators - tank filling auger	257
11.4.4	Returns elevator - returns thresher	258
11.4.5	Reel drive	258
11.5	Replacing the belts, left-hand side	259
11.5.1	Countershaft - rear beater	259
11.5.2	Countershaft - counter drive, straw chopper	259
11.5.3	Counter drive - straw chopper	260
11.5.4	Engine - countershaft	261
11.5.5	Rear beater - countershaft, shaker shoe drive	262
11.5.6	Countershaft, shaker shoe drive - eccentric shaft	263
11.5.7	Countershaft, shaker shoe drive - straw walker crank	263
11.5.8	Rear beater - elevator chain top shaft	264
11.5.9	Engine - unloading auger shaft	264
11.5.10	Engine - hydrostatic pump	265
11.5.11	PTO shaft – table countershaft	266
11.5.12	Table countershaft - knife drive	267
11.5.13	Countershaft - hydraulic pump, chaff spreader	267
11.6	Replacing the chains, left-hand side	268
11.6.1	Table countershaft - table auger	268
11.6.2	Elevator chain top shaft - elevator countershaft	268
11.6.3	Table auger - belt rollers (PowerFlow)	269
11.6.4	Hydraulic motor, reversing - elevator countershaft	270
11.6.5	Bottom auger – unloading auger	271
12:	Undercarriage	273
12.1	Auto Level final drive bracket	275
12.1.1	Removal	275
12.1.2	Assembly	276
12.1.3	Replacing the bushing	278
12.1.4	Replacing the hydraulic cylinder	279
12.1.5	Reconditioning the hydraulic cylinder	280
12.1.6	Adjusting the AutoLevel potentiometer	281
12.2	Final drives	282
12.2.1	Removal	282
12.2.2	Assembly	282
12.2.3	Reconditioning the final drives	284
12.3	Gearbox	287
12.3.1	Removal	287
12.3.2	Assembly	288
12.3.3	Replacing the shifter cylinders and sensor	289
12.3.4	Adjusting the shifter cylinders and sensor	290
12.3.5	Replacing the lubrication pump	294
12.3.6	Replacing the shifter forks	295
12.3.7	Reconditioning the differential	296
12.3.8	Reconditioning the gearbox	300
12.4	Hydrostatic motor	303
12.4.1	Removal	303
12.4.2	Assembly	303
12.5	Brakes	304
12.5.1	Replacing the brake blocks	304
12.5.2	Replacing the brake discs	305
12.5.3	Bleeding the brakes	307
12.5.4	Brake pedals and main cylinder	308

Contents

12.5.5	Replacing the handbrake shoes	311
12.5.6	Adjusting the hydraulic handbrake	312
12.6	Rear axle	313
12.6.1	General	313
12.6.2	Removal	313
12.6.3	Assembly	313
12.6.4	Replacing the king pins and bushings	314
12.6.5	Replacing the steering cylinder	315
12.6.6	Reconditioning the hydraulic cylinder	315
12.6.7	Adjusting the toe-in and steering deflection	316
13:	Cab	319
13.1	Multi-function lever and control panel	320
13.1.1	Control panel	320
13.1.2	Armrest	321
13.1.3	Multi-function lever	322
13.2	Replacing the windscreen	324
13.3	Control panel in roof	325
13.4	Roof	326
13.4.1	Outer roof	326
13.4.2	Inspection doors	326
13.4.3	Replacing the windscreen wiper	327
13.4.4	Replacing the blower	327
13.4.5	Replacing the heating element/tap	328
13.4.6	Replacing evaporator	328
13.5	Troubleshooting – Climate control	329
13.5.1	Climate control faults in general	329
13.5.2	ECS – Electronic control unit	329
13.5.3	Troubleshooting table	330
14:	Hydraulics	333
14.1	General	335
14.1.1	Emptying and filling the hydrostatic system	338
14.1.2	Running in and bleeding the hydrostatic system	340
14.1.3	Running in and bleeding the auxiliary hydraulics	340
14.2	Hydrostatic system	343
14.2.1	Hydraulic pump	343
14.2.2	Oil motor	343
14.2.3	Oil cooler	343
14.2.4	Hydraulic oil filter	345
14.3	Gearshift	347
14.3.1	Hydraulic cylinders - gearshift	347
14.3.2	Hydraulic valves - gearshift	347
14.4	Hand brake	349
14.4.1	Hydraulic valve - hand brake	349
14.4.2	Hydraulic cylinder - hand brake	349
14.5	Auxiliary hydraulics	351
14.5.1	Hydraulic pump	351
14.5.2	Hydraulic oil tank and return oil filter	351
14.5.3	Oil cooler	351
14.5.4	Hydraulic valve - main valve	353
14.6	Cutting table	355
14.6.1	Hydraulic cylinders - table up/down	355
14.6.2	Pressure accumulators - cutting table	355
14.6.3	Hydraulic valve - table up/down (standard machine)	355
14.6.4	Hydraulic valve - table up/down (Auto Level machine)	357
14.6.5	Hydraulic cylinder - table levelling	359
14.6.6	Pressure accumulators - levelling	359
14.6.7	Hydraulic valve – levelling	359

14.7	Auto Level	361
14.7.1	Hydraulic cylinders - machine levelling	361
14.7.2	Hydraulic valve - machine up/down/levelling	363
14.8	Reel	365
14.8.1	Hydraulic cylinders - reel up/down	365
14.8.2	Hydraulic valve - reel up/down	365
14.8.3	Hydraulic cylinders - reel fore/aft	367
14.8.4	Hydraulic valve - reel fore/aft	367
14.8.5	Oil motor	369
14.8.6	Flow divider	369
14.8.7	Rape auger	369
14.9	Steering	371
14.9.1	Hydraulic cylinders - steering	371
14.9.2	Orbitrol steering valve	371
14.10	Cylinder variator	373
14.10.1	Cylinder variator	373
14.10.2	Hydraulic valve - variator	373
14.11	Unloading auger	375
14.11.1	Hydraulic cylinder - unloading auger	375
14.11.2	Hydraulic valve - unloading auger	375
14.12	Reversing	377
14.12.1	Oil motor	377
14.12.2	Hydraulic valve - reversing	377
14.13	Chaff spreader	379
14.13.1	Hydraulic pump	379
14.13.2	Oil motors	379
14.14	Maxi Spreader	381
14.14.1	Hydraulic pump	381
14.14.2	Solenoid valves	381
14.14.3	Hydraulic motor	381
14.15	Troubleshooting - hydrostatic transmission	382
14.15.1	Hydrostatic transmission faults in general	382
14.15.2	Pump and motor specifications	382
14.15.3	Functional diagram, HPV pump - HMF motor	384
14.15.4	Connecting test equipment	386
14.15.5	Troubleshooting table	387
14.15.6	Checking the charge pump	388
14.15.7	Checking the high pressure valves	388
14.15.8	Checking the high pressure valve	389
14.15.9	Checking the servo control	389
14.15.10	Checking the hydraulic pump	390
14.15.11	Checking the hydraulic motor	391
15:	Machine housing	393
15.1	General	395
16:	Electrical system	397
16.1	General	399
16.2	Description of DATAVISION	400
16.3	Electric box	401
16.3.1	Replacing the terminal	401
16.3.2	Replacing the job computers	401
16.4	Calibrations	404
16.4.1	Speed calibration	404
16.4.2	Calibrating the concave	405
16.4.3	Shaft alarm calibration	405
16.4.4	Calibrating the electrical sieves	405
16.4.5	Calibrating the electrical straw deflectors	406
16.4.6	Calibrating Auto Level Combine	407

Contents

16.4.7	Table Calibration	407
16.5	Diagrams overview	409
16.6	Wiring diagrams	412
16.7	Diagrams - computer input/output	422
16.8	Connectors	425
16.9	W-connecting points	430
16.10	Components	431
16.11	Key to symbols	493
16.12	Wiring overview	494
17:	Straw chopper	539
17.1	General	540
17.1.1	Replacing and calibrating the electric actuator – straw deflectors	540
18:	General assembly instructions	541
18.1	Fitting gib-head keys	543
18.2	Fitting tightening pins	544
18.3	Fitting hydraulic pipes and screw connections	545
18.4	Fitting a flanged bearing with locking collar	547
18.5	Fitting sliding bushings	548
18.6	Removing the revolution sensor	549
18.7	Fitting tightening rings	550
19:	Miscellaneous data	551
19.1	General	553
19.2	Speeds - adjustment values	554
19.3	Maintenance	555
19.3.1	Lubrication chart	555
19.3.2	Lubrication points, left-hand machine side	562
19.3.3	Lubrication points, right-hand machine side	576
19.3.4	Recommended lubricants	588
19.3.5	Gear	589
19.3.6	Air Conditioning	590

O. Introduction - Specifications

0. Introduction - Specifications

Contents

0.1	Using the manual	3
0.2	General specifications	4
0.3	Dimensions and weight	11
0.4	Safety precautions	13
0.4.1	Safety in the workshop	13
0.4.2	Safety - a word to the mechanic	13
0.4.3	Safety - danger, warning and caution	13
0.4.4	Safety decals	13
0.4.5	General	13
0.4.6	Personal safety	13
0.4.7	Considerations with regard to equipment	14
0.4.8	General considerations	14
0.4.9	Operational considerations	15
0.4.10	Maintenance techniques	16
0.5	Practical advice	17
0.6	Start-up instructions	21
0.6.1	General	21
0.6.2	Pre-delivery checks	21
0.6.3	Instruction of combine operator	22
0.7	Conversion tables	25
0.7.1	Conventional units of measurement	25
0.8	Locking and sealing agents	27
0.9	Wheel nut torques	28
0.9.1	Wheels	28
0.9.2	Bolts with metric threads	29
0.9.3	Nuts with metric threads	30



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

0. Introduction - Specifications

O. Introduction - Specifications

0.1 Using the manual

General

The purpose of the manual is to help dealers and workshops start up, service and repair AGCO's equipment as efficiently and effectively as possible. If the specified procedures are followed and the recommended special tools used where necessary, jobs can be completed within the time indicated in the "Repair Time Schedule" manual.

Pagination

Example: "... as described in section 2.1.3 on page 71." This manual is divided into chapters and sections. In the example the figures show:

First figure = Chapter

Second figure = Section

Third figure = Consecutive number in the section in question

67 = Page number in manual

The publication number and version appear at the bottom of the page.

Use

To make it easier to look things up, there is a table of contents at the beginning of every chapter listing the various sections in the chapter.

Modifications

Modified pages have the same section numbering as their predecessors: Only the page number and version number change.

The old pages must be destroyed.

Service tools

In the case of jobs that require service tools, the number of the tool is specified at the point in the text where it is needed.

Repairs and replacing parts

When replacing parts, it is very important to only ever use genuine AGCO spares.

Please pay particular attention to the following points when it comes to repairs and fitting spare parts or other equipment.

Fitting non-genuine spare parts may impair the safety of the machine.

In some countries it is against the law to fit parts that do not conform to the manufacturer's specifications. Torque wrenches must always be adjusted in accordance with the instructions given in the workshop manual. Fit locking devices where specified. If the locking device breaks when removed, fit a new one.

If non-genuine AGCO parts are fitted, the machine will no longer be covered by the right to complain, as the manufacturer provides a warranty on all AGCO components. AGCO dealers are under the obligation to supply genuine parts only.

Repair Time Schedule

The "Repair Time Schedule" manual contains a table of standard time requirements for the commonest repairs

on a combine. The manual's sections follow the layout of the spare parts catalogue.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>