


Operator's Manual

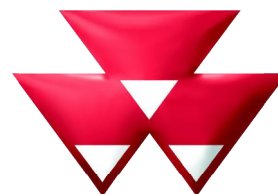

MASSEY FERGUSON

MF 7700 S - Maintenance

MF 7720 S

MF 7722 S

MF 7724 S

MF 7726 S



Dyna-VT

Beauvais

AGCO S.A.S. - 41 avenue Blaise Pascal - 60000

Beauvais - France - RC B562 104 539

© AGCO 2017

Original Operator's Manual

November 2017

ACT0032730

EAME

English

Foreword

We would like to welcome you to the ever-growing number of people who own a Massey Ferguson tractor; people who appreciate quality. We are proud of every tractor that leaves our factories, each being technically advanced and of a high quality.

This Operator's Manual contains the specifications for your new tractor. Please ensure that all operators read the instructions and follow them carefully. The pages that follow contain vital information on your tractor; please read them carefully.

This Operator's Manual contains the specifications for your new equipment. Please ensure that all operators read the instructions and follow them carefully. This will allow you to benefit from a long service life with complete safety and peace of mind. The pages that follow contain vital information about your new equipment; please read them carefully.

Your Massey Ferguson dealer will guarantee you quality servicing and will provide you with all the assistance you need. When it comes to servicing, remember that your dealer knows your tractor best and that he wants you to be completely satisfied.

Your Massey Ferguson dealer will guarantee you all the assistance you need.

Please leave this Operator's Manual in the tractor if resold. The subsequent owner will need the information it contains.

All information and specifications in this manual are up to date at the time of publication. However, our ongoing policy to improve our products obliges us to reserve the right to make alterations at any time without notice.

Please note that this manual relates to all models and refers to both standard and optional equipment. You may therefore find details relating to equipment that is not fitted on your tractor.

This operator's manual complies with European Commission delegated regulation no. 167/2013.

Massey Ferguson

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

MF 7700 S - Maintenance

1 Safety instructions and safety points - Warranty	11
1.1 Introduction	13
1.1.1 Introduction - Safety instructions	13
1.2 Safety — Symbols and terms	15
1.2.1 Safety — Symbols and terms	15
1.3 Safety decals and instructions	16
1.3.1 Checking and replacing the safety decals and instructions	16
1.3.2 Presentation and location of the safety decals and instructions	17
1.4 General safety instructions	22
1.4.1 Awareness of the safety instructions and symbols	22
1.4.2 Operator familiarity in the use of the tractor	22
1.4.3 Filling the fuel tank	23
1.4.4 Mounting and dismounting the operator's seat	23
1.4.5 Risk of burns	24
1.4.6 Prevention of accidents caused by lightning	24
1.4.7 Mandatory procedure before dismounting the tractor	24
1.5 Special instructions	26
1.5.1 Specific recommendations for agricultural and forestry tractors	26
1.6 Special safety instructions for preparing the tractor for use	28
1.6.1 Protective clothing	28
1.6.2 Activated carbon filter information	28
1.6.3 Safety devices and items	31
1.6.4 Checking the tractor	31
1.7 Specific safety instructions for starting the tractor	33
1.7.1 Protection of persons other than the operator	33
1.7.2 Start up safely	33
1.7.3 Starting the tractor with jump start cables	34
1.7.4 Checks to be carried out after start-up	35
1.8 Specific safety instructions for using the tractor	36
1.8.1 General instructions	36
1.8.2 Protection of persons other than the operator	37
1.8.3 Overturning	37
1.8.4 Tractor towing	40
1.8.5 Regulatory data on maximum permitted trailed weights	40
1.8.5.1 Drawbars and towing equipment	42
1.8.6 Road use	43
1.8.7 Instructions and Legislation for the Towing of Implements	45
1.8.8 Emergency hand brake (on models fitted with the ParkLock option)	46
1.8.9 Power take-off	46
1.8.10 Implements	47
1.8.11 Front-end loader	49
1.9 Specific safety instructions for servicing the tractor	51
1.9.1 Pollution warning to observe when servicing the tractor	51
1.9.2 General instructions	51
1.9.3 Handling instructions	52
1.9.4 Special instructions for cleaning the tractor	54
1.10 Protective structures	58
1.10.1 Protective structures - Use and accreditation	58
1.10.2 Cab	58
1.10.3 Seat belt	58

1.10.4 Instructor seat	59
1.11 Warranty	60
1.11.1 General	60
1.11.2 Pre-delivery inspection and commissioning on the user's premises	60
1.11.3 Warranty procedure	60
1.11.4 Procedure to follow if changing region	60
1.11.5 Servicing during and after the warranty period	61
2 Maintenance	63
2.1 Service Guide	67
2.1.1 Service guide	67
2.2 Operator environment	71
2.2.1 Air conditioning system: condenser	71
2.2.2 Air-conditioning system: Checking the air conditioning system	71
2.2.3 Cab air filter	71
2.2.3.1 Standard-roof air filter: Procedure	71
2.2.3.2 High-visibility-roof air filter: Procedure	72
2.2.4 Cab attachment	72
2.2.5 Windscreen washer	73
2.3 Engine	74
2.3.1 Recommended products	74
2.3.2 Fuel	75
2.3.3 Biodiesel fuel	76
2.3.4 AdBlue™ or DEF	78
2.3.5 6-cylinder SisuDiesel engine	79
2.3.6 Engine oil level check	79
2.3.6.1 Procedure	80
2.3.7 Draining the engine oil	80
2.3.8 Replacing the engine oil filter	81
2.3.9 Draining the Diesel Exhaust Fluid (DEF) tank	81
2.3.9.1 Procedure	81
2.3.10 Replacing the Diesel Exhaust Fluid (DEF) filter	82
2.3.10.1 Procedure	82
2.3.11 Fuel system: Fuel prefilter	85
2.3.11.1 Draining the water: Procedure	85
2.3.11.2 Replacing the filter element: Frequency	86
2.3.11.3 Replacing the filter element: Procedure	86
2.3.12 Fuel system: fuel filter	86
2.3.13 Checking and cleaning the fuel cooler	87
2.3.14 Fuel system: Water separator prefilter	87
2.3.14.1 Procedure for draining the water	88
2.3.14.2 Replacing the filter element: Frequency	88
2.3.14.3 Replacing the filter element: Procedure	88
2.3.15 Fuel system: bleeding	88
2.3.16 Fuel system: Injector pump, regulator and injectors	89
2.3.17 Fuel system: 3rd generation T4F SCR engine injection	89
2.3.18 Air filter	89
2.3.18.1 Cleaning and replacement of the main filter: Procedure	89
2.3.18.2 Cleaning and replacement of the secondary filter: Procedure	90
2.3.19 Cooling system	91
2.3.19.1 Checking the level and quality of the coolant	91
2.3.19.2 Filling to top up the coolant level	91
2.3.19.3 Draining the cooling system	92
2.3.19.4 Cleaning the radiator: Frequency	92
2.3.19.5 Procedure for cleaning the radiator	92
2.3.20 Check and replace the main fan/alternator Poly-V belt	93
2.3.20.1 Tension of the Poly-V main belt	93

2.3.20.2 Replacing the Poly-V main belt	94
2.3.21 Check and replace the air conditioning/alternator Poly-V accessories belt	94
2.3.21.1 Tension of the Poly-V accessories belt	94
2.3.21.2 Replacing the Poly-V accessory belt	95
2.3.22 Check and replace the air compressor (pneumatic braking) Poly-V accessories belt	95
2.3.22.1 Tension of the Poly-V accessories belt	96
2.3.22.2 Replacing the Poly-V accessory belt	96
2.4 Transmission	97
2.4.1 Recommended products	97
2.4.2 Checking the transmission oil level	97
2.4.2.1 Procedure	97
2.4.3 Draining the transmission oil	97
2.4.3.1 Procedure	97
2.4.4 Filtering the transmission hydraulic system	98
2.4.4.1 Procedure for replacing the filter strainer	98
2.4.4.2 Replacing the high-pressure filter: Frequency	98
2.4.4.3 Procedure for replacing the high-pressure filter	99
2.4.5 Checking the level of the rear final drive units	99
2.4.5.1 Procedure	99
2.4.6 Draining the rear final drives	99
2.4.6.1 Procedure	99
2.4.7 Checking and cleaning the transmission oil cooler	100
2.4.8 Lubricating the rear PTO shaft	100
2.5 Auxiliary hydraulics	101
2.5.1 Recommended products	101
2.5.2 Checking the auxiliary hydraulic system oil level	101
2.5.2.1 Procedure	101
2.5.3 Draining the auxiliary hydraulic system	102
2.5.3.1 Procedure	102
2.5.4 Filtering the auxiliary hydraulic system	103
2.5.4.1 Replacing the 15-micron return filter: Frequency	103
2.5.4.2 Replacing the 15-micron return filter: Procedure	103
2.5.4.3 Replacing the breather: Frequency	104
2.5.4.4 Replacing the breather: Procedure	104
2.6 Brakes	105
2.6.1 Recommended products	105
2.6.2 Checking the regulator filter	105
2.6.3 Bleeding the brake system	105
2.6.4 Compressed air system protection	106
2.6.4.1 Procedure	106
2.7 Front power take-off	108
2.7.1 Recommended products	108
2.7.2 Checking and cleaning the oil cooler of the front PTO	108
2.7.3 Draining oil	108
2.7.3.1 Procedure	108
2.7.4 Lubricating the front PTO shaft	109
2.8 Front axle and steering	110
2.8.1 Recommended products	110
2.8.2 4-wheel drive front axle: Checking the front axle beam oil level	110
2.8.2.1 Procedure	110
2.8.3 4-wheel drive front axle: Draining the front axle beam oil	110
2.8.3.1 Procedure	110
2.8.4 4-wheel drive front axle: Checking the oil level in the final drives	111
2.8.4.1 Procedure	111
2.8.5 Draining the oil from the final drives of the 4-wheel drive front axle	111
2.8.5.1 Procedure	111

2.8.6	Lubrication of the 4-wheel drive front axle	112
2.9	Rear linkage	113
2.9.1	Recommended products	113
2.9.2	Lubricating the linkage shaft	113
2.9.2.1	Procedure	113
2.9.3	Lubricating the three-point linkage	113
2.10	Front linkage	116
2.10.1	Recommended products	116
2.10.2	Lubricating the front linkage	116
2.11	Towing equipment	118
2.11.1	Recommended products	118
2.11.2	Ball hitch: lubrication	118
2.11.3	4-wheel trailer clevis hitch: lubrication	118
2.11.4	Auto-hitch: lubrication	120
2.12	Electrical equipment	122
2.12.1	Batteries	122
2.12.2	Alternator	122
2.12.3	Power socket (ISO)	123
2.12.4	Adjusting the headlights	124
2.12.5	Description of the main fuse box	125
2.12.6	Description of the secondary fuse box (depending on model)	135
2.12.7	Description of the secondary fuse box (depending on model)	139
2.12.8	Battery isolator	143
2.13	Pressure washing	145
2.13.1	Pressure washing	145
2.14	Storing your tractor	146
2.14.1	Storing your tractor	146
2.14.2	Storing the Diesel Exhaust Fluid (DEF)	146
2.15	Faults and solutions	147
2.15.1	General table of faults	147
2.15.2	Indicator light panel	150
2.15.3	Indication of faults	158
2.15.4	Description of error code format	161
2.15.5	Instrument panel error codes Dyna-VT	162
2.15.6	AGCO Power Tier 3/Stage IIIA engine and Tier 4F/Stage IV SCR Technology engine error codes	164
2.15.7	Dyna-VT transmission error codes	179
2.15.8	ParkLock error codes	183
2.15.9	Front axle error codes Dyna-VT	184
2.15.10	Rear power take-off error codes Dyna-VT	184
2.15.11	Error codes for the high-pressure braking	186
2.15.12	Rear linkage error codes	187
2.15.13	Front power lift error codes	188
2.15.14	Armrest error codes	188
2.15.15	Hydraulic valve error codes	190
2.15.16	Air conditioning error codes	191
2.15.17	Error codes of the keypad in the pillar	193
2.15.18	Suspended cab error codes	193
3	Technical specifications	195
3.1	General specifications	197
3.1.1	Model MF 7720 S Dyna-VT	197
3.1.2	Model MF 7722 S Dyna-VT	198
3.1.3	Model MF 7724 S Dyna-VT	199
3.1.4	Model MF 7726 S Dyna-VT	200
3.2	Operator environment	202

3.2.1	Noise levels (dB(A))	202
3.2.2	Level of vibration felt through the seat	202
3.3	Engine	203
3.3.1	Engine specifications	203
3.3.2	Fuel system and air filter	204
3.3.3	Cooling	204
3.3.4	Tightening torques	204
3.4	Transmission	205
3.4.1	Forward speed for all models with Dyna-VT transmission	205
3.4.2	Gearbox	205
3.4.3	Final drives	205
3.4.4	Rear differential lock	205
3.5	Brakes	206
3.5.1	Brake system technical specifications	206
3.6	Front axle and steering	207
3.6.1	Four-wheel drive front axle	207
3.6.2	Steering	207
3.7	Power take-off	208
3.7.1	Specifications	208
3.7.2	Tightening torques	209
3.8	Linkage	210
3.8.1	Front linkage	210
3.8.2	Rear linkage	210
3.9	Auxiliary hydraulics	211
3.9.1	Hydraulic system	211
3.10	Electrical equipment	212
3.10.1	Electrical equipment technical specifications	212
3.10.2	Layout of components	212
3.11	Wheels and tires	214
3.11.1	Rims	214
3.11.2	Tires	214
3.11.3	Tires, front/rear compatibility	214
3.11.4	Tightening torques	214
3.12	Capacities and dimensions	216
3.12.1	Capacities for models with a Tier 4F/Stage IV SCR Technology engine	216
3.12.2	Dimensions and weights	217
3.12.3	Attachment points: Dyna-VT models without front linkage	221
3.12.4	Attachment points: Dyna-VT models with 4 t front linkage (Imperial: 4.4 US ton)	222
4	Accessories	225
4.1	Cab	227
4.1.1	Cab accessories	227
4.2	Engine	228
4.2.1	Engine accessories	228
4.3	Power take-off	229
4.3.1	Power take-off accessories	229
4.4	Linkage	230
4.4.1	Linkage accessories	230
4.5	Auxiliary hydraulics	231
4.5.1	Auxiliary hydraulics accessories	231
4.6	Wheels and tires	232
4.6.1	Wheels and tires accessories	232

1. Safety instructions and safety points - Warranty

1.1 Introduction	13
1.1.1 Introduction - Safety instructions	13
1.2 Safety — Symbols and terms	15
1.2.1 Safety — Symbols and terms	15
1.3 Safety decals and instructions	16
1.3.1 Checking and replacing the safety decals and instructions	16
1.3.2 Presentation and location of the safety decals and instructions	17
1.4 General safety instructions	22
1.4.1 Awareness of the safety instructions and symbols	22
1.4.2 Operator familiarity in the use of the tractor	22
1.4.3 Filling the fuel tank	23
1.4.4 Mounting and dismounting the operator's seat	23
1.4.5 Risk of burns	24
1.4.6 Prevention of accidents caused by lightning	24
1.4.7 Mandatory procedure before dismounting the tractor	24
1.5 Special instructions	26
1.5.1 Specific recommendations for agricultural and forestry tractors	26
1.6 Special safety instructions for preparing the tractor for use	28
1.6.1 Protective clothing	28
1.6.2 Activated carbon filter information	28
1.6.3 Safety devices and items	31
1.6.4 Checking the tractor	31
1.7 Specific safety instructions for starting the tractor	33
1.7.1 Protection of persons other than the operator	33
1.7.2 Start up safely	33
1.7.3 Starting the tractor with jump start cables	34
1.7.4 Checks to be carried out after start-up	35
1.8 Specific safety instructions for using the tractor	36
1.8.1 General instructions	36
1.8.2 Protection of persons other than the operator	37
1.8.3 Overturning	37
1.8.4 Tractor towing	40
1.8.5 Regulatory data on maximum permitted trailed weights	40
1.8.5.1 Drawbars and towing equipment	42
1.8.6 Road use	43
1.8.7 Instructions and Legislation for the Towing of Implements	45
1.8.8 Emergency hand brake (on models fitted with the ParkLock option)	46
1.8.9 Power take-off	46
1.8.10 Implements	47
1.8.11 Front-end loader	49
1.9 Specific safety instructions for servicing the tractor	51
1.9.1 Pollution warning to observe when servicing the tractor	51
1.9.2 General instructions	51
1.9.3 Handling instructions	52
1.9.4 Special instructions for cleaning the tractor	54
1.10 Protective structures	58
1.10.1 Protective structures - Use and accreditation	58

1.10.2 Cab	58
1.10.3 Seat belt	58
1.10.4 Instructor seat	59
1.11 Warranty	60
1.11.1 General	60
1.11.2 Pre-delivery inspection and commissioning on the user's premises	60
1.11.3 Warranty procedure	60
1.11.4 Procedure to follow if changing region	60
1.11.5 Servicing during and after the warranty period	61

1.1 Introduction

1.1.1 Introduction - Safety instructions

Operator's Manual

NOTE: *This Operator's Manual is widely published and distributed and the availability of the attachments indicated, whether fitted to the basic tractor or as an accessory, may vary depending on the country or region in which the tractor is used. To find out which attachments are available in a given region, contact a Massey Ferguson dealer.*

The purpose of this manual is to enable the owner and the operator to operate the tractor appropriately under normal conditions of use. Providing they follow the instructions carefully, the tractor will give many years of service in the Massey Ferguson tradition.

Use for any other activity (particularly forestry work) is considered to be contrary to the intended use.

The commissioning of equipment by the Massey Ferguson dealer on the user's premises enables the dealer to ensure that these operating and service instructions are properly understood. Always consult the Massey Ferguson dealer if there is any part of this manual that you do not understand. It is important that these instructions are understood and followed.

This manual does not cover all operation and safety instructions relevant to the implements and accessories that may be fitted at the time of tractor delivery or later. It is essential that operators use and understand the Operator's Manuals relating to these implements and accessories.

IMPORTANT: *This manual must always be kept with the tractor. For extra copies, contact your Massey Ferguson dealer.*

This chapter in the Operator's Manual highlights certain basic safety-related situations that may be encountered during normal operation and servicing of the tractor and provides the information needed to handle these situations.

This chapter supplements any safety instructions given in other chapters of this manual.

It may be necessary to take additional precautions, depending on the implements and accessories used and the working conditions on-site or in the service area. Massey Ferguson can under no circumstances exercise direct control over the commissioning, operation, inspection, lubrication or servicing of the tractor. It is therefore YOUR responsibility to take suitable safety precautions in such areas.



WARNING:

It is your responsibility to read and understand the instructions that appear in this chapter before using the tractor.

They must then be strictly adhered to throughout the working day.

Servicing, spare parts, accessories and conditions of use

Daily servicing should become a routine, and a logbook of operating hours should be kept.

When spare parts are required, it is important to use only genuine Massey Ferguson parts. Massey Ferguson dealers supply genuine parts and can offer advice concerning their fitting and use. The use of lower quality parts may cause serious damage. Customers are advised only to purchase their spare parts from an approved Massey Ferguson dealer. In the same way, you must only use accessories specifically adapted to your tractor.

Owing to the considerable variation in operating conditions, it is not possible for the manufacturer to formulate complete or absolute assertions in its publications concerning the performance or operating methods of its machines or to accept liability for any loss or damage which may result from such assertions or possible errors or omissions.

If the tractor is to be used in abnormal conditions which could cause damage (use in deep water or in paddy fields for instance), you should consult your Massey Ferguson dealer to obtain special instructions to prevent the warranty from becoming void.

These tractors are designed only for usual farming activities (intended use). Use for any other activity (particularly forestry work) is considered to be contrary to the intended use.

Strict compliance with the repairs, service and operating conditions as specified by Massey Ferguson is also an essential component of the intended use.

IMPORTANT: *Massey Ferguson accepts no responsibility in the event of damage to equipment or personal injury resulting from improper use.*

The tractor must only be used, serviced and repaired by personnel who have full knowledge of its specific features and who are aware of the applicable safety measures (prevention of accidents).

Customers are strongly advised to contact a Massey Ferguson dealer in the event of after-sales problems and for any adjustments which may be necessary.

1.2 Safety – Symbols and terms

1.2.1 Safety – Symbols and terms

Signal



This safety alert symbol means **CAUTION! BE ALERT! YOUR SAFETY DEPENDS ON IT!**

The safety alert symbol identifies important safety notices on machines, safety signs, in instruction books or elsewhere. When you see this symbol, be alert to the risk of injury or death. Follow the instructions in the safety notice.

SAFETY is paramount! Why?

- ACCIDENTS DISABLE AND KILL
- ACCIDENTS ARE COSTLY
- ACCIDENTS CAN BE AVOIDED

Terms

The terms **DANGER**, **WARNING** and **CAUTION** are used with the safety alert symbol. It is essential to learn how to recognize these safety messages and to follow the recommended safety measures and instructions.



DANGER:

indicates an imminently hazardous situation which, if not avoided, will result in DEATH or VERY SERIOUS INJURY.



WARNING:

indicates a potentially hazardous situation which, if not avoided, could result in DEATH or SERIOUS INJURY.



CAUTION:

indicates a potentially hazardous situation which, if not avoided, may result in MINOR or MODERATE INJURY.

The terms **IMPORTANT** and **NOTE** are not directly related to personal safety, but are used to provide additional information and advice on the operation or maintenance of equipment.

IMPORTANT: *identifies specific instructions or procedures which, if not strictly applied, could damage or destroy the tractor, its equipment or the surrounding area.*

NOTE: *identifies points of particular interest for the most effective and suitable operation or repair.*



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

1.3 Safety decals and instructions

1.3.1 Checking and replacing the safety decals and instructions



WARNING:

Never remove or obscure the safety decals and instructions.

Replace any safety decals and instructions that are illegible or missing. Replacement decals are available from the dealer in the event of loss or damage. If a second-hand tractor has been purchased, check that all safety and instruction decals are correct, legible and in the correct location: To do this, refer to the section on the presentation and location of decals.

1.3.2 Presentation and location of the safety decals and instructions

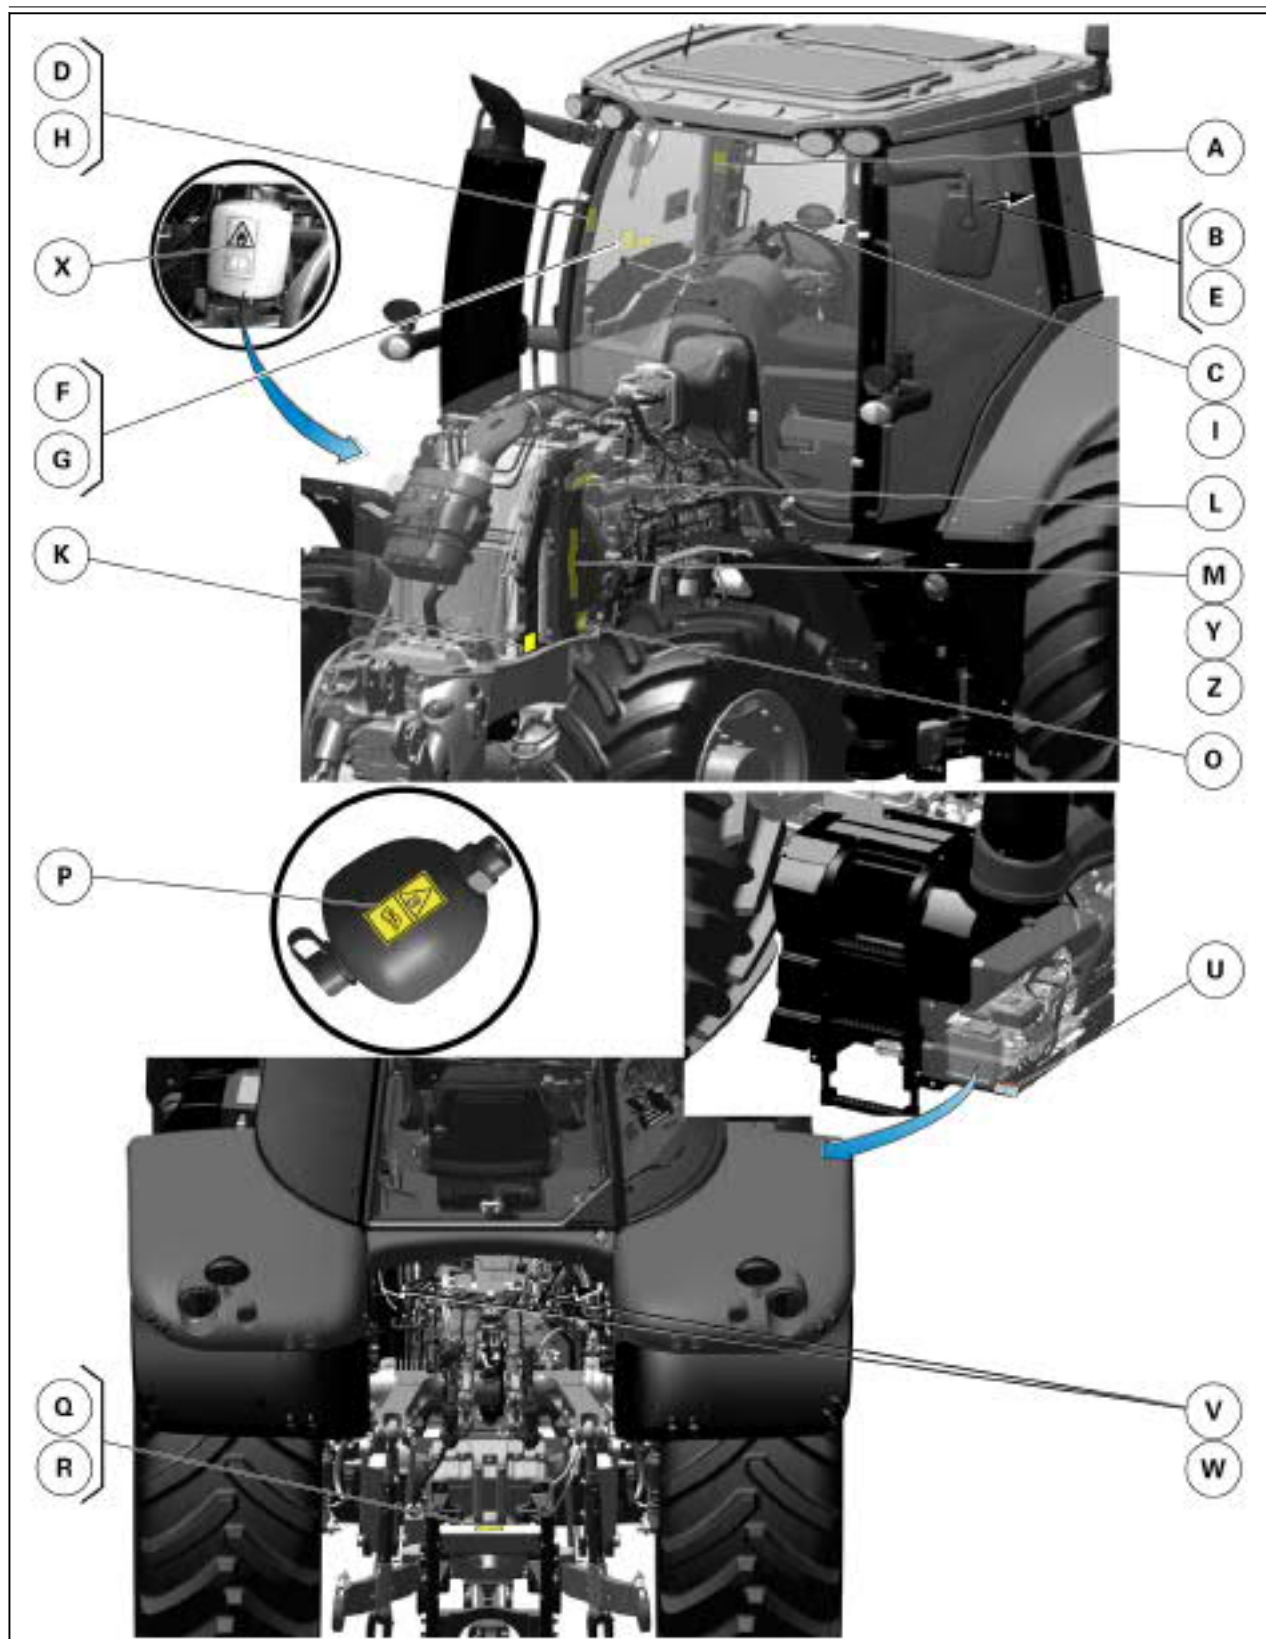


Fig. 1

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>