


Operator's Manual

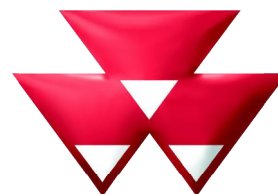

MASSEY FERGUSON

MF 7700 S - Operation

Versions Deluxe and Premium

MF 7720 S

MF 7722 S

MF 7724 S

MF 7726 S



Dyna-VT

Beauvais

AGCO S.A.S. - 41 avenue Blaise Pascal - 60000

Beauvais - France - RC B562 104 539

© AGCO 2017

Original Operator's Manual

September 2017

ACT0033780

NA

English

MF 7700 S - Operation

1 Tractor identification	11
1.1 Locating serial numbers	13
1.1.1 Locating serial numbers	13
1.2 Your tractor identification details	14
1.2.1 Your tractor identification details	14
2 Safety instructions and safety points - Warranty	15
2.1 Introduction	17
2.1.1 Introduction - Safety instructions	17
2.2 Safety — Symbols and terms	19
2.2.1 Safety — Symbols and terms	19
2.3 Safety decals and instructions	20
2.3.1 Checking and replacing the safety decals and instructions	20
2.3.2 Presentation and location of the safety decals and instructions	21
2.4 General safety instructions	26
2.4.1 Awareness of the safety instructions and symbols	26
2.4.2 Operator familiarity in the use of the tractor	26
2.4.3 Filling the fuel tank	27
2.4.4 Mounting and dismounting the operator's seat	27
2.4.5 Mandatory procedure before dismounting the tractor	28
2.5 Special safety instructions for preparing the tractor for use	29
2.5.1 Protective clothing	29
2.5.2 Activated carbon filter information	29
2.5.3 Safety devices and items	32
2.5.4 Checking the tractor	32
2.6 Specific safety instructions for starting the tractor	34
2.6.1 Protection of persons other than the operator	34
2.6.2 Start up safely	34
2.6.3 Starting the tractor with jump start cables	35
2.6.4 Checks to be carried out after start-up	36
2.7 Specific safety instructions for using the tractor	37
2.7.1 General instructions	37
2.7.2 Protection of persons other than the operator	38
2.7.3 Overturning	38
2.7.4 Tractor towing	41
2.7.5 Regulatory data on maximum permitted trailed weights	41
2.7.6 Road use	43
2.7.7 Parking brake	44
2.7.8 Power take-off	44
2.7.9 Implements	45
2.7.10 Front-end loader	47
2.8 Specific safety instructions for servicing the tractor	49
2.8.1 Pollution warning to observe when servicing the tractor	49
2.8.2 General instructions	49
2.8.3 Handling instructions	50
2.8.4 Special instructions for cleaning the tractor	52
2.9 Protective structures	53
2.9.1 Protective structures - Use and accreditation	53
2.9.2 Cab	53
2.9.3 Seat belt	53

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

2.9.4 Instructor seat	54
2.10 Warranty	55
2.10.1 General	55
2.10.2 Pre-delivery inspection and commissioning on the user's premises	55
2.10.3 Warranty procedure	55
2.10.4 Procedure to follow if changing region	55
2.10.5 Servicing during and after the warranty period	56
2.10.6 California emission control warranty statement	56
2.10.7 Emission reduction warranty statement for the United States and Canada	59
3 Operation	65
3.1 Operator environment	69
3.1.1 Steering console	69
3.1.2 Instrument panel	70
3.1.3 Control unit	77
3.1.4 Pedals	77
3.1.5 Steering wheel	78
3.1.6 Operator presence detector	78
3.1.7 Automatic adjustment pneumatic seat	81
3.1.8 Instructor seat	87
3.1.9 Right-hand console	88
3.1.10 Command Control Armrest	88
3.1.11 Right-hand pillar	91
3.1.12 Left-hand console	92
3.1.13 Upper console	93
3.1.14 Manual air conditioning	95
3.1.15 Automatic air conditioning	100
3.1.16 Additional heater	106
3.1.17 Accessories sockets	107
3.1.18 Emergency exits	109
3.1.19 Sun visor	110
3.1.20 Roof hatch	110
3.1.21 Wheel chock(s) (optional)	111
3.2 Setup and Information Screen control screens on the instrument panel	113
3.2.1 Using the Setup and Information Screen	113
3.2.2 Screens Setup and Information Screen	115
3.3 Body	123
3.3.1 Opening the bonnet	123
3.3.2 Adjusting the external rear-view mirrors	123
3.3.2.1 Positioning the arms	123
3.3.2.2 Rear-view mirror with manual adjustment	123
3.3.2.3 Adjusting the arm extensions (depending on model)	124
3.3.2.4 Rear-view mirror with electric adjustment	124
3.3.3 Adjusting the double-angle rear-view mirror	125
3.3.3.1 Positioning and extending the arms	125
3.3.3.2 Rear-view mirror with manual adjustment	126
3.3.3.3 Rear-view mirror with electric adjustment	126
3.3.4 Adjusting the left-hand step	127
3.4 Engine	129
3.4.1 Running-in	129
3.4.2 Filling with fuel	129
3.4.3 Start switch	131
3.4.4 Start-up	131
3.4.5 Starting the SCR Technology engine in cold weather	132
3.4.6 Information on the different operating modes of the Tier 4F/Stage IV SCR Technology engine	134

3.4.7 Stopping the engine	139
3.4.8 Engine speed	139
3.4.9 Storing engine speeds	141
3.5 Transmission	143
3.5.1 Presentation of the different driving modes	143
3.5.2 Clutch function	143
3.5.3 PowerShuttle	145
3.5.4 Setting start-up speeds	148
3.5.4.1 Start speeds	148
3.5.5 Storage of forward speeds	149
3.5.6 Engine underspeed supervisor	151
3.5.7 Lever mode	152
3.5.8 Pedal mode	154
3.5.8.1 Pedal Mode in winter conditions (on frozen or snow-covered ground)	156
3.5.9 Self-propelled mode	157
3.5.10 Road mode (Hare)/Field mode (Tortoise)	158
3.5.11 Changing forward speed	159
3.5.12 Tractor towing	159
3.5.12.1 Towing procedure:	160
3.5.13 Tractor limp home mode	160
3.5.14 Forward speed calibration	163
3.6 Brakes	165
3.6.1 Brake pedals	165
3.6.2 Hydraulic trailer brake	165
3.6.3 Pneumatic trailer brake	166
3.6.4 Electromechanically controlled brake on the steering column (ParkLock)	167
3.6.4.1 ParkLock engaged	168
3.6.4.2 Disengagement of the ParkLock	168
3.6.4.3 Manual disengagement of the ParkLock	168
3.6.5 Park brake	169
3.7 Steering	171
3.7.1 Steering	171
3.8 Front axle	174
3.8.1 Four-wheel drive front axle	174
3.8.2 Suspended front axle	175
3.8.3 Permissible load on the front axle	177
3.9 Differential lock	180
3.9.1 Differential lock	180
3.10 Power take-off	182
3.10.1 Front power take-off	182
3.10.2 Rear power take-off (PTO)	182
3.10.2.1 Selecting the power take-off speed	183
3.10.2.2 Engaging PTO in manual mode:	184
3.10.2.3 Engaging PTO in automatic mode:	184
3.10.3 Economy PTO	185
3.10.4 Changing the flanged shaft	186
3.10.4.1 Changing the shaft	186
3.10.5 PTO external control	187
3.10.6 Power take-off electronic controls	188
3.10.7 Power take-off protection	188
3.11 Linkage	190
3.11.1 General	190
3.11.2 Rear linkage electronic controls	190
3.11.3 Rear linkage operation	192
3.11.4 Rear linkage external controls	197
3.11.5 Front linkage	198
3.11.6 Top link	202

3.11.7	Bottom links	205
3.11.8	Lift rods	206
3.11.9	Stabilizers	207
3.11.9.1	Stabilizers with manual telescopic adjustment	207
3.11.9.2	Automatic stabilizers	209
3.11.9.3	Stabilizers with shoes	209
3.11.10	Ball joint support	210
3.12	Towing equipment	211
3.12.1	General	211
3.12.2	SAE standard	212
3.12.2.1	Fitting the swinging drawbar	215
3.12.2.2	Hitching an attachment	216
3.12.2.3	Modifying the clevis on the category 3 bar	216
3.12.3	Three-point linkage: Quick linkage hitch	216
3.12.3.1	Fitting	217
3.12.3.2	Transformation to category 3N	218
3.13	Auxiliary hydraulics	219
3.13.1	General	219
3.13.2	Description of hydraulic couplers on Closed Center system (Load Sensing)	219
3.13.3	Use of hydraulic couplers on Closed Center system (Load Sensing)	221
3.13.4	Auxiliary hydraulics locking/unlocking	226
3.13.5	Hydraulics control lever	227
3.13.6	Description and use of the cab controls	228
3.13.7	Description and use of the external controls	235
3.13.8	Setting flow rates and time delay	235
3.13.9	Emergency manual spool valve control	237
3.14	Front-end loader function	238
3.14.1	Front-end loader	238
3.14.2	Layout of components	239
3.14.3	Standard front-end loader connection	239
3.14.4	Using the electric joystick of the standard front-end loader	240
3.14.4.1	Joystick functions for the standard front-end loader	241
3.14.4.2	Floating position with the standard front-end loader	241
3.14.4.3	Displaying the flow rates of the standard front-end loader	242
3.14.4.4	Arm suspension on the standard front-end loader	243
3.14.4.5	Locking and unlocking standard front-end loader accessories	244
3.14.4.6	Standard front-end loader/engine speed automation	244
3.14.4.7	3rd and 4th functions of the standard front-end loader	245
3.14.4.8	Automatic shaking function of the standard front-end loader implement	245
3.15	Front-end loader function with 3rd function option	246
3.15.1	Front-end loader	246
3.15.2	Layout of components	247
3.15.3	Front-end loader connection with 3rd function option	247
3.15.4	Using the front-end loader electric joystick with the 3rd function option	248
3.15.4.1	Joystick functions for the front-end loader with the 3rd function option	249
3.15.4.2	Floating position of the front-end loader with the 3rd function option	249
3.15.4.3	Displaying the front-end loader flow rates with the 3rd function option	250
3.15.4.4	Arm suspension on the front-end loader with the 3rd function option	252
3.15.4.5	Locking and unlocking front-end loader accessories with the 3rd function option	252
3.15.4.6	Front-end loader/engine speed automation with the 3rd function option	253
3.15.4.7	Automatic shaking function for the front-end loader implement with the 3rd function option	253
3.15.4.8	Unhitching the front-end loader with the 3rd function option	253
3.16	Lighting	255
3.16.1	Main lighting control module	255
3.16.2	Work lights module	256

3.16.3	Direction indicators	257
3.17	Suspended cab	261
3.17.1	Suspended cab	261
3.18	Front tires and track widths	264
3.18.1	Wheel studs	264
3.18.2	Installation points of the axle stands	264
3.18.3	Adjusting the front wheel track width	265
3.18.4	Adjusting the 4WD front axle stops	268
3.18.4.1	Fitting the oscillation stops	268
3.18.4.2	Adjusting the steering angle	268
3.18.4.3	Toe-in check	269
3.18.4.4	Adjusting the front fenders Adjusting the lateral position of the fender on the support (two adjustments are possible)	269
3.18.4.5	Adjusting the front fenders Shoe side adjustment on the front axle	270
3.18.4.6	Adjusting the front fenders Adjusting the height of the support on the shoe	270
3.18.5	Tires	270
3.18.6	Tire pressures	270
3.19	Rear tires and track widths	271
3.19.1	Wheel studs	271
3.19.2	Installation points of the axle stands	271
3.19.3	Rear track width with flanged shafts	272
3.19.4	Rear track width with short straight shafts	274
3.19.5	Rear track width with long straight shafts	276
3.19.6	Adjusting the rear wheel track width	279
3.19.6.1	Adjustment of wheel position on the straight shaft	280
3.19.6.2	Adjustment of wheel position on the straight shaft	280
3.20	Dual wheels	282
3.20.1	Dual wheels	282
3.20.2	Installation points of the axle stands	283
3.20.3	Dual rear wheel track width with short straight shafts	284
3.20.4	Dual rear wheel track width with long straight shafts	289
3.21	Ballast	295
3.21.1	Liquid ballasting	295
3.21.2	Front-end weight	295
4	Accessories	299
4.1	Cab	301
4.1.1	Cab accessories	301
4.2	Engine	302
4.2.1	Engine accessories	302
4.3	Power take-off	303
4.3.1	Power take-off accessories	303
4.4	Linkage	304
4.4.1	Linkage accessories	304
4.5	Auxiliary hydraulics	305
4.5.1	Auxiliary hydraulics accessories	305
4.6	Wheels and tires	306
4.6.1	Wheels and tires accessories	306

1. Tractor identification

1.1 Locating serial numbers	13
1.1.1 Locating serial numbers	13
1.2 Your tractor identification details	14
1.2.1 Your tractor identification details	14

1.1 Locating serial numbers

1.1.1 Locating serial numbers

IMPORTANT:

Please quote the serial number of your tractor in all correspondence with your dealer or agent.

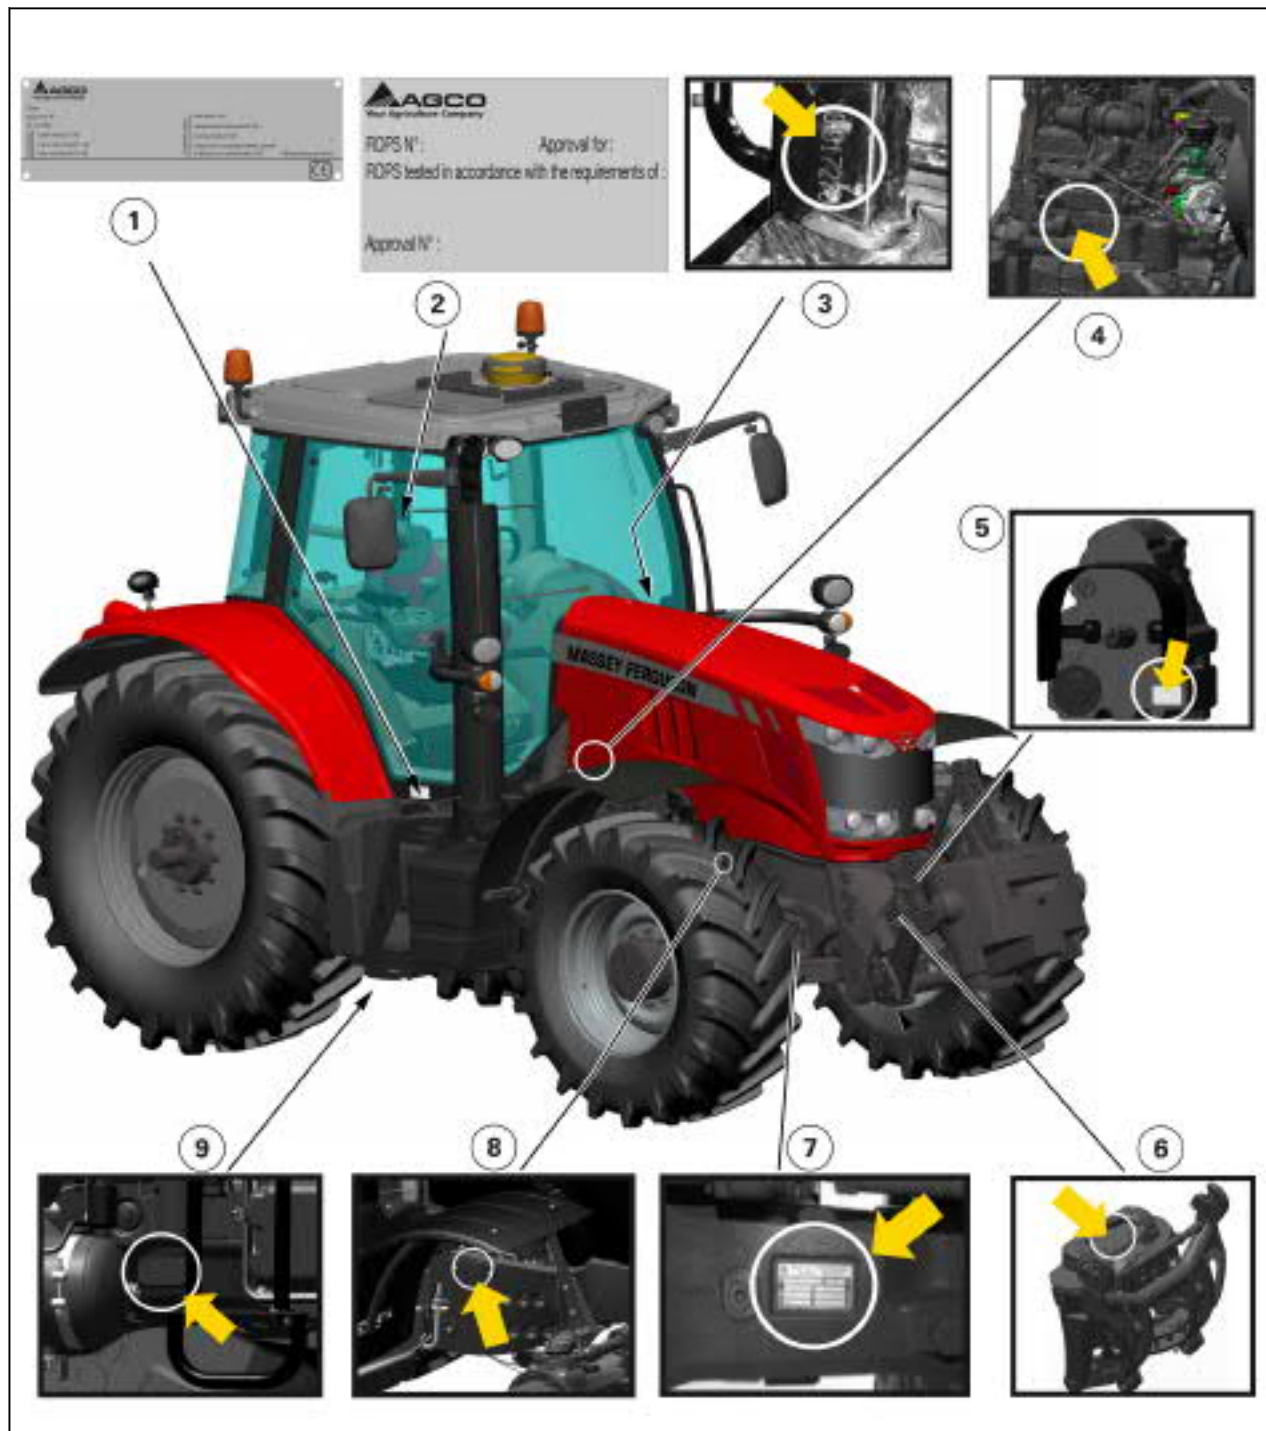


Fig. 1

- | | |
|---|--|
| (1) Name plate with serial number | (6) Front linkage serial number |
| (2) Homologation plate (according to country) | (7) Front axle serial number |
| (3) Cab serial number | (8) Chassis number |
| (4) AGCO Power engine serial number | (9) Dyna-VT transmission serial number |
| (5) Front PTO serial number | |

2. Safety instructions and safety points - Warranty

2.1 Introduction	17
2.1.1 Introduction - Safety instructions	17
2.2 Safety — Symbols and terms	19
2.2.1 Safety — Symbols and terms	19
2.3 Safety decals and instructions	20
2.3.1 Checking and replacing the safety decals and instructions	20
2.3.2 Presentation and location of the safety decals and instructions	21
2.4 General safety instructions	26
2.4.1 Awareness of the safety instructions and symbols	26
2.4.2 Operator familiarity in the use of the tractor	26
2.4.3 Filling the fuel tank	27
2.4.4 Mounting and dismounting the operator's seat	27
2.4.5 Mandatory procedure before dismounting the tractor	28
2.5 Special safety instructions for preparing the tractor for use	29
2.5.1 Protective clothing	29
2.5.2 Activated carbon filter information	29
2.5.3 Safety devices and items	32
2.5.4 Checking the tractor	32
2.6 Specific safety instructions for starting the tractor	34
2.6.1 Protection of persons other than the operator	34
2.6.2 Start up safely	34
2.6.3 Starting the tractor with jump start cables	35
2.6.4 Checks to be carried out after start-up	36
2.7 Specific safety instructions for using the tractor	37
2.7.1 General instructions	37
2.7.2 Protection of persons other than the operator	38
2.7.3 Overturning	38
2.7.4 Tractor towing	41
2.7.5 Regulatory data on maximum permitted trailed weights	41
2.7.6 Road use	43
2.7.7 Parking brake	44
2.7.8 Power take-off	44
2.7.9 Implements	45
2.7.10 Front-end loader	47
2.8 Specific safety instructions for servicing the tractor	49
2.8.1 Pollution warning to observe when servicing the tractor	49
2.8.2 General instructions	49
2.8.3 Handling instructions	50
2.8.4 Special instructions for cleaning the tractor	52
2.9 Protective structures	53
2.9.1 Protective structures - Use and accreditation	53
2.9.2 Cab	53
2.9.3 Seat belt	53
2.9.4 Instructor seat	54
2.10 Warranty	55
2.10.1 General	55
2.10.2 Pre-delivery inspection and commissioning on the user's premises	55

2.10.3	Warranty procedure	55
2.10.4	Procedure to follow if changing region	55
2.10.5	Servicing during and after the warranty period	56
2.10.6	California emission control warranty statement	56
2.10.7	Emission reduction warranty statement for the United States and Canada	59

2.1 Introduction

2.1.1 Introduction - Safety instructions

Operator's Manual

NOTE: *This Operator's Manual is widely published and distributed and the availability of the attachments indicated, whether fitted to the basic tractor or as an accessory, may vary depending on the country or region in which the tractor is used. To find out which attachments are available in a given region, contact a Massey Ferguson dealer.*

The purpose of this manual is to enable the owner and the operator to operate the tractor appropriately under normal conditions of use. Providing they follow the instructions carefully, the tractor will give many years of service in the Massey Ferguson tradition.

Use for any other activity (particularly forestry work) is considered to be contrary to the intended use.

The commissioning of equipment by the Massey Ferguson dealer on the user's premises enables the dealer to ensure that these operating and service instructions are properly understood. Always consult the Massey Ferguson dealer if there is any part of this manual that you do not understand. It is important that these instructions are understood and followed.

This manual does not cover all operation and safety instructions relevant to the implements and accessories that may be fitted at the time of tractor delivery or later. It is essential that operators use and understand the Operator's Manuals relating to these implements and accessories.

IMPORTANT: *This manual must always be kept with the tractor. For extra copies, contact your Massey Ferguson dealer.*

This chapter in the Operator's Manual highlights certain basic safety-related situations that may be encountered during normal operation and servicing of the tractor and provides the information needed to handle these situations.

This chapter supplements any safety instructions given in other chapters of this manual.

It may be necessary to take additional precautions, depending on the implements and accessories used and the working conditions on-site or in the service area. Massey Ferguson can under no circumstances exercise direct control over the commissioning, operation, inspection, lubrication or servicing of the tractor. It is therefore YOUR responsibility to take suitable safety precautions in such areas.



WARNING:

It is your responsibility to read and understand the instructions that appear in this chapter before using the tractor.

They must then be strictly adhered to throughout the working day.

Servicing, spare parts, accessories and conditions of use

Daily servicing should become a routine, and a logbook of operating hours should be kept.

When spare parts are required, it is important to use only genuine Massey Ferguson parts. Massey Ferguson dealers supply genuine parts and can offer advice concerning their fitting and use. The use of lower quality parts may cause serious damage. Customers are advised only to purchase their spare parts from an approved Massey Ferguson dealer. In the same way, you must only use accessories specifically adapted to your tractor.

Owing to the considerable variation in operating conditions, it is not possible for the manufacturer to formulate complete or absolute assertions in its publications concerning the performance or operating methods of its machines or to accept liability for any loss or damage which may result from such assertions or possible errors or omissions.

If the tractor is to be used in abnormal conditions which could cause damage (use in deep water or in paddy fields for instance), you should consult your Massey Ferguson dealer to obtain special instructions to prevent the warranty from becoming void.



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

These tractors are designed only for usual farming activities (intended use). Use for any other activity (particularly forestry work) is considered to be contrary to the intended use.

Strict compliance with the repairs, service and operating conditions as specified by Massey Ferguson is also an essential component of the intended use.

IMPORTANT: *Massey Ferguson accepts no responsibility in the event of damage to equipment or personal injury resulting from improper use.*

The tractor must only be used, serviced and repaired by personnel who have full knowledge of its specific features and who are aware of the applicable safety measures (prevention of accidents).

Customers are strongly advised to contact a Massey Ferguson dealer in the event of after-sales problems and for any adjustments which may be necessary.

2.2 Safety – Symbols and terms

2.2.1 Safety – Symbols and terms

Signal



This safety alert symbol means **CAUTION! BE ALERT! YOUR SAFETY DEPENDS ON IT!**

The safety alert symbol identifies important safety notices on machines, safety signs, in instruction books or elsewhere. When you see this symbol, be alert to the risk of injury or death. Follow the instructions in the safety notice.

SAFETY is paramount! Why?

- ACCIDENTS DISABLE AND KILL
- ACCIDENTS ARE COSTLY
- ACCIDENTS CAN BE AVOIDED

Terms

The terms **DANGER**, **WARNING** and **CAUTION** are used with the safety alert symbol. It is essential to learn how to recognize these safety messages and to follow the recommended safety measures and instructions.



DANGER:

indicates an imminently hazardous situation which, if not avoided, will result in DEATH or VERY SERIOUS INJURY.



WARNING:

indicates a potentially hazardous situation which, if not avoided, could result in DEATH or SERIOUS INJURY.



CAUTION:

indicates a potentially hazardous situation which, if not avoided, may result in MINOR or MODERATE INJURY.

The terms **IMPORTANT** and **NOTE** are not directly related to personal safety, but are used to provide additional information and advice on the operation or maintenance of equipment.

IMPORTANT: *identifies specific instructions or procedures which, if not strictly applied, could damage or destroy the tractor, its equipment or the surrounding area.*

NOTE: *identifies points of particular interest for the most effective and suitable operation or repair.*

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>