


Operator's Manual

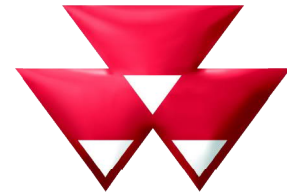

MASSEY FERGUSON

MF 8700 - Maintenance



Beauvais
AGCO S.A.S. - 41 avenue Blaise Pascal - 60000
Beauvais - France - RC B562 104 539
© AGCO 2016
Original Operator's Manual

June 2016
ACT0026460
EAME
English

Foreword

We would like to welcome you to the ever-growing number of people who own a Massey Ferguson tractor; people who appreciate quality. We are proud of every tractor that leaves our factories, each being technically advanced and of a high quality.

This Operator's Manual contains the specifications for your new tractor. Please ensure that all operators read the instructions and follow them carefully. The pages that follow contain vital information on your tractor; please read them carefully.

This Operator's Manual contains the specifications for your new equipment. Please ensure that all operators read the instructions and follow them carefully. This will allow you to benefit from a long service life with complete safety and peace of mind. The pages that follow contain vital information about your new equipment; please read them carefully.

Your Massey Ferguson dealer will guarantee you quality servicing and will provide you with all the assistance you need. When it comes to servicing, remember that your dealer knows your tractor best and that he wants you to be completely satisfied.

Your Massey Ferguson dealer will guarantee you all the assistance you need.

Please leave this Operator's Manual in the tractor if resold. The subsequent owner will need the information it contains.

All information and specifications in this manual are up to date at the time of publication. However, our ongoing policy to improve our products obliges us to reserve the right to make alterations at any time without notice.

Please note that this manual relates to all models and refers to both standard and optional equipment. You may therefore find details relating to equipment that is not fitted on your tractor.

This Operator's Manual complies with Directive 2010/52 EC.

Massey Ferguson

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

MF 8700 - Maintenance

1 Safety instructions and safety points - Warranty	11
1.1 Introduction	13
1.1.1 Introduction - Safety instructions	13
1.2 Safety — Symbols and terms	15
1.2.1 Safety — Symbols and terms	15
1.3 Safety decals and instructions	16
1.3.1 Checking and replacing the safety decals and instructions	16
1.3.2 Presentation and location of the safety decals and instructions	17
1.4 General safety instructions	21
1.4.1 Awareness of the safety instructions and symbols	21
1.4.2 Operator familiarity in the use of the tractor	21
1.4.3 Filling the fuel tank	22
1.4.4 Mounting and dismounting the operator's seat	22
1.4.5 Mandatory procedure before dismounting the tractor	22
1.5 Special instructions	23
1.5.1 Specific recommendations for agricultural and forestry tractors	23
1.6 Special safety instructions for preparing the tractor for use	25
1.6.1 Protective clothing	25
1.6.2 Activated carbon filter information	25
1.6.3 Safety devices and items	28
1.6.4 Checking the tractor	28
1.7 Specific safety instructions for starting the tractor	30
1.7.1 Protection of persons other than the operator	30
1.7.2 Start up safely	30
1.7.3 Starting the tractor with jump start cables	31
1.7.4 Checks to be carried out after start-up	32
1.8 Specific safety instructions for using the tractor	33
1.8.1 General instructions	33
1.8.2 Protection of persons other than the operator	34
1.8.3 Overturning	34
1.8.4 Tractor towing	37
1.8.5 Regulatory data on maximum permitted trailed weights	37
1.8.6 Road use	39
1.8.7 Parking brake	41
1.8.8 Emergency hand brake (on models fitted with the ParkLock option)	41
1.8.9 Power take-off	41
1.8.10 Implements	42
1.8.11 Front-end loader	45
1.9 Specific safety instructions for servicing the tractor	46
1.9.1 Pollution warning to observe when servicing the tractor	46
1.9.2 General instructions	46
1.9.3 Handling instructions	47
1.9.4 Special instructions for cleaning the tractor	49
1.10 Protective structures	50
1.10.1 Protective structures - Use and accreditation	50
1.10.2 Cab	50
1.10.3 Seat belt	50
1.10.4 Instructor seat	51
1.11 Warranty	52
1.11.1 General	52

1.11.2	Pre-delivery inspection and commissioning on the user's premises	52
1.11.3	Warranty procedure	52
1.11.4	Procedure to follow if changing region	52
1.11.5	Servicing during and after the warranty period	53
2	Maintenance	55
2.1	Service Guide	59
2.1.1	Service Guide	59
2.2	Operator environment	63
2.2.1	Air conditioning system: condenser	63
2.2.1.1	Procedure	63
2.2.2	Air conditioning system: checking the air conditioning system	63
2.2.3	Cab air filter	63
2.2.3.1	Roof air filter: Procedure	64
2.2.4	Cab attachment	64
2.2.5	Windscreen washer	65
2.3	Engine	66
2.3.1	Recommended engine oil products	66
2.3.2	Fuel	66
2.3.3	6-cylinder SisuDiesel engine	68
2.3.4	Engine oil level check	69
2.3.4.1	Procedure	69
2.3.5	Draining the engine oil	70
2.3.6	Replacing the engine oil filter	70
2.3.6.1	Procedure	70
2.3.7	Fuel system: fuel prefilter	71
2.3.7.1	Draining the water: Procedure	71
2.3.7.2	Replacing the filter element: Frequency	72
2.3.7.3	Replacing the filter element: Procedure	72
2.3.8	Fuel system: fuel filter	72
2.3.8.1	Procedure	72
2.3.9	Fuel system: Water separator prefilter	73
2.3.9.1	Draining the water: Procedure	73
2.3.9.2	Replacing the filter element: Frequency	73
2.3.9.3	Replacing the filter element: Procedure	73
2.3.10	Fuel system: bleeding	74
2.3.10.1		74
2.3.11	Fuel system: injection pump, regulator and injectors	75
2.3.12	Air filter	75
2.3.12.1	Cleaning and replacement of the main filter: Procedure	75
2.3.12.2	Cleaning and replacement of the secondary filter: Procedure	76
2.3.13	Cooling system	77
2.3.13.1	Checking the level and quality of the coolant	77
2.3.13.2	Filling to top up the coolant level	77
2.3.13.3	Draining the cooling system	78
2.3.13.4	Cleaning the radiator: Frequency	78
2.3.13.5	Cleaning the radiator: Procedure	78
2.3.14	Check and replace the main fan/alternator Poly-V belt	79
2.3.14.1	Procedure for tensioning the Poly-V main belt	79
2.3.14.2	Procedure for replacing the Poly-V main belt	80
2.3.14.3	Procedure for replacing the Poly-V main belt rollers	80
2.3.15	Check and replace the air conditioning/alternator Poly-V accessories belt	81
2.3.15.1	Tension of the Poly-V accessories belt	81
2.3.15.2	Replacing the Poly-V accessory belt	81
2.3.16	Check and replace the air compressor (pneumatic braking) Poly-V accessories belt	82
2.3.16.1	Tension of the Poly-V accessories belt	82

2.3.16.2 Replacing the Poly-V accessory belt	83
2.4 Transmission	84
2.4.1 Recommended products	84
2.4.2 Checking the transmission oil level	84
2.4.2.1 Procedure	84
2.4.3 Draining the transmission oil	84
2.4.3.1 Procedure	84
2.4.4 Checking the level of the rear final drive units	85
2.4.4.1 Procedure	85
2.4.5 Draining the rear final drives	86
2.4.5.1 Procedure	86
2.4.6 Filtering the transmission hydraulic system	86
2.4.6.1 Replacing the filter strainer: Procedure	86
2.4.6.2 Replacing the high-pressure filter: Frequency	86
2.4.6.3 Replacing the high-pressure filter: Procedure	86
2.4.7 Checking and cleaning the transmission oil cooler	87
2.4.7.1 Procedure	87
2.4.8 Lubricating the rear PTO shaft	87
2.5 Brakes	88
2.5.1 Recommended products	88
2.5.2 Checking the regulator filter	88
2.5.3 Bleeding the brake system	88
2.5.4 Compressed air system protection	89
2.5.4.1 Procedure	89
2.6 Front power take-off	91
2.6.1 Recommended products	91
2.6.2 Checking and cleaning the oil cooler of the front PTO	91
2.6.3 Draining oil	91
2.6.3.1 Procedure	91
2.6.4 Lubricating the front PTO shaft	92
2.7 Front axle and steering	93
2.7.1 Recommended products	93
2.7.2 Four-wheel drive front axle: Checking the front axle beam oil level	93
2.7.2.1 Procedure	93
2.7.3 4-wheel drive front axle: Draining the beam oil	93
2.7.3.1 Procedure	93
2.7.4 Four-wheel drive front axle: checking the oil level in the final drives	94
2.7.4.1 Procedure	94
2.7.5 Draining the oil from the final drives of the 4-wheel drive front axle	94
2.7.5.1 Procedure	94
2.7.6 Four-wheel drive front axle: lubrication	95
2.8 Rear linkage	97
2.8.1 Recommended products	97
2.8.2 Lubricating the linkage shaft	97
2.8.2.1 Procedure	97
2.8.3 Three-point linkage: lubrication	97
2.9 Front linkage	100
2.9.1 Recommended products	100
2.9.2 Front linkage: lubrication	100
2.10 Towing equipment	102
2.10.1 Recommended products	102
2.10.2 Ball hitch: lubrication	102
2.10.3 4-wheel trailer clevis hitch: lubrication	102
2.10.4 Auto-hitch: lubrication	104
2.11 Auxiliary hydraulics	106
2.11.1 Recommended products	106

2.11.2	Checking the auxiliary hydraulic system oil level	106
2.11.2.1	Procedure	106
2.11.3	Draining the auxiliary hydraulic system	107
2.11.3.1	Procedure	107
2.11.4	Filtering the auxiliary hydraulic system	108
2.11.4.1	Replacing the 300-micron filter: Procedure	108
2.11.4.2	Replacing the breather: Frequency	109
2.11.4.3	Replacing the breather: Procedure	109
2.12	Electrical equipment	111
2.12.1	Batteries	111
2.12.2	Alternator	111
2.12.3	Power socket (ISO)	112
2.12.4	Adjusting the headlights	113
2.12.5	Description of the main fuse box	114
2.12.6	Description of the secondary fuse box (depending on model)	125
2.12.7	Battery isolator	128
2.13	Pressure washing	129
2.13.1	Pressure washing	129
2.14	Storing your tractor	130
2.14.1	Storing your tractor	130
2.15	Faults and solutions	131
2.15.1	General table of faults	131
2.15.2	Indicator light panel	133
2.15.3	Indication of faults	138
2.15.4	Description of error code format	140
2.15.5	Instrument panel error codes Dyna-VT	142
2.15.6	AGCO Power Tier 3/Stage IIIA engine and Tier 4F/Stage IV SCR Technology engine error codes	143
2.15.7	Dyna-VT transmission error codes	158
2.15.8	Front axle error codes Dyna-VT	161
2.15.9	Rear power take-off error codes Dyna-VT	162
2.15.10	Error codes for the high-pressure braking	164
2.15.11	Rear linkage error codes	164
2.15.12	Front power lift error codes	166
2.15.13	Armrest error codes	166
2.15.14	Hydraulic valve error codes	167
2.15.15	Air conditioning error codes	169
2.15.16	Error codes of the keypad in the pillar	170
2.15.17	Suspended cab error codes	171
3	Technical specifications	173
3.1	General specifications	175
3.1.1	Model MF 8730 Dyna-VT	175
3.1.2	Model MF 8732 Dyna-VT	176
3.1.3	Model MF 8735 Dyna-VT	177
3.1.4	Model MF 8737 Dyna-VT	178
3.2	Operator environment	179
3.2.1	Noise levels (dB(A))	179
3.2.2	Level of vibration felt through the seat	179
3.3	Engine	180
3.3.1	Engine specifications	180
3.3.2	Fuel system and air filter	180
3.3.3	Cooling	181
3.3.4	Tightening torques	181
3.4	Transmission	182
3.4.1	Forward speed for all models with Dyna-VT transmission	182

3.4.2 Gearbox	182
3.4.3 Final drives	182
3.5 Brakes	183
3.5.1 Brake system technical specifications	183
3.6 Front axle and steering	184
3.6.1 Four-wheel drive front axle	184
3.6.2 Steering	184
3.7 Power take-off	185
3.7.1 Specifications	185
3.7.2 Tightening torques	185
3.8 Hydraulic linkage	186
3.8.1 Front linkage	186
3.8.2 Rear linkage	186
3.9 Auxiliary hydraulics	187
3.9.1 Hydraulic system	187
3.10 Electrical equipment	188
3.10.1 Electrical equipment technical specifications	188
3.10.2 Lighting - Layout of components	188
3.11 Wheels and tires	190
3.11.1 Rims	190
3.11.2 Tires	190
3.11.3 Tires, front/rear compatibility	190
3.11.4 Tightening torques	191
3.12 Capacities and dimensions	192
3.12.1 Capacity for models equipped with a Tier 2/Stage II engine	192
3.12.2 Dimensions and weights	192
3.12.3 Attachment points: Dyna-VT models with 5 t front linkage	194
3.12.4 Attachment points: Dyna-VT models without front linkage	196
4 Accessories	199
4.1 Cab accessories	201
4.1.1 Cab accessories	201
4.2 Engine accessories	202
4.2.1 Engine accessories	202
4.3 Front axle and steering accessories	203
4.3.1 Front axle and steering accessories	203
4.4 Power take-off accessories	204
4.4.1 Power take-off accessories	204
4.5 Linkage accessories	205
4.5.1 Linkage accessories	205
4.6 Auxiliary hydraulics accessories	206
4.6.1 Auxiliary hydraulics accessories	206

1. Safety instructions and safety points - Warranty

1.1 Introduction	13
1.1.1 Introduction - Safety instructions	13
1.2 Safety — Symbols and terms	15
1.2.1 Safety — Symbols and terms	15
1.3 Safety decals and instructions	16
1.3.1 Checking and replacing the safety decals and instructions	16
1.3.2 Presentation and location of the safety decals and instructions	17
1.4 General safety instructions	21
1.4.1 Awareness of the safety instructions and symbols	21
1.4.2 Operator familiarity in the use of the tractor	21
1.4.3 Filling the fuel tank	22
1.4.4 Mounting and dismounting the operator's seat	22
1.4.5 Mandatory procedure before dismounting the tractor	22
1.5 Special instructions	23
1.5.1 Specific recommendations for agricultural and forestry tractors	23
1.6 Special safety instructions for preparing the tractor for use	25
1.6.1 Protective clothing	25
1.6.2 Activated carbon filter information	25
1.6.3 Safety devices and items	28
1.6.4 Checking the tractor	28
1.7 Specific safety instructions for starting the tractor	30
1.7.1 Protection of persons other than the operator	30
1.7.2 Start up safely	30
1.7.3 Starting the tractor with jump start cables	31
1.7.4 Checks to be carried out after start-up	32
1.8 Specific safety instructions for using the tractor	33
1.8.1 General instructions	33
1.8.2 Protection of persons other than the operator	34
1.8.3 Overturning	34
1.8.4 Tractor towing	37
1.8.5 Regulatory data on maximum permitted trailed weights	37
1.8.6 Road use	39
1.8.7 Parking brake	41
1.8.8 Emergency hand brake (on models fitted with the ParkLock option)	41
1.8.9 Power take-off	41
1.8.10 Implements	42
1.8.11 Front-end loader	45
1.9 Specific safety instructions for servicing the tractor	46
1.9.1 Pollution warning to observe when servicing the tractor	46
1.9.2 General instructions	46
1.9.3 Handling instructions	47
1.9.4 Special instructions for cleaning the tractor	49
1.10 Protective structures	50
1.10.1 Protective structures - Use and accreditation	50
1.10.2 Cab	50
1.10.3 Seat belt	50
1.10.4 Instructor seat	51

1.11 Warranty	52
1.11.1 General	52
1.11.2 Pre-delivery inspection and commissioning on the user's premises	52
1.11.3 Warranty procedure	52
1.11.4 Procedure to follow if changing region	52
1.11.5 Servicing during and after the warranty period	53

1.1 Introduction

1.1.1 Introduction - Safety instructions

Operator's Manual

NOTE: *This Operator's Manual is widely published and distributed and the availability of the attachments indicated, whether fitted to the basic tractor or as an accessory, may vary depending on the country or region in which the tractor is used. To find out which attachments are available in a given region, contact a Massey Ferguson dealer.*

The purpose of this manual is to enable the owner and the operator to operate the tractor appropriately under normal conditions of use. Providing they follow the instructions carefully, the tractor will give many years of service in the Massey Ferguson tradition.

Use for any other activity (particularly forestry work) is considered to be contrary to the intended use.

The commissioning of equipment by the Massey Ferguson dealer on the user's premises enables the dealer to ensure that these operating and service instructions are properly understood. Always consult the Massey Ferguson dealer if there is any part of this manual that you do not understand. It is important that these instructions are understood and followed.

This manual does not cover all operation and safety instructions relevant to the implements and accessories that may be fitted at the time of tractor delivery or later. It is essential that operators use and understand the Operator's Manuals relating to these implements and accessories.

IMPORTANT: *This manual must always be kept with the tractor. For extra copies, contact your Massey Ferguson dealer.*

This chapter in the Operator's Manual highlights certain basic safety-related situations that may be encountered during normal operation and servicing of the tractor and provides the information needed to handle these situations.

This chapter supplements any safety instructions given in other chapters of this manual.

It may be necessary to take additional precautions, depending on the implements and accessories used and the working conditions on-site or in the service area. Massey Ferguson can under no circumstances exercise direct control over the commissioning, operation, inspection, lubrication or servicing of the tractor. It is therefore YOUR responsibility to take suitable safety precautions in such areas.



WARNING:

**It is your responsibility to read and understand the instructions that appear in this chapter before using the tractor.
They must then be strictly adhered to throughout the working day.**

Servicing, spare parts, accessories and conditions of use

Daily servicing should become a routine, and a logbook of operating hours should be kept.

When spare parts are required, it is important to use only genuine Massey Ferguson parts. Massey Ferguson dealers supply genuine parts and can offer advice concerning their fitting and use. The use of lower quality parts may cause serious damage. Customers are advised only to purchase their spare parts from an approved Massey Ferguson dealer. In the same way, you must only use accessories specifically adapted to your tractor.

Owing to the considerable variation in operating conditions, it is not possible for the manufacturer to formulate complete or absolute assertions in its publications concerning the performance or operating methods of its machines or to accept liability for any loss or damage which may result from such assertions or possible errors or omissions.

If the tractor is to be used in abnormal conditions which could cause damage (use in deep water or in paddy fields for instance), you should consult your Massey Ferguson dealer to obtain special instructions to prevent the warranty from becoming void.

These tractors are designed only for usual farming activities (intended use). Use for any other activity (particularly forestry work) is considered to be contrary to the intended use.

Strict compliance with the repairs, service and operating conditions as specified by Massey Ferguson is also an essential component of the intended use.

IMPORTANT: *Massey Ferguson accepts no responsibility in the event of damage to equipment or personal injury resulting from improper use.*

The tractor must only be used, serviced and repaired by personnel who have full knowledge of its specific features and who are aware of the applicable safety measures (prevention of accidents).

Customers are strongly advised to contact a Massey Ferguson dealer in the event of after-sales problems and for any adjustments which may be necessary.

1.2 Safety – Symbols and terms

1.2.1 Safety – Symbols and terms

Signal



This safety alert symbol means **CAUTION! BE ALERT! YOUR SAFETY DEPENDS ON IT!**

The safety alert symbol identifies important safety notices on machines, safety signs, in instruction books or elsewhere. When you see this symbol, be alert to the risk of injury or death. Follow the instructions in the safety notice.

SAFETY is paramount! Why?

- ACCIDENTS DISABLE AND KILL
- ACCIDENTS ARE COSTLY
- ACCIDENTS CAN BE AVOIDED

Terms

The terms **DANGER**, **WARNING** and **CAUTION** are used with the safety alert symbol. It is essential to learn how to recognize these safety messages and to follow the recommended safety measures and instructions.



DANGER:

indicates an imminently hazardous situation which, if not avoided, will result in DEATH or VERY SERIOUS INJURY.



WARNING:

indicates a potentially hazardous situation which, if not avoided, could result in DEATH or SERIOUS INJURY.



CAUTION:

indicates a potentially hazardous situation which, if not avoided, may result in MINOR or MODERATE INJURY.

The terms **IMPORTANT** and **NOTE** are not directly related to personal safety, but are used to provide additional information and advice on the operation or maintenance of equipment.

IMPORTANT: *identifies specific instructions or procedures which, if not strictly applied, could damage or destroy the tractor, its equipment or the surrounding area.*

NOTE: *identifies points of particular interest for the most effective and suitable operation or repair.*

1.3 Safety decals and instructions

1.3.1 Checking and replacing the safety decals and instructions



WARNING:

Never remove or obscure the safety decals and instructions.

Replace any safety decals and instructions that are illegible or missing. Replacement decals are available from the dealer in the event of loss or damage. If a second-hand tractor has been purchased, check that all safety and instruction decals are correct, legible and in the correct location: To do this, refer to the section on the presentation and location of decals.

1.3.2 Presentation and location of the safety decals and instructions

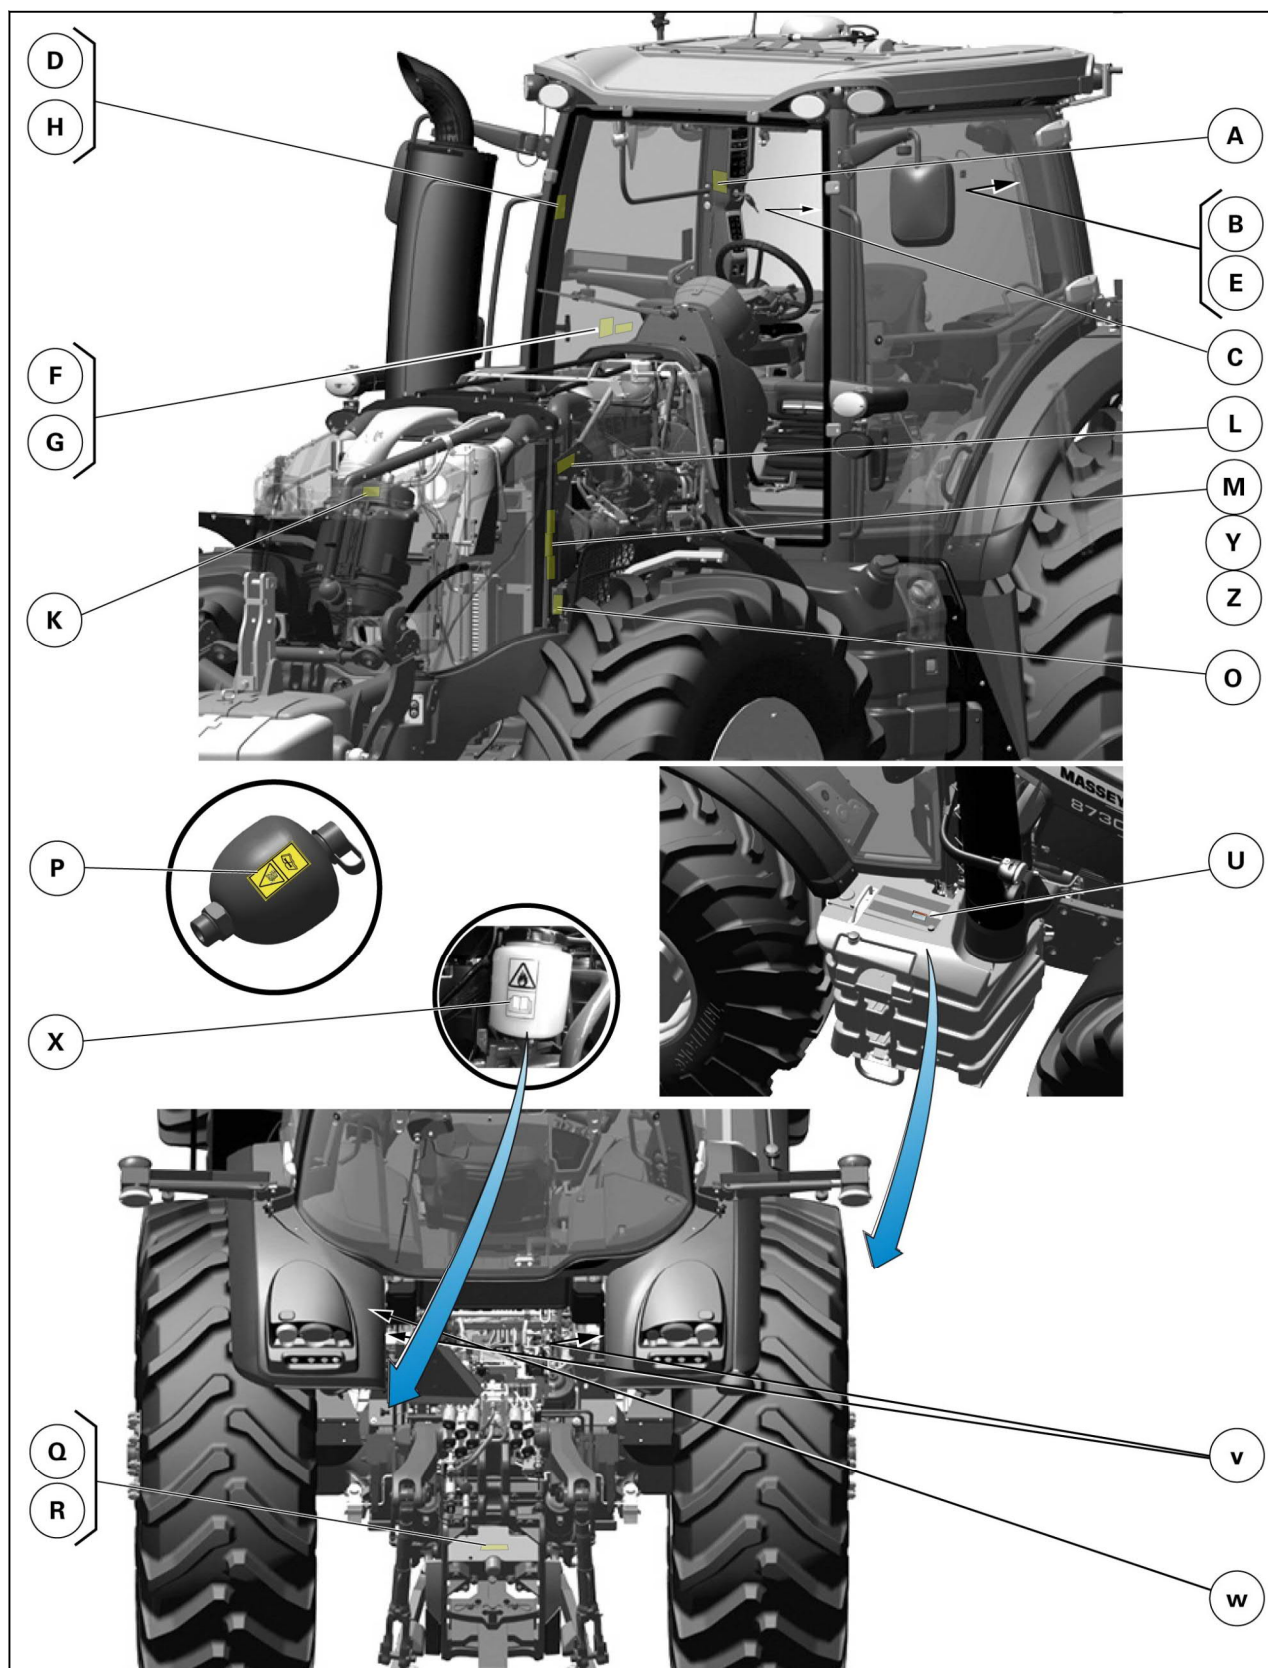


Fig. 1









Suggest:







For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

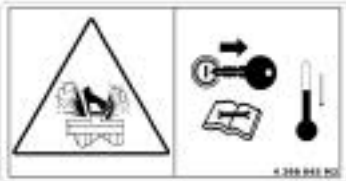	<ul style="list-style-type: none"> • 4296950M1 ((A)) • DANGER: General safety <p>Read the servicing manual and the safety advice before start-up and observe their contents during operation.</p>
	<ul style="list-style-type: none"> • ACW0487380 ((B)) • WARNING: Overturning of the tractor - Roll Over Protective Structure (ROPS) <p>Fasten your seat belt once you are in the seat (operator and instructor) and before the tractor moves.</p> <p>IMPORTANT: <i>The instructor seat will be used only for field applications. When using the instructor seat on the road, refer to the laws in force in the country of use. Read the safety instructions in the Operator's Manual.</i></p>
	<ul style="list-style-type: none"> • 4296946M1 ((C)) • WARNING: Risk of being crushed or run over by the tractor. <p>Stop the engine and remove the key before you commence any maintenance or repair operation.</p>
	<ul style="list-style-type: none"> • 4297924M1 ((D)) • DANGER: Risk of the front loader coming into contact with overhead power lines. Risk of extremely serious or fatal injuries. <p>Tractors fitted with a front loader: Exercise extreme caution to avoid coming into contact with power lines.</p> <ul style="list-style-type: none"> • Keep a safe distance from the overhead power lines whenever you use the front loader. Refer to any current national regulations concerning safe distances from power lines.
	<ul style="list-style-type: none"> • 4356345M1 ((E)) • WARNING: Possible inhalation of dangerous substances. • Read the instructions in the Operator's Manual and refer to the safety instructions provided by the product manufacturer. Wear personal protective equipment where necessary.
	<ul style="list-style-type: none"> • 4349217M1 ((F)) • WARNING: Towing • Carefully read the specific instructions from the Operator's Manual before towing the tractor.

	<ul style="list-style-type: none"> • 4352953M2 ((H)) for Efficient/Exclusive versions only • DANGER: Road safety. • Road traffic: Deactivate the automatic guidance system and the SpeedSteer system.
	<ul style="list-style-type: none"> • 523251D1 or ACW0232290 ((K)) • DANGER: Risk of engine explosion. • Never spray ether toward the engine air intake.
	<ul style="list-style-type: none"> • 4298645M2 ((L)) • WARNING: High-temperature liquid in the reserve. Risk of skin burns. <p>Stop the engine, remove the key and wait for the assembly to cool before commencing any maintenance or repair operation.</p>
	<ul style="list-style-type: none"> • 4296967M1 ((M)) • WARNING: Burn hazard – hot surfaces. <p>Keep away from hot engine components when engine has been running.</p> <p>Shut off engine, remove key and wait for system to cool before performing maintenance or repair work.</p>
	<ul style="list-style-type: none"> • 4296985M1 ((O)) • DANGER: Crushing of fingers or hands. • Never work in an area where there is a risk of crushing while parts could move.
	<ul style="list-style-type: none"> • ACW0018280 ((P)) • DANGER: Explosion hazard. The hydraulic accumulator contains pressurised gas and oil. • The hydraulic accumulator contains pressurised gas and oil. Refer to the instructions in the technical manual when removing and reconditioning.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>