



AMF

Harley-Davidson

SERVICE MANUAL

1980

Electra Glide · FL/FLH

Super Glide · FX/FXE/FXEF/FXS

1978¹/₂ to

Part No. 99482-80



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

**1978½ to 1980
FL/FLH
FX/FXE/FXEF/FXS**

**SERVICE
MANUAL**

PRODUCT	1
CHASSIS	2
ENGINE	3
TRANSMISSION	4
ELECTRICAL	5
MISCELLANEOUS	6

The information in this manual applies to the 1978½ to 1980 FL/FLH/FX/FXE/FXEF/FXS Models manufactured after January 1, 1978.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

TABLE OF CONTENTS

SECTION 1 - PRODUCT

Specifications

	Page No.
Dimensions	1-1
Capacities	1-1
Engine	1-1
Vehicle Identification	1-1
Transmission	1-2
Tire Data	1-2

Service

Servicing a New Motorcycle	1-3
Regular Service Intervals	1-4

Torque Requirements

Wheels	1-7
Brakes	1-7
Forks	1-7
Handlebar	1-7
Engine	1-7
Transmission	1-8
Electrical	1-8

Fluid Requirements

Harley-Davidson Oil	1-9
Harley-Davidson Chain Grease, Chain Saver, Chain Spray	1-9
Gasoline	1-9
Brake Fluid	1-9
Harley-Davidson/Loctite Products	1-9

Locating Troubles

Engine	1-11
Lubrication System	1-12
Electrical System	1-13
Carburetor	1-13
Transmission	1-13
Clutch	1-13
Brake	1-14

SECTION 2 - CHASSIS

Drive

Chains	2-1
--------------	-----

Wheels

General	2-5
Check List	2-5
Front Wheel	2-5
Rear Wheel	2-6
Wheel Hubs	2-6
Spoking Wheels - 16 Inch	2-9
Spoking Wheels - 19 Inch	2-10
Truing Spoked Wheel	2-11
Checking Cast Rim Runout	2-13
Tires	2-14

Handlebar Throttle Control

General	2-15
---------------	------

Frame

General	2-17
---------------	------

Forks

	Page No.
General	2-19
FL Front Fork	2-23
FX Front Fork	2-24
Straightening Fork Tubes	2-27
Rear Shock Absorber	2-29
Rear Fork	2-30

Brakes

General	2-33
Rear Brake Pedal Adjustment	2-33
Disc Brake Calipers	2-34
Rear Brake Master Cylinder	2-38

Seat

Solo Saddle	2-39
Comfort Flex Seat	2-40

Tools

.....	2-43
-------	------

SECTION 3 - ENGINE

General

Specifications	3-1
Description	3-1
Lubrication	3-2
Repair and Diagnostic Procedure	3-4

Cylinder Head

Removing	3-7
Disassembling	3-7
Cleaning and Inspection	3-7
Repairing Rocker Arms and Bushings	3-7
Replacing Valve Guides	3-9
Reconditioning or Replacing Valve Seats	3-9
Grinding Valve Faces and Seats	3-9
Lapping Valve Faces and Seats	3-10
Installing and Adjusting Push Rods	3-11
Checking Push Rod Adjustment	3-11

Cylinder and Piston

Disassembling Cylinder and Piston	3-13
Cleaning and Inspecting	3-13
Refinishing Cylinders	3-13
Fitting Piston Rings	3-14
Piston Pin Bushing	3-16
Assembling Cylinder and Piston	3-17

Gearcase

Oil Pump	3-19
Valve Tappets and Guides	3-21
Gearcase Cover and Timing Gears	3-22

Crankcase

General	3-27
Disassembling Crankcase	3-27
Flywheels	3-28
Assembling Crankcase	3-34

Fuel System

Carburetor	3-37
Air Cleaner	3-43
Fuel Tank	3-45
Fuel Supply Valve	3-45

TABLE OF CONTENTS

SECTION 3 - ENGINE (cont'd.)	Page No.	Lamps	Page No.
Tools	3-47	Headlamp	5-13
SECTION 4 - TRANSMISSION		Charging System	
General		Alternator	5-15
Specifications	4-1	Rectifier - Regulator	5-15
Description	4-1	Checking Charging System	5-16
Clutch		Removing the Alternator	5-17
General	4-3	Installing the Alternator	5-18
Disassembling Clutch	4-3	Ignition System - 1979 and Earlier	
Cleaning and Inspection	4-6	Ignition Timer	5-19
Assembling Clutch	4-6	Troubleshooting	5-20
Electric Starter		Disassembling and Assembling	5-22
General	4-7	Ignition System - 1980 and Later	
Disassembling Starter Shaft and Solenoid	4-7	Description	5-24A
Assembling Starter Shaft and Solenoid	4-7	Troubleshooting	5-24B
Kick Starter		Check Advance Timing with a Strobe Timing Light	5-24C
Disassembling Kick Starter	4-9	Setting Retarded Timing	5-24D
Cleaning, Inspection and Repair	4-9	Removing Ignition Components	5-24D
Assembling Kick Starter	4-9	Inspection and Replacing Parts	5-24D
Disassembling Starter Clutch	4-9	Installing Ignition Components	5-24D
Cleaning, Inspection and Repair	4-9	Ignition Coil	
Assembling Starter Clutch	4-10	Description	5-25
Transmission Case		Troubleshooting	5-25
Adjusting Shifter Linkage	4-11	Replacing Spark Plug Cable	5-25
Replacing Main Drive Gear Oil Seal	4-11	Spark Plugs	
Shifter Cover - Drum Shifter		General	5-27
Early 1979 and Earlier	4-13	Removing Spark Plugs	5-27
Shifter Cover - Plate Shifter		Inspecting Spark Plugs	5-27
Late 1979 and Later	4-16	Setting Spark Gap	5-27
Shifter Forks	4-17	Installing Spark Plugs	5-27
Transmission Case	4-19	Battery	
Tools	4-24	General	5-29
SECTION 5 - ELECTRICAL		Battery Care	5-29
General		Testing Battery	5-29
Specifications	5-1	Charging Battery	5-30
Wiring		Horn	5-31
1978½-1979 FL/FLH Wiring Diagram	5-3	Starter Motor	
1978½-1979 FX/FXE Wiring Diagram	5-5	Description	5-31
1978½-1979 FXS/FXEF Wiring Diagram	5-7	Troubleshooting	5-31
1980 FL/FLH Wiring Diagram	5-8A	Starter Motor and Drive	5-32
1980 FXE Wiring Diagram	5-8C	Prestolyte Starter Motor	5-32
1980 FXS/FXEF Wiring Diagram	5-8E	Hitachi Starter Motor	5-33
Switches		SECTION 6 - MISCELLANEOUS	
Ignition - Light Switch	5-9	Instruments	6-1
Handlebar Switch Assembly	5-10		
Stoplight Switch	5-10		
Starter Relay Switch	5-10		
Transmission Neutral Switch	5-10		
Solenoid Switch	5-11		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com