



Harley-Davidson Motor Co., Inc.


SERVICE MANUAL

CLE/TLE Sidecar Models

1979-1984 CLE; 1983 & 1984 TLE

Part No. 99485-84

OFFICIAL FACTORY MANUAL

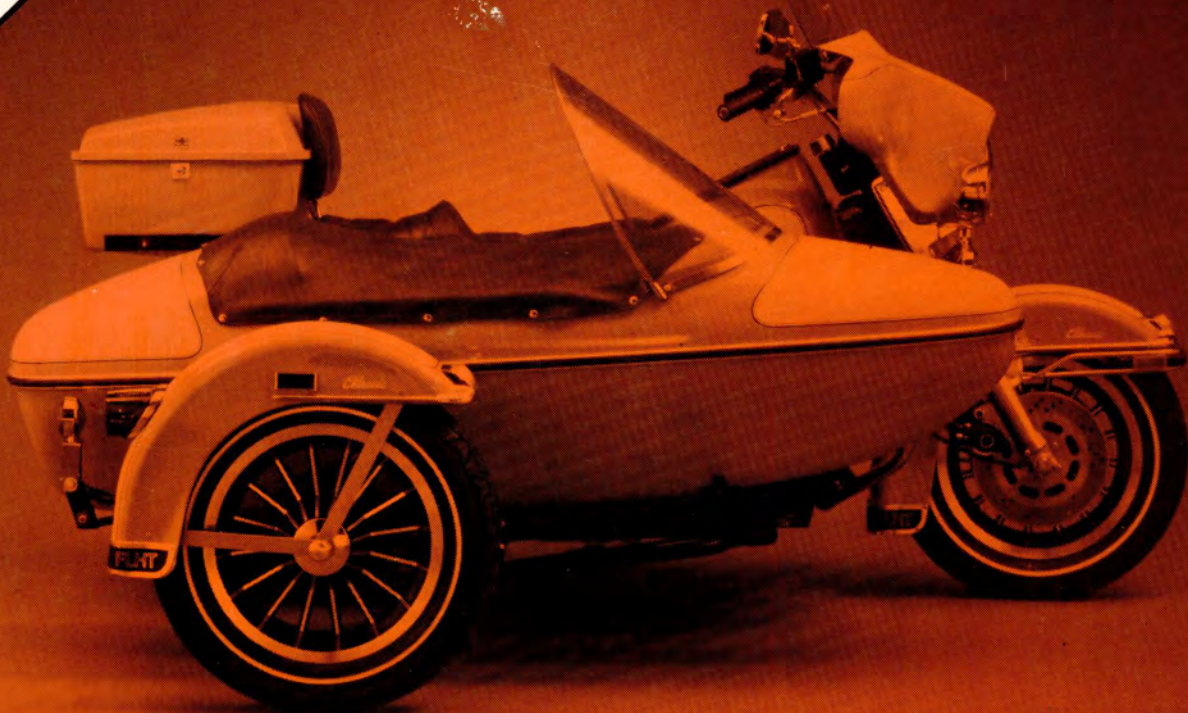



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

**CLE/TLE Sidecar Models
1979-1984 CLE; 1983 & 1984 TLE**

SERVICE MANUAL

© COPYRIGHT 1984
HARLEY-DAVIDSON MOTOR CO., INC.
ALL RIGHTS RESERVED

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

FOREWORD

This manual contains service and repair information for Harley-Davidson sidecars and instructions for attaching and removing sidecars.

HOW TO USE YOUR SERVICE MANUAL

Your Service Manual is arranged for quick, easy reference. This manual is divided into numbered sections. Sections are then divided into subjects. Use this manual as follows:

1. Check the TABLE OF CONTENTS located in the front of each section to find subject desired.
2. Page number is listed across from subject. Page number consists of section number and page number.
3. Information is presented in a definite order as follows:

Adjustments
Removal
Disassembly
Cleaning, Inspection and Repair
Assembly
Installation

In figure legends, the number following a name of a part indicates the quantity necessary for one complete assembly.

Procedures that only apply to one model are identified with that model's designation.

SERVICE BULLETINS

In addition to the information given in this Service Manual, Service Bulletins are issued to Harley-Davidson Dealers from time to time, which cover interim engineering changes and supplementary information. Service Bulletins should be consulted for complete information on the models covered by this manual.

USE GENUINE REPLACEMENT PARTS

WARNING

When replacement parts are required, use only genuine Harley-Davidson parts or parts with equivalent characteristics including type, strength and material. Failure to do so may result in product malfunction and possible injury to the operator and/or passenger.

To ensure a satisfactory and lasting repair job, follow the manual instructions carefully and use only genuine Harley-Davidson replacement parts. Behind the emblem bearing the words GENUINE HARLEY-DAVIDSON is more than three-quarters of a century of designing, research, manufacturing, testing, and inspecting experience.

This is your insurance that the parts you are using will fit right, operate properly and last longer. When you use genuine Harley-Davidson parts, you use the best.

PRODUCT REFERENCES

When reference is made in this manual to a specific brand name product, tool or instrument, an equivalent product, tool or instrument may be used in place of the one mentioned.

All tools mentioned in this SERVICE MANUAL with HD or J preceding the part number must be ordered through:

Kent-Moore Tool Division
29874 Little Mack
Roseville, Michigan 48066

CONTENTS

All photographs and illustrations may not necessarily depict the most current model or component, but are based on the latest production information available at the time of publication.

Harley-Davidson Motor Co., Inc., reserves the right to change specifications, equipment, or designs at any time without notice and without incurring obligation.

WARNINGS AND CAUTIONS

Statements in this manual preceded by the words WARNING or CAUTION and printed in bold face are very important.

WARNING

Means there is the possibility of personal injury to yourself or others.

CAUTION

Means there is the possibility of damage to the vehicle.

We recommend you take special notice of these items.

WARNING

Proper service and repair is important for the safe, reliable operation of all mechanical products. The service procedures recommended and described in this Service Manual are effective methods for performing service operations. Some of these service operations require the use of tools specially designed for the purpose. These special tools should be used when and as recommended.

It is important to note that warnings against the use of some specific service methods are stated in this Service Manual. However, please remember that these warnings are not all inclusive. Harley-Davidson could not possibly know, evaluate and advise the service trade of all possible ways in which service might be done or of the possible hazardous consequences of each way. Accordingly, anyone who uses a service procedure or tool which is not recommended by Harley-Davidson must first thoroughly satisfy himself that neither his nor the operator's safety will be jeopardized by the service methods selected.

TABLE OF CONTENTS

SECTION 1 - PRODUCT

Page No.

Service	1-1
Regular Service Intervals	1-1
Troubleshooting	1-3
Handling	1-3
Specifications	1-5
Dimensions	1-5
Serial Numbers	1-6

SECTION 2 — ELECTRICAL SYSTEM

Specifications	2-1
General	2-1
Replacing Bulbs	2-1
Sidecar Harness	2-2

SECTION 3 — CHASSIS

Brakes	3-1
General	3-1
Adjusting Sidecar Brakes	3-1
Disassembly	3-1
Cleaning, Inspection and Repair	3-3
Assembling Drum Brake	3-3

Sidecar Wheel Bearing — Servicing or Replacement	3-5
Inner Bearing	3-5
Outer Bearing	3-5

Sidecar Springs	3-7
Inspection	3-7
Removal	3-7
Bushing Removal and Replacement	3-7

SECTION 4 — FIBERGLASS REPAIR

Page No.

Fiberglass Body Care and Repair	4-1
Types of Finishes	4-1
Care of Finishes	4-1
Repairs	4-1
Surface Finishing	4-1

SECTION 5 — INSTALLING CONNECTION KITS ON MOTORCYCLES

FLH (CLE) Connection Kit	5-1
Kit Contents	5-1
Installing Connections	5-1
Installing Sidecar Harness	5-1

FLT (TLE) Connection Kit	5-3
Kit Contents	5-3
Installation	5-4

SECTION 6 — ATTACHING, ADJUSTING AND REMOVING SIDECARS

CLE Sidecar Installation and Removal ..	6-1
Adjustable Front Fork	6-1
Adjusting Steering Damper	6-1
Attaching Sidecar to Motorcycle	6-1
Adjustments	6-2
Filling Hydraulic Brake System	6-3
Adjusting Sidecar Brakes	6-3
Disconnecting Sidecar	6-3

TLE Sidecar Installation and Removal (FLT)	6-5
Attaching Sidecar to Motorcycle	6-5
Adjustments	6-6
Attaching Steering Damper to Motorcycle and Sidecar	6-6
Adjustment of Steering Damper	6-7
Filling Hydraulic Brake System	6-7
Disconnecting Sidecar	6-7