


2003 Harley-Davidson®

# DYNA MODELS

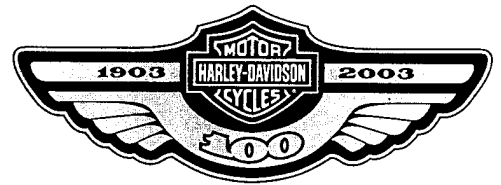

# SERVICE MANUAL

P/N 99481-03A

# 2003 DYNA GLIDE MODELS SERVICE MANUAL

The information in this Service Manual applies  
to 2003 Dyna Glide models.

©COPYRIGHT 2002  
HARLEY-DAVIDSON MOTOR COMPANY  
ALL RIGHTS RESERVED  
PART NO. 99481-03A

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE  
<http://www.harley-davidson.com>

**MAINTENANCE**

**1**

**CHASSIS**

**2**

**ENGINE**

**3**

**FUEL SYSTEM**

**4**

**ELECTRIC STARTER**

**5**

**DRIVE**

**6**

**TRANSMISSION**

**7**

**ELECTRICAL**

**8**

**APPENDIX**

**INDEX**

# TABLE OF CONTENTS

	Page No.		Page No.
<b>SECTION 1-MAINTENANCE</b>			
<b>1.1 General.....</b>	<b>1-1</b>	<b>1.5 Battery Maintenance .....</b>	<b>1-13</b>
Servicing a New Motorcycle .....	1-1	General .....	1-13
Safe Operating Maintenance .....	1-1	Battery Electrolyte Antidotes (Table) .....	1-13
Shop Practices .....	1-1	Disconnection and Removal .....	1-14
Repair Notes.....	1-1	Installation and Connection.....	1-14
Safety .....	1-1	Inspection.....	1-15
Removing Parts .....	1-1	Storage .....	1-15
Cleaning .....	1-1	<b>1.6 Brakes.....</b>	<b>1-16</b>
Disassembly and Assembly.....	1-2	Fluid Inspection.....	1-16
Repair and Replacement Procedures .....	1-2	Rear Pedal Height.....	1-17
Hardware and Threaded Parts .....	1-2	<b>1.7 Bleeding Brakes .....</b>	<b>1-18</b>
Wiring, Hoses and Lines.....	1-2	General .....	1-18
Instruments and Gauges .....	1-2	Procedure .....	1-18
Bearings .....	1-2	<b>1.8 Brake Pads and Discs .....</b>	<b>1-19</b>
Bushings .....	1-2	Inspection.....	1-19
Gaskets .....	1-2	Brake Pads .....	1-19
Lip Type Seals.....	1-2	Brake Disc Thickness .....	1-19
O-Rings (Preformed Packings).....	1-2	Brake Disc Lateral Runout and Warpage .....	1-19
Gears.....	1-3	Brake Pad Replacement .....	1-19
Shafts .....	1-3	Rear Brake Caliper .....	1-19
Part Replacement.....	1-3	Front Brake Caliper.....	1-21
Cleaning .....	1-3	<b>1.9 Tires and Wheels .....</b>	<b>1-22</b>
Part Protection.....	1-3	Tires .....	1-22
Cleaning Process .....	1-3	Tire Pressures (Table) .....	1-22
Rust or Corrosion Removal .....	1-3	Tire Replacement.....	1-22
Bearings .....	1-3	Wheel Bearings.....	1-23
Tool Safety .....	1-3	Wheel Spokes.....	1-23
Air Tools .....	1-3	<b>1.10 Primary Chain .....</b>	<b>1-24</b>
Wrenches .....	1-3	Inspection.....	1-24
Pliers/Cutters/Prybars.....	1-3	<b>1.11 Primary Chaincase Lubricant...</b>	<b>1-26</b>
Hammers .....	1-4	Changing Lubricant.....	1-26
Punches/Chisels.....	1-4	<b>1.12 Clutch .....</b>	<b>1-28</b>
Screwdrivers .....	1-4	Adjustment .....	1-28
Ratchets and Handles .....	1-4	<b>1.13 Transmission Lubricant.....</b>	<b>1-30</b>
Sockets.....	1-4	Changing Lubricant.....	1-30
Storage Units.....	1-4	<b>1.14 Rear Belt Deflection .....</b>	<b>1-31</b>
<b>1.2 Fuel and Oil .....</b>	<b>1-5</b>	Inspection.....	1-31
Fuel.....	1-5	Adjustment .....	1-32
Gasoline Blends .....	1-5	<b>1.15 Rear Belt and Sprockets .....</b>	<b>1-33</b>
Engine Oil.....	1-5	General .....	1-33
Winter Lubrication.....	1-5	Cleaning.....	1-33
<b>1.3 Maintenance Schedule .....</b>	<b>1-6</b>	Inspection.....	1-33
<b>1.4 Engine Oil and Filter .....</b>	<b>1-11</b>	Sprockets .....	1-33
Checking and Adding Oil .....	1-11	Rear Belt .....	1-33
Type of Oil .....	1-11	Drive Belt Wear Analysis (Table) .....	1-34
Checking With Cold Engine.....	1-11		
Checking With Warm Engine.....	1-11		
Recommended Oil Grades (Table).....	1-11		
Changing Oil and Filter.....	1-12		

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

	Page No.
<b>1.16 Suspension Adjustments.....</b>	<b>1-35</b>
All Models But FXDX/FXDXT .....	1-35
FXDX/FXDXT Models .....	1-35
General .....	1-35
Preload Adjustment.....	1-35
Rear Suspension Adjustments.....	1-37
Front Suspension Adjustments .....	1-37
FXDX/FXDXT Factory Suspension Settings (Table)	1-37
<b>1.17 Steering Head Bearings .....</b>	<b>1-38</b>
Adjustment.....	1-38
Bearing Adjustment, Fall-away .....	1-38
Lubrication .....	1-38
<b>1.18 Front Fork Oil.....</b>	<b>1-39</b>
Replacing Fork Oil .....	1-39
Type E Fork Oil Amounts (Table) .....	1-39
<b>1.19 Spark Plugs .....</b>	<b>1-40</b>
Inspection.....	1-40
<b>1.20 Air Cleaner Filter.....</b>	<b>1-41</b>
Removal.....	1-41
Installation.....	1-42
<b>1.21 Cable and Chassis Lubrication .....</b>	<b>1-43</b>
General .....	1-43
Cables and Hand Levers .....	1-43
Foot Shift Lever.....	1-43
Jiffy Stand .....	1-43
<b>1.22 Throttle Cables and Enrichener .....</b>	<b>1-44</b>
Cable Inspection, Lubrication and Adjustment.....	1-44
Inspection and Lubrication .....	1-44
Adjustment .....	1-44
Enrichener Adjustment.....	1-45
<b>1.23 Idle Speed and Ignition Timing. ....</b>	<b>1-46</b>
Idle Speed Inspection .....	1-46
Ignition Timing.....	1-46
<b>1.24 Fuel Supply Valve Filter .....</b>	<b>1-47</b>
Inspection.....	1-47
Fuel System Lines and Fittings.....	1-48
<b>1.25 Engine Mounts.....</b>	<b>1-49</b>
Inspection.....	1-49
<b>1.26 Headlamp Alignment.....</b>	<b>1-50</b>
Inspection.....	1-50
Adjustment .....	1-51
All Models But FXDWG/FXDXT .....	1-51
FXDWG Model.....	1-51
FXDXT Model .....	1-51
<b>1.27 Critical Fasteners.....</b>	<b>1-52</b>
Inspection.....	1-52
<b>1.28 Storage .....</b>	<b>1-53</b>
General .....	1-53
Removal From Storage.....	1-54

	Page No.
<b>1.29 Troubleshooting .....</b>	<b>1-55</b>
General.....	1-55
Engine .....	1-55
Starter Motor Does Not Operate/Turn Over .....	1-55
Engine Turns Over But Does Not Start .....	1-55
Starts Hard .....	1-55
Starts But Runs Irregularly or Misses.....	1-55
A Spark Plug Fouls Repeatedly.....	1-56
Pre-Ignition or Detonation (Knocks or Pings) .....	1-56
Overheating.....	1-56
Valve Train Noise .....	1-56
Excessive Vibration .....	1-56
Check Engine Light Illuminates During Operation	1-56
Lubrication System.....	1-56
Oil Does Not Return To Oil Pan .....	1-56
Engine Uses Too Much Oil Or Smokes Excessively	1-56
Engine Leaks Oil From Cases, Push Rods, Hoses	1-56
Low Oil Pressure .....	1-57
High Oil Pressure .....	1-57
Electrical System.....	1-57
Alternator Does Not Charge .....	1-57
Alternator Charge Rate Is Below Normal .....	1-57
Speedometer Operates Erratically .....	1-57
Carburetor .....	1-57
Floods.....	1-57
Transmission .....	1-57
Shifts Hard.....	1-57
Jumps Out Of Gear .....	1-57
Clutch Slips.....	1-57
Clutch Drags Or Does Not Release.....	1-57
Clutch Chatters.....	1-57
Handling .....	1-58
Irregularities.....	1-58
Brakes .....	1-58
Brake Does Not Hold Normally.....	1-58

## SECTION 2-CHASSIS

<b>2.1 Specifications .....</b>	<b>2-1</b>
<b>2.2 Torque Values.....</b>	<b>2-2</b>
<b>2.3 Vehicle Identification Number.....</b>	<b>2-4</b>
General.....	2-4
<b>2.4 Front Wheel.....</b>	<b>2-5</b>
Removal .....	2-5
Disassembly .....	2-7
Cast Wheel.....	2-7
Laced Wheel.....	2-7
Cleaning and Inspection.....	2-7
Assembly.....	2-7
Cast Wheel.....	2-7
Laced Wheel.....	2-7
Installation .....	2-8
<b>2.5 Rear Wheel.....</b>	<b>2-9</b>
Removal .....	2-9
Disassembly .....	2-9
Cleaning and Inspection.....	2-10
Assembly.....	2-10
Installation .....	2-11

	Page No.		Page No.
<b>2.6 Sealed Wheel Bearings .....</b>	<b>2-12</b>	<b>2.17 Rear Brake Caliper .....</b>	<b>2-42</b>
Inspection .....	2-12	Removal .....	2-42
Removal .....	2-12	Disassembly .....	2-42
Installation .....	2-13	Cleaning, Inspection and Repair .....	2-44
<b>2.7 Wheel Lacing: 16 In. Rim.....</b>	<b>2-14</b>	Assembly .....	2-44
General .....	2-14	Installation .....	2-45
Procedure .....	2-14	<b>2.18 Front Fork: FXD and FXDL .....</b>	<b>2-46</b>
<b>2.8 Wheel Lacing: 19 In. Rim.....</b>	<b>2-16</b>	Removal .....	2-46
Procedure .....	2-16	Disassembly .....	2-46
<b>2.9 Wheel Lacing: 21 In. Rim.....</b>	<b>2-20</b>	Cleaning and Inspection .....	2-46
General .....	2-20	Assembly .....	2-46
Procedure .....	2-20	Installation .....	2-48
<b>2.10 Truing Laced Wheel.....</b>	<b>2-22</b>	<b>2.19 Front Fork: FXDWG .....</b>	<b>2-49</b>
General .....	2-22	Removal .....	2-49
Lateral Truing .....	2-22	Disassembly .....	2-49
Radial Truing .....	2-23	Cleaning and Inspection .....	2-49
<b>2.11 Cast Wheel Runout.....</b>	<b>2-24</b>	Assembly .....	2-51
General .....	2-24	Installation .....	2-51
Lateral Runout .....	2-24	<b>2.20 Front Fork: FXDX and FXDXT...</b>	<b>2-52</b>
Radial Runout .....	2-24	Removal .....	2-52
<b>2.12 Tires .....</b>	<b>2-25</b>	Disassembly .....	2-52
General .....	2-25	Cleaning and Inspection .....	2-54
Removal .....	2-25	Assembly .....	2-54
Cleaning and Inspection .....	2-25	Installation .....	2-56
Replacement .....	2-25	<b>2.21 Steering Head .....</b>	<b>2-57</b>
Installation .....	2-26	Removal .....	2-57
Checking Tire Runout.....	2-27	All Models Except FXDWG .....	2-57
Radial Runout .....	2-27	FXDWG Models .....	2-57
Lateral Runout .....	2-27	Cleaning and Inspection .....	2-58
Wheel Balancing .....	2-27	Disassembly .....	2-58
Wheel Weights and Colors (Table).....	2-27	Steering Head Bearing Race Removal .....	2-58
<b>2.13 Vehicle Alignment.....</b>	<b>2-28</b>	Assembly .....	2-59
Inspection .....	2-28	Installation .....	2-59
<b>2.14 Front Brake Master Cylinder.....</b>	<b>2-30</b>	All Models Except FXDWG .....	2-59
General .....	2-30	FXDWG Models .....	2-59
Removal/Disassembly .....	2-30	<b>2.22 Rear Shock Absorbers.....</b>	<b>2-60</b>
Cleaning and Inspection .....	2-32	General .....	2-60
Assembly/Installation .....	2-32	FXD, FXDL, FXDWG Models.....	2-60
<b>2.15 Rear Brake Master Cylinder .....</b>	<b>2-34</b>	Removal .....	2-60
Removal .....	2-34	Installation .....	2-60
Disassembly .....	2-35	FXDX, FXDXT Models .....	2-61
Cleaning and Inspection .....	2-35	Removal .....	2-61
Assembly .....	2-35	Installation .....	2-61
Installation .....	2-36	<b>2.23 Rear Fork.....</b>	<b>2-62</b>
<b>2.16 Front Brake Caliper.....</b>	<b>2-37</b>	Removal .....	2-62
Removal .....	2-37	Disassembly .....	2-63
Disassembly .....	2-37	Cleaning and Inspection .....	2-63
Cleaning, Inspection and Repair .....	2-39	Assembly .....	2-63
Assembly .....	2-39	Installation .....	2-63
Installation .....	2-40	<b>2.24 Belt Guard .....</b>	<b>2-64</b>
		Removal .....	2-64
		Installation .....	2-64

	Page No.
<b>2.25 Debris Deflector</b> .....	<b>2-65</b>
Removal .....	2-65
Installation .....	2-65
<b>2.26 Throttle Control</b> .....	<b>2-66</b>
Removal/Disassembly .....	2-66
Cleaning and Inspection .....	2-66
Assembly/Installation .....	2-66
Throttle Cable Routing .....	2-67
<b>2.27 Clutch Control</b> .....	<b>2-68</b>
Removal .....	2-68
Installation .....	2-68
<b>2.28 Front Fender</b> .....	<b>2-69</b>
Removal .....	2-69
Installation .....	2-69
<b>2.29 Rear Fender</b> .....	<b>2-70</b>
General .....	2-70
Removal .....	2-70
Tail Lamp/Turn Signal Harness Routing .....	2-70
Installation .....	2-71
FXDWG Model .....	2-71
Removal .....	2-71
Installation .....	2-71
FXD, FXDX and FXDL Models .....	2-72
Removal .....	2-72
Installation .....	2-72
FXDXT Model .....	2-72
Removal .....	2-72
Installation .....	2-72
<b>2.30 Jiffy Stand</b> .....	<b>2-73</b>
Cleaning .....	2-73
Removal .....	2-73
Installation .....	2-73
<b>2.31 Fork Lock</b> .....	<b>2-74</b>
Removal .....	2-74
Installation .....	2-74
<b>2.32 Seat</b> .....	<b>2-75</b>
Removal .....	2-75
Installation .....	2-75
<b>2.33 Engine Mounts</b> .....	<b>2-76</b>
Removal .....	2-76
Front Isolator .....	2-76
Rear Isolator .....	2-76
Installation .....	2-76
Front Isolator .....	2-76
Rear Isolator .....	2-76
<b>2.34 Saddlebags: FXDXT</b> .....	<b>2-77</b>
General .....	2-77
Removal .....	2-77
Installation .....	2-77
<b>2.35 Windshield: FXDXT</b> .....	<b>2-78</b>
Removal .....	2-78
Disassembly .....	2-78
Assembly .....	2-80
Installation .....	2-81

## SECTION 3-ENGINE

---

	Page No.
<b>3.1 Specifications</b> .....	<b>3-1</b>
<b>3.2 Torque Values</b> .....	<b>3-3</b>
<b>3.3 Service Wear Limits</b> .....	<b>3-5</b>
General .....	3-5
<b>3.4 Engine Oil Flow</b> .....	<b>3-7</b>
Oil Feed .....	3-7
Top End .....	3-8
Bottom End .....	3-8
Oil Return .....	3-12
<b>3.5 Oil Pump Operation</b> .....	<b>3-13</b>
General .....	3-13
Operation .....	3-13
<b>3.6 Breather Operation</b> .....	<b>3-14</b>
General .....	3-14
<b>3.7 Oil Pressure</b> .....	<b>3-15</b>
Oil Pressure Indicator Lamp .....	3-15
Checking Oil Pressure .....	3-15
<b>3.8 How To Use This Section</b> .....	<b>3-16</b>
Top End Repair .....	3-16
Bottom End Repair .....	3-16
Typical Symptoms .....	3-16
<b>3.9 Top End Service</b> .....	<b>3-17</b>
Engine In Chassis .....	3-17
Engine Removed From Chassis .....	3-18
<b>3.10 Bottom End Service</b> .....	<b>3-19</b>
Engine In Chassis: Cam Compartment Service .....	3-19
Engine Removed: Flywheel Compartment Service or Complete Engine Overhaul .....	3-20
<b>3.11 Troubleshooting</b> .....	<b>3-21</b>
Diagnosing Valve Train Noise .....	3-21
Compression Test .....	3-21
Compression Test Results (Table) .....	3-21
Cylinder Leakage Test .....	3-22
Diagnosing Smoking Engine or High Oil Consumption .....	3-22
Check Prior To Cylinder Head Removal .....	3-22
Check After Cylinder Head Removal .....	3-22
<b>3.12 Stripping Motorcycle For Service</b> .....	<b>3-23</b>
Procedure .....	3-23
<b>3.13 Assembling Motorcycle After Service</b> .....	<b>3-24</b>
Procedure .....	3-24
<b>3.14 Removing Engine From Chassis</b> .....	<b>3-25</b>
Procedure .....	3-25
<b>3.15 Installing Engine In Chassis</b> .....	<b>3-26</b>
Procedure .....	3-26

	Page No.		Page No.
<b>3.16 Top End Overhaul: Disassembly</b>	<b>3-28</b>	<b>3.23 Cylinder Head</b>	<b>3-61</b>
General	3-28	Removal Overview	3-61
Breather Assembly	3-28	Disassembly	3-61
Rocker Arm Support Plate	3-29	Cleaning	3-62
Pushrods, Lifters and Covers	3-30	Inspection	3-63
Cylinder Head	3-30	Cylinder Head	3-63
Cylinder	3-31	Valve Guides	3-63
Piston	3-32	Valve Stem To Guide Clearance Service Wear Limits (Table)	3-63
<b>3.17 Top End Overhaul: Assembly</b>	<b>3-33</b>	Valves	3-63
General	3-33	Valve Springs	3-63
Piston	3-33	Tapered Keepers	3-64
Cylinder	3-34	Valve Seats	3-64
Cylinder Head	3-36	Valve Guide Replacement	3-64
Pushrods, Lifters and Covers	3-39	Removal	3-64
Push Rod/Lifter Locations (Table)	3-39	Installation	3-65
Rocker Arm Support Plate	3-40	Valve Stem To Guide Clearance (Table)	3-67
Breather Assembly	3-41	Refacing Valve Seats	3-67
<b>3.18 Bottom End Overhaul: Disassembly</b>	<b>3-42</b>	Assembly	3-70
General	3-42	Installation Overview	3-72
Cover and Cam Support Plate	3-42	<b>3.24 Cylinder</b>	<b>3-73</b>
Crankcase	3-45	Removal Overview	3-73
<b>3.19 Bottom End Overhaul: Assembly</b>	<b>3-46</b>	Cleaning	3-73
General	3-46	Inspection	3-74
Crankcase	3-46	Deglazing Cylinder	3-75
Cover and Cam Support Plate	3-49	Boring and Honing Cylinder	3-76
Rear Cam Sprocket Spacers (Table)	3-51	Installation Overview	3-76
<b>3.20 Breather Assembly</b>	<b>3-55</b>	Oversize Pistons/Cylinder Bores (Table)	3-76
Removal Overview	3-55	<b>3.25 Piston</b>	<b>3-77</b>
Disassembly	3-55	Removal Overview	3-77
Inspection	3-55	Disassembly	3-77
Assembly	3-55	Piston Rings	3-77
Installation Overview	3-55	Cleaning	3-77
<b>3.21 Rocker Arm Support Plate</b>	<b>3-56</b>	Inspection	3-78
Removal Overview	3-56	Assembly	3-80
Disassembly	3-56	Piston Rings	3-80
Cleaning and Inspection	3-56	Ring End Gap (Table)	3-80
Assembly	3-58	Installation Overview	3-81
Installation Overview	3-58	<b>3.26 Upper Connecting Rod</b>	<b>3-82</b>
<b>3.22 Pushrods, Lifters and Covers</b>	<b>3-59</b>	Removal Overview	3-82
Removal Overview	3-59	Disassembly/Assembly	3-82
Disassembly	3-59	Removing Upper Connecting Rod Bushing	3-82
Cleaning and Inspection	3-59	Installing Upper Connecting Rod Bushing	3-83
Lifter Inspection	3-60	Reaming Upper Connecting Rod Bushing	3-84
Assembly	3-60	Honing Upper Connecting Rod Bushing	3-85
Installation Overview	3-60	Installation Overview	3-85

**3.27 Cover and Cam Support Plate.. 3-87**

Removal Overview .....	3-87
Disassembly/Assembly .....	3-88
Crankshaft Bushing .....	3-88
Removal .....	3-88
Installation .....	3-88
Reaming Crankshaft Bushing .....	3-89
Camshafts and Camshaft Bearings .....	3-90
Removal .....	3-90
Installation .....	3-93
Cam Chain Tensioners .....	3-97
Removal .....	3-97
Installation .....	3-98
Oil Pressure Relief Valve .....	3-98
Removal .....	3-98
Installation .....	3-98
Cam Needle Bearings .....	3-99
Removal .....	3-99
Installation .....	3-100
Cleaning and Inspection .....	3-101
Installation Overview .....	3-101

**3.28 Oil Pump ..... 3-102**

Removal Overview .....	3-102
Cleaning and Inspection .....	3-102
Installation Overview .....	3-102

**3.29 Oil Filter Mount and Adapter .... 3-103**

Removal .....	3-103
Installation .....	3-103

**3.30 Crankcase ..... 3-104**

Removal Overview .....	3-104
Right Crankcase Half .....	3-104
Crankshaft (Roller) Bearing .....	3-104
Piston Jets .....	3-105
Left Crankcase Half .....	3-106
Crankshaft (Roller) Bearing .....	3-106
Cylinder Studs .....	3-108
Removal .....	3-108
Installation .....	3-108
Pipe Plug and Oil Fittings .....	3-108
Removal .....	3-108
Installation .....	3-108
Cleaning and Inspection .....	3-108
Installation Overview .....	3-108

**3.31 Flywheel/Connecting Rod..... 3-109**

Removal Overview .....	3-109
Inspection .....	3-109
Installation Overview .....	3-109

**3.32 Oil Pan ..... 3-110**

Removal .....	3-110
Installation .....	3-111

**SECTION 4-FUEL SYSTEM****4.1 Specifications ..... 4-1**

Torque Values (Table) .....	4-1
-----------------------------	-----

**4.2 Fuel System Troubleshooting..... 4-2**

Carburetor .....	4-2
Overflow Troubleshooting (Table) .....	4-2
Poor Idling (Table) .....	4-2
Poor Fuel Economy (Table) .....	4-2
Poor Acceleration (Table) .....	4-3
Hard Starting (Table) .....	4-3
Poor Performance On Road (Table) .....	4-3
Poor High Speed Performance (Table) .....	4-4
Vacuum Piston Assembly .....	4-4
Piston Does Not Raise Properly (Table) .....	4-4
Piston Does Not Close Properly (Table) .....	4-4

**4.3 Enrichener..... 4-5**

General .....	4-5
Operation .....	4-5
Cool Engine .....	4-5
Warm Climate or Hot Engine .....	4-5

**4.4 Carburetor ..... 4-6**

Removal .....	4-6
Disassembly .....	4-8
Vacuum Piston Chamber .....	4-8
Carburetor Body .....	4-8
Accelerator Pump .....	4-8
Cleaning and Inspection .....	4-8
Vacuum Piston Components .....	4-8
Carburetor Body Components .....	4-8
Float Replacement .....	4-9
Accelerator Pump .....	4-9
Assembly .....	4-9
Vacuum Piston Chamber .....	4-9
Carburetor Body .....	4-9
Accelerator Pump .....	4-9
Installation .....	4-10

**4.5 Carburetor Adjustments ..... 4-11**

Operation Check: Vacuum Piston .....	4-11
Opening Malfunction .....	4-11
Closing Malfunction .....	4-11
Float Bowl .....	4-11
Float Bowl Inlet (Needle) Valve Replacement .....	4-11
Float Level .....	4-12

**4.6 Fuel Supply Valve..... 4-15**

General .....	4-15
Operation .....	4-15
Removal, Inspection and Installation .....	4-15
Troubleshooting .....	4-15
Troubleshooting Fuel Supply Valve (Table) .....	4-15
Vacuum Test .....	4-16

	Page No.
<b>4.7 Fuel Tank .....</b>	<b>4-17</b>
General .....	4-17
Removal .....	4-17
Cleaning and Inspection .....	4-18
Installation .....	4-18
Vapor Valve .....	4-18
<b>4.8 Air Cleaner.....</b>	<b>4-19</b>
Removal .....	4-19
Installation .....	4-19
Backplate Assembly: California Models .....	4-20
<b>4.9 Exhaust System .....</b>	<b>4-21</b>
Removal .....	4-21
Disassembly .....	4-21
Assembly .....	4-21
Installation .....	4-21
<b>4.10 Evaporative Emissions Control: CA Models .....</b>	<b>4-23</b>
General .....	4-23
Charcoal Canister.....	4-24
Removal .....	4-24
Installation .....	4-24
Hose Routing/Replacement.....	4-25
 <b>SECTION 5-ELECTRIC STARTER</b>	
<b>5.1 Specifications.....</b>	<b>5-1</b>
Starter (Table) .....	5-1
Service Wear Limits (Table) .....	5-1
Torque Values (Table).....	5-1
<b>5.2 Electric Starter System.....</b>	<b>5-2</b>
General.....	5-2
Wiring Diagrams .....	5-2
Starter Relay.....	5-2
Operation.....	5-2
<b>5.3 Starter Relay.....</b>	<b>5-5</b>
Removal .....	5-5
Installation .....	5-5
<b>5.4 Starter .....</b>	<b>5-6</b>
Removal .....	5-6
Installation .....	5-6
Disassembly, Inspection and Repair .....	5-8
Assembly .....	5-11
<b>5.5 Starter Solenoid .....</b>	<b>5-13</b>
General.....	5-13
Disassembly .....	5-13
Assembly .....	5-13
<b>5.6 Starter Jackshaft.....</b>	<b>5-14</b>
Removal/Disassembly .....	5-14
Assembly/Installation.....	5-15

## SECTION 6-DRIVE

---

	Page No.
<b>6.1 Specifications .....</b>	<b>6-1</b>
Torque Values (Table) .....	6-1
<b>6.2 Primary Chaincase .....</b>	<b>6-2</b>
General .....	6-2
Primary Chaincase Cover .....	6-2
Removal .....	6-2
Installation .....	6-3
Primary Chaincase Housing .....	6-3
Removal .....	6-3
Inspection.....	6-4
Mainshaft Bearing and Lip Seal .....	6-4
Removal .....	6-4
Installation.....	6-5
<b>6.3 Drive Components.....</b>	<b>6-6</b>
Primary Chain and Compensating Sprocket.....	6-6
Removal .....	6-6
Installation .....	6-7
Sprocket Alignment.....	6-9
Spacer Thickness (Table) .....	6-9
Chain Tensioner Shoe .....	6-9
<b>6.4 Clutch .....</b>	<b>6-10</b>
Removal/Installation.....	6-10
Clutch Pack Only .....	6-10
Partial Disassembly .....	6-10
Assembly .....	6-10
Cleaning and Inspection .....	6-12
Clutch Pack and Bearing .....	6-12
Complete Disassembly .....	6-12
Assembly .....	6-13
<b>6.5 Transmission Sprocket.....</b>	<b>6-15</b>
Removal.....	6-15
Cleaning and Inspection .....	6-15
Installation .....	6-15
<b>6.6 Drive Belt.....</b>	<b>6-17</b>
Removal.....	6-17
Inspection.....	6-17
Installation .....	6-17

**SECTION 7-TRANSMISSION**

<b>7.1 Specifications .....</b>	<b>7-1</b>
Torque Values.....	7-2
<b>7.2 Transmission .....</b>	<b>7-3</b>
General .....	7-3
Neutral .....	7-3
1st Gear .....	7-3
2nd Gear .....	7-3
3rd Gear .....	7-3
4th Gear .....	7-3
5th Gear .....	7-3
Shifter Linkage Adjustment .....	7-5
<b>7.3 Shifter Cam Assembly.....</b>	<b>7-6</b>
Removal/Disassembly .....	7-6
Cleaning and Inspection .....	7-7
Assembly/Installation .....	7-8
<b>7.4 Shifter Forks.....</b>	<b>7-10</b>
Removal.....	7-10
Cleaning and Inspection .....	7-10
Installation.....	7-11
<b>7.5 Transmission Clutch Release Cover .....</b>	<b>7-12</b>
Removal/Disassembly .....	7-12
Cleaning and Inspection .....	7-13
Assembly/Installation .....	7-13
<b>7.6 Mainshaft and Countershaft .....</b>	<b>7-15</b>
Removal.....	7-15
Disassembly.....	7-16
Cleaning and Inspection .....	7-16
Replacing Side Door Bearings.....	7-16
Assembly .....	7-16
Installation.....	7-23
<b>7.7 Transmission Case.....</b>	<b>7-25</b>
Removal.....	7-25
General .....	7-25
Main Drive Gear and Bearing .....	7-25
Installation.....	7-25
Main Drive Gear and Bearing .....	7-25
Disassembly.....	7-28
Shifter Arm Assembly .....	7-28
Cleaning and Inspection .....	7-28
Assembly .....	7-29
Shifter Pawl Lever Assembly .....	7-29

**SECTION 8-ELECTRICAL**

<b>8.1 Specifications .....</b>	<b>8-1</b>
Torque Values .....	8-2
<b>8.2 Bulb Requirements .....</b>	<b>8-3</b>
General.....	8-3
Dyna Glide Bulb Chart (Table) .....	8-3
Dyna Glide Indicator Bulb Chart (Table).....	8-3
<b>8.3 Ignition System.....</b>	<b>8-4</b>
General.....	8-4
Troubleshooting.....	8-4
<b>8.4 Electrical Panel.....</b>	<b>8-6</b>
Removal .....	8-6
Removing Cover and Bracket.....	8-6
Removing Panel For Ignition Module Access.....	8-7
Installation .....	8-8
<b>8.5 Ignition Module.....</b>	<b>8-9</b>
General.....	8-9
Ignition Timing .....	8-9
Removal .....	8-9
Installation .....	8-9
<b>8.6 Manifold Absolute Pressure Sensor (MAP).....</b>	<b>8-10</b>
General.....	8-10
Removal .....	8-10
Installation .....	8-10
<b>8.7 Crank Position Sensor (CKP).....</b>	<b>8-11</b>
General.....	8-11
Removal .....	8-11
Installation .....	8-12
Crank Position Sensor Terminals (Table).....	8-12
Oil Pressure Switch Sensor Terminals (Table)....	8-12
<b>8.8 Spark Plug Cables.....</b>	<b>8-13</b>
General.....	8-13
Removal .....	8-13
Installation .....	8-13
<b>8.9 Ignition Coil.....</b>	<b>8-14</b>
Removal .....	8-14
Installation .....	8-14
<b>8.10 Fuses .....</b>	<b>8-15</b>
General.....	8-15
Replacement .....	8-15
<b>8.11 Main Circuit Breaker .....</b>	<b>8-16</b>
General.....	8-16
Removal .....	8-16
Installation .....	8-17

	Page No.		Page No.
<b>8.12 Ignition/Light Switch.....</b>	<b>8-18</b>	<b>8.22 Speedometer and Tachometer .</b>	<b>8-41</b>
General.....	8-18	<b>8.23 Instruments: FXDWG .....</b>	<b>8-42</b>
Replacement .....	8-18	Removal.....	8-42
FXD, FXDL, FXDX, FXDXT Models .....	8-18	Speedometer .....	8-42
Key Switch Functions and Positions (Table) .....	8-18	Installation.....	8-42
FXDWG Models.....	8-19	Speedometer .....	8-42
<b>8.13 Alternator.....</b>	<b>8-20</b>	<b>8.24 Instruments: FXDL .....</b>	<b>8-43</b>
Removal/Disassembly .....	8-20	Removal.....	8-43
Cleaning/Inspection .....	8-20	General .....	8-43
Assembly/Installation.....	8-20	Speedometer .....	8-43
<b>8.14 Voltage Regulator .....</b>	<b>8-21</b>	Tachometer.....	8-43
Removal .....	8-21	Installation.....	8-43
Installation .....	8-22	General .....	8-43
<b>8.15 Battery.....</b>	<b>8-23</b>	Speedometer .....	8-43
Battery Testing .....	8-23	Tachometer .....	8-43
General.....	8-23	<b>8.25 Instruments: FXD, FXDX, FXDXT .....</b>	<b>8-44</b>
Voltmeter Test .....	8-23	Removal.....	8-44
Load Test.....	8-23	Speedometer .....	8-44
Voltmeter Test For Battery Charge Conditions (Table).....	8-23	Tachometer: FXDX, FXDXT Only .....	8-44
Battery Load Test (Table).....	8-23	Installation.....	8-44
Charging Battery.....	8-24	General .....	8-44
Safety Precautions .....	8-24	Speedometer .....	8-44
Using a Battery Charger.....	8-24	Tachometer: FXDX, FXDXT Only .....	8-44
Battery Charging Rates/Times (Table).....	8-24	<b>8.26 Speedometer Speed Sensor.....</b>	<b>8-45</b>
<b>8.16 Battery Cables.....</b>	<b>8-26</b>	General .....	8-45
Routing Procedure.....	8-26	Removal.....	8-45
<b>8.17 Headlamp.....</b>	<b>8-27</b>	Installation.....	8-45
General.....	8-27	<b>8.27 Indicator Lamps: All But FXDWG .....</b>	<b>8-46</b>
Removal .....	8-27	Bulb Replacement.....	8-46
FXD, FXDL, FXDX Models .....	8-27	FXD, FXDX and FXDXT Models .....	8-46
FXDWG, FXDXT Models.....	8-27	FXDL Models .....	8-46
Installation .....	8-27	Lamp Housing Replacement.....	8-46
<b>8.18 Tail Lamp .....</b>	<b>8-29</b>	FXD, FXDX, FXDXT Connector [20] Pins (Table).....	8-47
General.....	8-29	<b>8.28 Indicator Lamps: FXDWG .....</b>	<b>8-48</b>
Bulb Replacement .....	8-29	General .....	8-48
Base Replacement .....	8-29	Removal.....	8-48
Tail Lamp Wires (Table).....	8-30	Installation.....	8-48
<b>8.19 Turn Signals/Running Lights....</b>	<b>8-31</b>	FXDWG Connector [21] Pins (Table).....	8-48
Bulb Replacement .....	8-31	LED Assembly Wiring (Table).....	8-48
Lamp Housing Replacement .....	8-31	<b>8.29 Neutral Switch.....</b>	<b>8-49</b>
FXDXT Turn Signals.....	8-31	General .....	8-49
FXD, FXDX, FXDL, FXDWG Turn Signals .....	8-32	Removal.....	8-49
<b>8.20 TSM/TSSM Module.....</b>	<b>8-34</b>	Installation.....	8-49
Removal .....	8-34	<b>8.30 Oil Pressure Switch.....</b>	<b>8-50</b>
Installation .....	8-35	General .....	8-50
<b>8.21 Fuel Gauge .....</b>	<b>8-39</b>	Removal.....	8-50
General.....	8-39	Installation.....	8-50
FXDL, FXDWG Models .....	8-39	<b>8.31 Rear Stoplight Switch .....</b>	<b>8-51</b>
Removal .....	8-39	General .....	8-51
Installation .....	8-39	Removal.....	8-51
FXD, FXDX, FXDXT Models .....	8-40	Installation.....	8-51
Removal .....	8-40		
Installation .....	8-40		

	Page No.
<b>8.32 Horn .....</b>	<b>8-52</b>
Inspection.....	8-52
Replacement.....	8-52
<b>8.33 Main Wiring Harness .....</b>	<b>8-53</b>
General .....	8-53
Removal.....	8-53
Installation.....	8-54
<b>8.34 Handlebar Switch Assemblies..</b>	<b>8-56</b>
General .....	8-56
Repair Procedures .....	8-56
<b>8.35 Right Handlebar Switch .....</b>	<b>8-57</b>
Removal.....	8-57
Installation.....	8-57
Disassembly.....	8-59
Switch Repair/Replacement.....	8-60
Upper Housing Repair .....	8-60
Lower Housing Repair .....	8-61
Assembly .....	8-62
<b>8.36 Left Handlebar Switch .....</b>	<b>8-63</b>
Removal.....	8-63
Installation.....	8-63
Disassembly.....	8-64
Switch Repair/Replacement.....	8-64
Upper Housing Repair .....	8-64
Lower Housing Repair .....	8-65
Assembly .....	8-65

## APPENDIX A-TOOLS

---

<b>A.1 Tools.....</b>	<b>A-1</b>
-----------------------	------------

## APPENDIX B-WIRING

---

	Page No.
<b>B.1 Amp Multilock Electrical Connectors</b>	
<b>B-1</b>	
Removing Socket/Pin Terminals .....	B-1
Installing Socket/Pin Terminals .....	B-1
Crimping Instructions.....	B-4
<b>B.2 Deutsch Electrical Connectors...</b>	<b>B-5</b>
General.....	B-5
Removing/Disassembling.....	B-5
Removing/Installing Sockets .....	B-5
Removing/Installing Pins .....	B-6
Assembling/Installing.....	B-7
Crimping Instructions.....	B-8
<b>B.3 Mini-Deutsch Connectors .....</b>	<b>B-10</b>
General.....	B-10
Mini-Deutsch Connectors For Size 20, 16 and 12	
Contacts Wire Range 26-12 AWG.....	B-10
Crimping Instructions.....	B-10
<b>B.4 Sealed Butt Splice Connectors ..</b>	<b>B-12</b>
Installation .....	B-12
<b>B.5 Packard Electrical Connectors...</b>	<b>B-13</b>
General.....	B-13
Pull-to-Seat Terminals .....	B-14
Removing External Latch Type .....	B-14
Installing External Latch Type .....	B-14
Push-to-Seat Terminals.....	B-14
Removing Push-to-Seat Terminals.....	B-14
Installing Push-to-Seat Terminals.....	B-15
Crimping Instructions.....	B-15
<b>B.6 Connector Locations.....</b>	<b>B-17</b>
<b>B.7 Index to Wiring Diagrams .....</b>	<b>B-19</b>

## APPENDIX C- METRIC CONVERSIONS

---

<b>C.1 Metric Conversions .....</b>	<b>C-1</b>
<b>C.2 Fastener Torque Values .....</b>	<b>C-2</b>
<b>C.3 Fluid Conversions .....</b>	<b>C-4</b>
United States System .....	C-4
Metric System.....	C-4
British Imperial System.....	C-4

<b>SUBJECT</b>	<b>PAGE NO.</b>
1.1 General .....	1-1
1.2 Fuel and Oil .....	1-5
1.3 Maintenance Schedule .....	1-6
1.4 Engine Oil and Filter .....	1-11
1.5 Battery Maintenance .....	1-13
1.6 Brakes .....	1-16
1.7 Bleeding Brakes .....	1-18
1.8 Brake Pads and Discs .....	1-19
1.9 Tires and Wheels .....	1-22
1.10 Primary Chain .....	1-24
1.11 Primary Chaincase Lubricant .....	1-26
1.12 Clutch .....	1-28
1.13 Transmission Lubricant .....	1-30
1.14 Rear Belt Deflection .....	1-31
1.15 Rear Belt and Sprockets .....	1-33
1.16 Suspension Adjustments .....	1-35
1.17 Steering Head Bearings .....	1-38
1.18 Front Fork Oil .....	1-39
1.19 Spark Plugs .....	1-40
1.20 Air Cleaner Filter .....	1-41
1.21 Cable and Chassis Lubrication .....	1-43
1.22 Throttle Cables and Enrichener .....	1-44
1.23 Idle Speed and Ignition Timing .....	1-46
1.24 Fuel Supply Valve Filter .....	1-47
1.25 Engine Mounts .....	1-49
1.26 Headlamp Alignment .....	1-50
1.27 Critical Fasteners .....	1-52
1.28 Storage .....	1-53
1.29 Troubleshooting .....	1-55

## SERVICING A NEW MOTORCYCLE

### WARNING

Always follow the listed service and maintenance recommendations, since they affect the safe operation of the motorcycle and the personal welfare of the rider. Failure to follow recommendations could result in death or serious injury.

Service operations to be performed before customer delivery are specified in the applicable model year PREDELIVERY AND SETUP MANUAL.

The performance of new motorcycle initial service is required to keep warranty in force and to ensure proper emissions systems operation.

After a new motorcycle has been driven its first 1000 miles (1600 km), and at every 2500 mile (4000 km) interval thereafter, have a Harley-Davidson dealer perform the service operations listed under 1.3 MAINTENANCE SCHEDULE.

## SAFE OPERATING MAINTENANCE

### CAUTION

- Do not attempt to retighten engine head bolts. Retightening can cause engine damage.
- During the initial 1000 mile (1600 km) break-in period, use only Harley-Davidson 20W50 engine oil. Failure to use the recommended oil will result in improper break-in of the engine cylinders and piston rings.

A careful check of certain equipment is necessary after periods of storage, and frequently between regular service intervals, to determine if additional maintenance is required.

Check:

1. Tires for abrasions, cuts and correct pressure.
2. Secondary drive belt for proper tension and condition.
3. Brakes, steering and throttle for responsiveness.
4. Brake fluid level and condition. Hydraulic lines and fittings for leaks. Also, check brake pads and rotors for wear.
5. Cables for fraying, crimping and free operation.
6. Engine oil and transmission fluid levels.
7. Headlamp, passing lamp, tail lamp, brake lamp and turn signal operation.

## SHOP PRACTICES

### Repair Notes

#### NOTE

- General maintenance practices are given in this section.
- Repair = Disassembly/Assembly.
- Replace = Removal/Installation.

All special tools and torque values are noted at the point of use.

All required parts or materials can be found in the appropriate PARTS CATALOG.

### Safety

Safety is always the most important consideration when performing any job. Be sure you have a complete understanding of the task to be performed. Use common sense. Use the proper tools. Protect yourself and bystanders with approved eye protection. Don't just do the job – do the job safely.

### Removing Parts

Always consider the weight of a part when lifting. Use a hoist whenever necessary. Do not lift heavy parts by hand. A hoist and adjustable lifting beam or sling are needed to remove some parts. The lengths of chains or cables from the hoist to the part should be equal and parallel and should be positioned directly over the center of the part. Be sure that no obstructions will interfere with the lifting operation. Never leave a part suspended in mid-air.

### WARNING

Always check the capacity rating and condition of hoists, slings, chains or cables before use. Failure to do so could lead to an accident which could result in death or serious injury.

Always use blocking or proper stands to support the part that has been hoisted. If a part cannot be removed, verify that all bolts and attaching hardware have been removed. Check to see if any parts are in the way of the part being removed.

When removing hoses, wiring or tubes, always tag each part to ensure proper installation.

### Cleaning

If you intend to reuse parts, follow good shop practice and thoroughly clean the parts before assembly. Keep all dirt out of parts; the unit will perform better and last longer. Seals, filters and covers are used in this vehicle to keep out environmental dirt and dust. These items must be kept in good condition to ensure satisfactory operation.

Clean and inspect all parts as they are removed. Be sure all holes and passages are clean and open. After cleaning, cover all parts with clean lint-free cloth, paper or other material. Be sure the part is clean when it is installed.

Always clean around lines or covers before they are removed. Plug, tape or cap holes and openings to keep out dirt, dust and debris.

Always verify cleanliness of blind holes before assembly. Tightening a screw with dirt, water or oil in the hole can cause castings to crack or break.

## Disassembly and Assembly

Always assemble or disassemble one part at a time. Do not work on two assemblies simultaneously. Be sure to make all necessary adjustments. Recheck your work when finished. Be sure that everything is done.

Operate the vehicle to perform any final check or adjustments. If all is correct, the vehicle is ready to go back to the customer.

## REPAIR AND REPLACEMENT PROCEDURES

---

### Hardware and Threaded Parts

Install helical thread inserts when inside threads in castings are stripped, damaged or not capable of withstanding specified torque.

Replace bolts, nuts, studs, washers, spacers and small common hardware if missing or in any way damaged. Clean up or repair minor thread damage with a suitable tap or die.

Replace all damaged or missing lubrication fittings.

Use Teflon pipe sealant on pipe fitting threads.

### Wiring, Hoses and Lines

Replace hoses, clamps, electrical wiring, electrical switches or fuel lines if they do not meet specifications.

### Instruments and Gauges

Replace broken or defective instruments and gauges. Replace dials and glass that are so scratched or discolored that reading is difficult.

### Bearings

Anti-friction bearings must be handled in a special way. To keep out dirt and abrasives, cover the bearings as soon as they are removed from the package.

Wash bearings in a non-flammable cleaning solution. Knock out packed lubricant inside by tapping the bearing against a wooden block. Wash bearings again. Cover bearings with clean material after setting them down to dry. Never use compressed air to dry bearings.

Coat bearings with clean oil. Wrap bearings in clean paper.

Be sure that the chamfered side of the bearing always faces the shoulder (when bearings installed against shoulders). Lubricate bearings and all metal contact surfaces before pressing into place. Only apply pressure on the part of the bearing that makes direct contact with the mating part.

Always use the proper tools and fixtures for removing and installing bearings.

Bearings do not usually need to be removed. Only remove bearings if necessary.

### Bushings

Do not remove a bushing unless damaged, excessively worn or loose in its bore. Press out bushings that must be replaced.

When pressing or driving bushings, be sure to apply pressure in line with the bushing bore. Use a bearing/bushing driver or a bar with a smooth, flat end. Never use a hammer to drive bushings.

Inspect the bushing and the mated part for oil holes. Be sure all oil holes are properly aligned.

### Gaskets

Always discard gaskets after removal. Replace with **new** gaskets. Unless otherwise instructed, never use the same gasket twice. Be sure that gasket holes match up with holes in the mating part. But be aware that sections of a gasket may be used to seal passages.

### Lip Type Seals

Lip seals are used to seal oil or grease and are usually installed with the sealing lip facing the contained lubricant. Seal orientation, however, may vary under different applications.

Seals should not be removed unless necessary. Only remove seals if required to gain access to other parts or if seal damage or wear dictates replacement.

Leaking oil or grease usually means that a seal is damaged. Replace leaking seals to prevent overheated bearings.

Always discard seals after removal. Do not use the same seal twice.

### O-Rings (Preformed Packings)

Always discard O-rings after removal. Replace with **new** O-rings. To prevent leaks, lubricate the O-rings before installation. Apply the same type of lubricant as that being sealed. Be sure that all gasket, O-ring and seal mating surfaces are thoroughly clean before installation.

## Gears

Always check gears for damaged or worn teeth.

Lubricate mating surfaces before pressing gears on shafts.

## Shafts

If a shaft does not come out easily, check that all nuts, bolts or retaining rings have been removed. Check to see if other parts are in the way before using force.

Shafts fitted to tapered splines should be very tight. If shafts are not tight, disassemble and inspect tapered splines. Discard parts that are worn. Be sure tapered splines are clean, dry and free of burrs before putting them in place. Press mating parts together tightly.

Clean all rust from the machined surfaces of new parts.

## Part Replacement

Always replace worn or damaged parts with **new** parts.

## CLEANING

---

### Part Protection

Before cleaning, protect rubber parts (such as hoses, boots and electrical insulation) from cleaning solutions. Use a grease-proof barrier material. Remove the rubber part if it cannot be properly protected.

### Cleaning Process

Any cleaning method may be used as long as it does not result in parts damage. Thorough cleaning is necessary for proper parts inspection. Strip rusted paint areas to bare metal before repainting.

### Rust or Corrosion Removal

Remove rust and corrosion with a wire brush, abrasive cloth, sand blasting, vapor blasting or rust remover. Use buffing crocus cloth on highly polished parts that are rusted.

### Bearings

Clean open bearings by soaking them in a petroleum cleaning solution. Never use a solution that contains chlorine.

Let bearings stand and dry. Do not dry using compressed air. Do not spin bearings while they are drying.

## TOOL SAFETY

---

### Air Tools

- Always use approved eye protection equipment when performing any task using air-operated tools.
- On all power tools, use only recommended accessories with proper capacity ratings.
- Do not exceed air pressure ratings of any power tools.
- Bits should be placed against work surface before air hammers are operated.
- Disconnect the air supply line to an air hammer before attaching a bit.
- Never point an air tool at yourself or another person.
- Protect bystanders with approved eye protection.

### Wrenches

- Never use an extension on a wrench handle.
- If possible, always pull on a wrench handle and adjust your stance to prevent a fall if something lets go.
- Never cock a wrench.
- Never use a hammer on any wrench other than a STRIKING FACE wrench.
- Discard any wrench with broken or battered points.
- Never use a pipe wrench to bend, raise or lift a pipe.

### Pliers/cutters/prybars

- Plastic- or vinyl-covered pliers handles are not intended to act as insulation; don't use on live electrical circuits.
- Don't use pliers or cutters for cutting hardened wire unless they were designed for that purpose.
- Always cut at right angles.
- Don't use any prybar as a chisel, punch or hammer.



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

## Hammers

- Never strike one hammer against a hardened object, such as another hammer.
- Always grasp a hammer handle firmly, close to the end.
- Strike the object with the full face of the hammer.
- Never work with a hammer which has a loose head.
- Discard hammer if face is chipped or mushroomed.
- Wear approved eye protection when using striking tools.
- Protect bystanders with approved eye protection.

## Punches/Chisels

- Never use a punch or chisel with a chipped or mushroomed end; dress mushroomed chisels and punches with a file.
- Hold a chisel or a punch with a tool holder if possible.
- When using a chisel on a small piece, clamp the piece firmly in a vise and chip toward the stationary jaw.
- Wear approved eye protection when using these tools.
- Protect bystanders with approved eye protection.

## Screwdrivers

- Don't use a screwdriver for prying, punching, chiseling, scoring or scraping.
- Use the right type of screwdriver for the job; match the tip to the fastener.
- Don't interchange POZIDRIV®, PHILLIPS® or REED AND PRINCE screwdrivers.
- Screwdriver handles are not intended to act as insulation; don't use on live electrical circuits.
- Don't use a screwdriver with rounded edges because it will slip – redress with a file.

## Ratchets and Handles

- Periodically clean and lubricate ratchet mechanisms with a light grade oil. Do not replace parts individually; ratchets should be rebuilt with the entire contents of service kit.
- Never hammer or put a pipe extension on a ratchet or handle for added leverage.
- Always support the ratchet head when using socket extensions, but do not put your hand on the head or you may interfere with the action of its reversing mechanism.
- When breaking loose a fastener, apply a small amount of pressure as a test to be sure the ratchet's gear wheel is engaged with the pawl.

## Sockets

- Never use hand sockets on power or impact wrenches.
- Select the right size socket for the job.
- Never cock any wrench or socket.
- Select only impact sockets for use with air or electric impact wrenches.
- Replace sockets showing cracks or wear.
- Keep sockets clean.
- Always use approved eye protection when using power or impact sockets.

## Storage Units

- Don't open more than one loaded drawer at a time. Close each drawer before opening up another.
- Close lids and lock drawers and doors before moving storage units.
- Don't pull on a tool cabinet; push it in front of you.
- Set the brakes on the locking casters after the cabinet has been rolled to your work.

## FUEL

### WARNING

Remove filler cap slowly and fill fuel tank slowly to prevent spillage; do not overfill or fill above the bottom of the filler neck insert. In addition, leave air space to allow for fuel expansion. Expansion can cause an overfilled tank to overflow gasoline through the filler cap onto surrounding areas. After refueling, be sure filler cap is securely tightened. Inadequate safety precautions may cause an explosion or fire which could result in death or serious injury.

Use a good quality leaded or unleaded gasoline (91 pump octane or higher). Pump octane is the octane number usually shown on the gas pump.

## GASOLINE BLENDS

### CAUTION

Using gasoline that has an alcohol additive, such as methanol, may cause fuel system rubber components' failure and/or engine damage.

Harley-Davidson motorcycles were designed to give the best performance using unleaded gasoline. Some fuel suppliers sell gasoline/alcohol blends as a fuel. The type and amount of alcohol added to the fuel is important.

- **DO NOT USE GASOLINES CONTAINING METHANOL.** Using gasoline/methanol blends will result in starting and driveability deterioration and damage to critical fuel system components.
- **ETHANOL** is a mixture of 10% ethanol (Grain alcohol) and 90% unleaded gasoline. Gasoline/ethanol blends can be used in your motorcycle if the ethanol content does not exceed 10%.
- **REFORMULATED OR OXYGENATED GASOLINES (RFG):** "Reformulated gasoline" is a term used to describe gasoline blends that are specifically designed to burn cleaner than other types of gasoline. Your motorcycle will run normally using this type of gas.

You may find that some gasoline blends adversely affect the starting, driveability or fuel efficiency of your bike. If you experience one or more of these problems, we recommend you try a different brand of gasoline or gasoline with a higher octane rating.

## ENGINE OIL

Use the proper grade of oil for the lowest temperature expected before the next oil change.

If it is necessary to add oil and Harley-Davidson oil is not available, use an oil certified for diesel engines. Acceptable diesel engine oil designations include:

- CF
- CF-4
- CG-4
- CH-4

The preferred viscosities for the diesel engine oils, in descending order, are:

- 20W-50
- 15W-40
- 10W-40

At the first opportunity, see a Harley-Davidson dealer to change back to 100 percent Harley-Davidson oil.

See 1.4 ENGINE OIL AND FILTER for all service information.

## WINTER LUBRICATION

Combustion in an engine produces water vapor. During starting and warm-up in cold weather, especially in freezing temperatures, the vapor condenses to water before the crankcase is hot enough to exhaust it through the breather system. If the engine is run long enough for the crankcase to become thoroughly heated, the water returns to vapor and is then exhausted.

An engine used for only short trips, and seldom allowed to thoroughly warm up, accumulates increasing amounts of water in the oil pan. Water mixed with oil forms a sludge that causes accelerated engine wear. In freezing temperatures, the water becomes slush or ice, which may clog oil lines and result in engine failure.

Always change the engine oil more often in winter. If the engine is used for short runs, change the oil even more frequently. The farther below freezing the temperature drops the more often the oil should be changed.

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**