

2006 SOFTAIL SERVICE MANUAL

The information in this Service Manual applies
to all 2006 Softail® models.

MAINTENANCE

1

CHASSIS

2

ENGINE

3

FUEL SYSTEM

4

ELECTRIC STARTER

5

DRIVE

6

TRANSMISSION

7

ELECTRICAL

8

FUEL INJECTION

9

APPENDIX

INDEX

TABLE OF CONTENTS

	Page No.		Page No.
SECTION 1—MAINTENANCE			
1.1 General.....	1-1	1.6 Brakes.....	1-16
Servicing a New Motorcycle.....	1-1	Fluid Inspection.....	1-16
Safe Operating Maintenance.....	1-1	Rear Brake Pedal.....	1-17
Shop Practices.....	1-1	Pedal Height.....	1-17
Repair Notes.....	1-1	Pedal Lubrication.....	1-17
Safety.....	1-1	Pedal Pad.....	1-17
Removing Parts.....	1-1	1.7 Bleeding Brakes.....	1-18
Cleaning.....	1-2	General.....	1-18
Disassembly and Assembly.....	1-2	Procedure.....	1-18
Repair and Replacement Procedures.....	1-2	1.8 Brake Pads and Discs.....	1-19
Hardware and Threaded Parts.....	1-2	Inspection.....	1-19
Wiring, Hoses and Lines.....	1-2	Brake Pads.....	1-19
Instruments and Gauges.....	1-2	Brake Disc Thickness.....	1-19
Bearings.....	1-2	Brake Disc Lateral Runout and Warpage.....	1-19
Bushings.....	1-2	Brake Pad Replacement.....	1-20
Gaskets.....	1-3	Rear Brake Caliper.....	1-20
Lip Type Seals.....	1-3	Front Brake Caliper; All But FLSTSC/FXSTS.....	1-22
O-Rings (Preformed Packings).....	1-3	1.9 Tires and Wheels.....	1-23
Gears.....	1-3	Tires.....	1-23
Shafts.....	1-3	Tire Pressures (table).....	1-23
Part Replacement.....	1-3	Tire Replacement.....	1-24
Cleaning.....	1-3	Wheel Bearings.....	1-24
Part Protection.....	1-3	Wheel Spokes.....	1-24
Cleaning Process.....	1-3	1.10 Primary Chain.....	1-25
Rust or Corrosion Removal.....	1-3	Inspection.....	1-25
Tool Safety.....	1-3	1.11 Primary Chaincase Lubricant...	1-26
Air Tools.....	1-3	Changing Lubricant.....	1-26
Wrenches.....	1-3	1.12 Clutch.....	1-28
Pliers/Cutters/Prybars.....	1-4	Adjustment.....	1-28
Hammers.....	1-4	1.13 Transmission Lubricant.....	1-30
Punches/Chisels.....	1-4	Changing Lubricant.....	1-30
Screwdrivers.....	1-4	1.14 Rear Belt Deflection.....	1-31
Ratchets and Handles.....	1-4	Inspection.....	1-31
Sockets.....	1-4	1.15 Rear Belt and Sprockets.....	1-32
Storage Units.....	1-4	General.....	1-32
1.2 Fuel and Oil.....	1-5	Cleaning.....	1-32
Fuel.....	1-5	Inspection.....	1-32
Gasoline Blends.....	1-5	Sprockets.....	1-32
Engine Oil.....	1-5	Rear Belt.....	1-32
Winter Lubrication.....	1-5	Drive Belt Wear Analysis (table).....	1-33
1.3 Maintenance Schedule.....	1-6	1.16 Suspension Adjustments.....	1-34
First Scheduled Maintenance.....	1-6	Rear Shock Preload.....	1-34
1.4 Engine Oil and Filter.....	1-11	1.17 Steering Head Bearings: All But FLSTSC/FXSTS.....	1-35
Checking and Adding Oil.....	1-11	Adjustment.....	1-35
Type of Oil.....	1-11	Bearing Adjustment (Fall-away).....	1-35
Checking Oil Level.....	1-11	Lubrication.....	1-35
Recommended Oil Grades (table).....	1-11		
Changing Oil and Filter.....	1-12		
1.5 Battery Maintenance.....	1-13		
General.....	1-13		
Battery Electrolyte Antidotes (table).....	1-13		
Disconnection and Removal.....	1-14		
Installation and Connection.....	1-14		
Inspection.....	1-15		
Storage.....	1-15		

	Page No.		Page No.
1.18 Steering Head Bearings: FLSTSC/FXSTS	1-36	1.32 Troubleshooting	1-59
General	1-36	General	1-59
Lubrication	1-36	Engine	1-59
Adjustment	1-36	Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-59
FLSTSC Models	1-37	Engine Turns Over But Does Not Start	1-59
FXSTS Models	1-37	Starts Hard	1-59
1.19 Rocker Bearings: FLSTSC/FXSTS	1-39	Starts But Runs Irregularly or Misses	1-59
Inspection	1-39	A Spark Plug Fouls Repeatedly.....	1-60
1.20 Front Fork Oil	1-41	Pre-Ignition or Detonation (Knocks or Pings)	1-60
Replacing Fork Oil	1-41	Overheating	1-60
1.21 Spark Plugs	1-43	Valve Train Noise	1-60
Inspection	1-43	Excessive Vibration	1-60
1.22 Air Cleaner Filter	1-44	Check Engine Light Illuminates During Operation	1-60
Removal	1-44	Lubrication System	1-60
Installation	1-45	Oil Does Not Return To Oil Tank.....	1-60
1.23 Cable and Chassis Lubrication	1-46	Engine Uses Too Much Oil Or Smokes Excessively	1-60
General	1-46	Engine Leaks Oil From Cases, Push Rods, Hoses	1-60
Cables and Hand Levers	1-46	Low Oil Pressure	1-61
Jiffy Stand	1-46	High Oil Pressure	1-61
1.24 Throttle Cables	1-47	Electrical System	1-61
Cable Inspection, Lubrication and Adjustment.....	1-47	Alternator Does Not Charge	1-61
Inspection and Lubrication	1-47	Alternator Charge Rate Is Below Normal	1-61
Adjustment	1-48	Speedometer Operates Erratically	1-61
1.25 Enrichener: Carbureted	1-49	Carburetor	1-61
Enrichener Operation	1-49	Floods	1-61
1.26 Idle Speed and Ignition Timing: Carbureted	1-50	Transmission	1-61
Idle Speed Inspection	1-50	Shifts Hard.....	1-61
Ignition Timing	1-50	Jumps Out Of Gear	1-61
1.27 Fuel Supply Valve Filter: Carbureted	1-51	Clutch Slips.....	1-61
Inspection	1-51	Clutch Drags Or Does Not Release.....	1-61
Fuel System Lines and Fittings	1-52	Clutch Chatters.....	1-61
1.28 Engine Mounts	1-53	Handling	1-62
Inspection	1-53	Irregularities.....	1-62
1.29 Headlamp Alignment	1-54	Brakes	1-62
Inspection	1-54	Brake Does Not Hold Normally.....	1-62
Adjustment	1-55		
FLSTSC/FXSTS Models	1-55	SECTION 2—CHASSIS	
FLSTC/FLSTF/FLSTN/FXSTB/FXST/FLST Models	1-55	2.1 Specifications	2-1
FXSTD Models	1-55	2.2 Torque Values	2-2
1.30 Critical Fasteners	1-56	Tires	2-5
Inspection	1-56	Tire Fitment, Tubeless Cast Wheels (table)	2-5
Critical Fasteners (table)	1-56	Tire Fitment, Laced Wheels (table)	2-5
1.31 Storage	1-57	Tire Pressure, All Models (table)	2-6
General	1-57	2.3 Vehicle Identification Number (V.I.N.)	2-7
Removal From Storage	1-58	General	2-7
		2.4 Front Wheel: All But FLSTSC/FXSTS/FXSTD	2-9
		Removal	2-9
		Disassembly	2-9
		Disc Wheel	2-9
		Laced Wheel.....	2-9
		Cleaning and Inspection	2-11
		Assembly	2-11
		Disc Wheel	2-11
		Laced Wheel.....	2-11
		Installation	2-11

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

	Page No.
2.5 Front Wheel: FXSTD	2-12
Removal	2-12
Disassembly	2-12
Cleaning and Inspection	2-12
Assembly	2-13
Installation	2-13
2.6 Front Wheel: FLSTSC	2-14
Removal	2-14
Disassembly	2-14
Cleaning and Inspection	2-14
Assembly	2-14
Installation	2-16
2.7 Front Wheel: FXSTS	2-17
Removal	2-17
Disassembly	2-17
Cleaning and Inspection	2-17
Assembly	2-17
Installation	2-19
2.8 Rear Wheel	2-20
Removal	2-20
Disassembly	2-20
Cleaning and Inspection	2-22
Assembly	2-22
Installation	2-22
2.9 Sealed Wheel Bearings	2-23
Inspection	2-23
Removal	2-23
Installation	2-24
2.10 Wheel Lacing: 16 In. Rim.....	2-25
General	2-25
Procedure	2-26
2.11 Wheel Lacing: 21 In. Rim.....	2-28
Procedure	2-28
2.12 Truing Laced Wheel.....	2-31
General	2-31
Lateral Truing	2-31
Wheel Offset Dimensions (table)	2-32
Radial Truing	2-34
2.13 Disc Rim Runout.....	2-35
General	2-35
Lateral Runout	2-35
Radial Runout	2-35
2.14 Tires	2-36
General	2-36
Removal	2-36
Cleaning and Inspection	2-36
Installation	2-37
Checking Tire Runout	2-38
Radial Runout	2-38
Lateral Runout	2-38
Wheel Balancing.....	2-39
Wheel Weights (Table)	2-39
2.15 Vehicle Alignment.....	2-40
Inspection	2-40

	Page No.
2.16 Front Brake Master Cylinder	2-41
General	2-41
Removal/Disassembly.....	2-41
Cleaning and Inspection	2-42
Assembly/Installation	2-44
2.17 Rear Brake Master Cylinder/ Reservoir	2-46
Removal	2-46
Installation	2-46
Disassembly	2-49
Cleaning and Inspection	2-50
Assembly	2-50
2.18 Front Brake Caliper: All But FLSTSC/FXSTS	2-52
Removal	2-52
Disassembly	2-52
Cleaning, Inspection and Repair	2-55
Assembly	2-56
Installation	2-57
2.19 Front Brake Caliper: FLSTSC ...	2-58
Front Brake Caliper	2-58
Removal	2-58
Installation	2-58
Brake Reaction Link	2-60
Removal	2-60
Installation	2-60
2.20 Front Brake Caliper: FXSTS	2-61
Removal	2-61
Installation	2-62
Disassembly	2-63
Cleaning and Inspection	2-64
Assembly	2-65
2.21 Rear Brake Caliper: All But FXST/FXSTB/FXSTS	2-66
Removal	2-66
Disassembly	2-66
Cleaning, Inspection and Repair	2-69
Assembly	2-69
Installation	2-70
2.22 Rear Brake Caliper: FXST/FXSTB/ FXSTS	2-71
Removal	2-71
Disassembly	2-71
Cleaning, Inspection and Repair	2-74
Assembly	2-75
Installation	2-76
2.23 Front Forks: All But FLSTSC/ FXSTS	2-77
General	2-77
Removal	2-77
Disassembly	2-77
Cleaning and Inspection	2-77
Assembly	2-81
Installation	2-81

	Page No.
2.24 Springer Fork: FLSTSC/FXSTS	2-82
General	2-82
Handlebar and Risers	2-82
Removal	2-82
Installation	2-82
Front Shock Absorber	2-84
Removal	2-84
Installation	2-84
Rigid Fork	2-85
Removal	2-85
Installation	2-85
Spring Fork	2-86
Disassembly	2-86
Assembly	2-88
Fork Rockers	2-90
Removal	2-90
Installation	2-90
Fork Stem Bearings	2-91
Removal/Installation	2-91
2.25 Steering Head.....	2-92
Removal	2-92
FLSTC, FLSTF, FLSTN, FLST Models	2-92
FXSTD, FXST, FXSTB Models	2-92
FLSTSC, FXSTS Models	2-93
Cleaning and Inspection	2-93
All Models	2-93
Disassembly	2-93
Removing Lower Bearings From Fork Stem	2-93
Steering Head Bearing Race Removal	2-94
Assembly	2-94
Installation	2-95
FLSTC, FLSTF, FLSTN, FLST Models	2-95
FXSTD, FXST, FXSTB Models	2-95
FLSTSC, FXSTS Models	2-95
2.26 Rear Fork	2-96
Removal	2-96
Cleaning and Inspection	2-96
Installation	2-97
2.27 Rear Shock Absorbers	2-98
General	2-98
Removal	2-98
Installation	2-98
2.28 Throttle Control.....	2-99
Removal/Disassembly	2-99
Cleaning and Inspection	2-99
Assembly/Installation	2-99
Cable Routing	2-100
All Models Except FXSTS/FLSTSC/FXSTD	2-100
FXSTS/FLSTSC Models	2-100
FXSTD Models	2-100
2.29 Handlebars	2-101
Removal	2-101
All But FXSTD/FXSTS/FLSTSC	2-101
FXSTD	2-102
Installation	2-103
All But FXSTD/FXSTS/FLSTSC	2-103
FXSTD	2-103
All Models	2-104
2.30 Clutch Hand Control.....	2-105
Removal	2-105
Installation	2-105

2.31 Front Fender: All But FLSTSC/ FXSTS.....	2-106
FXST, FXSTB Models	2-106
Removal	2-106
Installation	2-106
FLSTC, FLSTN, FLST Models	2-106
Removal	2-106
Installation	2-106
FLSTF Models	2-107
Removal	2-107
Installation	2-107
FXSTD Models	2-107
Removal	2-107
Installation	2-107
2.32 Front Fender: FLSTSC	2-108
Removal	2-108
Front Fender	2-108
Front Fender Bearing Replacement	2-108
Installation	2-109
2.33 Front Fender: FXSTS	2-110
Removal	2-110
Installation	2-111
2.34 Rear Fender: FLSTC/FLSTF/ FLST	2-112
Removal	2-112
FLSTC	2-112
FLSTF/FLST	2-112
Installation	2-113
2.35 Rear Fender: FXST/FXSTS/ FXSTB.....	2-114
Removal	2-114
Installation	2-115
2.36 Rear Fender: FXSTD	2-116
Removal	2-116
Disassembly	2-116
Assembly	2-117
Installation	2-117
2.37 Rear Fender: FLSTSC	2-118
Removal	2-118
Disassembly	2-118
Assembly	2-119
Installation	2-119
2.38 Rear Fender: FLSTN.....	2-120
Removal	2-120
Disassembly	2-120
Assembly	2-122
Installation	2-122
2.39 Rear Fender Wire Conduit: All But FXSTD	2-123
Installation	2-123

	Page No.
2.40 Belt Guard/Debris Deflector.....	2-125
Removal	2-125
Belt Guard	2-125
Debris Deflector.....	2-125
Installation	2-125
Belt Guard	2-125
Debris Deflector.....	2-125
2.41 Jiffy Stand.....	2-126
Cleaning	2-126
Removal	2-127
Installation	2-127
2.42 Fork Lock.....	2-128
Removal	2-128
Installation	2-128
2.43 Seat/Strap Retention Nut.....	2-129
Replacement	2-129
2.44 Seat: FXST/FXSTB/FXSTS.....	2-130
Removal/Installation	2-130
Seat Strap.....	2-130
Seat	2-130
2.45 Seat: FLSTF/FLSTC	2-131
Removal/Installation	2-131
Seat	2-131
Sissy Bar: FLSTC Models	2-131
2.46 Seat: FXSTD	2-132
Removal/Installation	2-132
2.47 Seat: FLSTSC/FLSTN/FLST.....	2-133
Removal/Installation	2-133
2.48 Luggage Rack: FLSTN.....	2-134
Removal/Installation	2-134
2.49 Saddlebags: FLSTC	2-135
Removal	2-135
Installation	2-135
2.50 Windshield: FLSTC	2-136
Removal	2-136
Installation	2-136

SECTION 3—ENGINE

3.1 Specifications.....	3-1
3.2 Engine Torque Values (table)	3-3
3.3 Service Wear Limits.....	3-4
General	3-4
3.4 Engine Oil Flow	3-6
Oil Feed	3-6
Top End	3-7
Bottom End.....	3-7
Chain Guide Bracket	3-11
Oil Return	3-11

	Page No.
3.5 Oil Pump Operation.....	3-12
General	3-12
Operation	3-12
3.6 Breather Operation.....	3-13
General	3-13
3.7 Oil Pressure	3-14
Oil Pressure Indicator Lamp	3-14
Checking Oil Pressure	3-14
3.8 How To Use This Section.....	3-15
Top End Repair.....	3-15
Bottom End Repair.....	3-15
Typical Symptoms.....	3-15
3.9 Top End Service	3-16
Engine In Chassis	3-16
Engine Removed From Chassis	3-17
3.10 Bottom End Service	3-18
Engine In Chassis: Cam Compartment Service.....	3-18
Engine Removed: Flywheel Compartment Service or Complete Engine Overhaul.....	3-19
3.11 Troubleshooting	3-20
Diagnosing Valve Train Noise.....	3-20
Compression Test.....	3-20
Compression Test Results (table).....	3-20
Cylinder Leakage Test	3-21
Diagnosing Smoking Engine or High Oil Consumption	3-21
Check Prior To Cylinder Head Removal	3-21
Check After Cylinder Head Removal	3-21
3.12 Stripping Motorcycle For Service.....	3-22
Procedure	3-22
3.13 Assembling Motorcycle After Service.....	3-23
Procedure	3-23
3.14 Removing Engine From Chassis	3-24
Procedure	3-24
3.15 Installing Engine In Chassis.....	3-25
Procedure	3-25
3.16 Top End Overhaul: Disassembly	3-27
General	3-27
Breather Assembly.....	3-27
Rocker Arm Support Plate	3-28
Push Rods, Lifters and Covers	3-29
Cylinder Head	3-30
Cylinder.....	3-31
Piston.....	3-33
3.17 Top End Overhaul: Assembly ..	3-34
General	3-34
Piston.....	3-34
Cylinder.....	3-35
Cylinder Head	3-38
Push rods, Lifters and Covers.....	3-41
Rocker Arm Support Plate	3-42
Breather Assembly.....	3-43

	Page No.		Page No.
3.18 Bottom End Overhaul:		3.24 Cylinder	3-88
Disassembly.....	3-45	Removal Overview	3-88
General	3-45	Cleaning	3-88
Cover and Cam Support Plate	3-45	Inspection	3-89
Crankcase.....	3-48	Deglazing Cylinder	3-90
Counterbalancer Assembly	3-49	Boring and Honing Cylinder.....	3-92
		Installation Overview	3-92
		Oversize Pistons/Cylinder Bores (table).....	3-92
3.19 Bottom End Overhaul: Assembly 3-52		3.25 Piston	3-93
General	3-52	Removal Overview	3-93
Counterbalancer Assembly	3-52	Disassembly	3-93
Balance Sprocket Spacers (table)	3-53	Piston Rings	3-93
Crankcase.....	3-55	Cleaning	3-93
Cover and Cam Support Plate	3-59	Inspection	3-94
Rear Cam Sprocket Spacers (table)	3-61	Assembly.....	3-96
		Piston Rings	3-96
		Installation Overview	3-97
3.20 Breather Assembly	3-65	3.26 Upper Connecting Rod	3-98
Removal Overview	3-65	Removal Overview	3-98
Disassembly.....	3-65	Disassembly/Assembly.....	3-98
Cleaning and Inspection	3-65	Removing Upper Connecting Rod Bushing.....	3-98
Assembly	3-65	Installing Upper Connecting Rod Bushing.....	3-99
Installation Overview	3-65	Reaming Upper Connecting Rod Bushing.....	3-100
		Honing Upper Connecting Rod Bushing.....	3-101
		Installation Overview	3-101
3.21 Rocker Arm Support Plate	3-66	3.27 Cover and Cam Support Plate... 3-103	
Removal Overview	3-66	Removal Overview	3-103
Disassembly.....	3-66	Disassembly/Assembly.....	3-104
Cleaning and Inspection	3-66	Crankshaft Bushing	3-104
Assembly	3-69	Removal	3-104
Installation Overview	3-69	Installation	3-104
		Reaming Crankshaft Bushing.....	3-105
		Camshafts and Camshaft Bearings.....	3-106
		Removal	3-106
		Installation	3-109
		Cam Chain Tensioners.....	3-113
		Removal	3-113
		Installation	3-113
		Oil Pressure Relief Valve.....	3-114
		Removal	3-114
		Cleaning	3-114
		Installation	3-114
		Cam Needle Bearings	3-115
		Removal	3-115
		Installation	3-116
		Installation Overview	3-117
3.22 Push Rods, Lifters and Covers 3-70		3.28 Oil Pump.....	3-118
Removal Overview	3-70	Removal Overview	3-118
Disassembly.....	3-70	Cleaning and Inspection	3-118
Cleaning and Inspection	3-70	Installation and Overview	3-119
Lifter Inspection.....	3-71		
Assembly	3-72		
Installation Overview	3-72		
3.23 Cylinder Head.....	3-73		
Removal Overview	3-73		
Disassembly.....	3-73		
Cleaning.....	3-75		
Inspection.....	3-75		
Cylinder Head	3-75		
Valve Guides.....	3-76		
Valve Stem To Guide Clearance Service Wear Limits (table)	3-76		
Valves	3-76		
Valve Springs	3-76		
Tapered Keepers	3-76		
Valve Seats	3-76		
Valve Guide Replacement	3-77		
Removal	3-77		
Installation	3-78		
Valve Stem To Guide Clearance (table)	3-81		
Valve and Seat Refacing	3-82		
Assembly	3-85		
Installation Overview	3-87		

	Page No.
3.29 Crankcase	3-120
Removal Overview	3-120
Right Crankcase Half.....	3-120
Chain Guide Screen	3-120
Crankshaft Bearing.....	3-120
Piston Jets	3-121
Left Crankcase Half.....	3-122
Crankshaft (Roller) Bearing.....	3-122
Sprocket Shaft Bearing Inner Race.....	3-124
Balance Shaft Support Bearings	3-127
Cylinder Studs	3-128
Removal	3-128
Installation	3-128
Pipe Plug and Oil Fittings	3-128
Removal/Installation	3-128
Cleaning and Inspection	3-129
Installation Overview	3-129
3.30 Counterbalancer Assembly	3-130
Removal Overview	3-130
Cleaning, Inspection and Repair	3-130
General.....	3-130
Balance Shaft Support Bearings	3-130
Front and Rear Balance Sprockets	3-131
Hydraulic Tensioners.....	3-131
Chain Tensioner Guides.....	3-131
Chain Guide Bracket	3-131
Balance Chain	3-131
Installation Overview	3-131
3.31 Flywheel/Connecting Rod	3-132
Removal Overview	3-132
Inspection	3-132
Installation Overview	3-132
3.32 Oil Tank	3-133
Removal/Disassembly	3-133
Oil Tank	3-133
Oil Line Fittings/Retainers	3-135
Installation	3-136

SECTION 4—FUEL SYSTEM

4.1 Specifications	4-1
Torque Values (table)	4-1
4.2 Fuel System Troubleshooting	4-2
Carburetor	4-2
Overflow Troubleshooting (table)	4-2
Poor Idling (table)	4-2
Poor Fuel Economy (table).....	4-2
Poor Acceleration (table).....	4-3
Hard Starting (table)	4-3
Poor Performance On Road (table).....	4-3
Poor High Speed Performance (table)	4-4
Vacuum Piston Assembly	4-4
Piston Does Not Raise Properly (table)	4-4
Piston Does Not Close Properly (table).....	4-4
4.3 Enrichener: Carbureted	4-5
General.....	4-5
Operation.....	4-5
Cool Engine	4-5
Warm Climate or Hot Engine.....	4-5

	Page No.
4.4 Carburetor	4-6
Removal	4-6
Installation.....	4-8
Disassembly.....	4-8
Vacuum Piston Chamber.....	4-8
Carburetor Body.....	4-8
Accelerator Pump	4-8
Cleaning and Inspection	4-9
Vacuum Piston Components	4-9
Carburetor Body Components	4-9
Float Replacement.....	4-9
Accelerator Pump	4-9
Assembly	4-10
Vacuum Piston Chamber	4-10
Carburetor Body.....	4-10
Accelerator Pump	4-10
4.5 Carburetor Adjustments	4-11
Operation Check—Vacuum Piston.....	4-11
Opening Malfunction	4-11
Closing Malfunction.....	4-11
Float Bowl	4-11
Float Bowl Inlet (Needle) Valve Replacement	4-11
Float Level	4-12
4.6 Fuel Supply Valve: Carbureted ..	4-15
General	4-15
Operation	4-15
Removal, Inspection and Installation	4-15
Troubleshooting	4-15
Troubleshooting Fuel Supply Valve (table)	4-15
Vacuum Test.....	4-16
4.7 Fuel Tank: Carbureted	4-17
General	4-17
Removal.....	4-17
All But FXSTD Models	4-17
FXSTD Models.....	4-18
Cleaning and Inspection	4-18
Installation	4-21
All But FXSTD Models	4-21
FXSTD Models.....	4-21
Vapor Valve	4-22
4.8 Air Cleaner: Carbureted	4-23
Removal.....	4-23
Installation.....	4-23
Backplate Assembly—California Models	4-24
4.9 Exhaust System: FXST/FLST/ FLSTC/FXSTB/FXSTS	4-25
Removal	4-25
Installation.....	4-25
Disassembly.....	4-25
Assembly	4-25
4.10 Exhaust System: FXSTD/FLSTF	4-27
Removal	4-27
Mufflers Only	4-27
Exhaust System	4-27
Installation.....	4-27
Mufflers Only	4-27
Exhaust System	4-27

	Page No.
4.11 Exhaust System: FLSTN	4-29
Removal	4-29
Mufflers Only	4-29
Exhaust System	4-29
Installation	4-29
Mufflers Only	4-29
Exhaust System	4-29
4.12 Exhaust System: FLSTSC	4-31
Removal	4-31
Installation	4-31
4.13 Intake Leak Test	4-33
General	4-33
Leak Tester	4-33
Parts List	4-33
Tester Assembly	4-33
Tester Adjustment	4-33
Procedure	4-34
4.14 Evaporative Emissions Control: CA Models	4-35
General	4-35
Charcoal Canister	4-37
Removal	4-37
Installation	4-37
Hose Routing/Replacement	4-38
 SECTION 5—ELECTRIC STARTER	
5.1 Specifications	5-1
Torque Values	5-1
5.2 Electric Starter System	5-2
General	5-2
Starter Relay	5-2
Operation	5-2
5.3 Starter Relay	5-6
Removal	5-6
Installation	5-6
5.4 Starter	5-7
Removal	5-7
Installation	5-8
Disassembly, Inspection and Repair	5-9
Assembly	5-12
5.5 Starter Solenoid	5-14
General	5-14
Disassembly	5-14
Assembly	5-14
5.6 Starter Jackshaft	5-15
Removal/Disassembly	5-15
Assembly/Installation	5-16

SECTION 6—DRIVE

	Page No.
6.1 Specifications	6-1
Torque Values (table)	6-1
6.2 Primary Chaincase	6-2
General	6-2
Primary Chaincase Cover	6-2
Removal	6-2
Installation	6-3
Primary Chaincase Housing	6-3
Removal	6-3
Inspection And Repair	6-4
Mainshaft Bearing and Oil Seal	6-4
Installation	6-6
6.3 Drive Components	6-7
Primary Chain and Compensating Sprocket	6-7
Removal	6-7
Installation	6-8
Sprocket Alignment	6-10
Spacer Thickness (table)	6-10
Chain Tensioner Shoe	6-11
6.4 Clutch	6-12
Removal/Installation	6-12
Clutch Pack Only	6-12
Partial Disassembly	6-12
Assembly	6-12
Cleaning and Inspection	6-14
Clutch Pack and Bearing	6-14
Complete Disassembly	6-14
Assembly	6-15
6.5 Transmission Sprocket	6-17
Removal	6-17
Cleaning and Inspection	6-17
Installation	6-17
6.6 Drive Belt	6-19
Removal	6-19
Inspection	6-19
Installation	6-20
 SECTION 7—TRANSMISSION	
7.1 Specifications	7-1
Torque Values	7-2
7.2 Transmission	7-3
General	7-3
Neutral	7-3
1st Gear	7-3
2nd Gear	7-3
3rd Gear	7-3
4th Gear	7-3
5th Gear	7-3
Shifter Linkage Adjustment	7-5

	Page No.
7.3 Shifter Cam Assembly	7-6
Removal/Disassembly	7-6
Cleaning and Inspection	7-8
Assembly/Installation	7-8
7.4 Shifter Forks	7-10
Removal	7-10
Cleaning and Inspection	7-10
Installation	7-11
7.5 Transmission Clutch Release Cover	7-12
Removal/Disassembly	7-12
Cleaning and Inspection	7-13
Assembly/Installation	7-13
7.6 Mainshaft and Countershaft	7-15
General	7-15
Removal	7-15
Installation	7-16
Disassembly	7-18
Cleaning and Inspection	7-18
Replacing Side Door Bearings	7-18
Assembly	7-20
7.7 Transmission Case	7-25
Removal	7-25
General	7-25
Main Drive Gear and Bearing	7-25
Installation	7-25
Main Drive Gear and Bearing	7-25
Disassembly	7-28
Shifter Arm Assembly	7-28
Cleaning and Inspection	7-28
Assembly	7-29
Shifter Pawl/Lever Assembly	7-29

SECTION 8—ELECTRICAL

8.1 Specifications	8-1
Torque Values (table)	8-1
8.2 Bulb Requirements	8-3
General	8-3
Softail Bulb Chart (table)	8-3
8.3 Ignition System: Carbureted Models	8-4
General	8-4
Troubleshooting	8-4
8.4 Electrical Panel	8-7
General	8-7
Removal	8-7
Installation	8-8

	Page No.
8.5 Ignition Control Module	8-9
General	8-9
Ignition Timing	8-9
Removal	8-9
All But FXST/FXSTB/FXSTS/FXSTD	8-9
FXST/FXSTB/FXSTS/FXSTD	8-9
Installation	8-10
All But FXST/FXSTB/FXSTS/FXSTD	8-10
FXST/FXSTB/FXSTS/FXSTD	8-10
8.6 Bank Angle Sensor (BAS)	8-11
General	8-11
Operation	8-11
Testing	8-11
Removal/Installation	8-11
8.7 Manifold Absolute Pressure Sensor (MAP)	8-12
General	8-12
Carbureted Models	8-12
Removal	8-12
Installation	8-13
8.8 Crank Position Sensor (CKP)	8-14
General	8-14
Removal	8-14
Installation	8-15
8.9 Spark Plug Cables	8-16
General	8-16
Removal	8-16
Inspection	8-16
Installation	8-16
8.10 Ignition Coil	8-17
Removal	8-17
Installation	8-17
8.11 Fuses	8-18
General	8-18
Removal	8-18
Installation	8-18
8.12 Relays	8-19
General	8-19
Removal	8-19
Installation	8-19
8.13 Main Circuit Breaker	8-20
General	8-20
Removal	8-20
Installation	8-20
8.14 Ignition/Light Switch	8-21
General	8-21
Replacement	8-21
Key Switch Functions and Positions (table)	8-21
8.15 Alternator	8-22
Removal/Disassembly	8-22
Cleaning/Inspection	8-22
Assembly/Installation	8-22
8.16 Voltage Regulator	8-23
Removal	8-23
Installation	8-24

	Page No.		Page No.
8.17 Battery	8-26	8.25 Turn Signals/Running Lights	8-47
Battery Testing.....	8-26	Bulb Replacement: All But FLST/FLSTC.....	8-47
General	8-26	Bulb Replacement: FLST/FLSTC	8-47
Voltmeter Test.....	8-26	Lamp Replacement	8-47
Voltmeter Test For Battery Charge Conditions (table).....	8-26	Front Turn Signals: All But FLSTC, FLSTN, FLSTSC, FXSTS.....	8-48
Conductance Test.....	8-26	Front Turn Signals: FLSTSC, FXSTS.....	8-49
Load Test.....	8-27	Rear Turn Signals: All But FXSTD, FLSTSC, FLSTN.....	8-50
Battery Load Test (table)	8-27	Rear Turn Signals: FXSTD.....	8-50
Charging Battery	8-28	Rear Turn Signals: FLSTSC.....	8-51
Safety Precautions.....	8-28	Rear Turn Signals: FLSTN	8-51
Using a Battery Charger	8-28		
Battery Charging Rates/Times (Approximate) (table).....	8-28	8.26 Turn Signal/Turn Signal Security Module.....	8-52
8.18 Battery Cables.....	8-30	General.....	8-52
Routing Procedure	8-30	Removal	8-52
8.19 Headlamp.....	8-31	Installation	8-52
General	8-31	TSM/TSSM Configuration.....	8-53
Removal/Installation.....	8-31	Password Learning.....	8-53
FXSTD, FXSTS and FLSTSC Models	8-31	Digital Technician	8-53
FXST and FXSTB Models.....	8-31	Without Digital Technician	8-53
FLSTC, FLSTF, FLSTN and FLST Models.....	8-31		
8.20 Tail Lamp: All But FXSTD/FLSTSC/FLSTN	8-33	8.27 TSM/TSSM Key Fob and Code Assignment.....	8-54
General	8-33	General.....	8-54
Bulb Replacement.....	8-33	Power Disruption And Configuring	8-54
Base Replacement.....	8-33	Key Fob Assignment	8-55
Tail Lamp Wires (table).....	8-34	Personal Code Entry	8-55
8.21 Tail Lamp: FXSTD.....	8-35	First Time Code Entry: TSSM Only	8-55
Removal.....	8-35	Modifying Existing Codes: TSSM Only.....	8-55
Installation	8-36	8.28 Fuel Gauge.....	8-59
8.22 Tail Lamp: FLSTSC/FLSTN	8-37	General.....	8-59
Bulb Replacement.....	8-37	Removal	8-59
Tail Lamp Replacement	8-37	Installation	8-60
8.23 Auxiliary Lamps: FLSTC/FLSTN	8-39	8.29 Fuel Gauge Sending Unit: Carbureted Models.....	8-61
Auxiliary Lamp Bulb	8-39	Removal	8-61
Removal	8-39	Installation	8-62
Installation.....	8-39	8.30 Instrument Console: FXSTD.....	8-63
FLSTC Models.....	8-40	Removal	8-63
Auxiliary Lamp Bracket Removal	8-40	Installation	8-63
Auxiliary Lamp Bracket Installation	8-40	8.31 Speedometer: All But FXSTD	8-64
Auxiliary Lamp Housing Removal	8-40	Removal	8-64
Auxiliary Lamp Housing Installation	8-40	Installation	8-64
FLSTN Models	8-42	8.32 Speedometer: FXSTD.....	8-65
Auxiliary Lamp Bracket Removal	8-42	Removal	8-65
Auxiliary Lamp Bracket Installation	8-42	Installation	8-65
Auxiliary Lamp Housing Removal	8-44	8.33 Vehicle Speed Sensor: VSS	8-66
Auxiliary Lamp Housing Installation	8-44	General.....	8-66
Adjustment: FLSTC/FLSTN Models.....	8-45	Removal	8-66
8.24 Front Fender Lamp: FLSTSC....	8-46	Installation	8-66
Removal.....	8-46	8.34 Indicator Lamps: All But FXSTD	8-67
Installation.....	8-46	General.....	8-67
		Removal	8-67
		Installation	8-67
		Connector [21] Pins (table).....	8-67
		Indicator Lamp Assembly Wiring (table).....	8-67



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

	Page No.
8.35 Indicator Lamps: FXSTD	8-68
General	8-68
Removal	8-68
Installation	8-68
8.36 Neutral Switch	8-69
General	8-69
Removal	8-69
Installation	8-69
8.37 Oil Pressure Switch	8-70
General	8-70
Removal	8-70
Installation	8-70
8.38 Rear Stop Light Switch.....	8-71
General	8-71
Removal	8-71
Installation	8-71
8.39 Horn.....	8-72
Inspection	8-72
Replacement	8-72
8.40 Main Wiring Harness	8-73
Removal	8-73
Installation	8-74
8.41 Handlebar Switch Assemblies..	8-76
General	8-76
Repair Procedures.....	8-76
8.42 Right Handlebar Switch.....	8-77
Removal	8-77
Installation	8-77
Disassembly	8-79
Switch Repair/Replacement	8-80
Upper Housing Repair	8-80
Lower Housing Repair	8-81
Assembly	8-82
8.43 Left Handlebar Switch	8-83
Removal	8-83
Installation	8-83
Disassembly	8-84
Switch Repair/Replacement	8-84
Upper Housing Repair	8-84
Lower Housing Repair	8-85
Assembly	8-85

SECTION 9—FUEL INJECTION

9.1 Specifications.....	9-1
Torque Values (table)	9-1
9.2 Electronic Fuel Injection (EFI) System	9-3
General	9-3
Troubleshooting	9-3
9.3 Idle Speed: EFI	9-5
General	9-5

	Page No.
9.4 Air Cleaner: EFI.....	9-6
Removal	9-6
Installation	9-6
9.5 Fuel Tank: EFI	9-7
General	9-7
Removal	9-7
Cleaning and Inspection	9-11
Installation	9-11
All But FXSTDI	9-11
9.6 Electronic Control Module (ECM)	9-13
General	9-13
Removal	9-13
Installation	9-13
9.7 Throttle Position Sensor (TP).....	9-14
General	9-14
Removal	9-14
Installation	9-14
9.8 Intake Air Temperature Sensor (IAT)	9-15
General	9-15
Removal	9-15
Installation	9-15
9.9 Engine Temperature Sensor (ET)	9-16
General	9-16
Removal	9-16
Installation	9-17
9.10 Induction Module.....	9-18
Removal	9-18
Installation	9-20
9.11 Idle Air Control (IAC)	9-21
General	9-21
Removal	9-21
Installation	9-21
9.12 Manifold Absolute Pressure Sensor (MAP)	9-22
General	9-22
Removal	9-22
Installation	9-22
9.13 Fuel Injectors	9-23
General	9-23
Removal	9-23
Installation	9-24
9.14 Fuel Pump/Fuel Gauge Sending Unit.....	9-25
General	9-25
Removal	9-25
Disassembly/Assembly	9-28
Installation	9-32
9.15 Fuel Pressure Test	9-33
General	9-33
Testing	9-33

Page No.

APPENDIX A—TOOLS

A.1 Tools..... A-1

APPENDIX B—WIRING

B.1 Amp Multilock Electrical Connectors..... B-1

Removing Socket/Pin Terminals B-1

Installing Socket/Pin Terminals B-1

Crimping Instructions B-4

B.2 Deutsch Electrical Connectors.. B-5

General B-5

Removing/Disassembling B-5

Removing/Installing Sockets B-5

Removing/Installing Pins..... B-6

Assembling/Installing B-7

Crimping Instructions B-8

B.3 Mini-Deutsch Connectors..... B-10

General B-10

 For Size 20, 16 and 12 Contacts Wire Range
 26-12 AWG B-10

Crimping Instructions B-10

B.4 Sealed Butt Splice Connectors.. B-12

Installation..... B-12

B.5 Delphi Electrical Connectors B-13

General B-13

Removing Socket Terminals B-13

Installing Socket Terminals B-14

B.6 Packard Electrical Connectors . B-15

150 Metri-Pack Series..... B-15

280 Metri-Pack Series..... B-17

480 Metri-Pack Series..... B-19

Packard Micro 64..... B-21

Packard 100W B-23

 Disassembly..... B-23

 Assembly B-23

Crimping Instructions B-24

B.7 Connector Locations B-25

B.8 Index to Wiring Diagrams..... B-27

Page No.

APPENDIX C—METRIC CONVERSIONS

C.1 Metric Conversions C-1

C.2 Fluid Conversions C-2

United States System C-2

Metric System..... C-2

British Imperial System..... C-2

APPENDIX D—JAPANESE MAIN-SHAFT/COUNTERSHAFT

D.1 Japanese Mainshaft/Countershaft D-1

General..... D-1

Disassembly D-1

Cleaning And Inspection..... D-4

Assembly D-5

APPENDIX E—GLOSSARY

E.1 Glossary..... E-1

INDEX

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>