

2007 SOFTAIL SERVICE MANUAL

The information in this Service Manual applies
to all 2007 Softail® models.

MAINTENANCE

1

CHASSIS

2

ENGINE

3

FUEL SYSTEM

4

ELECTRIC STARTER

5

DRIVE

6

TRANSMISSION

7

ELECTRICAL

8

APPENDIX

INDEX

FOREWORD

GENERAL

This Service Manual has been prepared with two purposes in mind. First, it will acquaint the user with the construction of the Harley-Davidson product and assist in the performance of basic maintenance and repair. Secondly, it will introduce to the professional Harley-Davidson Technician the latest field-tested and factory-approved major repair methods. We sincerely believe that this Service Manual will make your association with Harley-Davidson products more pleasant and profitable.

HOW TO USE YOUR SERVICE MANUAL

Information is arranged as follows:

- Section 1—Maintenance
- Section 2—Chassis
- Section 3—Engine
- Section 4—Fuel System
- Section 5—Electric Starter
- Section 6—Drive
- Section 7—Transmission
- Section 8—Electrical
- Appendix A—Tools
- Appendix B—Wiring
- Appendix C—Metric Conversions
- Appendix D—Glossary

Use the TABLE OF CONTENTS following this FOREWORD or the INDEX at the back of the book to find the desired subject.

Note that each manual section contains sequentially numbered topics. The numbering system allows quick cross references throughout the document.

For example, the sixth topic (BRAKES) in section one (MAINTENANCE) could be referred to as:

1.6 BRAKES

This cross reference directs the reader to section 1 (MAINTENANCE) and topic 6 (BRAKES).

PREPARATION FOR SERVICE

WARNING

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

Good preparation is very important for efficient service work. A clean work area at the start of each job will allow you to perform the repair as easily and quickly as possible, and will reduce the incidence of misplaced tools and parts. A motorcycle that is excessively dirty should be cleaned before work starts. Cleaning will occasionally uncover sources of trouble. Tools, instruments and any parts needed for the job should be gathered before work is started. Interrupting a job to locate tools or parts is a distraction and causes needless delay. See APPENDIX A—TOOLS for equipment required for special service work.

NOTE

- *To avoid unnecessary disassembly, carefully read all relative service information before repair work is started.*
- *In figure legends, the number which follows the name of a part indicates the quantity necessary for one complete assembly.*

SERVICE BULLETINS

In addition to the information presented in this Service Manual, Harley-Davidson Motor Company will periodically issue Service Bulletins to Harley dealers. Service Bulletins cover interim engineering changes and supplementary information.

USE GENUINE REPLACEMENT PARTS

WARNING

When replacement parts are required, use only genuine Harley-Davidson parts or parts with equivalent characteristics (which include type, strength and material). Failure to do so may result in product malfunction. This could result in death or serious injury.

To ensure satisfactory and lasting repairs, carefully follow the Service Manual instructions and use only genuine Harley-Davidson replacement parts. Behind the emblem bearing the words GENUINE HARLEY-DAVIDSON stand more than 100 years of design, research, manufacturing, testing and inspecting experience. This is your assurance that the parts you are using will fit right, operate properly and last longer

WARNINGS AND CAUTIONS

Statements in this service manual preceded by the following words are of special significance.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. (00119a)

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. (00139a)

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage (00140a)

WARNING

- Proper service and repair is important for the safe, reliable operation of all mechanical products. The service procedures recommended and described in this Service Manual are effective methods for performing service operations. Some of these service operations require the use of tools specially designed for the purpose. These special tools should be used when and as recommended. It is important to note that some warnings against the use of specific service methods, which could damage the motorcycle or render it unsafe, are stated in this Service Manual. However, please remember that these warnings are not all-inclusive. Inadequate safety precautions could result in death or serious injury.
- Since Harley-Davidson could not possibly know, evaluate or advise the service trade of all possible ways in which service might be performed, or of the possible hazardous consequences of each method, we have not undertaken any such broad evaluation. Accordingly, anyone who uses a service procedure or tool which is not recommended by Harley-Davidson must first thoroughly satisfy himself that neither his nor the operator's safety will be jeopardized as a result. This could result in death or serious injury.
- Wear eye protection when using hammers, arbor or hydraulic presses, gear pullers, spring compressors, slide hammers and similar tools. Be especially cautious when using pulling, pressing or compressing equipment. The forces involved can cause parts to fly outward with considerable force, possibly resulting in death or serious injury.

PRODUCT REFERENCES

WARNING

Follow the directions listed on all products. Carefully read all labels, warnings and cautions before use. Inadequate safety precautions could result in death or serious injury.

When reference is made in this Service Manual to a specific brand name product, tool or instrument, an equivalent product, tool or instrument may be substituted.

Kent-Moore Products

All tools mentioned in this manual with an "HD", "J" or "B" preface must be ordered through:

Kent-Moore
SPX Corporation
28635 Mound Road
Warren, Michigan USA 48092-3499

Sealing and Threadlocking Products

LOCTITE PRODUCTS

Some procedures in this Service Manual call for the use of Loctite® products. If you have any questions regarding Loctite product usage or retailer/wholesaler locations, please contact Loctite Corp. at www.loctite.com.

CONTENTS

All photographs, illustrations and procedures may not necessarily depict the most current model or component, but are based on the latest production information available at the time of publication.

Since product improvement is our continual goal, Harley-Davidson reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

TABLE OF CONTENTS

	Page No.		Page No.
SECTION 1—MAINTENANCE			
1.1 General	1-1	1.5 Battery Maintenance	1-13
Servicing a New Motorcycle	1-1	General.....	1-13
Safe Operating Maintenance.....	1-1	Battery Electrolyte Antidotes (table)	1-13
Shop Practices.....	1-1	Disconnection and Removal.....	1-14
Repair Notes.....	1-1	Installation and Connection	1-14
Safety.....	1-1	Inspection	1-15
Removing Parts	1-1	Storage.....	1-15
Cleaning.....	1-2	1.6 Brakes.....	1-16
Disassembly and Assembly.....	1-2	Fluid Inspection	1-16
Repair and Replacement Procedures.....	1-2	Rear Brake Pedal.....	1-17
Hardware and Threaded Parts	1-2	Pedal Height.....	1-17
Threadlocking Agents.....	1-2	Pedal Lubrication.....	1-17
Wiring, Hoses and Lines.....	1-2	Pedal Pad.....	1-17
Instruments and Gauges	1-2	1.7 Bleeding Brakes	1-18
Bearings.....	1-2	General.....	1-18
Bushings.....	1-2	Procedure.....	1-18
Exhaust System Leakage.....	1-2	1.8 Brake Pads and Discs	1-19
Gaskets.....	1-3	Inspection.....	1-19
Lip Type Seals.....	1-3	Brake Pads.....	1-19
O-Rings (Preformed Packings).....	1-3	Brake Disc Thickness.....	1-19
Gears.....	1-3	Brake Disc Lateral Runout and Warpage.....	1-19
Shafts.....	1-3	Brake Pad Replacement	1-20
Part Replacement.....	1-3	Rear Brake Caliper.....	1-20
Cleaning.....	1-3	Front Brake Caliper: All But FLSTSC.....	1-22
Part Protection	1-3	1.9 Tires and Wheels	1-23
Cleaning Process.....	1-3	Tires	1-23
Rust or Corrosion Removal	1-3	Tire Pressures (table).....	1-23
Tool Safety.....	1-3	Tire Replacement	1-24
Air Tools.....	1-3	Wheel Bearings	1-24
Wrenches.....	1-3	Wheel Spokes	1-24
Pliers/Cutters/Prybars.....	1-4	1.10 Primary Chain	1-25
Hammers	1-4	General.....	1-25
Punches/Chisels	1-4	1.11 Primary Chaincase Lubricant...	1-26
Screwdrivers.....	1-4	Changing Lubricant	1-26
Ratchets and Handles	1-4	1.12 Clutch	1-28
Sockets.....	1-4	Adjustment	1-28
Storage Units.....	1-4	1.13 Transmission Lubricant.....	1-30
1.2 Fuel and Oil	1-5	Changing Lubricant	1-30
Fuel.....	1-5	1.14 Rear Belt Deflection	1-31
Gasoline Blends.....	1-5	Inspection.....	1-31
Engine Oil.....	1-5	Rear Belt Deflection (Table).....	1-31
Winter Lubrication.....	1-5	Adjustment	1-32
1.3 Maintenance Schedule	1-6	1.15 Rear Belt and Sprockets	1-33
First Scheduled Maintenance	1-6	General.....	1-33
1.4 Engine Oil and Filter.....	1-11	Cleaning	1-33
Checking and Adding Oil	1-11	Inspection	1-33
Type of Oil	1-11	Sprockets	1-33
Checking Oil Level.....	1-11	Rear Belt	1-33
Recommended Oil Grades (table).....	1-11	Drive Belt Wear Analysis (table).....	1-34
Changing Oil and Filter.....	1-12	1.16 Suspension Adjustments	1-35
		Rear Shock Preload	1-35

1.17 Steering Head Bearings: All But FLSTSC	1-36
Adjustment.....	1-36
Bearing Adjustment (Fall-away).....	1-36
Lubrication.....	1-36
1.18 Steering Head Bearings: FLSTSC	1-37
General.....	1-37
Lubrication.....	1-37
Adjustment.....	1-37
Adjustment.....	1-38
1.19 Rocker Bearings: FLSTSC	1-39
Inspection.....	1-39
1.20 Front Fork Oil	1-41
Replacing Fork Oil.....	1-41
1.21 Spark Plugs	1-43
Inspection.....	1-43
1.22 Air Cleaner Filter	1-44
Removal.....	1-44
Installation.....	1-45
1.23 Cable and Chassis Lubrication	1-46
General.....	1-46
Cables and Hand Levers.....	1-46
Jiffy Stand.....	1-46
1.24 Throttle Cables	1-47
Cable Inspection, Lubrication and Adjustment.....	1-47
Inspection and Lubrication.....	1-47
Adjustment.....	1-48
1.25 Engine Mounts	1-49
Inspection.....	1-49
1.26 Headlamp Alignment	1-50
Inspection.....	1-50
Adjustment.....	1-51
FLSTSC Models.....	1-51
FLSTC/FLSTF/FLSTN/FXST/FXSTB/FXSTC Models.....	1-51
FXSTD Models.....	1-51
1.27 Critical Fasteners	1-52
Inspection.....	1-52
Critical Fasteners (table).....	1-52
1.28 Storage	1-53
General.....	1-53
Removal From Storage.....	1-54

1.29 Troubleshooting	1-55
General.....	1-55
Engine.....	1-55
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-55
Engine Turns Over But Does Not Start.....	1-55
Starts Hard.....	1-55
Starts But Runs Irregularly or Misses.....	1-55
A Spark Plug Fouls Repeatedly.....	1-56
Pre-Ignition or Detonation (Knocks or Pings).....	1-56
Overheating.....	1-56
Valve Train Noise.....	1-56
Excessive Vibration.....	1-56
Check Engine Light Illuminates During Operation.....	1-56
Lubrication System.....	1-56
Oil Does Not Return To Oil Tank.....	1-56
Engine Uses Too Much Oil Or Smokes Excessively.....	1-56
Engine Leaks Oil From Cases, Push Rods, Hoses.....	1-56
Low Oil Pressure.....	1-57
High Oil Pressure.....	1-57
Electrical System.....	1-57
Alternator Does Not Charge.....	1-57
Alternator Charge Rate Is Below Normal.....	1-57
Speedometer Operates Erratically.....	1-57
Transmission.....	1-57
Shifts Hard.....	1-57
Jumps Out Of Gear.....	1-57
Clutch Slips.....	1-57
Clutch Drags Or Does Not Release.....	1-57
Clutch Chatters.....	1-57
Handling.....	1-58
Irregularities.....	1-58
Brakes.....	1-58
Brake Does Not Hold Normally.....	1-58

SECTION 2—CHASSIS

2.1 Specifications	2-1
Tires.....	2-2
Tire Fitment, Tubeless Cast Wheels (table).....	2-2
Tire Fitment, Laced Wheels (table).....	2-2
Tire Pressure, All Models (table).....	2-3
2.2 Torque Values	2-4
2.3 Vehicle Identification Number (V.I.N.)	2-7
General.....	2-7
2.4 Front Wheel: All But FLSTSC/FXSTD	2-9
Removal.....	2-9
Disassembly.....	2-9
Disc Wheel.....	2-9
Laced Wheel.....	2-9
Cleaning and Inspection.....	2-11
Assembly.....	2-11
Disc Wheel.....	2-11
Laced Wheel.....	2-11
Installation.....	2-11

	Page No.
2.5 Front Wheel: FXSTD	2-12
Removal.....	2-12
Disassembly	2-12
Cleaning and Inspection	2-12
Assembly	2-13
Installation.....	2-13
2.6 Front Wheel: FLSTSC	2-14
Removal.....	2-14
Disassembly	2-14
Cleaning and Inspection	2-14
Assembly	2-14
Installation.....	2-16
2.7 Rear Wheel	2-17
Removal.....	2-17
Disassembly	2-17
Cleaning and Inspection	2-19
Assembly	2-19
Installation.....	2-19
2.8 Sealed Wheel Bearings	2-20
Inspection	2-20
Removal.....	2-20
Installation.....	2-21
2.9 Wheel Lacing: 16 In. Rim.....	2-22
General	2-22
Procedure	2-23
2.10 Wheel Lacing: 21 In. Rim.....	2-25
Procedure	2-25
2.11 Truing Laced Wheel.....	2-28
General.....	2-28
Lateral Truing.....	2-28
Wheel Offset Dimensions (table).....	2-29
Radial Truing	2-31
2.12 Disc Rim Runout.....	2-32
General.....	2-32
Lateral Runout	2-32
Radial Runout.....	2-32
2.13 Tires	2-33
General.....	2-33
Removal.....	2-34
Cleaning, Inspection and Repair.....	2-34
Installation.....	2-35
Tube Type Tires.....	2-35
Tubeless Tires	2-35
2.14 Vehicle Alignment.....	2-36
Inspection	2-36
2.15 Front Brake Master Cylinder.....	2-37
General.....	2-37
Removal/Disassembly	2-37
Cleaning and Inspection	2-38
Assembly/Installation	2-40

	Page No.
2.16 Rear Brake Master Cylinder/Reservoir.....	2-42
Removal	2-42
Installation	2-42
Disassembly	2-45
Cleaning and Inspection.....	2-46
Assembly.....	2-46
2.17 Front Brake Caliper: All But FLSTSC	2-48
Removal	2-48
Disassembly	2-48
Cleaning, Inspection and Repair	2-51
Assembly.....	2-52
Installation	2-53
2.18 Front Brake Caliper: FLSTSC ...	2-54
Front Brake Caliper	2-54
Removal	2-54
Disassembly	2-54
Cleaning and Inspection.....	2-55
Assembly.....	2-56
Installation	2-56
Brake Reaction Link	2-58
Removal	2-58
Installation	2-58
2.19 Rear Brake Caliper: All But FXST/FXSTB/FXSTC/FLSTF.....	2-60
Removal	2-60
Disassembly	2-60
Cleaning, Inspection and Repair	2-63
Assembly.....	2-63
Installation	2-64
2.20 Rear Brake Caliper: FXST/FXSTB/FXSTC/FLSTF.....	2-65
Removal	2-65
Disassembly	2-65
Cleaning, Inspection and Repair	2-68
Assembly.....	2-69
Installation	2-70
2.21 Front Forks: All But FLSTSC....	2-71
General.....	2-71
Removal	2-71
Disassembly	2-71
Cleaning and Inspection.....	2-71
Assembly.....	2-75
Installation	2-75

	Page No.		Page No.
2.22 Springer Fork: FLSTSC	2-76	2.28 Handlebars: FLSTF	2-99
General	2-76	Removal.....	2-99
Handlebar and Risers	2-76	Installation.....	2-100
Removal.....	2-76	FXSTD.....	2-102
Installation.....	2-76	2.29 Clutch Hand Control	2-102
Front Shock Absorber	2-78	Removal.....	2-102
Removal.....	2-78	Installation.....	2-102
Installation.....	2-78	2.30 Front Fender: All But FLSTSC ..	2-103
Rigid Fork.....	2-79	FXST, FXSTB, FXSTC Models.....	2-103
Removal.....	2-79	Removal.....	2-103
Installation.....	2-79	Installation.....	2-103
Spring Fork.....	2-80	FLSTC, FLSTN Models	2-103
Disassembly.....	2-80	Removal.....	2-103
Assembly.....	2-82	Installation.....	2-103
Fork Rockers.....	2-84	FLSTF Models	2-104
Removal.....	2-84	Removal.....	2-104
Installation.....	2-84	Installation.....	2-104
Fork Stem Bearings	2-85	FXSTD Models	2-104
Removal/Installation.....	2-85	Removal.....	2-104
Installation.....	2-85	Installation.....	2-104
2.23 Steering Head	2-86	2.31 Front Fender: FLSTSC	2-105
Removal.....	2-86	Removal.....	2-105
FLSTC, FLSTF, FLSTN Models.....	2-86	Front Fender.....	2-105
FXSTD, FXST, FXSTC, FXSTB Models	2-86	Front Fender Bearing Replacement	2-105
FLSTSC Models.....	2-87	Installation.....	2-106
Cleaning and Inspection	2-87	2.32 Rear Fender: FLSTC.....	2-107
All Models.....	2-87	Removal.....	2-107
Disassembly.....	2-87	Installation.....	2-108
Removing Lower Bearings From Fork Stem.....	2-87	2.33 Rear Fender: FLSTF	2-109
Steering Head Bearing Race Removal	2-88	Removal.....	2-109
Assembly.....	2-88	Installation.....	2-110
Installation.....	2-89	2.34 Rear Fender:	
FLSTC, FLSTF, FLSTN Models.....	2-89	FXST/FXSTB/FXSTC.....	2-111
FXSTD, FXST, FXSTC, FXSTB Models	2-89	Removal.....	2-111
FLSTSC Models.....	2-89	Installation.....	2-112
2.24 Rear Fork.....	2-90	2.35 Rear Fender: FXSTD	2-113
Removal.....	2-90	Removal.....	2-113
Cleaning and Inspection	2-90	Disassembly	2-113
Installation.....	2-91	Assembly	2-114
2.25 Rear Shock Absorbers	2-92	Installation.....	2-114
General	2-92	2.36 Rear Fender: FLSTSC	2-115
Removal.....	2-92	Removal.....	2-115
Installation.....	2-92	Disassembly	2-115
2.26 Throttle Control.....	2-93	Assembly	2-116
Removal/Disassembly.....	2-93	Installation.....	2-116
Cleaning and Inspection	2-93	2.37 Rear Fender: FLSTN.....	2-117
Assembly/Installation	2-93	Removal.....	2-117
Cable Routing	2-94	Disassembly	2-117
All Models Except FLSTSC/FXSTD	2-94	Assembly	2-119
FLSTSC Models.....	2-94	Installation.....	2-119
FXSTD Models.....	2-94	2.38 Rear Fender Wire Conduit:	
2.27 Handlebars: All but		All But FXSTD	2-120
FLSTF/FLSTSC.....	2-95	Installation.....	2-120
Removal.....	2-95		
FXSTD	2-96		
Installation.....	2-97		
FXSTD	2-97		

	Page No.		Page No.
2.39 Belt Guard/Debris Deflector.....	2-122	3.5 Oil Pump Operation.....	3-12
Removal.....	2-122	General.....	3-12
Belt Guard.....	2-122	Operation.....	3-12
Debris Deflector.....	2-122	3.6 Breather Operation.....	3-13
Installation.....	2-122	General.....	3-13
Belt Guard.....	2-122	3.7 Oil Pressure	3-14
Debris Deflector.....	2-122	Oil Pressure Indicator Lamp.....	3-14
2.40 Jiffy Stand.....	2-123	Checking Oil Pressure.....	3-14
Cleaning.....	2-123	3.8 How To Use This Section.....	3-15
Removal.....	2-124	Top End Repair.....	3-15
Installation.....	2-124	Bottom End Repair.....	3-15
2.41 Fork Lock.....	2-125	Typical Symptoms.....	3-15
Removal.....	2-125	3.9 Top End Service	3-16
Installation.....	2-125	Engine In Chassis.....	3-16
2.42 Seat/Strap Retention Nut.....	2-126	Engine Removed From Chassis.....	3-17
Replacement.....	2-126	3.10 Bottom End Service	3-18
2.43 Seat: FXST/FXSTB	2-127	Engine In Chassis: Cam Compartment Service.....	3-18
Removal/Installation.....	2-127	Engine Removed: Flywheel Compartment	
Seat Strap.....	2-127	Service or Complete Engine Overhaul.....	3-19
Seat.....	2-127	3.11 Troubleshooting	3-20
2.44 Seat: FXSTC	2-128	Diagnosing Valve Train Noise.....	3-20
Removal/Installation.....	2-128	Compression Test.....	3-20
Seat Strap.....	2-128	Compression Test Results (table).....	3-20
Seat.....	2-128	Cylinder Leakage Test.....	3-21
2.45 Seat: FXSTD	2-129	Diagnosing Smoking Engine or High Oil Consumption	3-21
Removal/Installation.....	2-129	Check Prior To Cylinder Head Removal.....	3-21
2.46 Seat: FLSTSC/FLSTN/ FLSTF/FLSTC	2-130	Check After Cylinder Head Removal.....	3-21
Removal/Installation.....	2-130	3.12 Stripping Motorcycle For Service	3-22
2.47 Luggage Rack: FLSTN.....	2-131	Procedure.....	3-22
Removal/Installation.....	2-131	3.13 Assembling Motorcycle After Service	3-23
2.48 Saddlebags: FLSTC	2-132	Procedure.....	3-23
Removal.....	2-132	3.14 Removing Engine From Chassis	3-24
Installation.....	2-132	Procedure.....	3-24
2.49 Windshield: FLSTC	2-133	3.15 Installing Engine In Chassis.....	3-25
Removal.....	2-133	Procedure.....	3-25
Installation.....	2-133	3.16 Top End Overhaul: Disassembly	3-27
SECTION 3—ENGINE			
3.1 Specifications	3-1	General.....	3-27
3.2 Engine Torque Values (table)	3-3	Breather Assembly.....	3-27
3.3 Service Wear Limits.....	3-4	Rocker Arm Support Plate.....	3-28
General.....	3-4	Push Rods, Lifters and Covers.....	3-29
3.4 Engine Oil Flow	3-6	Cylinder Head.....	3-30
Oil Feed.....	3-6	Cylinder.....	3-31
Top End.....	3-7	Piston.....	3-33
Bottom End.....	3-7	3.17 Top End Overhaul: Assembly ..	3-34
Chain Guide Bracket.....	3-11	General.....	3-34
Oil Return.....	3-11	Piston.....	3-34
		Cylinder.....	3-35
		Cylinder Head.....	3-38
		Push rods, Lifters and Covers.....	3-41
		Rocker Arm Support Plate.....	3-42
		Breather Assembly.....	3-43

	Page No.		Page No.
3.18 Bottom End Overhaul:		3.24 Cylinder	3-88
Disassembly	3-45	Removal Overview.....	3-88
General	3-45	Cleaning.....	3-88
Cover and Cam Support Plate	3-45	Inspection	3-89
Crankcase.....	3-49	Deglazing Cylinder.....	3-90
Counterbalancer Assembly	3-50	Boring and Honing Cylinder.....	3-92
		Installation Overview.....	3-92
3.19 Bottom End Overhaul: Assembly 3-53		Oversize Pistons/Cylinder Bores (table)	3-92
General	3-53	3.25 Piston	3-93
Counterbalancer Assembly	3-53	Removal Overview.....	3-93
Balance Sprocket Spacers (table).....	3-54	Disassembly	3-93
Crankcase.....	3-56	Piston Rings.....	3-93
Cover and Cam Support Plate	3-60	Cleaning.....	3-93
Rear Cam Sprocket Spacers (Table).....	3-62	Inspection	3-94
3.20 Breather Assembly	3-65	Assembly	3-96
Removal Overview	3-65	Piston Rings.....	3-96
Disassembly.....	3-65	Installation Overview.....	3-97
Cleaning and Inspection	3-65		
Assembly.....	3-65	3.26 Cover and Cam Support Plate... 3-99	
Installation Overview	3-65	Removal Overview.....	3-99
3.21 Rocker Arm Support Plate	3-66	Camshafts.....	3-100
Removal Overview	3-66	Removal.....	3-100
Disassembly.....	3-66	Assembly	3-101
Cleaning and Inspection	3-66	Oil Pressure Relief Valve.....	3-103
Assembly.....	3-69	Removal.....	3-103
Installation Overview	3-69	Installation.....	3-103
3.22 Push Rods, Lifters and Covers 3-70		Cam Needle Bearings.....	3-104
Removal Overview	3-70	Removal.....	3-104
Disassembly.....	3-70	Installation.....	3-105
Cleaning and Inspection	3-70	Cleaning and Inspection	3-106
Lifter Inspection.....	3-71	Oil Pressure Valve	3-106
Assembly.....	3-72	Cam Support Plate	3-106
Installation Overview	3-72	Installation Overview.....	3-106
3.23 Cylinder Head	3-73	3.27 Oil Pump..... 3-107	
Removal Overview	3-73	Removal Overview.....	3-107
Disassembly.....	3-73	Cleaning and Inspection	3-107
Cleaning	3-75	Installation and Overview.....	3-108
Inspection.....	3-75	3.28 Crankcase	3-109
Cylinder Head	3-75	Removal Overview.....	3-109
Valve Guides.....	3-76	Right Crankcase Half.....	3-109
Valve Stem To Guide Clearance Service		Chain Guide Screen	3-109
Wear Limits (table).....	3-76	Crankshaft Bearing.....	3-109
Valves	3-76	Piston Jets	3-110
Valve Springs.....	3-76	Left Crankcase Half	3-111
Tapered Keepers	3-76	Crankshaft (Roller) Bearing	3-111
Valve Seats.....	3-76	Cylinder Studs	3-113
Valve Guide Replacement	3-77	Removal.....	3-113
Removal.....	3-77	Installation.....	3-113
Installation	3-78	Pipe Plug and Oil Fittings	3-113
Valve Stem To Guide Clearance (table)	3-81	Removal/Installation	3-113
Valve and Seat Refacing	3-82	Cleaning and Inspection	3-114
Assembly.....	3-85	Installation Overview.....	3-114
Installation Overview	3-87		

	Page No.
3.29 Counterbalancer Assembly	3-115
Removal Overview.....	3-115
Cleaning, Inspection and Repair.....	3-115
General	3-115
Balance Shaft Removal	3-115
Balance Shaft Installation	3-116
Balance Shaft Support Bearings	3-117
Front and Rear Balance Sprockets.....	3-118
Hydraulic Tensioners	3-118
Chain Tensioner Guides	3-118
Chain Guide Bracket.....	3-118
Balance Chain	3-118
Installation Overview.....	3-118
3.30 Flywheel/Connecting Rod	3-119
Removal Overview.....	3-119
Inspection	3-119
Installation Overview.....	3-119
3.31 Oil Tank.....	3-120
Removal/Disassembly	3-120
Oil Tank	3-120
Oil Line Fittings/Retainers.....	3-122
Installation.....	3-123

SECTION 4—FUEL SYSTEM

4.1 Specifications	4-1
Torque Values (table)	4-1
4.2 Electronic Fuel Injection (EFI) System	4-3
General.....	4-3
Troubleshooting.....	4-3
4.3 Idle Speed.....	4-5
General.....	4-5
4.4 Air Cleaner.....	4-6
Removal.....	4-6
Installation.....	4-6
Backplate Assembly: HDI Models.....	4-7
4.5 Fuel Tank	4-8
General.....	4-8
Removal.....	4-8
Cleaning and Inspection	4-12
Installation.....	4-12
All But FXSTDI.....	4-12
4.6 Throttle Position Sensor (TP)	4-14
General.....	4-14
Removal.....	4-14
Installation.....	4-14
4.7 Intake Air Temperature Sensor (IAT).....	4-15
General.....	4-15
Removal.....	4-15
Installation.....	4-15

	Page No.
4.8 Engine Temperature Sensor (ET)	4-16
General.....	4-16
Removal	4-16
Installation	4-17
4.9 Induction Module.....	4-18
Removal	4-18
Installation	4-20
4.10 Idle Air Control (IAC).....	4-21
General.....	4-21
Removal	4-21
Installation	4-21
4.11 Manifold Absolute Pressure Sensor (MAP)	4-22
General.....	4-22
Removal	4-22
Installation	4-22
4.12 Oxygen Sensor	4-23
General.....	4-23
Removal	4-23
Installation	4-23
4.13 Fuel Injectors	4-25
General.....	4-25
Removal	4-25
Installation	4-26
4.14 Fuel Pump/Fuel Gauge Sending Unit	4-27
General.....	4-27
Removal	4-27
Disassembly/Assembly	4-30
Installation	4-34
4.15 Fuel Pressure Test	4-35
General.....	4-35
Testing.....	4-35
4.16 Exhaust System: FXST/FLSTC/ FXSTB/FXSTC	4-38
Mufflers.....	4-38
Removal	4-38
Assembly.....	4-38
System	4-38
Removal	4-38
Installation	4-39
4.17 Exhaust System: FXSTD/FLSTF	4-41
Mufflers.....	4-41
Removal	4-41
Assembly.....	4-41
System	4-42
Removal	4-42
Installation	4-42
4.18 Exhaust System: FLSTN	4-44
Mufflers.....	4-44
Removal	4-44
Assembly.....	4-44
System	4-45
Removal	4-45
Installation	4-45

	Page No.
4.19 Exhaust System: FLSTSC.....	4-47
Removal.....	4-47
Installation.....	4-48
4.20 Intake Leak Test.....	4-50
General.....	4-50
Leak Tester.....	4-50
Parts List.....	4-50
Tester Assembly.....	4-50
Tester Adjustment.....	4-50
Procedure.....	4-51
4.21 Evaporative Emissions Control: CA Models.....	4-52
General.....	4-52
Charcoal Canister.....	4-53
Removal.....	4-53
Installation.....	4-53
Hose Routing/Replacement.....	4-54

SECTION 5—ELECTRIC STARTER

5.1 Specifications.....	5-1
Torque Values.....	5-1
5.2 Electric Starter System.....	5-2
General.....	5-2
Starter Relay.....	5-2
Operation.....	5-2
5.3 Starter Relay.....	5-5
Removal.....	5-5
Installation.....	5-5
5.4 Starter.....	5-6
Removal.....	5-6
Installation.....	5-6
Disassembly, Inspection and Repair.....	5-7
Assembly.....	5-10
5.5 Starter Solenoid.....	5-12
General.....	5-12
Disassembly.....	5-12
Assembly.....	5-12

SECTION 6—DRIVE

6.1 Specifications.....	6-1
Torque Values (Table).....	6-1
6.2 Primary Chaincase.....	6-2
General.....	6-2
Primary Chaincase Cover.....	6-2
Removal.....	6-2
Installation.....	6-3
Primary Chaincase Housing.....	6-4
Removal.....	6-4
Inspection.....	6-4
Installation.....	6-4
Mainshaft Bearing and Lip Seal.....	6-6
Removal.....	6-6
Shifter Shaft Bushing.....	6-7

	Page No.
6.3 Drive Components.....	6-8
Primary Chain and Compensating Sprocket.....	6-8
Removal.....	6-8
Installation.....	6-10
6.4 Clutch.....	6-14
Removal/Installation.....	6-14
Clutch Pack Only.....	6-14
Partial Disassembly.....	6-14
Assembly.....	6-14
Cleaning and Inspection.....	6-16
Clutch Pack and Bearing.....	6-17
Complete Disassembly.....	6-17
Assembly.....	6-18
6.5 Transmission Sprocket.....	6-20
Removal.....	6-20
Cleaning and Inspection.....	6-21
Installation.....	6-21
6.6 Drive Belt.....	6-23
Removal.....	6-23
Inspection.....	6-23
Installation.....	6-24

SECTION 7—TRANSMISSION

7.1 Specifications.....	7-1
Torque Values.....	7-2
7.2 Transmission.....	7-3
General.....	7-3
Neutral.....	7-3
1st Gear.....	7-3
2nd Gear.....	7-3
3rd Gear.....	7-3
4th Gear.....	7-3
5th Gear.....	7-3
6th Gear.....	7-3
Shifter Linkage Adjustment.....	7-5
7.3 Shifter Forks.....	7-6
Cleaning and Inspection.....	7-6
7.4 Transmission Clutch Release Cover.....	7-7
Removal/Disassembly.....	7-7
Cleaning and Inspection.....	7-8
Assembly/Installation.....	7-8
7.5 Transmission Assembly.....	7-9
Removal.....	7-9
Disassembly.....	7-11
Countershaft.....	7-17
Cleaning and Inspection.....	7-19
Replacing Side Door Bearings.....	7-19
Assembly.....	7-20
Installation.....	7-22

	Page No.
7.6 Main Drive Gear And Bearing	7-24
Removal.....	7-24
Cleaning and Inspection.....	7-26
Needle Bearing Replacement.....	7-27
Installation.....	7-30
Installing Main Drive Gear	7-31
Installing Main Drive Gear Seal	7-32
7.7 Transmission Case	7-34
Removal.....	7-34
General.....	7-34
Disassembly	7-34
Shifter Arm Assembly	7-34
Cleaning and Inspection	7-36
Assembly	7-37
Countershaft Needle Bearing Replacement	7-37
Shifter Pawl Lever Assembly	7-37

SECTION 8—ELECTRICAL

8.1 Specifications	8-1
Torque Values (table).....	8-1
8.2 Bulb Requirements	8-3
General.....	8-3
Softail Bulb Chart (table).....	8-3
8.3 Electrical Panel	8-4
General.....	8-4
Removal.....	8-4
Installation.....	8-5
8.4 Electronic Control Module (ECM)	8-6
General.....	8-6
Removal.....	8-6
Installation.....	8-7
8.5 Crank Position Sensor (CKP)	8-8
General.....	8-8
Removal.....	8-8
Installation.....	8-9
8.6 Spark Plug Cables	8-10
General.....	8-10
Removal.....	8-10
Inspection	8-11
Installation.....	8-11
8.7 Ignition Coil	8-12
Removal.....	8-12
Installation.....	8-12
8.8 Fuses	8-13
General.....	8-13
Removal.....	8-13
Installation.....	8-13
8.9 Relays	8-14
General.....	8-14
Removal.....	8-14
Installation.....	8-14

	Page No.
8.10 Main Fuse	8-15
Removal.....	8-15
Installation.....	8-15
8.11 Ignition/Light Switch	8-16
General.....	8-16
Replacement	8-16
Key Switch Functions and Positions (table)	8-16
8.12 Alternator	8-17
Removal/Disassembly.....	8-17
Cleaning/Inspection.....	8-17
Assembly/Installation.....	8-17
8.13 Voltage Regulator	8-18
General.....	8-18
8.14 Front Electrical Caddy	8-20
General.....	8-20
Disassembly	8-20
Assembly.....	8-22
8.15 Battery	8-24
Battery Testing	8-24
General.....	8-24
Voltmeter Test.....	8-24
Voltmeter Test For Battery Charge Conditions (table).....	8-24
Conductance Test	8-24
Load Test	8-25
Battery Load Test (table).....	8-25
Charging Battery	8-26
Safety Precautions	8-26
Using a Battery Charger.....	8-26
Battery Charging Rates/Times (Approximate) (table).....	8-26
8.16 Battery Cables	8-28
Routing Procedure	8-28
8.17 Headlamp	8-30
General.....	8-30
Removal/Installation	8-30
FXSTD, FXSTS and FLSTSC Models.....	8-30
FXST and FXSTB Models.....	8-31
FLSTC, FLSTF and FLSTN Models.....	8-31
8.18 Tail Lamp: All But FXSTD/ FLSTSC/FLSTN	8-33
General.....	8-33
Bulb Replacement.....	8-33
Base Replacement.....	8-33
Tail Lamp Wires (table).....	8-34
8.19 Tail Lamp: FXSTD.....	8-35
Removal	8-35
Installation	8-36
8.20 Tail Lamp: FLSTSC/FLSTN	8-37
Bulb Replacement.....	8-37
Tail Lamp Replacement	8-37

8.21 Auxiliary Lamps: FLSTC/FLSTN	8-39	8.30 Indicator Lamps: All But FXSTD	8-60
Auxiliary Lamp Bulb	8-39	General	8-60
Removal	8-39	Removal	8-60
Installation	8-39	Installation	8-60
FLSTC Models	8-40	Connector [21] Pins (table)	8-60
Auxiliary Lamp Bracket Removal	8-40	Indicator Lamp Assembly Wiring (table)	8-60
Auxiliary Lamp Bracket Installation	8-40		
Auxiliary Lamp Housing Removal	8-40	8.31 Indicator Lamps: FXSTD.....	8-61
Auxiliary Lamp Housing Installation	8-40	General	8-61
FLSTN Models	8-42	Removal	8-61
Auxiliary Lamp Bracket Removal	8-42	Installation	8-61
Auxiliary Lamp Bracket Installation	8-42		
Auxiliary Lamp Housing Removal	8-44	8.32 Neutral Switch	8-62
Auxiliary Lamp Housing Installation	8-44	General	8-62
Adjustment: FLSTC/FLSTN Models	8-45	Removal	8-62
		Installation	8-62
8.22 Front Fender Lamp: FLSTSC....	8-46	8.33 Oil Pressure Switch.....	8-63
Removal	8-46	General	8-63
Installation	8-46	Removal	8-63
		Installation	8-63
8.23 Turn Signals/Running Lights....	8-47	8.34 Rear Stop Light Switch	8-64
Bulb Replacement: All But FLSTC	8-47	General	8-64
Bulb Replacement: FLSTC	8-47	Removal	8-64
Lamp Replacement	8-47	Installation	8-64
Front Turn Signals: All But FLSTC, FLSTN, FLSTSC, FXSTS.....	8-48		
Front Turn Signals: FLSTSC, FXSTC	8-49	8.35 Horn	8-65
Rear Turn Signals: All But FXSTD, FLSTSC, FLSTN	8-50	Inspection	8-65
Rear Turn Signals: FXSTD	8-50	Replacement	8-65
Rear Turn Signals: FLSTSC	8-51		
Rear Turn Signals: FLSTN	8-51	8.36 Active Exhaust Module	8-66
		General	8-66
8.24 TSM/TSSM/HFSM	8-52	Removal	8-66
General	8-52	Repair	8-67
Removal	8-52	Installation	8-67
Installation	8-52		
TSM/TSSM Configuration	8-53	8.37 Main Wiring Harness	8-68
		Removal	8-68
8.25 Fuel Gauge	8-54	Installation	8-70
General	8-54		
Removal	8-54	8.38 Handlebar Switch Assemblies ..	8-72
Installation	8-55	General	8-72
		Repair Procedures	8-72
8.26 Instrument Console: FXSTD	8-56		
Removal	8-56	8.39 Right Handlebar Switch	8-73
Installation	8-56	Removal	8-73
		Installation	8-73
8.27 Speedometer: All But FXSTD ...	8-57	Disassembly	8-75
Removal	8-57	Switch Repair/Replacement	8-76
Installation	8-57	Upper Housing Repair	8-76
		Lower Housing Repair	8-77
8.28 Speedometer: FXSTD	8-58	Assembly	8-78
Removal	8-58		
Installation	8-58	8.40 Left Handlebar Switch.....	8-79
		Removal	8-79
8.29 Vehicle Speed Sensor: VSS.....	8-59	Installation	8-79
General	8-59	Disassembly	8-80
Removal	8-59	Switch Repair/Replacement	8-80
Installation	8-59	Upper Housing Repair	8-80
		Lower Housing Repair	8-82
		Assembly	8-83



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

APPENDIX A—TOOLS

A.1 Tools..... A-1

APPENDIX B—WIRING

B.1 Amp 1-Place Connector..... B-1

Pin and Socket Housings.....	B-1
To Separate Housings.....	B-1
To Mate Housings.....	B-1
Wire Terminals.....	B-1
Remove Socket Terminals.....	B-1
Install Socket Terminal.....	B-2
Remove Pin Terminals.....	B-2
Install Pin Terminals.....	B-2

B.2 Amp Multilock..... B-3

Pin and Socket Housings.....	B-3
Separate Housings.....	B-3
Mate Housings.....	B-3
Wire Terminals.....	B-4
Remove Terminals from Housing.....	B-4
Insert Terminals into Housings.....	B-5
Terminal Crimps.....	B-6
Prepare Wire Leads.....	B-6
Crimp Terminals to Leads.....	B-6
Inspect Crimp.....	B-7

B.3 Delphi Connectors..... B-8

Pin and Socket Housings.....	B-8
To Separate Housings.....	B-8
To Mate Housings.....	B-8
Wire Terminals.....	B-8
Remove Socket Terminals.....	B-8
Install Socket Terminals.....	B-9
Housing.....	B-10
To Separate Housings.....	B-10
To Mate Housings.....	B-10
Wire Terminals.....	B-10
Remove Terminal.....	B-10
Installation.....	B-10

B.5 Deutsch..... B-11

Pin and Socket Housings.....	B-11
Separate Housings.....	B-11
Mate Housings.....	B-11
Wire Terminals.....	B-12
Remove Socket Terminals.....	B-12
Install Socket Terminals.....	B-12
Remove Pin Terminals.....	B-13
install Pin Terminals.....	B-14
Terminal Crimps.....	B-14

B.6 Standard Deutsch Terminal Crimps..... B-15

Terminal Crimps.....	B-15
Prepare Wire Lead.....	B-15
Crimp Terminal to Lead.....	B-15
Inspect Crimp.....	B-15

B.7 Deutsch Mini Terminal Crimps .. B-16

Terminal Crimps.....	B-16
Prepare Wire Lead.....	B-16
Crimp a Mini Terminal to a Wire Lead.....	B-16
Inspect Crimp.....	B-16

B.8 Deutsch Solid Barrel Terminal Crimps..... B-17

Wire Terminals.....	B-17
Prepare Wire Lead.....	B-17
Adjust Crimper Tool.....	B-17
Crimp Barrel Contact to Wire Lead.....	B-18
Inspect Crimp.....	B-18

B.9 Fuse Blocks..... B-19

Fuse Wire Leads.....	B-19
Remove Socket Terminals.....	B-19
Install Socket Terminals.....	B-19
Terminal Crimps.....	B-20

B.10 150 Metri-Pack..... B-21

Pin and Socket Housings.....	B-21
Wire Terminals.....	B-21
Remove Terminals.....	B-21
Insert Terminals.....	B-21
Terminal Crimps.....	B-21

B.11 280 Metri-Pack..... B-23

Pin and Socket Housings.....	B-23
To Separate Housings.....	B-23
To Mate Housings.....	B-23
Wire Terminals.....	B-23
Remove Socket Terminals.....	B-23
Install Socket Terminals.....	B-23
Terminal Crimps.....	B-24

B.12 480 Metri-Pack..... B-25

Pin and Socket Housings.....	B-25
To Separate Housings.....	B-25
To Mate Housings.....	B-25
Wire Terminals.....	B-25
Remove Socket Terminal.....	B-25
Install Socket Terminal.....	B-26

B.13 630 Metri-Pack..... B-27

Pin and Socket Housings.....	B-27
Separate Housings.....	B-27
Mate Housings.....	B-27
Wire Terminals.....	B-27
Remove Socket Terminals.....	B-27
Install Socket Terminals.....	B-27

B.14 800 Metri-Pack..... B-28

Fuse and Socket Housing.....	B-28
Remove the Maxi-Fuse.....	B-28
Install Maxi-Fuse.....	B-28
Wire Terminals.....	B-28
Remove Socket Terminals.....	B-28
Install Socket Terminals.....	B-29
Terminal Crimps.....	B-29

B.15 Metri-Pack Terminal Crimps B-30

Match Terminal to Crimper.....	B-30
Terminal Crimps.....	B-31
Prepare Wire Lead.....	B-31
Crimp Wire Core	B-31
Crimp Insulation/Seal.....	B-31
Inspect Crimp.....	B-31

B.16 Packard 100W..... B-32

Socket Housing.....	B-32
Separate Socket Housing from ECM.....	B-32
Mate Socket Housing to ECM.....	B-32
Wire Terminals.....	B-32
Remove Socket Terminals.....	B-32
Install Socket Terminals.....	B-32

B.17 Molex..... B-34

Pin and Socket Housings.....	B-34
Separate the Housings	B-34
Mate the Housings	B-34
Wire Terminals.....	B-34
Remove Terminals.....	B-34
Install Terminal.....	B-35

B.18 Packard Micro 64 B-36

Pin and Socket Housings.....	B-36
Separate the Housings	B-36
Mate the Housings	B-36
Wire Terminals.....	B-36
Remove Terminals.....	B-36
Install Terminals.....	B-37
Terminal Crimps.....	B-38
Prepare Wire Lead.....	B-38
Crimp Terminal.....	B-38
Inspect Crimp.....	B-38

B.19 Sealed Splice..... B-39

Prepare Wire Leads	B-39
Splicing Wire Leads	B-40
Inspect Seal	B-40

B.20 Connector Locations B-41**B.21 Index to Wiring Diagrams..... B-43**

Wire Color Codes.....	B-43
Wiring Diagram Symbols.....	B-43

APPENDIX C—METRIC CONVERSIONS

C.1 Metric Conversions..... C-1**C.2 Fluid Conversions..... C-2**

United States System.....	C-2
Metric System	C-2
British Imperial System	C-2

APPENDIX D—GLOSSARY

D.1 Glossary..... D-1

INDEX

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>