



2008 Dyna Models Service Manual

©2007 H-D.
ALL RIGHTS RESERVED
99481-08

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE
<http://www.harley-davidson.com>

MAINTENANCE

1.1 GENERAL

Servicing a New Motorcycle.....	1-1
Safe Operating Maintenance.....	1-1
Shop Practices.....	1-1
Repair Notes.....	1-1
Safety.....	1-1
Removing Parts.....	1-1
Cleaning.....	1-1
Disassembly and Assembly.....	1-2
Checking Torques on Fasteners with Lock Patches.....	1-2
Magnetic Parts Trays.....	1-2
Repair and Replacement Procedures.....	1-2
Hardware and Threaded Parts.....	1-2
Threadlocking Agents.....	1-2
Wiring, Hoses and Lines.....	1-2
Instruments and Gauges.....	1-2
Bearings.....	1-2
Bushings.....	1-2
Gaskets.....	1-2
Lip Type Seals.....	1-2
O-Rings (Preformed Packings).....	1-3
Gears.....	1-3
Shafts.....	1-3
Part Replacement.....	1-3
Exhaust System Leakage.....	1-3
Cleaning.....	1-3
Part Protection.....	1-3
Cleaning Process.....	1-3
Rust or Corrosion Removal.....	1-3
Bearings.....	1-3
Tool Safety.....	1-3
Air Tools.....	1-3
Wrenches.....	1-3
Pliers/Cutters/Pry bars.....	1-3
Hammers.....	1-4
Punches/Chisels.....	1-4
Screwdrivers.....	1-4
Ratchets and Handles.....	1-4
Sockets.....	1-4
Storage Units.....	1-4

1.2 MAINTENANCE SCHEDULE

General.....	1-5
--------------	-----

1.3 FUEL AND OIL

Fuel.....	1-8
Gasoline Blends.....	1-8
Engine Lubrication.....	1-8
Winter Lubrication.....	1-9

1.4 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-10
Type of Oil.....	1-10
Checking with Cold Engine.....	1-10
Checking with Warm Engine.....	1-10
Changing Oil and Filter.....	1-11

1.5 BULB REQUIREMENTS

General.....	1-12
--------------	------

1.6 BRAKES

Fluid Inspection.....	1-13
Rear Pedal Height.....	1-13

1.7 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-15
Installation.....	1-15
Exhaust System Leak Check.....	1-16

1.8 TIRES AND WHEELS

Tires.....	1-17
Tire Replacement.....	1-17
Wheel Bearings.....	1-18
Wheel Spokes.....	1-18

1.9 PRIMARY CHAIN

General.....	1-19
Changing Primary Chaincase Lubricant.....	1-19

1.10 TRANSMISSION LUBRICANT

Changing Transmission Lubricant.....	1-21
--------------------------------------	------

1.11 CLUTCH

Adjustment.....	1-22
-----------------	------

1.12 REAR BELT AND SPROCKETS

General.....	1-24
Cleaning.....	1-24
Inspection.....	1-24
Sprockets.....	1-24
Rear Belt.....	1-24

1.13 REAR BELT DEFLECTION

Inspection.....	1-26
Adjustment.....	1-27

1.14 THROTTLE CABLES

Cable Inspection, Lubrication and Adjustment.....	1-28
Inspection and Lubrication.....	1-28
Adjustment.....	1-28

1.15 BLEEDING BRAKES

General.....	1-29
Procedure.....	1-29

1.16 BRAKE PADS AND DISCS

Inspection.....	1-30
Brake Pads.....	1-30
Brake Disc Thickness.....	1-30
Brake Disc Lateral Runout and Warpage.....	1-30
Brake Pad Replacement.....	1-30
Rear Brake Caliper.....	1-30
Front Brake Caliper.....	1-31

1.17 BATTERY MAINTENANCE

General.....	1-33
Cleaning and Inspection.....	1-34
Voltmeter Test.....	1-34
Voltmeter Test.....	1-34
Charging Battery.....	1-34
Safety Precautions.....	1-34
Using a Battery Charger.....	1-34
Disconnection and Removal.....	1-35
Storage.....	1-36
Installation and Connection.....	1-36

1.18 SUSPENSION ADJUSTMENTS

Rear Shock Preload Adjustment.....	1-38
------------------------------------	------

TABLE OF CONTENTS

1.19 SPARK PLUGS

Inspection.....	1-39
Spark Plug Cable Inspection.....	1-39

1.20 STEERING HEAD BEARINGS

Adjustment.....	1-41
Bearing Adjustment (Fall Away).....	1-41
Lubrication.....	1-41

1.21 FRONT FORK OIL

Replacing Fork Oil.....	1-42
-------------------------	------

1.22 CABLE AND CHASSIS LUBRICATION

General.....	1-43
Cables and Hand Levers.....	1-43
Jiffy Stand.....	1-43

1.23 HEADLAMP ALIGNMENT

Inspection.....	1-44
Adjustment.....	1-44
All Models.....	1-44

1.24 CRITICAL FASTENERS

Inspection.....	1-46
-----------------	------

1.25 ENGINE MOUNTS

Inspection.....	1-47
-----------------	------

1.26 STORAGE

General.....	1-48
Placing in Storage.....	1-48
Removal from Storage.....	1-48

1.27 TROUBLESHOOTING

General.....	1-50
Engine.....	1-50
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-50
Engine Turns Over But Does Not Start.....	1-50
Starts Hard.....	1-50
Starts But Runs Irregularly or Misses.....	1-50
Spark Plug Fouls Repeatedly.....	1-50
Pre-Ignition or Detonation (Knocks or Pings).....	1-50
Overheating.....	1-51
Valve Train Noise.....	1-51
Excessive Vibration.....	1-51
Check Engine Light Illuminates During Operation.....	1-51
Lubrication System.....	1-51
Oil Does Not Return To Oil Pan.....	1-51
Engine Uses Too Much Oil Or Smokes Excessively... ..	1-51
Engine Leaks Oil From Cases, Push Rods, Hoses, Etc.....	1-51
Low Oil Pressure.....	1-51
High Oil Pressure.....	1-51
Electrical System.....	1-51
Alternator Does Not Charge.....	1-51
Alternator Charge Rate Is Below Normal.....	1-51
Speedometer Operates Erratically.....	1-52
Transmission.....	1-52
Shifts Hard.....	1-52

Jumps Out Of Gear.....	1-52
Clutch Slips.....	1-52
Clutch Drags Or Does Not Release.....	1-52
Clutch Chatters.....	1-52
Handling.....	1-52
Irregularities.....	1-52
Brakes.....	1-52
Brake Does Not Hold Normally.....	1-52

CHASSIS

2.1 SPECIFICATIONS

Specifications.....	2-1
Tires.....	2-1

2.2 VEHICLE IDENTIFICATION NUMBER (V.I.N.)

General.....	2-3
--------------	-----

2.3 FRONT WHEEL

Removal.....	2-5
Disassembly.....	2-5
Cast Wheel.....	2-5
Cast Wheel, Dual Brakes.....	2-5
Laced Wheel.....	2-5
Cleaning and Inspection.....	2-8
Assembly.....	2-8
Cast Wheel.....	2-9
Laced Wheel.....	2-9
Installation.....	2-9

2.4 REAR WHEEL

Removal.....	2-10
Disassembly.....	2-10
Cleaning and Inspection.....	2-11
Assembly.....	2-11
Installation.....	2-12

2.5 SEALED WHEEL BEARINGS

Inspection.....	2-13
Removal.....	2-13
Installation.....	2-14

2.6 WHEEL LACING: 17 INCH RIM

General.....	2-16
Procedure.....	2-16
Hub: Brake Disc Flange Up.....	2-16
Hub: Sprocket Side Up.....	2-17

2.7 WHEEL LACING: 19 INCH RIM

Procedure.....	2-19
----------------	------

2.8 WHEEL LACING: 21 INCH RIM

General.....	2-23
Procedure.....	2-23

2.9 TRUING LACED WHEELS

General.....	2-26
Lateral Truing.....	2-26
Radial Truing.....	2-27

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

TABLE OF CONTENTS

2.10 CHECKING CAST WHEEL RUNOUT

General.....	2-29
Lateral Runout.....	2-29
Radial Runout.....	2-29

2.11 VEHICLE ALIGNMENT

Inspection.....	2-30
-----------------	------

2.12 FRONT BRAKE MASTER CYLINDER

General.....	2-32
Removal and Disassembly.....	2-32
Cleaning and Inspection.....	2-34
Assembly and Installation.....	2-34

2.13 FRONT BRAKE CALIPER

Removal.....	2-36
Disassembly.....	2-36
Cleaning, Inspection and Repair.....	2-38
Assembly.....	2-39
Installation.....	2-39

2.14 REAR BRAKE MASTER CYLINDER

General.....	2-41
Removal.....	2-41
Disassembly.....	2-42
Cleaning and Inspection.....	2-43
Assembly.....	2-43
Installation.....	2-43

2.15 REAR BRAKE CALIPER

Removal.....	2-45
Disassembly.....	2-45
Cleaning, Inspection and Repair.....	2-47
Assembly.....	2-48
Installation.....	2-48

2.16 TIRES

General.....	2-50
Removal.....	2-50
Cleaning, Inspection and Repair.....	2-51
Installation.....	2-51
Tube Type Tires.....	2-51
Tubeless Tires.....	2-52

2.17 FRONT FORK

Removal.....	2-53
Disassembly.....	2-53
Cleaning and Inspection.....	2-56
Assembly.....	2-56
Installation.....	2-57

2.18 STEERING HEAD

Removal.....	2-58
Inspection.....	2-58
Disassembly.....	2-59
Steering Head Bearing Race Removal.....	2-59
Assembly.....	2-60
Installation.....	2-60

2.19 BELT GUARD

Removal.....	2-61
Installation.....	2-61

2.20 DEBRIS DEFLECTOR

Removal.....	2-62
Installation.....	2-62

2.21 THROTTLE CONTROL

Removal/Disassembly.....	2-63
Cleaning and Inspection.....	2-63
Assembly/Installation.....	2-63
Throttle Cable Routing.....	2-63

2.22 REAR SHOCK ABSORBERS

General.....	2-65
Removal.....	2-65
Inspection.....	2-65
Installation.....	2-65

2.23 REAR FORK

Removal.....	2-66
Disassembly.....	2-67
Cleaning and Inspection.....	2-67
Assembly.....	2-67
Installation.....	2-67

2.24 CLUTCH CONTROL

Removal.....	2-68
Installation.....	2-68

2.25 HANDLEBARS: ALL BUT FXDWG/FXDF

Removal.....	2-69
All Models.....	2-69
FXD/FXDC Models.....	2-69
FXDB.....	2-69
FXDL Models.....	2-70
Installation.....	2-70
FXD/FXDC Models.....	2-70
FXDB Models.....	2-71
FXDL Models.....	2-71
All Models.....	2-71

2.26 HANDLEBARS: FXDWG/FXDF

Removal.....	2-72
Installation.....	2-72

2.27 FRONT FENDER

Removal.....	2-75
Installation.....	2-75

2.28 REAR FENDER

General.....	2-76
Removal.....	2-76
Tail Lamp/Turn Signal Harness Routing.....	2-76
Installation.....	2-76
FXDWG/FXDF.....	2-77
Removal.....	2-77
Installation.....	2-77
FXD, FXDC, FXDB and FXDL Models.....	2-77

TABLE OF CONTENTS

Removal.....	2-77
Installation.....	2-77
2.29 SEAT	
Removal.....	2-78
Installation.....	2-78
2.30 JIFFY STAND	
Cleaning.....	2-80
Sensor (HDI Models).....	2-80
Removal.....	2-81
Installation.....	2-81
2.31 ENGINE MOUNTS	
Removal.....	2-83
Front Isolator.....	2-83
Rear Isolator.....	2-83
Installation.....	2-83
Front Isolator.....	2-83
Rear Isolator.....	2-83
ENGINE	
3.1 SPECIFICATIONS	
Specifications.....	3-1
3.2 SERVICE WEAR LIMITS	
General.....	3-3
3.3 ENGINE OIL FLOW	
Oil Feed.....	3-5
Top End.....	3-6
Bottom End.....	3-7
Oil Return.....	3-9
3.4 OIL PUMP OPERATION	
General.....	3-10
Operation.....	3-10
3.5 BREATHER OPERATION	
General.....	3-12
3.6 OIL PRESSURE	
Oil Pressure Indicator Lamp.....	3-13
Checking Oil Pressure.....	3-13
3.7 TROUBLESHOOTING	
Diagnosing Valve Train Noise.....	3-14
Compression Test.....	3-14
Cylinder Leakdown Test.....	3-14
Diagnosing Smoking Engine or High Oil Consumption.....	3-15
Check Prior To Cylinder Head Removal.....	3-15
Check After Cylinder Head Removal.....	3-15
3.8 HOW TO USE THIS SECTION	
Top End Repair.....	3-16
Bottom End Repair.....	3-16
Typical Symptoms.....	3-16

3.9 TOP END SERVICE	
Engine in Chassis.....	3-17
Engine Removed from Chassis.....	3-18
3.10 BOTTOM END SERVICE	
Engine in Chassis.....	3-19
Engine Removed From Chassis.....	3-20
3.11 STRIPPING MOTORCYCLE FOR SERVICE	
Procedure.....	3-21
3.12 ASSEMBLING MOTORCYCLE AFTER SERVICE	
Procedure.....	3-22
3.13 REMOVING ENGINE FROM CHASSIS	
Procedure.....	3-23
3.14 INSTALLING ENGINE IN CHASSIS	
Procedure.....	3-24
3.15 TOP END OVERHAUL: DISASSEMBLY	
General.....	3-26
Breather Assembly.....	3-26
Rocker Arm Support Plate.....	3-27
Push Rods, Lifters and Covers.....	3-28
Cylinder Head.....	3-29
Cylinder.....	3-30
Piston.....	3-30
3.16 TOP END OVERHAUL: ASSEMBLY	
General.....	3-32
Piston.....	3-32
Cylinder.....	3-33
Cylinder Head.....	3-35
Push Rods, Lifters and Covers.....	3-39
Rocker Arm Support Plate.....	3-40
Breather Assembly.....	3-41
3.17 BOTTOM END OVERHAUL: DISASSEMBLY	
General.....	3-43
Cover and Cam Support Plate.....	3-43
Prepare Engine.....	3-43
Cam Chain and Sprockets.....	3-43
Cam Support Plate.....	3-44
Crankcase.....	3-45
3.18 BOTTOM END OVERHAUL: ASSEMBLY	
General.....	3-47
Crankcase.....	3-47
Cover and Cam Support Plate.....	3-49
3.19 BREATHER ASSEMBLY	
Removal Overview.....	3-54
Disassembly.....	3-54
Cleaning and Inspection.....	3-54
Assembly.....	3-54

TABLE OF CONTENTS

Installation Overview.....	3-54
----------------------------	------

3.20 ROCKER ARM SUPPORT PLATE

Removal Overview.....	3-55
Disassembly.....	3-55
Cleaning and Inspection.....	3-55
Inspection.....	3-55
Rocker Shaft Fit.....	3-55
Rocker Arm Shaft to Bushing.....	3-56
Replace Rocker Arm Bushings.....	3-56
Assembly.....	3-57
Installation Overview.....	3-57

3.21 PUSH RODS, LIFTERS AND COVERS

Removal Overview.....	3-58
Disassembly.....	3-58
Cleaning and Inspection.....	3-58
Lifter Inspection.....	3-59
Assembly.....	3-59
Installation Overview.....	3-60

3.22 CYLINDER HEAD

Removal Overview.....	3-61
Disassembly.....	3-61
Cleaning.....	3-62
Inspection.....	3-63
Cylinder Head.....	3-63
Valve Guides.....	3-63
Valves.....	3-63
Valve Springs.....	3-63
Tapered Keepers.....	3-64
Valve Seats.....	3-64
Valve Guide Replacement.....	3-64
Removal.....	3-64
Installation.....	3-65
Valve and Seat Refacing.....	3-68
Assembly.....	3-70
Installation Overview.....	3-71

3.23 CYLINDER

Removal Overview.....	3-72
Cleaning.....	3-72
Inspection.....	3-73
Deglazing Cylinder.....	3-74
Boring and Honing Cylinder.....	3-75
Installation Overview.....	3-75

3.24 PISTON

Removal Overview.....	3-76
Disassembly.....	3-76
Piston Rings.....	3-76
Cleaning.....	3-76
Inspection.....	3-77
Assembly.....	3-78
Checking Piston Ring Gap.....	3-78
Installing Piston Rings.....	3-79
Installation Overview.....	3-80

3.25 COVER AND CAM SUPPORT PLATE

Removal Overview.....	3-81
Camshafts.....	3-82

Removal.....	3-82
Assembly.....	3-83
Oil Pressure Relief Valve.....	3-84
Removal.....	3-84
Installation.....	3-84
Inspection.....	3-85
Cam Needle Bearings.....	3-85
Removal.....	3-85
Installation.....	3-86
Cleaning and Inspection.....	3-88
Oil Pressure Valve.....	3-88
Cam Support Plate.....	3-88
Installation Overview.....	3-88

3.26 OIL PUMP

Removal Overview.....	3-89
Cleaning and Inspection.....	3-89
Installation Overview.....	3-89

3.27 CRANKCASE

Removal Overview.....	3-90
Right Crankcase Half.....	3-90
Crankshaft Bearing Removal.....	3-90
Crankshaft Bearing Installation.....	3-90
Piston Jets Removal.....	3-91
Piston Jets Installation.....	3-91
Left Crankcase Half.....	3-91
Crankshaft (Roller) Bearing Removal.....	3-91
Crankshaft (Roller) Bearing Installation.....	3-93
Sprocket Shaft Bearing Inner Race.....	3-94
Removal.....	3-94
Installation.....	3-95
Cylinder Studs.....	3-96
Removal.....	3-96
Installation.....	3-96
Pipe Plug and Oil Fittings.....	3-97
Removal.....	3-97
Installation.....	3-97
Cleaning and Inspection.....	3-97
Installation Overview.....	3-97

3.28 FLYWHEEL AND CONNECTING RODS

Removal Overview.....	3-98
Inspection.....	3-98
Installation Overview.....	3-98

3.29 OIL PAN

Removal.....	3-99
Installation.....	3-99

FUEL SYSTEM

4.1 SPECIFICATIONS: FUEL SYSTEM

Specifications.....	4-1
---------------------	-----

4.2 ELECTRONIC FUEL INJECTION (EFI)

Troubleshooting.....	4-2
----------------------	-----

4.3 IDLE SPEED

General.....	4-3
--------------	-----

TABLE OF CONTENTS

4.4 AIR CLEANER ASSEMBLY

Removal.....	4-4
Installation.....	4-5
Backplate Assembly: HDI Models.....	4-5

4.5 FUEL TANK

General.....	4-7
Removal.....	4-7
Cleaning and Inspection.....	4-9
Installation.....	4-9
Vapor Valve.....	4-9

4.6 THROTTLE POSITION SENSOR (TPS)

General.....	4-10
Removal.....	4-10
Installation.....	4-10

4.7 INTAKE AIR TEMPERATURE SENSOR (IAT)

General.....	4-11
Removal.....	4-11
Installation.....	4-11

4.8 ENGINE TEMPERATURE SENSOR (ET)

General.....	4-12
Removal.....	4-12
Installation.....	4-13

4.9 INDUCTION MODULE

Removal.....	4-14
Installation.....	4-15

4.10 IDLE AIR CONTROL (IAC)

General.....	4-16
Removal.....	4-16
Installation.....	4-16

4.11 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)

General.....	4-17
Removal.....	4-17
Installation.....	4-17

4.12 OXYGEN SENSOR

General.....	4-18
Removal.....	4-18
Installation.....	4-18

4.13 FUEL INJECTORS

General.....	4-19
Removal.....	4-19
Installation.....	4-19

4.14 FUEL PUMP

General.....	4-21
Removal.....	4-21
Disassembly/Assembly.....	4-23
Fuel Filter.....	4-23
Regulator.....	4-23

Inlet Sock.....	4-24
Fuel Pump.....	4-25
Installation.....	4-25

4.15 FUEL PRESSURE TEST

General.....	4-29
Testing.....	4-29

4.16 EXHAUST SYSTEM

Removal: All but FXDF.....	4-31
Disassembly: All but FXDF.....	4-33
Assembly: All but FXDF.....	4-33
Installation: All but FXDF.....	4-33
Removal: FXDF.....	4-34
Installation: FXDF.....	4-35

4.17 INTAKE LEAK TEST

General.....	4-37
Leak Tester.....	4-37
Parts List.....	4-37
Tester Assembly.....	4-37
Tester Adjustment.....	4-37
Procedure.....	4-37

4.18 EVAPORATIVE EMISSIONS CONTROL (CA MODELS)

General.....	4-39
Charcoal Canister.....	4-39
Removal.....	4-39
Installation.....	4-40

STARTER

5.1 SPECIFICATIONS: STARTER

Specifications.....	5-1
---------------------	-----

5.2 STARTER

General.....	5-2
Starter Relay.....	5-2
Wiring Diagrams.....	5-2
Removal.....	5-2
Installation.....	5-2
Testing.....	5-2
Armature.....	5-2
Brushes and Brush Holder.....	5-5
Field Coil Assembly.....	5-6
Disassembly.....	5-6
Inspection.....	5-6
Assembly.....	5-6
Drive Assembly.....	5-7
Disassembly.....	5-7
Inspection.....	5-7
Assembly.....	5-7

5.3 STARTER SOLENOID

Solenoid Assembly.....	5-8
Disassembly.....	5-8
Assembly.....	5-8
Solenoid Plunger.....	5-8
Disassembly.....	5-8

TABLE OF CONTENTS

Assembly.....	5-8
Solenoid Contacts.....	5-8
Disassembly.....	5-8
Assembly.....	5-9

DRIVE

6.1 SPECIFICATIONS: DRIVE

Specifications.....	6-1
---------------------	-----

6.2 PRIMARY CHAINCASE COVER

General.....	6-2
Removal.....	6-2
Installation.....	6-2

6.3 DRIVE COMPONENTS

Removal.....	6-3
Installation.....	6-4

6.4 PRIMARY CHAINCASE HOUSING

Removal.....	6-8
Inspection.....	6-8
Mainshaft Bearing and Lip Seal.....	6-8
Removal.....	6-8
Installation.....	6-8
Mainshaft Bearing Inner Race.....	6-9
Removal.....	6-9
Installation.....	6-9
Shifter Shaft Bushing.....	6-10
Installation.....	6-11

6.5 CLUTCH

Removal and Installation.....	6-13
Clutch Pack Only.....	6-13
Partial Disassembly.....	6-13
Cleaning And Inspection.....	6-13
Assembly.....	6-14
Clutch Pack and Bearing.....	6-15
Complete Disassembly.....	6-15
Assembly.....	6-16

6.6 TRANSMISSION SPROCKET

Removal.....	6-18
Cleaning and Inspection.....	6-18
Installation.....	6-19

6.7 DRIVE BELT

Removal.....	6-21
Installation.....	6-21

TRANSMISSION

7.1 SPECIFICATIONS: TRANSMISSION

Specifications.....	7-1
Service Wear Limits.....	7-1

7.2 TRANSMISSION

Power Flow.....	7-2
Neutral.....	7-2
1st Gear.....	7-2

2nd Gear.....	7-2
3rd Gear.....	7-2
4th Gear.....	7-2
5th Gear.....	7-2
6th Gear.....	7-2

7.3 SHIFTER LINKAGE

Adjustment.....	7-4
-----------------	-----

7.4 CLUTCH RELEASE COVER

Removal and Disassembly.....	7-5
Cleaning and Inspection.....	7-5
Assembly and Installation.....	7-6

7.5 TRANSMISSION ASSEMBLY

Removal.....	7-7
Disassembly.....	7-8
Shifter Cam/Shifter Forks.....	7-8
Mainshaft.....	7-9
Countershaft.....	7-13
Replacing Side Door Bearings.....	7-15
Cleaning and Inspection.....	7-15
Assembly.....	7-15
Installing Side Door Bearings.....	7-15
Countershaft.....	7-16
Mainshaft.....	7-16
Shifter Cam/Shifter Forks.....	7-17
Installation.....	7-18

7.6 MAIN DRIVE GEAR AND BEARING

Removal.....	7-19
Cleaning and Inspection.....	7-20
Needle Bearing Replacement.....	7-20
Installation.....	7-22
Installing Main Drive Gear Bearing.....	7-23
Installing Main Drive Gear.....	7-23
Installing Main Drive Gear Seal.....	7-24

7.7 TRANSMISSION CASE

Removal.....	7-26
Installation.....	7-27
Disassembly.....	7-28
Shifter Arm Assembly.....	7-28
Cleaning and Inspection.....	7-28
Assembly.....	7-29
Countershaft Needle Bearing Replacement.....	7-29
Shifter Pawl Lever Assembly.....	7-29

ELECTRICAL

8.1 SPECIFICATIONS: ELECTRICAL

Specifications.....	8-1
---------------------	-----

8.2 ELECTRICAL CADDY

Removal.....	8-2
Installation.....	8-2

8.3 ELECTRONIC CONTROL MODULE (ECM)

General.....	8-4
Replacement.....	8-4

TABLE OF CONTENTS

8.4 SPARK PLUG CABLES

Removal.....	8-5
Installation.....	8-5

8.5 VOLTAGE REGULATOR

Removal.....	8-6
Installation.....	8-6

8.6 FUSES AND RELAYS

General.....	8-7
Removal and Installation.....	8-7
Relays.....	8-7
Fuses.....	8-7

8.7 IGNITION SWITCH/FORK LOCK

General.....	8-8
FXD, FXDL, FXDB.....	8-8
Removal.....	8-8
Installation.....	8-9
FXDWG, FXDC, FXDF Models (Ignition Switch Only).....	8-11

8.8 BATTERY TRAY AND BATTERY CABLES

Battery Tray.....	8-12
Removal.....	8-12
Installation.....	8-12
Battery Cables.....	8-13
Routing.....	8-13

8.9 HEADLAMP

General.....	8-14
Bulb Removal.....	8-14
Single Bulb Headlamp.....	8-14
Dual Bulb Headlamp.....	8-15
Bulb Installation.....	8-16
Headlamp Assembly Removal.....	8-16
Headlamp Assembly Installation.....	8-16

8.10 TAIL LAMP

General.....	8-17
Tail Lamp Bulb Replacement: Standard Style.....	8-17
Base Replacement.....	8-17

8.11 TURN SIGNALS AND RUNNING LIGHTS

Bulb Replacement: Bullet Style.....	8-19
Front Lamp Housing Replacement.....	8-19
Rear Lamp Housing Replacement.....	8-20

8.12 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)

Removal.....	8-23
Installation.....	8-23

8.13 CRANK POSITION SENSOR (CKP)

General.....	8-25
Removal.....	8-25
Installation.....	8-25

8.14 ALTERNATOR AND STATOR

Removal/Disassembly.....	8-26
Assembly/Installation.....	8-26

8.15 FUEL GAUGE

General.....	8-27
All But FXD Models.....	8-27
Removal.....	8-27
Installation.....	8-27
FXD Models.....	8-27
Console Removal.....	8-27
Gauge Removal.....	8-29
Gauge Installation.....	8-29
Console Installation.....	8-29

8.16 FUEL GAUGE SENDER

Removal.....	8-31
Installation.....	8-32

8.17 INSTRUMENTS: FXDWG/FXDC/FXDF

Removal.....	8-34
Speedometer.....	8-34
Installation.....	8-34
Speedometer.....	8-34

8.18 INSTRUMENTS: FXDL/FXDB

Removal.....	8-35
General.....	8-35
Speedometer.....	8-35
Tachometer.....	8-35
Installation.....	8-35
General.....	8-35
Speedometer.....	8-35
Tachometer.....	8-35

8.19 INSTRUMENTS: FXD

Removal.....	8-37
Installation.....	8-37

8.20 VEHICLE SPEED SENSOR (VSS)

General.....	8-38
Removal.....	8-38
Installation.....	8-38

8.21 INDICATOR LAMPS

General.....	8-39
Removal.....	8-39
FXDWG/FXDC/FXDF Models.....	8-39
FXDB Models.....	8-39
FXD Models.....	8-40
FXDL Models.....	8-40
Installation.....	8-40
FXDWG/ FXDC/FXDF Models.....	8-40
FXDB Models.....	8-41
FXD Models.....	8-41
FXDL Models.....	8-41

8.22 NEUTRAL SWITCH

General.....	8-42
Removal.....	8-42
Installation.....	8-42

8.23 OIL PRESSURE SWITCH

General.....	8-43
--------------	------

TABLE OF CONTENTS

Removal.....	8-43
Installation.....	8-43

8.24 REAR STOPLIGHT SWITCH

General.....	8-44
Removal.....	8-44
Installation.....	8-44

8.25 HORN

Inspection.....	8-45
Replacement.....	8-45

8.26 ACTIVE EXHAUST

General.....	8-46
Removal.....	8-46
Repair.....	8-46
Installation.....	8-46

8.27 MAIN WIRING HARNESS

General.....	8-48
Removal.....	8-48
Installation.....	8-50

8.28 HANDLEBAR SWITCH ASSEMBLIES

General.....	8-53
Repair Procedures.....	8-53

8.29 RIGHT HANDLEBAR SWITCH

Removal.....	8-54
Installation.....	8-54
Disassembly.....	8-56
Switch Repair/Replacement.....	8-57
Upper Housing Repair.....	8-57
Lower Housing Repair.....	8-57
Turn-Right Signal Switch.....	8-58
Front Stoplight Switch.....	8-58
Assembly.....	8-58

8.30 LEFT HANDLEBAR SWITCH

Removal.....	8-60
Installation.....	8-60
Disassembly.....	8-61
Switch Repair/Replacement.....	8-61
Upper Housing Repair.....	8-61
Lower Housing Repair.....	8-62
Turn-Left Signal Switch.....	8-62
Clutch Interlock Switch.....	8-62
Assembly.....	8-62

APPENDIX A CONNECTOR REPAIR

A.1 AMP 1-PLACE CONNECTORS

AMP 1-Place Connector Repair.....	A-1
General.....	A-1
Separating Pin and Socket Housings.....	A-1
Mating Pin and Socket Housings.....	A-1
Removing Socket Terminals.....	A-1
Installing Socket Terminal.....	A-1
Removing Pin Terminal.....	A-1
Installing Pin Terminal.....	A-2

A.2 AMP MULTILOCK CONNECTORS

AMP Multilock Connector Repair.....	A-3
General.....	A-3
Separating Pin and Socket Housings.....	A-3
Mating Pin and Socket Housings.....	A-3
Removing Terminals from Housing.....	A-3
Inserting Terminals into Housing.....	A-4
Preparing Wire Leads for Crimping.....	A-4
Crimping Terminals to Leads.....	A-5
Inspecting Crimped Terminals.....	A-6

A.3 AUTOFUSE ELECTRICAL CONNECTORS

Autofuse Connector Repair.....	A-7
General.....	A-7
Disassembly.....	A-7
Assembly.....	A-7

A.4 DELPHI CONNECTORS

Delphi Connector Repair.....	A-8
General.....	A-8
Separating Pin and Socket Housings.....	A-8
Mating Pin and Socket Housings.....	A-8
Removing Socket Terminals.....	A-8
Installing Socket Terminals.....	A-8

A.5 DELPHI MAXI FUSE HOUSING

Delphi Maxi-Fuse Housing Repair.....	A-10
General.....	A-10
Removing Maxi-Fuse.....	A-10
Installing Maxi-Fuse.....	A-10
Removing Socket Terminals.....	A-10
Installing Socket Terminals.....	A-10

A.6 DEUTSCH ELECTRICAL CONNECTORS

Deutsch Connector Repair.....	A-12
General.....	A-12
Separating Pin and Socket Housings.....	A-12
Mating Pin and Socket Housings.....	A-12
Removing Socket Terminals.....	A-12
Installing Socket Terminals.....	A-12
Removing Pin Terminals.....	A-14
Installing Pin Terminals.....	A-14
Crimping Terminals.....	A-15

A.7 DEUTSCH STANDARD TERMINAL REPAIR

Deutsch Standard Terminal Crimps.....	A-16
Preparing Wire Leads for Crimping.....	A-16
Crimping Terminal to Lead.....	A-16
Inspecting Crimps.....	A-16

A.8 DEUTSCH SOLID BARREL MINI TERMINAL REPAIR

Deutsch Solid Barrel Terminal Crimps.....	A-17
Preparing Wire Leads For Crimping.....	A-17
Adjusting Crimper Tool.....	A-17
Crimping a Barrel Contact To Wire Lead.....	A-17
Inspecting Crimps.....	A-17

TABLE OF CONTENTS

A.9 DEUTSCH MINI TERMINAL REPAIR

Deutsch Mini Terminal Crimps.....	A-19
Preparing Wire Leads for Crimping.....	A-19
Crimping a Mini Terminal to Wire Lead.....	A-19
Inspecting Crimps.....	A-19

A.10 MOLEX CONNECTORS

Molex Connector Repair.....	A-20
Separating Pin and Socket Housings.....	A-20
Mating Pin and Socket Housings.....	A-20
Removing Terminals.....	A-20
Installing Terminals.....	A-20
Crimp Terminal to Lead.....	A-21
Prepare Lead.....	A-21
Prepare Tool.....	A-21
Position Terminal in the Punch/Die.....	A-22
Insert Stripped Lead.....	A-22
Crimp Terminal to Lead.....	A-22
Inspect Crimp.....	A-23

A.11 PACKARD 150 METRI-PACK CONNECTORS

150 Metri-Pack Connector Repair.....	A-24
General.....	A-24
Separating Pin and Socket Housings.....	A-24
Mating Pin and Socket Housings.....	A-24
Removing Socket Terminal.....	A-24
Inserting Socket Terminal.....	A-24

A.12 PACKARD 280 METRI-PACK RELAY AND FUSE BLOCK CONNECTORS

Fuse Block Repair.....	A-26
Removing Socket Terminals.....	A-26
Installing Socket Terminals.....	A-26
Crimping Terminals.....	A-26

A.13 PACKARD 480 METRI-PACK CONNECTORS

480 Metri-Pack Connector Repair.....	A-27
General.....	A-27
Separating Pin and Socket Housings.....	A-27
Mating Pin and Socket Housings.....	A-27
Removing Socket Terminals.....	A-27
Installing Socket Terminals.....	A-27

A.14 PACKARD 630 METRI-PACK CONNECTORS

630 Metri-Pack Connector Repair.....	A-28
General.....	A-28
Separating Pin and Socket Housings.....	A-28
Mating Pin and Socket Housings.....	A-28
Removing Socket Terminal.....	A-28
Installing Socket Terminal.....	A-28

A.15 PACKARD METRI-PACK TERMINALS

Metri-Pack Terminal Crimps.....	A-29
Matching Terminal To Crimper.....	A-29
Preparing Wire Lead.....	A-29
Crimping Wire Core.....	A-29
Crimping Insulation/Seal.....	A-29

Inspecting Crimps.....	A-30
------------------------	------

A.16 PACKARD ECM CONNECTOR

Packard 100W Connector Repair.....	A-31
General.....	A-31
Separating Socket Housing From ECM.....	A-31
Mating Socket Housing To ECM.....	A-31
Removing Socket Terminal.....	A-31
Installing Socket Terminal.....	A-31
Crimping Terminals.....	A-31

A.17 PACKARD MICRO-64 CONNECTORS

Packard Micro-64 Connector Repair.....	A-33
General.....	A-33
Separating Pin and Socket Housings.....	A-33
Mating Pin and Socket Housings.....	A-33
Removing Terminal.....	A-33
Installing Terminal.....	A-33
Preparing Wire Leads for Crimping.....	A-34
Crimping Terminals.....	A-34
Inspecting Crimps.....	A-34

A.18 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-36
General.....	A-36
Preparing Wire Leads.....	A-36
Splicing Wire Leads.....	A-36
Inspecting Seals.....	A-36

APPENDIX B WIRING

B.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-3
Wire Color Codes.....	B-3
Wiring Diagram Symbols.....	B-3
2008 Dyna Wiring Diagrams.....	B-4

APPENDIX C CONVERSIONS

C.1 LENGTH CONVERSION

Conversion Table.....	C-1
-----------------------	-----

C.2 FLUID CONVERSION

United States System.....	C-2
Metric System.....	C-2
British Imperial System.....	C-2

C.3 TORQUE CONVERSION

United States System.....	C-3
Metric System.....	C-3



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

APPENDIX D GLOSSARY

D.1 GLOSSARY

Acronyms and Abbreviations.....D-1

REFERENCE MATERIAL

TOOLS.....I

TORQUE VALUES.....VII

INDEX.....XV

NOTES

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>