



2008 Softail Models Service Manual

©2008 H-D.
ALL RIGHTS RESERVED
99482-08A

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE
<http://www.harley-davidson.com>

MAINTENANCE

1.1 GENERAL

Servicing a New Motorcycle.....	1-1
Safe Operating Maintenance.....	1-1
Shop Practices.....	1-1
Repair Notes.....	1-1
Safety.....	1-1
Removing Parts.....	1-1
Cleaning.....	1-1
Disassembly and Assembly.....	1-2
Checking Torques on Fasteners with Lock Patches.....	1-2
Magnetic Parts Trays.....	1-2
Repair and Replacement Procedures.....	1-2
Hardware and Threaded Parts.....	1-2
Threadlocking Agents.....	1-2
Wiring, Hoses and Lines.....	1-2
Instruments and Gauges.....	1-2
Bearings.....	1-2
Bushings.....	1-2
Gaskets.....	1-2
Lip Type Seals.....	1-2
O-Rings (Preformed Packings).....	1-3
Gears.....	1-3
Shafts.....	1-3
Part Replacement.....	1-3
Exhaust System Leakage.....	1-3
Cleaning.....	1-3
Part Protection.....	1-3
Cleaning Process.....	1-3
Rust or Corrosion Removal.....	1-3
Bearings.....	1-3
Tool Safety.....	1-3
Air Tools.....	1-3
Wrenches.....	1-3
Pliers/Cutters/Pry bars.....	1-3
Hammers.....	1-4
Punches/Chisels.....	1-4
Screwdrivers.....	1-4
Ratchets and Handles.....	1-4
Sockets.....	1-4
Storage Units.....	1-4

1.2 MAINTENANCE SCHEDULE

General.....	1-5
--------------	-----

1.3 FUEL AND OIL

Fuel.....	1-9
Gasoline Blends.....	1-9
Engine Lubrication.....	1-9
Winter Lubrication.....	1-10

1.4 BULB REQUIREMENTS

General.....	1-11
--------------	------

1.5 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-12
Type of Oil.....	1-12
Checking Oil Level.....	1-12
Changing Oil and Filter.....	1-12

1.6 BRAKES

Fluid Inspection.....	1-14
Rear Brake Pedal.....	1-14
Pedal Height.....	1-14

Pedal Lubrication.....	1-14
Pedal Pad.....	1-14

1.7 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-16
Installation.....	1-17
Exhaust System Leak Check.....	1-18

1.8 TIRES AND WHEELS

Tires.....	1-19
Tire Replacement.....	1-19
Inspection.....	1-19
When To Replace Tires.....	1-19
Wheel Bearings.....	1-20
Wheel Spokes.....	1-20

1.9 PRIMARY CHAIN

General.....	1-21
Changing Primary Chaincase Lubricant.....	1-21

1.10 TRANSMISSION LUBRICANT

Changing Transmission Lubricant.....	1-23
--------------------------------------	------

1.11 CLUTCH

Adjustment.....	1-25
-----------------	------

1.12 REAR BELT AND SPROCKETS

General.....	1-27
Cleaning.....	1-27
Inspection.....	1-27
Sprockets.....	1-27
Rear Belt.....	1-27

1.13 REAR BELT DEFLECTION

Inspection.....	1-29
Adjustment.....	1-29

1.14 THROTTLE CABLES

Cable Inspection, Lubrication and Adjustment.....	1-31
Inspection and Lubrication.....	1-31
Adjustment.....	1-31

1.15 BLEEDING BRAKES

General.....	1-32
Procedure.....	1-32

1.16 BRAKE PADS AND DISCS

Inspection.....	1-33
Brake Pads.....	1-33
Brake Disc.....	1-33
Brake Pad Replacement.....	1-33
Rear Brake Caliper.....	1-33
Front Brake Caliper.....	1-35

1.17 BATTERY MAINTENANCE

General.....	1-37
Cleaning and Inspection.....	1-38
Voltmeter Test.....	1-38
Voltmeter Test.....	1-38
Charging Battery.....	1-38
Safety Precautions.....	1-38
Using a Battery Charger.....	1-38
Disconnection and Removal.....	1-39
Storage.....	1-40
Installation and Connection.....	1-41

TABLE OF CONTENTS

1.18 SUSPENSION ADJUSTMENTS

Shock Absorbers: Softail Models.....	1-43
Adjustment.....	1-43

1.19 SPARK PLUGS

Inspection.....	1-44
Spark Plug Cable Inspection.....	1-44

1.20 STEERING HEAD BEARINGS: ALL BUT FLSTSB

Adjustment: FLST, FLSTC, FLSTF, FLSTN.....	1-46
Bearing Adjustment (Fall-away).....	1-46
Adjustment: FXST, FXSTB, FXSTC, FXCW/C.....	1-47
Bearing Adjustment (Fall-away).....	1-47
Lubrication.....	1-48

1.21 STEERING HEAD BEARINGS: FLSTSB

General.....	1-49
Lubrication.....	1-49
Adjustment: FLSTSB.....	1-49
Bearing Adjustment (Fall-away).....	1-49

1.22 ROCKER BEARINGS: FLSTSB

Inspection.....	1-51
-----------------	------

1.23 FRONT FORK OIL

Replacing Fork Oil.....	1-53
-------------------------	------

1.24 CABLE AND CHASSIS LUBRICATION

General.....	1-54
Cables and Hand Levers.....	1-54
Jiffy Stand.....	1-54
Steering Head Bearings.....	1-54

1.25 HEADLAMP ALIGNMENT

Inspection.....	1-55
Adjustment.....	1-56

1.26 CRITICAL FASTENERS

Inspection.....	1-57
-----------------	------

1.27 ENGINE MOUNTS

Inspection.....	1-58
-----------------	------

1.28 STORAGE

General.....	1-59
Placing in Storage.....	1-59
Removal from Storage.....	1-59

1.29 TROUBLESHOOTING

General.....	1-61
Engine.....	1-61
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-61
Engine Turns Over But Does Not Start.....	1-61
Starts Hard.....	1-61
Starts But Runs Irregularly or Misses.....	1-61
A Spark Plug Fouls Repeatedly.....	1-62
Pre-Ignition or Detonation (Knocks or Pings).....	1-62

Overheating.....	1-62
Valve Train Noise.....	1-62
Excessive Vibration.....	1-62
Check Engine Light Illuminates During Operation.....	1-62
Lubrication System.....	1-62
Oil Does Not Return To Oil Tank.....	1-62
Engine Uses Too Much Oil Or Smokes Excessively... ..	1-62
Engine Leaks Oil From Cases, Push Rods, Hoses, Etc.....	1-62
Low Oil Pressure.....	1-63
High Oil Pressure.....	1-63
Electrical System.....	1-63
Alternator Does Not Charge.....	1-63
Alternator Charge Rate Is Below Normal.....	1-63
Speedometer Operates Erratically.....	1-63
Transmission.....	1-63
Shifts Hard.....	1-63
Jumps Out Of Gear.....	1-63
Clutch Slips.....	1-63
Clutch Drags Or Does Not Release.....	1-63
Clutch Chatters.....	1-63
Handling.....	1-63
Irregularities.....	1-63
Brakes.....	1-63
Brake Does Not Hold Normally.....	1-63

CHASSIS

2.1 SPECIFICATIONS

Specifications.....	2-1
Chassis Specifications.....	2-1
Tire Specifications.....	2-2

2.2 VEHICLE IDENTIFICATION NUMBER (V.I.N.)

Vehicle Identification Number.....	2-4
------------------------------------	-----

2.3 FRONT WHEEL: ALL BUT FLSTSB

Removal.....	2-6
Disassembly.....	2-6
Disc Wheel.....	2-6
Laced Wheel.....	2-6
Cleaning and Inspection.....	2-8
Assembly.....	2-8
Disc Wheel.....	2-8
Laced Wheel.....	2-8
Installation.....	2-9

2.4 FRONT WHEEL: FLSTSB

Removal.....	2-10
Disassembly.....	2-10
Cleaning and Inspection.....	2-10
Assembly.....	2-10
Installation.....	2-11

2.5 REAR WHEEL

Removal.....	2-12
Disassembly.....	2-12
Cleaning and Inspection.....	2-13
Assembly.....	2-13
Installation.....	2-14

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

TABLE OF CONTENTS

2.6 SEALED WHEEL BEARINGS

Inspection.....	2-15
Removal.....	2-15
Installation.....	2-16

2.7 WHEEL LACING: 16 INCH RIM

General.....	2-18
Procedure.....	2-18

2.8 WHEEL LACING: 17 INCH RIM

General.....	2-21
Procedure.....	2-21

2.9 WHEEL LACING: 21 INCH RIM

General.....	2-24
Procedure.....	2-24

2.10 TRUING LACED WHEELS

General.....	2-27
Lateral Truing.....	2-27
Radial Truing.....	2-28

2.11 CHECKING CAST WHEEL RUNOUT

General.....	2-30
Lateral Runout.....	2-30
Radial Runout.....	2-30

2.12 VEHICLE ALIGNMENT

Inspection.....	2-31
-----------------	------

2.13 FRONT BRAKE MASTER CYLINDER

General.....	2-32
Removal and Disassembly.....	2-32
Cleaning and Inspection.....	2-34
Assembly and Installation.....	2-34

2.14 FRONT BRAKE CALIPER: ALL BUT FLSTSB

Removal.....	2-36
Disassembly.....	2-36
Cleaning, Inspection and Repair.....	2-38
Assembly.....	2-39
Installation.....	2-39

2.15 FRONT BRAKE CALIPER: FLSTSB

Removal.....	2-41
Disassembly.....	2-42
Cleaning and Inspection.....	2-43
Assembly.....	2-44
Installation.....	2-45

2.16 REAR BRAKE MASTER CYLINDER

General.....	2-47
Removal.....	2-47
Installation.....	2-47
Disassembly.....	2-49
Cleaning and Inspection.....	2-50
Assembly.....	2-50

2.17 REAR BRAKE CALIPER

Removal.....	2-52
Disassembly.....	2-52
Cleaning, Inspection and Repair.....	2-54
Assembly.....	2-55
Installation.....	2-55

2.18 TIRES

General.....	2-57
Removal.....	2-57
Cleaning, Inspection and Repair.....	2-58
Installation.....	2-58
Tube Type Tires.....	2-58
Tubeless Tires.....	2-59

2.19 FRONT FORK: TELESCOPIC

General.....	2-60
Removal.....	2-60
Disassembly.....	2-60
Cleaning and Inspection.....	2-60
Assembly.....	2-64
Installation.....	2-64

2.20 FRONT FORK: SPRINGER

General.....	2-65
Front Shock Absorber.....	2-65
Removal.....	2-65
Installation.....	2-65
Rigid Fork.....	2-65
Removal.....	2-65
Installation.....	2-66
Spring Fork.....	2-66
Disassembly.....	2-66
Assembly.....	2-68
Fork Rockers.....	2-70
Removal.....	2-70
Installation.....	2-70
Fork Stem Bearings.....	2-71
Removal and Installation.....	2-71

2.21 STEERING HEAD

Removal.....	2-72
FLST, FLSTC, FLSTF, FLSTN Models.....	2-72
FXST, FXSTC, FXSTB Models.....	2-72
FXCW/C Models.....	2-72
FLSTSB Models.....	2-73
Inspection.....	2-73
All Models.....	2-73
Disassembly.....	2-73
Removing Lower Bearings From Fork Stem.....	2-73
Steering Head Bearing Race Removal.....	2-74
Assembly.....	2-74
Installation.....	2-75
FLST, FLSTC, FLSTF, FLSTN Models.....	2-75
FXST, FXSTC, FXSTB Models.....	2-75
FXCW/C Models.....	2-75
FLSTSB Models.....	2-75

2.22 BELT GUARD AND DEBRIS DEFLECTOR

Removal.....	2-76
--------------	------

TABLE OF CONTENTS

Belt Guard.....	2-76
Debris Deflector.....	2-76
Installation.....	2-76
Belt Guard.....	2-76
Debris Deflector.....	2-76

2.23 REAR SHOCK ABSORBERS

General.....	2-77
Removal.....	2-77
Installation.....	2-77

2.24 REAR FORK

Removal.....	2-79
Cleaning and Inspection.....	2-80
Installation.....	2-80

2.25 THROTTLE CONTROL

Removal/Disassembly.....	2-82
Cleaning and Inspection.....	2-82
Assembly/Installation.....	2-82
Cable Routing.....	2-83

2.26 CLUTCH CONTROL

Removal.....	2-84
Installation.....	2-84

2.27 HANDLEBARS: ALL BUT FLSTF/FLSTSB/FXCW/FXCWC

Removal.....	2-86
Installation.....	2-87

2.28 HANDLEBARS: FLSTF

Removal.....	2-88
Installation.....	2-89

2.29 HANDLEBARS: FLSTSB

Removal.....	2-91
Installation.....	2-91

2.30 HANDLEBARS: FXCW/FXCWC

Removal.....	2-93
Installation.....	2-94

2.31 FRONT FENDER: ALL BUT FLSTSB

Removal.....	2-97
Installation.....	2-97

2.32 FRONT FENDER: FLSTSB

Removal.....	2-98
Installation.....	2-99

2.33 REAR FENDER: FLST/FLSTC

Removal.....	2-100
Installation.....	2-100

2.34 REAR FENDER: FLSTF

Removal.....	2-102
Installation.....	2-102

2.35 REAR FENDER: FXST/FXSTB/FXSTC/FLSTSB

Removal.....	2-104
Installation.....	2-104

2.36 REAR FENDER: FXCW/FXCWC

Removal.....	2-106
Installation.....	2-106

2.37 REAR FENDER: FLSTN

Removal.....	2-108
Disassembly.....	2-108
Assembly.....	2-110
Installation.....	2-110

2.38 REAR FENDER WIRE CONDUIT

Installation.....	2-111
-------------------	-------

2.39 JIFFY STAND

Cleaning.....	2-113
Sensor (HDI Models).....	2-113
Removal.....	2-114
Installation.....	2-114

2.40 FORK LOCK

Removal.....	2-115
Installation.....	2-115

2.41 SEAT AND STRAP RETENTION NUT

Replacement.....	2-116
------------------	-------

2.42 SEAT: FXST/FXSTB

Removal and Installation.....	2-117
Seat Strap.....	2-117
Seat.....	2-117

2.43 SEAT: FXSTC

Removal and Installation.....	2-118
Seat Strap.....	2-118
Seat.....	2-118

2.44 SEAT: FXCW/FXCWC

Removal and Installation.....	2-119
Solo Seat: FXCW.....	2-119
Rider Seat: FXCWC.....	2-119
Passenger Seat Support: FXCWC.....	2-119

2.45 SEAT: FLSTN/FLSTF/FLST/FLSTC

Removal and Installation.....	2-121
-------------------------------	-------

2.46 SEAT: FLSTSB

Seat: FLSTSB.....	2-122
Removal.....	2-122
Installation.....	2-122
Adjusting Seat Position.....	2-122

2.47 LUGGAGE RACK: FLSTN

Removal and Installation.....	2-124
-------------------------------	-------

2.48 SADDLEBAGS: FLSTC

Removal.....2-125
Installation.....2-125

2.49 WINDSHIELD: FLSTC

Removal.....2-126
Installation.....2-126

ENGINE

3.1 SPECIFICATIONS

Specifications.....3-1

3.2 SERVICE WEAR LIMITS

General.....3-3

3.3 ENGINE OIL FLOW

Oil Feed.....3-5
Top End.....3-6
Bottom End.....3-7
Chain Guide Bracket.....3-9
Oil Return.....3-9

3.4 OIL PUMP OPERATION

General.....3-10
Operation.....3-10

3.5 BREATHER OPERATION

General.....3-12

3.6 OIL PRESSURE

Oil Pressure Indicator Lamp.....3-13
Checking Oil Pressure.....3-13

3.7 TROUBLESHOOTING

Diagnosing Valve Train Noise.....3-14
Compression Test.....3-14
Cylinder Leakdown Test.....3-14
Diagnosing Smoking Engine or High Oil Consumption.....3-15
 Check Prior To Cylinder Head Removal.....3-15
 Check After Cylinder Head Removal.....3-15

3.8 HOW TO USE THIS SECTION

Top End Repair.....3-16
Bottom End Repair.....3-16
Typical Symptoms.....3-16

3.9 TOP END SERVICE

Engine in Chassis.....3-17
Engine Removed from Chassis.....3-18

3.10 BOTTOM END SERVICE

Engine in Chassis.....3-19
Engine Removed From Chassis.....3-20

3.11 STRIPPING MOTORCYCLE FOR SERVICE

Procedure.....3-21

3.12 ASSEMBLING MOTORCYCLE AFTER SERVICE

Procedure.....3-22

3.13 REMOVING ENGINE FROM CHASSIS

Procedure.....3-23

3.14 INSTALLING ENGINE IN CHASSIS

Procedure.....3-24

3.15 TOP END OVERHAUL: DISASSEMBLY

General.....3-26
Rocker Covers.....3-26
Rocker Arm Support Plate.....3-26
Push Rods, Lifters and Covers.....3-28
Cylinder Head.....3-29
Cylinder.....3-30
Piston.....3-30

3.16 TOP END OVERHAUL: ASSEMBLY

General.....3-32
Piston.....3-32
Cylinder.....3-33
Cylinder Head.....3-35
Push Rods, Lifters and Covers.....3-38
Rocker Arm Support Plate.....3-39
Breather Assembly.....3-40

3.17 BOTTOM END OVERHAUL: DISASSEMBLY

General.....3-42
Cover and Cam Support Plate.....3-42
 Prepare Engine.....3-42
 Cam Chain and Sprockets.....3-42
 Cam Support Plate.....3-43
Crankcase.....3-44
Counterbalancer Assembly.....3-45

3.18 BOTTOM END OVERHAUL: ASSEMBLY

General.....3-48
Counterbalancer Assembly.....3-48
Crankcase.....3-51
Cover and Cam Support Plate.....3-55

3.19 BREATHER ASSEMBLY

Removal Overview.....3-59
Disassembly.....3-59
Cleaning and Inspection.....3-59
Assembly.....3-59
Installation Overview.....3-59

3.20 ROCKER ARM SUPPORT PLATE

Removal Overview.....3-60
Disassembly.....3-60
Cleaning and Inspection.....3-60
 Inspection.....3-60
 Rocker Shaft Fit.....3-60
 Rocker Arm Shaft to Bushing.....3-61
 Replace Rocker Arm Bushings.....3-61
Assembly.....3-62

TABLE OF CONTENTS

Installation Overview.....	3-62	Installation Overview.....	3-93
3.21 PUSH RODS, LIFTERS AND COVERS		3.26 OIL PUMP	
Removal Overview.....	3-64	Removal Overview.....	3-94
Disassembly.....	3-64	Cleaning and Inspection.....	3-94
Cleaning and Inspection.....	3-64	Installation Overview.....	3-94
Lifter Inspection.....	3-65	3.27 CRANKCASE	
Assembly.....	3-65	Removal Overview.....	3-95
Installation Overview.....	3-66	Right Crankcase Half.....	3-95
3.22 CYLINDER HEAD		Chain Guide Screen.....	3-95
Removal Overview.....	3-67	Crankshaft (Roller) Bearing Removal.....	3-95
Disassembly.....	3-67	Crankshaft (Roller) Bearing Installation.....	3-96
Cleaning.....	3-68	Piston Jets Removal.....	3-96
Inspection.....	3-69	Piston Jets Installation.....	3-96
Cylinder Head.....	3-69	Left Crankcase Half.....	3-97
Valve Guides.....	3-69	Main Bearing Removal.....	3-97
Valves.....	3-69	Main Bearing Installation.....	3-98
Valve Springs.....	3-69	Sprocket Shaft Bearing Inner Race.....	3-99
Tapered Keepers.....	3-70	Removal.....	3-99
Valve Seats.....	3-70	Installation.....	3-100
Valve Guide Replacement.....	3-70	Cylinder Studs.....	3-101
Removal.....	3-70	Removal.....	3-101
Installation.....	3-71	Installation.....	3-101
Valve and Seat Refacing.....	3-74	Pipe Plugs and Oil Fittings.....	3-101
Assembly.....	3-76	Removal/Installation.....	3-101
Installation Overview.....	3-77	Cleaning and Inspection.....	3-102
3.23 CYLINDER		Installation Overview.....	3-102
Removal Overview.....	3-78	3.28 FLYWHEEL AND CONNECTING RODS	
Cleaning.....	3-78	Removal Overview.....	3-103
Inspection.....	3-79	Inspection.....	3-103
Deglazing Cylinder.....	3-80	Installation Overview.....	3-103
Boring and Honing Cylinder.....	3-81	3.29 COUNTERBALANCER ASSEMBLY	
Installation Overview.....	3-81	Removal Overview.....	3-104
3.24 PISTON		Cleaning, Inspection, and Repair.....	3-104
Removal Overview.....	3-82	General.....	3-104
Disassembly.....	3-82	Balance Shaft Removal.....	3-104
Piston Rings.....	3-82	Balance Shaft Installation.....	3-105
Cleaning.....	3-82	Balance Shaft Support Bearings Removal.....	3-105
Inspection.....	3-83	Balance Shaft Support Bearings Installation.....	3-105
Assembly.....	3-84	Front and Rear Balance Sprockets.....	3-106
Checking Piston Ring Gap.....	3-84	Hydraulic Tensioners.....	3-106
Installing Piston Rings.....	3-85	Chain Tensioner Guides.....	3-107
Installation Overview.....	3-86	Chain Guide Bracket.....	3-107
3.25 COVER AND CAM SUPPORT PLATE		Balance Chain.....	3-107
Removal Overview.....	3-87	Installation Overview.....	3-107
Camshafts.....	3-87	3.30 OIL TANK: ALL BUT FXCW/C	
Removal.....	3-87	Removal and Disassembly.....	3-108
Assembly.....	3-87	Oil Tank.....	3-108
Oil Pressure Relief Valve.....	3-89	Oil Line Fittings/Retainers.....	3-110
Removal.....	3-89	Installation.....	3-111
Installation.....	3-89	3.31 OIL TANK: FXCW/C	
Inspection.....	3-89	Removal and Disassembly.....	3-112
Cam Needle Bearings.....	3-89	Oil Tank.....	3-112
Removal.....	3-89	Oil Line Fittings/Retainers.....	3-114
Installation.....	3-91	Installation.....	3-115
Cleaning and Inspection.....	3-92		
Oil Pressure Valve.....	3-92		
Cam Support Plate.....	3-93		

FUEL SYSTEM

4.1 SPECIFICATIONS: FUEL SYSTEM

Specifications.....4-1

4.2 ELECTRONIC FUEL INJECTION (EFI)

Troubleshooting.....4-2

4.3 IDLE SPEED

General.....4-3

4.4 AIR CLEANER ASSEMBLY

Removal.....4-4

Installation.....4-4

Backplate Assembly: HDI Models.....4-5

4.5 FUEL TANK

General.....4-6

Removal.....4-6

Cleaning and Inspection.....4-10

Installation.....4-10

 All But FXCW/C.....4-10

 FXCW/C.....4-10

4.6 THROTTLE POSITION SENSOR (TPS)

General.....4-12

Removal.....4-12

Installation.....4-12

4.7 INTAKE AIR TEMPERATURE SENSOR (IAT)

General.....4-13

Removal.....4-13

Installation.....4-13

4.8 ENGINE TEMPERATURE SENSOR (ET)

General.....4-14

Removal.....4-14

Installation.....4-14

4.9 INDUCTION MODULE

Removal.....4-16

Installation.....4-17

4.10 IDLE AIR CONTROL (IAC)

General.....4-18

Removal.....4-18

Installation.....4-18

4.11 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)

General.....4-19

Removal.....4-19

Installation.....4-19

4.12 OXYGEN SENSOR

General.....4-20

Removal.....4-20

Installation.....4-20

4.13 FUEL INJECTORS

General.....4-22

Removal.....4-22

Installation.....4-22

4.14 FUEL PUMP AND FUEL GAUGE SENDING UNIT

General.....4-24

Removal.....4-24

Disassembly/Assembly.....4-26

 Fuel Filter.....4-26

 Regulator.....4-26

 Inlet sock.....4-27

 Fuel Pump.....4-28

Installation.....4-28

4.15 FUEL PRESSURE TEST

General.....4-30

Testing.....4-30

4.16 EXHAUST SYSTEM: ALL BUT FLSTF/FLSTN/FLSTSB

Mufflers.....4-33

 Removal.....4-33

 Assembly.....4-33

System.....4-33

 Removal.....4-33

 Installation.....4-33

4.17 EXHAUST SYSTEM: FLSTF/FLSTN/FLSTSB

Mufflers.....4-35

 Removal.....4-35

 Assembly.....4-35

System.....4-35

 Removal.....4-35

 Installation.....4-35

4.18 INTAKE LEAK TEST

General.....4-37

Leak Tester.....4-37

 Parts List.....4-37

 Tester Assembly.....4-37

 Tester Adjustment.....4-37

Procedure.....4-37

4.19 EVAPORATIVE EMISSIONS CONTROL (CA MODELS)

General.....4-39

Charcoal Canister.....4-39

 Removal.....4-39

 Installation.....4-40

Hose Routing/Replacement.....4-40

TABLE OF CONTENTS

STARTER

5.1 SPECIFICATIONS: STARTER

Specifications.....	5-1
---------------------	-----

5.2 STARTER

General.....	5-3
Wiring Diagrams.....	5-3
Removal.....	5-3
Installation.....	5-3
Testing.....	5-3
Armature.....	5-3
Brushes and Brush Holder.....	5-5
Field Coil Assembly.....	5-6
Disassembly.....	5-6
Inspection.....	5-6
Assembly.....	5-6
Drive Assembly.....	5-7
Disassembly.....	5-7
Inspection.....	5-7
Assembly.....	5-7

5.3 STARTER SOLENOID

Solenoid Assembly.....	5-8
Disassembly.....	5-8
Assembly.....	5-8
Solenoid Plunger.....	5-8
Disassembly.....	5-8
Assembly.....	5-8
Solenoid Contacts.....	5-8
Disassembly.....	5-8
Assembly.....	5-9

DRIVE

6.1 SPECIFICATIONS: DRIVE

Specifications.....	6-1
---------------------	-----

6.2 PRIMARY CHAINCASE COVER

General.....	6-2
Removal.....	6-2
Installation.....	6-2

6.3 DRIVE COMPONENTS

Removal.....	6-3
Installation.....	6-5

6.4 PRIMARY CHAINCASE HOUSING

Removal.....	6-9
Inspection.....	6-9
Mainshaft Bearing and Lip Seal.....	6-9
Removal.....	6-9
Installation.....	6-9
Mainshaft Bearing Inner Race.....	6-10
Removal.....	6-10
Installation.....	6-10
Installation.....	6-11

6.5 CLUTCH

Removal and Installation.....	6-13
-------------------------------	------

Clutch Pack Only.....	6-13
Partial Disassembly.....	6-13
Cleaning And Inspection.....	6-13
Assembly.....	6-14
Clutch Pack and Bearing.....	6-15
Complete Disassembly.....	6-15
Assembly.....	6-16

6.6 TRANSMISSION SPROCKET

Removal.....	6-18
Cleaning and Inspection.....	6-19
Installation.....	6-19

6.7 DRIVE BELT

Removal.....	6-21
Inspection.....	6-21
Installation.....	6-21

TRANSMISSION

7.1 SPECIFICATIONS: TRANSMISSION

Specifications.....	7-1
Service Wear Limits.....	7-1

7.2 TRANSMISSION

Power Flow.....	7-2
Neutral.....	7-2
1st Gear.....	7-2
2nd Gear.....	7-2
3rd Gear.....	7-2
4th Gear.....	7-2
5th Gear.....	7-2
6th Gear.....	7-2

7.3 SHIFTER LINKAGE

Adjustment.....	7-4
Shifter Rod.....	7-4

7.4 CLUTCH RELEASE COVER

Removal and Disassembly.....	7-5
Cleaning and Inspection.....	7-5
Assembly and Installation.....	7-6

7.5 TRANSMISSION ASSEMBLY

Removal.....	7-7
Disassembly.....	7-8
Shifter Cam/Shifter Forks.....	7-8
Mainshaft.....	7-10
Countershaft.....	7-13
Replacing Side Door Bearings.....	7-14
Cleaning and Inspection.....	7-15
Assembly.....	7-15
Installing Side Door Bearings.....	7-15
Countershaft.....	7-15
Mainshaft.....	7-16
Shifter Cam/Shifter Forks.....	7-16
Installation.....	7-18

7.6 MAIN DRIVE GEAR AND BEARING

Removal.....	7-20
--------------	------

TABLE OF CONTENTS

Cleaning and Inspection.....	7-21	Removal and Installation: All But FXCW/C.....	8-11
Needle Bearing Replacement.....	7-22	Removal and Installation: FXCW/C.....	8-12
Installation.....	7-23	8.10 BATTERY CABLES	
Installing Main Drive Gear Bearing.....	7-23	Routing Procedure.....	8-13
Installing Main Drive Gear.....	7-24	8.11 HEADLAMP	
Installing Main Drive Gear Large Seal.....	7-24	General.....	8-15
7.7 TRANSMISSION CASE		Removal and Installation.....	8-15
Removal.....	7-27	FXSTC Models.....	8-15
Installation.....	7-27	FXCW/C Models.....	8-15
Disassembly.....	7-28	FXST, FXSTB, and FLSTSB Models.....	8-15
Shifter Arm Assembly.....	7-28	FLST, FLSTC, FLSTF, and FLSTN Models.....	8-15
Cleaning and Inspection.....	7-28	8.12 TAIL LAMP: ALL BUT FLSTN	
Assembly.....	7-29	General.....	8-19
Countershaft Needle Bearing Replacement.....	7-29	Bulb Replacement.....	8-19
Shifter Pawl Lever Assembly.....	7-29	Base Replacement.....	8-19
ELECTRICAL		8.13 TAIL LAMP: FLSTN	
8.1 SPECIFICATIONS: ELECTRICAL		Bulb Replacement.....	8-21
Specifications.....	8-1	Tail Lamp Replacement.....	8-21
8.2 ELECTRICAL PANEL		8.14 AUXILIARY LAMPS: FLST/FLSTC/FLSTN	
General.....	8-2	Auxiliary Lamp Bulb.....	8-23
Removal: All But FXCW/C.....	8-2	Removal.....	8-23
Installation: All But FXCW/C.....	8-2	Installation.....	8-23
Removal: FXCW/C.....	8-2	FLST and FLSTC Models.....	8-23
Installation: FXCW/C.....	8-3	Auxiliary Lamp Bracket Removal.....	8-23
8.3 ELECTRONIC CONTROL MODULE (ECM)		Auxiliary Lamp Bracket Installation.....	8-24
General.....	8-4	Auxiliary Lamp Housing Removal.....	8-24
Removal: All But FXCW/C.....	8-4	Auxiliary Lamp Housing Installation.....	8-24
Installation: All But FXCW/C.....	8-4	FLSTN Models.....	8-26
Removal: FXCW/FXCWC.....	8-4	Auxiliary Lamp Bracket Removal.....	8-26
Installation: FXCW/FXCWC.....	8-5	Auxiliary Lamp Bracket Installation.....	8-26
8.4 VOLTAGE REGULATOR		Auxiliary Lamp Housing Removal.....	8-27
General.....	8-6	Auxiliary Lamp Housing Installation.....	8-27
8.5 FRONT ELECTRICAL CADDY		Adjustment: FLST/FLSTC/FLSTN Models.....	8-28
General.....	8-7	8.15 TURN SIGNALS AND RUNNING LIGHTS	
Disassembly.....	8-7	Bulb Replacement: Bullet Style.....	8-30
Assembly.....	8-7	Bulb Replacement: Flat Lens Style.....	8-30
8.6 FUSES		Lamp Replacement.....	8-30
General.....	8-8	All Models.....	8-30
Removal.....	8-8	Front Turn Signals: All But FLST, FLSTC, FLSTN.....	8-31
Installation.....	8-8	Front Turn Signals: FLST, FLSTC, FLSTN.....	8-32
8.7 RELAYS		Rear Turn Signals: All But FXCW/C, FLSTN.....	8-32
General.....	8-9	Rear Turn Signals: FXCW/C.....	8-32
Removal.....	8-9	Rear Turn Signals: FLSTN.....	8-34
Installation.....	8-9	8.16 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)	
8.8 MAIN FUSE		General.....	8-35
Removal.....	8-10	TSM/HFSM/TSSM Configuration.....	8-35
Installation.....	8-10	Removal.....	8-35
8.9 IGNITION AND LIGHT SWITCH		Installation.....	8-35
General.....	8-11	8.17 CRANK POSITION SENSOR (CKP)	
		General.....	8-36

TABLE OF CONTENTS

Removal.....	8-36
Installation.....	8-36
8.18 IGNITION COIL	
Removal.....	8-37
All Except FXCW/C.....	8-37
FXCW/C Only.....	8-37
Installation.....	8-37
All Except FXCW/C.....	8-37
FXCW/C Only.....	8-37
8.19 SPARK PLUG CABLES	
General.....	8-39
Removal.....	8-39
Installation.....	8-39
8.20 ALTERNATOR	
Removal.....	8-40
Cleaning and Inspection.....	8-40
Installation.....	8-40
8.21 FUEL GAUGE	
General.....	8-42
Removal.....	8-42
Installation.....	8-42
8.22 INSTRUMENT CONSOLE: FXCW/C	
Removal.....	8-44
Installation.....	8-44
8.23 SPEEDOMETER: ALL BUT FXCW/C	
Removal.....	8-45
Installation.....	8-45
8.24 SPEEDOMETER: FXCW/C	
Removal.....	8-46
Installation.....	8-46
8.25 VEHICLE SPEED SENSOR (VSS)	
General.....	8-47
Removal.....	8-47
Installation.....	8-47
8.26 INDICATOR LAMPS: ALL BUT FXCW/C	
General.....	8-48
Removal.....	8-48
Installation.....	8-48
8.27 INDICATOR LAMPS: FXCW/C	
Removal.....	8-50
Installation.....	8-50
8.28 NEUTRAL SWITCH	
General.....	8-51
Removal.....	8-51
Installation.....	8-51
8.29 OIL PRESSURE SWITCH	
General.....	8-52
Removal.....	8-52

Installation.....	8-52
8.30 REAR STOPLIGHT SWITCH	
General.....	8-53
Removal.....	8-53
Installation.....	8-53
8.31 HORN	
Inspection.....	8-54
Removal and Installation: All But FXCW/C.....	8-54
Removal and Installation: FXCW/C.....	8-55
8.32 ACTIVE EXHAUST	
General.....	8-56
Removal.....	8-56
Repair.....	8-56
Installation.....	8-56
8.33 MAIN WIRING HARNESS	
Removal.....	8-57
Installation.....	8-58
8.34 HANDLEBAR SWITCH ASSEMBLIES	
General.....	8-60
Repair Procedures.....	8-60
8.35 RIGHT HANDLEBAR SWITCH	
Removal.....	8-61
Installation.....	8-61
Switch Repair/Replacement.....	8-63
Upper Housing Repair.....	8-63
Lower Housing Repair.....	8-64
Turn-Right Signal Switch.....	8-64
Front Stoplight Switch.....	8-64
Assembly.....	8-65
8.36 LEFT HANDLEBAR SWITCH	
Removal.....	8-67
Installation.....	8-67
Switch Repair/Replacement.....	8-68
Upper Housing Repair.....	8-68
Lower Housing Repair.....	8-69
Turn-Left Signal Switch.....	8-69
Clutch Interlock Switch.....	8-69
Assembly.....	8-69
APPENDIX A CONNECTOR REPAIR	
<hr/>	
A.1 AMP 1-PLACE CONNECTORS	
AMP 1-Place Connector Repair.....	A-1
General.....	A-1
Separating Pin and Socket Housings.....	A-1
Mating Pin and Socket Housings.....	A-1
Removing Socket Terminals.....	A-1
Installing Socket Terminal.....	A-1
Removing Pin Terminal.....	A-1
Installing Pin Terminal.....	A-2
A.2 AMP MULTILOCK CONNECTORS	
AMP Multilock Connector Repair.....	A-3

TABLE OF CONTENTS

General.....	A-3	Preparing Wire Leads for Crimping.....	A-19
Separating Pin and Socket Housings.....	A-3	Crimping a Mini Terminal to Wire Lead.....	A-19
Mating Pin and Socket Housings.....	A-3	Inspecting Crimps.....	A-19
Removing Terminals from Housing.....	A-3		
Inserting Terminals into Housing.....	A-4	A.10 MOLEX CONNECTORS	
Preparing Wire Leads for Crimping.....	A-4	Molex Connector Repair.....	A-20
Crimping Terminals to Leads.....	A-5	Separating Pin and Socket Housings.....	A-20
Inspecting Crimped Terminals.....	A-6	Mating Pin and Socket Housings.....	A-20
		Removing Terminals.....	A-20
A.3 AUTOFUSE ELECTRICAL CONNECTORS		Installing Terminals.....	A-20
Autofuse Connector Repair.....	A-7	Crimp Terminal to Lead.....	A-21
General.....	A-7	Prepare Lead.....	A-21
Disassembly.....	A-7	Prepare Tool.....	A-21
Assembly.....	A-7	Position Terminal in the Punch/Die.....	A-22
		Insert Stripped Lead.....	A-22
A.4 DELPHI CONNECTORS		Crimp Terminal to Lead.....	A-22
Delphi Connector Repair.....	A-8	Inspect Crimp.....	A-23
General.....	A-8		
Separating Pin and Socket Housings.....	A-8	A.11 PACKARD 150 METRI-PACK CONNECTORS	
Mating Pin and Socket Housings.....	A-8	150 Metri-Pack Connector Repair.....	A-24
Removing Socket Terminals.....	A-8	General.....	A-24
Installing Socket Terminals.....	A-8	Separating Pin and Socket Housings.....	A-24
		Mating Pin and Socket Housings.....	A-24
A.5 DELPHI MAXI FUSE HOUSING		Removing Socket Terminal.....	A-24
Delphi Maxi-Fuse Housing Repair.....	A-10	Inserting Socket Terminal.....	A-24
General.....	A-10		
Removing Maxi-Fuse.....	A-10	A.12 PACKARD 280 METRI-PACK RELAY AND FUSE BLOCK CONNECTORS	
Installing Maxi-Fuse.....	A-10	Fuse Block Repair.....	A-26
Removing Socket Terminals.....	A-10	Removing Socket Terminals.....	A-26
Installing Socket Terminals.....	A-10	Installing Socket Terminals.....	A-26
		Crimping Terminals.....	A-26
A.6 DEUTSCH ELECTRICAL CONNECTORS			
Deutsch Connector Repair.....	A-12	A.13 PACKARD 480 METRI-PACK CONNECTORS	
General.....	A-12	480 Metri-Pack Connector Repair.....	A-27
Separating Pin and Socket Housings.....	A-12	General.....	A-27
Mating Pin and Socket Housings.....	A-12	Separating Pin and Socket Housings.....	A-27
Removing Socket Terminals.....	A-12	Mating Pin and Socket Housings.....	A-27
Installing Socket Terminals.....	A-12	Removing Socket Terminals.....	A-27
Removing Pin Terminals.....	A-14	Installing Socket Terminals.....	A-27
Installing Pin Terminals.....	A-14		
Crimping Terminals.....	A-15	A.14 PACKARD 630 METRI-PACK CONNECTORS	
		630 Metri-Pack Connector Repair.....	A-28
A.7 DEUTSCH STANDARD TERMINAL REPAIR		General.....	A-28
Deutsch Standard Terminal Crimps.....	A-16	Separating Pin and Socket Housings.....	A-28
Preparing Wire Leads for Crimping.....	A-16	Mating Pin and Socket Housings.....	A-28
Crimping Terminal to Lead.....	A-16	Removing Socket Terminal.....	A-28
Inspecting Crimps.....	A-16	Installing Socket Terminal.....	A-28
A.8 DEUTSCH SOLID BARREL MINI TERMINAL REPAIR		A.15 PACKARD METRI-PACK TERMINALS	
Deutsch Solid Barrel Terminal Crimps.....	A-17	Metri-Pack Terminal Crimps.....	A-29
Preparing Wire Leads For Crimping.....	A-17	Matching Terminal To Crimper.....	A-29
Adjusting Crimper Tool.....	A-17	Preparing Wire Lead.....	A-29
Crimping a Barrel Contact To Wire Lead.....	A-17	Crimping Wire Core.....	A-29
Inspecting Crimps.....	A-17	Crimping Insulation/Seal.....	A-29
		Inspecting Crimps.....	A-30
A.9 DEUTSCH MINI TERMINAL REPAIR			
Deutsch Mini Terminal Crimps.....	A-19		

TABLE OF CONTENTS

A.16 PACKARD ECM CONNECTOR

Packard 100W Connector Repair.....	A-31
General.....	A-31
Separating Socket Housing From ECM.....	A-31
Mating Socket Housing To ECM.....	A-31
Removing Socket Terminal.....	A-31
Installing Socket Terminal.....	A-31
Crimping Terminals.....	A-31

A.17 PACKARD MICRO-64 CONNECTORS

Packard Micro-64 Connector Repair.....	A-33
General.....	A-33
Separating Pin and Socket Housings.....	A-33
Mating Pin and Socket Housings.....	A-33
Removing Terminal.....	A-33
Installing Terminal.....	A-33
Preparing Wire Leads for Crimping.....	A-34
Crimping Terminals.....	A-34
Inspecting Crimps.....	A-34

A.18 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-36
General.....	A-36
Preparing Wire Leads.....	A-36
Splicing Wire Leads.....	A-36
Inspecting Seals.....	A-36

APPENDIX B WIRING

B.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-3
Wire Color Codes.....	B-3
Wiring Diagram Symbols.....	B-3
2008 Softail Wiring Diagrams.....	B-4

APPENDIX C CONVERSIONS

C.1 METRIC CONVERSION

Conversion Table.....	C-1
-----------------------	-----

C.2 FLUID CONVERSIONS

United States System.....	C-2
Metric System.....	C-2
British Imperial System.....	C-2

C.3 TORQUE CONVERSIONS

United States System.....	C-3
Metric System.....	C-3

APPENDIX D GLOSSARY

D.1 GLOSSARY

Acronyms and Abbreviations.....	D-1
---------------------------------	-----

REFERENCE MATERIAL

TOOLS.....	I
-------------------	----------

TORQUE VALUES.....	VII
---------------------------	------------

INDEX.....	XIX
-------------------	------------

SUBJECT	PAGE NO.
1.1 GENERAL.....	1-1
1.2 MAINTENANCE SCHEDULE.....	1-5
1.3 FUEL AND OIL.....	1-9
1.4 BULB REQUIREMENTS.....	1-11
1.5 ENGINE OIL AND FILTER.....	1-12
1.6 BRAKES.....	1-14
1.7 AIR CLEANER AND EXHAUST SYSTEM.....	1-16
1.8 TIRES AND WHEELS.....	1-19
1.9 PRIMARY CHAIN.....	1-21
1.10 TRANSMISSION LUBRICANT.....	1-23
1.11 CLUTCH.....	1-25
1.12 REAR BELT AND SPROCKETS.....	1-27
1.13 REAR BELT DEFLECTION.....	1-29
1.14 THROTTLE CABLES.....	1-31
1.15 BLEEDING BRAKES.....	1-32
1.16 BRAKE PADS AND DISCS.....	1-33
1.17 BATTERY MAINTENANCE.....	1-37
1.18 SUSPENSION ADJUSTMENTS.....	1-43
1.19 SPARK PLUGS.....	1-44
1.20 STEERING HEAD BEARINGS: ALL BUT FLSTSB.....	1-46
1.21 STEERING HEAD BEARINGS: FLSTSB.....	1-49
1.22 ROCKER BEARINGS: FLSTSB.....	1-51
1.23 FRONT FORK OIL.....	1-53
1.24 CABLE AND CHASSIS LUBRICATION.....	1-54
1.25 HEADLAMP ALIGNMENT.....	1-55
1.26 CRITICAL FASTENERS.....	1-57
1.27 ENGINE MOUNTS.....	1-58
1.28 STORAGE.....	1-59
1.29 TROUBLESHOOTING.....	1-61

NOTES

SERVICING A NEW MOTORCYCLE

WARNING

Perform the service and maintenance operations as indicated in the regular service interval table. Lack of regular maintenance at the recommended intervals can affect the safe operation of your motorcycle, which could result in death or serious injury. (00010a)

Service operations to be performed before customer delivery are specified in the applicable model year PREDELIVERY AND SET-UP MANUAL.

The performance of new motorcycle initial service is required to keep warranty in force and to ensure proper emissions systems operation. See [1.2 MAINTENANCE SCHEDULE](#).

SAFE OPERATING MAINTENANCE

NOTES

- Do not attempt to retighten engine head bolts. Retightening can cause engine damage.
- During the initial break-in period, use only Harley-Davidson 20W50 engine oil. Failure to use the recommended oil will result in improper break-in of the engine cylinders and piston rings.

A careful check of certain equipment is necessary after periods of storage, and frequently between regular service intervals, to determine if additional maintenance is required.

Check:

1. Tires for abrasions, cuts and correct pressure.
2. Secondary drive belt for proper tension and condition.
3. Brakes, steering and throttle for responsiveness.
4. Brake fluid level and condition. Hydraulic lines and fittings for leaks. Also, check brake pads and rotors for wear.
5. Cables for fraying, crimping and free operation.
6. Engine oil and transmission fluid levels.
7. Headlamp, auxiliary lamp, tail lamp, brake lamp, horn and turn signal operation.

SHOP PRACTICES

Repair Notes

General maintenance practices are given in this section.

NOTES

- *Repair = Disassembly/Assembly.*
- *Replacement = Substitute a **new** part for existing component.*

All special tools and torque values are noted at the point of use.

All required parts or materials can be found in the appropriate PARTS CATALOG.

Safety

Safety is always the most important consideration when performing any job. Be sure you have a complete understanding of the task to be performed. Use common sense. Use the proper tools. Protect yourself and bystanders with approved eye protection. Don't just do the job - do the job safely.

Removing Parts

Always consider the weight of a part when lifting. Use a hoist whenever necessary. Do not lift heavy parts by hand. A hoist and adjustable lifting beam or sling are needed to remove some parts. The lengths of chains or cables from the hoist to the part should be equal and parallel and should be positioned directly over the center of the part. Be sure that no obstructions will interfere with the lifting operation. Never leave a part suspended in mid-air.

WARNING

Be sure to check capacity rating and condition of hoists, slings, chains and cables before use. Exceeding capacity ratings or using lifting devices that are in poor condition can lead to an accident, which could result in death or serious injury. (00466c)

Always use blocking or proper stands to support the part that has been hoisted. If a part cannot be removed, verify that all bolts and attaching hardware have been removed. Check to see if any parts are in the way of the part being removed.

When removing hoses, wiring or tubes, always tag each part to ensure proper installation.

Cleaning

If you intend to reuse parts, follow good shop practice and thoroughly clean the parts before assembly. Keep all dirt out of parts; the unit will perform better and last longer. Seals, filters and covers are used in this vehicle to keep out environmental dirt and dust. These items must be kept in good condition to ensure satisfactory operation.

When you are instructed in a step to clean fastener threads or threaded holes, proceed as follows: Clean all LOCTITE material from fastener threads and threaded holes. Use a wire brush to clean fastener threads. Use a thread chaser or other suitable tool to clean threaded holes. Use PJ-1 cleaner or equivalent to remove all traces of oil and contaminants from threads. Blow out all threaded holes with low pressure compressed air.

Clean and inspect all parts as they are removed. Be sure all holes and passages are clean and open. After cleaning, cover all parts with clean lint-free cloth, paper or other material. Be sure the part is clean when it is installed.

Always clean around lines or covers before they are removed. Plug, tape or cap holes and openings to keep out dirt, dust and debris.

Always verify cleanliness of blind holes before assembly. Tightening a screw with dirt, water or oil in the hole can cause castings to crack or break.

Disassembly and Assembly

Always assemble or disassemble one part at a time. Do not work on two assemblies simultaneously. Be sure to make all necessary adjustments. Recheck your work when finished. Be sure that everything is done.

Operate the vehicle to perform any final check or adjustments. If all is correct, the vehicle is ready to go back to the customer.

Checking Torques on Fasteners with Lock Patches

To check the torque on a fastener that has a lock patch:

1. Set the torque wrench for the lowest setting in the specified torque range.
2. Attempt to tighten fastener to set torque. If fastener does not move and lowest setting is satisfied (torque wrench clicks), then the proper torque has been maintained.

Magnetic Parts Trays

Magnetic parts trays are becoming common in the service facility because they are convenient and can keep parts from becoming lost during a repair procedure.

However, hardened steel parts can become magnetized when held in magnetic parts trays. Metal fragments that would ordinarily be washed away in the oil and trapped in the oil filter or magnetic drain plug during vehicle operation could be captured by magnetized parts in the engine, potentially causing accelerated engine wear and damage.

Parts that will be returned to service inside the vehicle's powertrain such as gears, thrust washers and especially bearings should never be kept in magnetic parts trays.

REPAIR AND REPLACEMENT PROCEDURES

Hardware and Threaded Parts

Install helical thread inserts when inside threads in castings are stripped, damaged or not capable of withstanding specified torque.

Replace bolts, nuts, studs, washers, spacers and small common hardware if missing or in any way damaged. Clean up or repair minor thread damage with a suitable tap or die.

Replace all damaged or missing lubrication fittings.

Use Teflon pipe sealant or LOCTITE 565 THREAD SEALANT on pipe fitting threads.

Threadlocking Agents

Always follow specific service manual procedures when working with fasteners containing preapplied threadlocking agents when fastener replacement is recommended. When re-using fasteners containing threadlocking agents, be sure to completely remove all existing threadlocking agent from fastener threads with a wire brush or wire wheel. Also, be sure to remove residual threadlocking agent from fastener hole using an appropriate thread chasing device and compressed air when using new or existing fasteners. Always use the recommended threadlocking agent for your specific procedure.

Wiring, Hoses and Lines

Hoses, clamps, electrical wiring, electrical switches or fuel lines if they do not meet specifications.

Instruments and Gauges

Replace broken or defective instruments and gauges. Replace dials and glass that are so scratched or discolored that reading is difficult.

Bearings

Anti-friction bearings must be handled in a special way. To keep out dirt and abrasives, cover the bearings as soon as they are removed from the package.

Wash bearings in a non-flammable cleaning solution. Knock out packed lubricant inside by tapping the bearing against a wooden block. Wash bearings again. Cover bearings with clean material after setting them down to dry. Never use compressed air to dry bearings.

Coat bearings with clean oil. Wrap bearings in clean paper.

When bearings are installed against shoulders, be sure that the chamfered side of the bearing always faces the shoulder. Lubricate bearings and all metal contact surfaces before pressing into place. Only apply pressure on the part of the bearing that makes direct contact with the mating part. Install bearings with numbered side facing out.

Always use the proper tools and fixtures for removing and installing bearings.

Bearings do not usually need to be removed. Only remove bearings if necessary.

Bushings

Do not remove a bushing unless damaged, excessively worn or loose in its bore. Press out bushings that must be replaced.

When pressing or driving bushings, be sure to apply pressure in line with the bushing bore. Use a bearing/bushing driver or a bar with a smooth, flat end. Never use a hammer to drive bushings.

Inspect the bushing and the mated part for oil holes. Be sure all oil holes are properly aligned.

Gaskets

Always discard gaskets after removal. Replace with **new** gaskets. Never use the same gasket twice. Be sure that gasket holes match up with holes in the mating part. But be aware that sections of a gasket may be used to seal passages.

If a gasket must be made, be sure to cut holes that match up with the mating part. Serious damage can occur if any flange holes are blocked by the gasket. Use material that is the right type and thickness.

Lip Type Seals

Lip seals are used to seal oil or grease and are usually installed with the sealing lip facing the contained lubricant. Seal orientation, however, may vary under different applications.

Seals should not be removed unless necessary. Only remove seals if required to gain access to other parts or if seal damage or wear dictates replacement.

Leaking oil or grease usually means that a seal is damaged. Replace leaking seals to prevent overheated bearings.

Always discard seals after removal. Do not use the same seal twice.

O-Rings (Preformed Packings)

Always discard o-rings after removal. Replace with **new** o-rings. To prevent leaks, lubricate the o-rings before installation. Apply the same type of lubricant as that being sealed. Be sure that all gasket, o-ring and seal mating surfaces are thoroughly clean before installation.

Gears

Always check gears for damaged or worn teeth.

Remove burrs and rough spots with a honing stone or crocus cloth before installation.

Lubricate mating surfaces before pressing gears on shafts.

Shafts

If a shaft does not come out easily, check that all nuts, bolts or retaining rings have been removed. Check to see if other parts are in the way before using force.

Shafts fitted to tapered splines should be very tight. If shafts are not tight, disassemble and inspect tapered splines. Discard parts that are worn. Be sure tapered splines are clean, dry and free of burrs before putting them in place. Press mating parts together tightly.

Clean all rust from the machined surfaces of new parts.

Part Replacement

Always replace worn or damaged parts with **new** parts.

Exhaust System Leakage

In the event of an exhaust system leak at a muffler or header pipe connection location, disassemble and clean all mating surfaces. Replace any damaged components. If leak still exists, disassemble and repair the leak by applying a bead of Harley-Davidson High-Performance Sealant (Part No. 99650-02) (or an equivalent O2 Sensor/Catalyst-safe alternative). Reassemble components, wipe off any excess sealant and allow adequate curing time following sealant product instructions before operating vehicle.

CLEANING

Part Protection

Before cleaning, protect rubber parts (such as hoses, boots and electrical insulation) from cleaning solutions. Use a grease-proof barrier material. Remove the rubber part if it cannot be properly protected.

Cleaning Process

Any cleaning method may be used as long as it does not result in parts damage. Thorough cleaning is necessary for proper parts inspection. Strip rusted paint areas to bare metal before priming and repainting.

Rust or Corrosion Removal

Remove rust and corrosion with a wire brush, abrasive cloth, sand blasting, vapor blasting or rust remover. Use buffing crocus cloth on highly polished parts that are rusted.

Bearings

Remove shields and seals from bearings before cleaning. Clean bearings with permanent shields and seals in solution.

WARNING

Using compressed air to "spin dry" bearings can cause bearing to fly apart, which could result in death or serious injury. (00505b)

Clean open bearings by soaking them in a petroleum cleaning solution. Never use a solution that contains chlorine.

Let bearings stand and dry. Do not dry with compressed air. Do not spin bearings while they are drying.

TOOL SAFETY

Air Tools

- Always use approved eye protection equipment when performing any task using air-operated tools.
- On all power tools, use only recommended accessories with proper capacity ratings.
- Do not exceed air pressure ratings of any power tools.
- Bits should be placed against work surface before air hammers are operated.
- Disconnect the air supply line to an air hammer before attaching a bit.
- Never point an air tool at yourself or another person.
- Protect bystanders with approved eye protection.

Wrenches

- Never use an extension on a wrench handle.
- If possible, always pull on a wrench handle and adjust your stance to prevent a fall if something lets go.
- Never cock a wrench.
- Never use a hammer on any wrench other than a STRIKING FACE wrench.
- Discard any wrench with broken or battered points.
- Never use a pipe wrench to bend, raise or lift a pipe.

Pliers/Cutters/Pry bars

- Plastic- or vinyl-covered pliers handles are not intended to act as insulation. Do not use on live electrical circuits.
- Do not use pliers or cutters for cutting hardened wire unless they were designed for that purpose.
- Always cut at right angles.
- Do not use any pry bar as a chisel, punch or hammer.

Hammers

- Never strike a hammer against a hardened object, such as another hammer.
- Always grasp a hammer handle firmly, close to the end.
- Strike the object with the full face of the hammer.
- Never work with a hammer which has a loose head.
- Discard hammer if face is chipped or mushroomed.
- Wear approved eye protection when using striking tools.
- Protect bystanders with approved eye protection.

Punches/Chisels

- Never use a punch or chisel with a chipped or mushroomed end; dress mushroomed chisels and punches with a file.
- Hold a chisel or a punch with a tool holder if possible.
- When using a chisel on a small piece, clamp the piece firmly in a vise and chip toward the stationary jaw.
- Wear approved eye protection when using these tools.
- Protect bystanders with approved eye protection.

Screwdrivers

- Do not use a screwdriver for prying, punching, chiseling, scoring or scraping.
- Use the right type of screwdriver for the job; match the tip to the fastener.
- Do not interchange POZIDRIV, PHILLIPS or REED AND PRINCE screwdrivers.
- Screwdriver handles are not intended to act as insulation. Do not use on live electrical circuits.
- Do not use a screwdriver with rounded edges because it will slip. Redress with a file.

Ratchets and Handles

- Periodically clean and lubricate ratchet mechanisms with a light grade oil. Do not replace parts individually; ratchets should be rebuilt with the entire contents of service kit.
- Never hammer or put a pipe extension on a ratchet or handle for added leverage.
- Always support the ratchet head when using socket extensions, but do not put your hand on the head or you may interfere with the action of its reversing mechanism.
- When breaking loose a fastener, apply a small amount of pressure as a test to be sure the ratchet's gear wheel is engaged with the pawl.

Sockets

- Never use hand sockets on power or impact wrenches.
- Select the right size socket for the job.
- Never cock any wrench or socket.
- Select only impact sockets for use with air or electric impact wrenches.
- Replace sockets showing cracks or wear.
- Keep sockets clean.
- Always use approved eye protection when using power or impact sockets.

Storage Units

- Do not open more than one loaded drawer at a time. Close each drawer before opening up another.
- Close lids and lock drawers and doors before moving storage units.
- Do not pull on a tool cabinet; push it in front of you.
- Set the brakes on the locking casters after the cabinet has been rolled to your workspace.

MAINTENANCE SCHEDULE

1.2

GENERAL

The table below lists the periodic maintenance requirements for Softail model motorcycles. If you are familiar with the procedures, just refer to the table for the recommended service interval. If necessary, see the quick reference table (Table 1-2) for the required specifications.

If more detailed information is needed, turn to the sections which follow for step-by-step instructions.

Also, throughout this manual, you will be instructed to use various lubricants, greases and sealants. Refer to Table 1-3. for the correct part numbers of these items.

Table 1-1. Regular Service Intervals: 2008 Softail Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	5000 MI. 8000 KM	10,000 MI. 16,000 KM	15,000 MI. 24,000 KM	20,000 MI. 32,000 KM	25,000 MI. 40,000 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required	X	X	X	X	X	X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	
Wheel spokes	Check tightness	X	X			X		1, 4
Primary chaincase lubricant	Replace	X		X		X		
Transmission lubricant	Replace	X				X		
Clutch	Check adjustment	X	X	X	X	X	X	1
Rear belt and sprockets	Inspect, adjust belt	X	X	X	X	X	X	1
Throttle, brake, and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	1
Jiffy stand	Inspect and lubricate	X		X		X		1
Fuel lines and fittings	Inspect for leaks	X	X	X	X	X	X	1
Fuel filter in fuel tank	Replace						X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	6
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Spark plugs	Inspect	X	X	X	X	X	X	
	Replace					X		
Electrical equipment and switches	Check operation	X	X	X	X	X	X	
Engine idle speed	Check adjustment	X	X	X	X	X	X	1
Front fork oil	Replace	Replace at 50,000 miles (80,000 kilometers).						1
Steering head bearings (Softail models)	Adjust	X		X		X		1
	Lubricate			X		X		2
Steering head bearings (Springer models)	Adjust	Adjust and lubricate every 2500 miles (4000 kilometers).						1, 5
Windshield bushings	Inspect			X		X		1
Springer rocker bearings	Adjust	X		X		X		1, 7
Critical fasteners	Check tightness	X		X		X		1
Battery	Check battery and clean connections							3
Exhaust system	Inspect for leaks, cracks, and loose or missing fasteners or heat shields	X	X	X	X	X	X	3
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Disassemble, lubricate and inspect every 30,000 miles (48,000 kilometers). 3. Perform annually. 4. Not all vehicles are equipped with spoke wheels. Consult appropriate topic in service manual. 5. Disassemble, lubricate and inspect every 20,000 miles (32,000 kilometers). 6. Change D.O.T. 4 fluid and flush brake system every two years. 7. Adjust at 500 miles (800 kilometers).							

Table 1-2. Softail Quick Reference Maintenance Chart

ITEM SERVICED	SPECIFICATION	DATA
Engine oil and filter	Drain plug torque	14-21 ft-lbs (19-28 Nm)
	Oil capacity	3.0 qt (2.85 L)
	Filter	Hand tighten 1/2-3/4 turn after gasket contact
	Chrome filter part number	63798-99
	Black filter part number	63731-99
Primary chain lubricant	Lubricant capacity	32 oz (0.95 L) wet 40 oz (1.18 L) dry
	Primary chaincase drain plug torque	14-21 ft-lbs (19-28 Nm)
Clutch adjustment	Free play at adjuster screw	1/2-1 turn
	Adjuster screw locknut torque	72-120 in-lbs (8-14 Nm)
	Free play at hand lever	1/16-1/8 in. (1.6-3.2 mm)
	Clutch inspection cover torque	84-108 in-lbs (10-12 Nm)
Transmission lubricant	Lubricant level	Dipstick at FULL with motorcycle on jiffy stand and filler plug resting on threads
	Lubricant capacity	32 oz (0.95 L)
	Transmission drain plug torque	14-21 ft-lbs (19-28 Nm)
	Filler plug torque	25-75 in-lbs (3-9 Nm)
Spark plugs	Type	HD-6R12
	Gap	0.038-0.043 in. (0.97-1.09 mm)
	Torque	12-18 ft-lbs (16-24 Nm)
Engine idle speed	Idle speed	950-1050 RPM
Front fork oil	Type	HYDRAULIC FORK OIL (TYPE E) Part No. 99884-80 (16 oz)
Battery	Lubricant	ELECTRICAL CONTACT LUBRICANT Part No. 99861-02 (1 oz)
	Battery terminal torque	60-72 in-lbs (6.8-8.1 Nm)

Table 1-2. Softail Quick Reference Maintenance Chart

ITEM SERVICED	SPECIFICATION	DATA	
Tire condition and pressure	Pressure for solo rider	FLST, FLSTC, FLSTN Models: Front: 36 psi (248 kPa) Rear: 36 psi (248 kPa) FXST, FXSTC, FXSTB Models: Front: 30 psi (207 kPa) Rear: 38 psi (262 kPa) FLSTF, FLSTSB Models: Front: 36 psi (248 kPa) Rear: 38 psi (262 kPa) FXCW/C Models: Front: 30 psi (207 kPa) Rear: 38 psi (262 kPa)	
	Pressure for rider and passenger	FLST, FLSTC, FLSTN Models: Front: 36 psi (248 kPa) Rear: 40 psi (276 kPa) FXST, FXSTC, FXSTB Models: Front: 30 psi (207 kPa) Rear: 42 psi (290 kPa) FLSTF Models: Front: 36 psi (248 kPa) Rear: 42 psi (290 kPa) FXCWC Models: Front: 30 psi (207 kPa) Rear: 42 psi (290 kPa)	
	Wear	Replace tire if 1/32 in. (0.8 mm) or less of tread pattern remains	
	Wheel spokes	Spoke nipple torque	Steel laced wheel: 55 in-lbs (6.2 Nm)
			Chrome aluminum laced wheel: 55 in-lbs (6.2 Nm)
	Steering head bearings	Lubricant for neck fitting	SPECIAL PURPOSE GREASE Part No. 99857-97 (14oz cartridge)
	Brake fluid reservoir level	DOT 4 hydraulic brake fluid part number	99953-99A (12 oz)
Proper fluid level		1/4 ± 1/8 in. (6.35 ± 3.18 mm) from top	
Master cylinder reservoir cover torque		6-8 in-lbs (0.7-0.9 Nm)	
Brake pad linings and discs	Minimum brake pad thickness	0.04 in. (1.02 mm)	
	Minimum brake disc thickness	See stamp on side of disc	
Drive belt	Upward measurement force applied at midpoint of bottom off belt strand	10 lb (4.5 kg)	
	With motorcycle on Jiffy Stand without rider or luggage	FLSTN, FXCW/C: 1/4-5/16 in. (6.4-7.9 mm) FXST, FLST, FLSTC, FLSTF, FXSTB, FXSTC: 9/16-5/8 in. (14.3-15.9 mm)	
	Vehicle upright with rear wheel in air	FLSTN, FXCW/C: 5/16-3/8 in. (7.9-9.5 mm) FXST, FLST, FLSTC, FLSTF, FXSTB, FXSTC: 11/16-3/4 in. (17.5-19.1 mm)	
Air cleaner	Air cleaner cover bracket screw torque	40-60 in-lbs (4.5-6.8 Nm)	
	Air cleaner cover screw torque	36-60 in-lbs (4.1-6.8 Nm)	
	Adhesive for air cleaner cover screw	LOCTITE THREADLOCKER 243 Part No. 99642-97 (6 ml)	

Table 1-2. Softail Quick Reference Maintenance Chart

ITEM SERVICED	SPECIFICATION	DATA
Clutch and throttle cables	Lubricant	SUPER OIL Part No. 94968-85TV (1/4 fl oz)
	Handlebar clamp screw torque	12-15 ft-lbs (16.3-20.3 Nm)
	Handlebar switch housing screw torque	35-45 in-lbs (4-5 Nm)

Table 1-3. Lubricants, Greases, Sealants

ITEM	PART NUMBER	PACKAGE
Anti-Seize Lubricant	98960-97	1 oz squeeze tube
CCI #20 Brake Grease	42830-05 (included in master cylinder rebuild kit)	squeeze packet
D.O.T. 4 Brake Fluid	99953-99A	12 oz. bottle
Electrical Contact Lubricant	99861-02	1 oz squeeze tube
Genuine Harley-Davidson Formula+ Transmission and Primary Chaincase Lubricant	99851-05	1 qt bottle
G40M Brake Grease	42820-04	squeeze packet
Gray High Performance Sealant	99650-02	1.9 oz squeeze tube
HYLOMAR Gasket and Thread Sealant	99653-85	3.5 oz tube
Loctite Pipe Sealant With Teflon 565	99818-97	6 ml squeeze tube
Loctite Prism Primer (770)		
Loctite Prism Superbonder (411)		
Loctite Superbonder 420 Adhesive		
Loctite Threadlocker 243 (blue)	99642-97	6 ml squeeze tube
Loctite Threadlocker 262 (red)	94759-99	6 ml squeeze tube
Loctite Threadlocker 272	98618-03	10 ml bottle
Special Purpose Grease	99857-97	14 oz. cartridge
Super Oil	94968-85TV	1/4 fl. oz
Type "E" Hydraulic Fork Oil	99884-80	16 oz bottle



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

FUEL

Refer to [Table 1-4](#). Always use a good quality unleaded gasoline. Octane ratings are usually found on the pump.

⚠ WARNING

Avoid spills. Slowly remove filler cap. Do not fill above bottom of filler neck insert, leaving air space for fuel expansion. Secure filler cap after refueling. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00028a)

⚠ WARNING

Use care when refueling. Pressurized air in fuel tank can force gasoline to escape through filler tube. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00029a)

Modern service station pumps dispense a high flow of gasoline into a motorcycle fuel tank making air entrapment and pressurization a possibility.

Table 1-4. Octane Ratings

SPECIFICATION	RATING
Pump Octane (R+M)/2	91 (95 RON)

GASOLINE BLENDS

Your motorcycle was designed to get the best performance and efficiency using unleaded gasoline. Most gasoline is blended with alcohol and/or ether to create oxygenated blends. The type and amount of alcohol or ether added to the fuel is important.

CAUTION

Do not use gasoline that contains methanol. Doing so can result in fuel system component failure, engine damage and/or equipment malfunction. (00148a)

- Gasoline containing METHYL TERTIARY BUTYL ETHER (MTBE): Gasoline/MTBE blends are a mixture of gasoline

and as much as 15% MTBE. Gasoline/MTBE blends can be used in your motorcycle.

- ETHANOL is a mixture of 10% ethanol (Grain alcohol) and 90% unleaded gasoline. Gasoline/ethanol blends can be used in your motorcycle if the ethanol content does **not** exceed 10%.
- REFORMULATED OR OXYGENATED GASOLINES (RFG): Reformulated gasoline is a term used to describe gasoline blends that are specifically designed to burn cleaner than other types of gasoline, leaving fewer tailpipe emissions. They are also formulated to evaporate less when you are filling your tank. Reformulated gasolines use additives to oxygenate the gas. Your motorcycle will run normally using this type of gas and Harley-Davidson recommends you use it when possible, as an aid to cleaner air in our environment.
- Do not use race gas or octane boosters. Use of these fuels will damage the fuel system.

Some gasoline blends might adversely affect the starting, driveability or fuel efficiency of the motorcycle. If any of these problems are experienced, try a different brand of gasoline or gasoline with a higher octane blend.

ENGINE LUBRICATION

CAUTION

Do not switch lubricant brands indiscriminately because some lubricants interact chemically when mixed. Use of inferior lubricants can damage the engine. (00184a)

Engine oil is a major factor in the performance and service life of the engine. Always use the proper grade of oil for the lowest temperature expected before the next scheduled oil change. Refer to [Table 1-5](#). Your authorized dealer has the proper oil to suit your requirements.

If it is necessary to add oil and Harley-Davidson oil is not available, use an oil certified for diesel engines. Acceptable diesel engine oil designations include: CF-4, CG-4, CH-4 and CI-4.

The preferred viscosities for the diesel engine oils in descending order are: 20W50, 15W40 and 10W40.

At the first opportunity, see an authorized dealer to change back to 100 percent Harley-Davidson oil.

Table 1-5. Recommended Engine Oils

H-D TYPE	VISCOSITY	H-D RATING	LOWEST AMBIENT TEMPERATURE	COLD WEATHER STARTS BELOW 50° F (10° C)
H-D Multi-grade	SAE 10W40	HD 360	Below 40° F (4° C)	Excellent
H-D Multi-grade	SAE 20W50	HD 360	Above 40° F (4° C)	Good
H-D Regular Heavy	SAE 50	HD 360	Above 60° F (16° C)	Poor
H-D Extra Heavy	SAE 60	HD 360	Above 80° F (27° C)	Poor

WINTER LUBRICATION

In colder climates, the engine oil should be changed often. If motorcycle is used frequently for short trips, less than 15 miles (24 kilometers), in ambient temperatures below 60° F (16° C), oil change intervals should be reduced to 1500 miles (2400 kilometers). Motorcycles used only for short runs must have a thorough tank flush-out before **new** oil is put in. The tank flush-out should be performed by an authorized dealer or qualified technician.

NOTE

The further below freezing the temperature drops, the shorter the oil change interval should be.

Water vapor is a normal by-product of combustion in any engine. During cold weather operation, some of the water vapor condenses to liquid form on the cool metal surfaces inside the engine. In freezing weather this water will become slush or ice and, if allowed to accumulate too long, may block the oil lines and cause damage to the engine.

If the engine is run frequently and allowed to thoroughly warm up, most of this water will become vapor again and will be blown out through the crankcase breather.

If the engine is not run frequently and allowed to thoroughly warm up, this water will accumulate, mix with the engine oil and form a sludge that is harmful to the engine.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>