



2009 Dyna Models Service Manual

99481-09

©2008 H-D.

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-4
Checking Torques on Fasteners.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip Type Seals.....	1-4
O-Rings (Preformed Packings).....	1-5
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Exhaust System Leakage.....	1-5
Cleaning.....	1-5
Part Protection.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry bars.....	1-5
Hammers.....	1-6
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

1.3 MAINTENANCE SCHEDULE

General.....1-7

1.4 FUEL AND OIL

Fuel.....	1-10
Gasoline Blends.....	1-10
Engine Lubrication.....	1-10
Winter Lubrication.....	1-11

1.5 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-12
Type of Oil.....	1-12
Checking with Cold Engine.....	1-12
Checking with Warm Engine.....	1-12
Changing Oil and Filter.....	1-13

1.6 BULB REQUIREMENTS

General.....1-15

1.7 BRAKES

Fluid Inspection.....	1-16
Rear Pedal Height.....	1-16

1.8 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-18
Installation.....	1-18
Exhaust System Leak Check.....	1-19

1.9 TIRES AND WHEELS

Tires.....	1-20
Tire Replacement.....	1-20
Wheel Bearings.....	1-21
Wheel Spokes.....	1-21

1.10 PRIMARY CHAIN

General.....	1-22
Changing Primary Chaincase Lubricant.....	1-22

1.11 TRANSMISSION LUBRICANT

Changing Transmission Lubricant.....	1-24
--------------------------------------	------

1.12 CLUTCH

Adjustment.....	1-25
-----------------	------

1.13 REAR BELT AND SPROCKETS

General.....	1-27
Cleaning.....	1-27
Inspection.....	1-27
Sprockets.....	1-27
Rear Belt.....	1-27

1.14 REAR BELT DEFLECTION

Inspection.....	1-29
Adjustment.....	1-30

1.15 THROTTLE CABLES

Cable Inspection, Lubrication and Adjustment.....	1-31
Inspection and Lubrication.....	1-31
Adjustment.....	1-31

1.16 BLEEDING BRAKES

General.....	1-32
Procedure.....	1-32

1.17 BRAKE PADS AND DISCS

Inspection.....	1-33
Brake Pads.....	1-33
Brake Disc.....	1-33
Brake Pad Replacement.....	1-33
Rear Brake Caliper.....	1-33
Front Brake Caliper.....	1-34

1.18 BATTERY MAINTENANCE

General.....	1-36
Cleaning and Inspection.....	1-37
Voltmeter Test.....	1-37
Voltmeter Test.....	1-37
Charging Battery.....	1-37
Safety Precautions.....	1-37
Using a Battery Charger.....	1-37
Disconnection and Removal.....	1-38
Storage.....	1-39
Installation and Connection.....	1-39

TABLE OF CONTENTS

1.19 SUSPENSION ADJUSTMENTS

Rear Shock Preload Adjustment.....1-41

1.20 SPARK PLUGS

Inspection.....1-42
Spark Plug Cable Inspection.....1-42

1.21 STEERING HEAD BEARINGS

Adjustment.....1-44
 Bearing Adjustment (Fall Away).....1-44
Lubrication.....1-44

1.22 FRONT FORK OIL

Replacing Fork Oil.....1-45

1.23 CABLE AND CHASSIS LUBRICATION

General.....1-46
Cables and Hand Levers.....1-46
Jiffy Stand.....1-46

1.24 HEADLAMP ALIGNMENT

Headlamp Alignment.....1-47
Adjustment.....1-47
 All Models.....1-47

1.25 CRITICAL FASTENERS

Inspection.....1-49
 Checking Torques on Fasteners.....1-49

1.26 ENGINE MOUNTS

Inspection.....1-50

1.27 STORAGE

General.....1-51
Placing in Storage.....1-51
Removal from Storage.....1-51

1.28 TROUBLESHOOTING

General.....1-53
Engine.....1-53
 Starter Motor Does Not Operate or Does Not Turn Engine
 Over.....1-53
 Engine Turns Over But Does Not Start.....1-53
 Starts Hard.....1-53
 Starts But Runs Irregularly or Misses.....1-53
 Spark Plug Fouls Repeatedly.....1-53
 Pre-Ignition or Detonation (Knocks or Pings).....1-53
 Overheating.....1-54
 Valve Train Noise.....1-54
 Excessive Vibration.....1-54
 Check Engine Light Illuminates During Operation.....1-54
Lubrication System.....1-54
 Oil Does Not Return To Oil Pan.....1-54
 Engine Uses Too Much Oil Or Smokes Excessively...1-54
 Engine Leaks Oil From Cases, Push Rods, Hoses,
 Etc.....1-54
 Low Oil Pressure.....1-54
 High Oil Pressure.....1-54
Electrical System.....1-54
 Alternator Does Not Charge.....1-54

 Alternator Charge Rate Is Below Normal.....1-55
 Speedometer Operates Erratically.....1-55
Transmission.....1-55
 Shifts Hard.....1-55
 Jumps Out Of Gear.....1-55
 Clutch Slips.....1-55
 Clutch Drags Or Does Not Release.....1-55
 Clutch Chatters.....1-55
Handling.....1-55
 Irregularities.....1-55
Brakes.....1-55
 Brake Does Not Hold Normally.....1-55

CHASSIS

2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....2-1

2.2 SPECIFICATIONS

Specifications.....2-4
 Chassis Specifications.....2-4
 Tire Specifications.....2-5

2.3 VEHICLE IDENTIFICATION NUMBER (V.I.N.)

General.....2-7

2.4 FRONT WHEEL

Removal.....2-9
Disassembly.....2-9
 Cast Wheel.....2-9
 Cast Wheel, Dual Brakes.....2-9
 Laced Wheel.....2-9
Cleaning and Inspection.....2-12
Assembly.....2-12
 Cast Wheel.....2-13
 Laced Wheel.....2-13
Installation.....2-13

2.5 REAR WHEEL

Removal.....2-15
Disassembly.....2-15
Cleaning and Inspection.....2-16
Assembly.....2-16
Installation.....2-17

2.6 SEALED WHEEL BEARINGS

Inspection.....2-18
Removal.....2-18
Installation.....2-19

2.7 WHEEL LACING: 17 INCH RIM

General.....2-21
Procedure.....2-21

2.8 WHEEL LACING: 19 INCH RIM

Procedure.....2-24

2.9 WHEEL LACING: 21 INCH RIM

General.....2-28

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

TABLE OF CONTENTS

Procedure.....	2-28	Inspection.....	2-64
2.10 TRUING LACED WHEELS		Disassembly.....	2-64
General.....	2-31	Steering Head Bearing Race Removal	2-64
Lateral Truing.....	2-31	Assembly.....	2-65
Radial Truing.....	2-32	Installation.....	2-65
2.11 CHECKING CAST WHEEL RUNOUT		2.20 BELT GUARD	
General.....	2-34	Removal.....	2-66
Lateral Runout.....	2-34	Installation.....	2-66
Radial Runout.....	2-34	2.21 DEBRIS DEFLECTOR	
2.12 VEHICLE ALIGNMENT		Removal.....	2-67
Inspection.....	2-35	Installation.....	2-67
2.13 FRONT BRAKE MASTER CYLINDER		2.22 THROTTLE CONTROL	
General.....	2-37	Removal/Disassembly.....	2-68
Removal and Disassembly.....	2-37	Cleaning and Inspection.....	2-68
Cleaning and Inspection.....	2-39	Assembly/Installation.....	2-68
Assembly and Installation.....	2-39	Throttle Cable Routing.....	2-68
2.14 FRONT BRAKE CALIPER		2.23 REAR SHOCK ABSORBERS	
Removal.....	2-41	General.....	2-70
Disassembly.....	2-41	Removal.....	2-70
Cleaning, Inspection and Repair.....	2-43	Inspection.....	2-70
Assembly.....	2-44	Installation.....	2-70
Installation.....	2-44	2.24 REAR FORK	
2.15 REAR BRAKE MASTER CYLINDER		Removal.....	2-71
General.....	2-46	Disassembly.....	2-72
Removal.....	2-46	Cleaning and Inspection.....	2-72
Disassembly.....	2-47	Assembly.....	2-72
Cleaning and Inspection.....	2-48	Installation.....	2-72
Assembly.....	2-48	2.25 CLUTCH CONTROL	
Installation.....	2-48	Removal.....	2-73
2.16 REAR BRAKE CALIPER		Installation.....	2-73
Removal.....	2-50	2.26 HANDLEBARS: ALL BUT FXDB/FXDF	
Disassembly.....	2-50	Removal.....	2-74
Cleaning, Inspection and Repair.....	2-52	All Models.....	2-74
Assembly.....	2-53	FXD/FXDC Models.....	2-74
Installation.....	2-53	FXDL Models.....	2-74
2.17 TIRES		Installation.....	2-75
General.....	2-55	FXD/FXDC Models.....	2-75
Removal.....	2-55	FXDL Models.....	2-75
Cleaning, Inspection and Repair.....	2-56	All Models.....	2-76
Installation.....	2-56	2.27 HANDLEBARS: FXDB/FXDF	
Tube Type Tires.....	2-56	Removal.....	2-77
Tubeless Tires.....	2-57	FXDB.....	2-77
2.18 FRONT FORK		FXDF.....	2-77
Removal.....	2-58	Installation.....	2-78
Disassembly.....	2-58	2.28 FRONT FENDER	
Cleaning and Inspection.....	2-61	Removal.....	2-80
Assembly.....	2-61	Installation.....	2-80
Installation.....	2-62	2.29 REAR FENDER	
2.19 STEERING HEAD		General.....	2-81
Removal.....	2-63	Removal.....	2-81

TABLE OF CONTENTS

Tail Lamp/Turn Signal Harness Routing.....	2-81
Installation.....	2-81
FXDF.....	2-82
Removal.....	2-82
Installation.....	2-82
FXD, FXDC, and FXDL Models.....	2-82
Removal.....	2-82
Installation.....	2-82
FXDB Models.....	2-82
Removal.....	2-82
Installation.....	2-83

2.30 SEAT

Removal.....	2-84
Installation.....	2-84

2.31 JIFFY STAND

Cleaning.....	2-85
Sensor (HDI Models).....	2-85
Removal.....	2-86
Installation.....	2-87

2.32 ENGINE MOUNTS

Removal.....	2-88
Front Isolator.....	2-88
Rear Isolator.....	2-88
Installation.....	2-88
Front Isolator.....	2-88
Rear Isolator.....	2-88

ENGINE

3.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	3-1
---	-----

3.2 SPECIFICATIONS

Specifications.....	3-3
---------------------	-----

3.3 SERVICE WEAR LIMITS

General.....	3-5
--------------	-----

3.4 ENGINE OIL FLOW

Oil Feed.....	3-7
Top End.....	3-7
Bottom End.....	3-9
Oil Return.....	3-11

3.5 OIL PUMP OPERATION

General.....	3-13
Operation.....	3-13

3.6 BREATHER OPERATION

General.....	3-15
--------------	------

3.7 OIL PRESSURE

Oil Pressure Indicator Lamp.....	3-16
Checking Oil Pressure.....	3-16

3.8 TROUBLESHOOTING

Diagnosing Valve Train Noise.....	3-17
-----------------------------------	------

Compression Test.....	3-17
Cylinder Leakdown Test.....	3-17
Diagnosing Smoking Engine or High Oil Consumption.....	3-18
Check Prior To Cylinder Head Removal.....	3-18
Check After Cylinder Head Removal.....	3-18

3.9 HOW TO USE THIS SECTION

Top End Repair.....	3-19
Bottom End Repair.....	3-19
Typical Symptoms.....	3-19

3.10 TOP END SERVICE

Engine in Chassis.....	3-20
Engine Removed from Chassis.....	3-21

3.11 BOTTOM END SERVICE

Engine in Chassis.....	3-22
Engine Removed From Chassis.....	3-23

3.12 STRIPPING MOTORCYCLE FOR SERVICE

Procedure.....	3-24
----------------	------

3.13 ASSEMBLING MOTORCYCLE AFTER SERVICE

Procedure.....	3-25
----------------	------

3.14 REMOVING ENGINE FROM CHASSIS

Procedure.....	3-26
----------------	------

3.15 INSTALLING ENGINE IN CHASSIS

Procedure.....	3-27
----------------	------

3.16 TOP END OVERHAUL: DISASSEMBLY

General.....	3-29
Rocker Covers.....	3-29
Rocker Arm Support Plate.....	3-29
Push Rods, Lifters and Covers.....	3-31
Cylinder Head.....	3-32
Cylinder.....	3-33
Piston.....	3-33

3.17 TOP END OVERHAUL: ASSEMBLY

General.....	3-35
Piston.....	3-35
Cylinder.....	3-36
Cylinder Head.....	3-38
Push Rods, Lifters and Covers.....	3-42
Rocker Arm Support Plate.....	3-43
Breather Assembly.....	3-44

3.18 BOTTOM END OVERHAUL: DISASSEMBLY

General.....	3-46
Cam Support Plate and Cover.....	3-46
Prepare Engine.....	3-46
Cam Chain and Sprockets.....	3-46
Cam Support Plate.....	3-47
Crankcase.....	3-48

TABLE OF CONTENTS

3.19 BOTTOM END OVERHAUL: ASSEMBLY

General.....	3-50
Crankcase.....	3-50
Cam Support Plate and Cover.....	3-52

3.20 BREATHER ASSEMBLY

Removal Overview.....	3-57
Disassembly.....	3-57
Cleaning and Inspection.....	3-57
Assembly.....	3-57
Installation Overview.....	3-57

3.21 ROCKER ARM SUPPORT PLATE

Removal Overview.....	3-58
Disassembly.....	3-58
Cleaning and Inspection.....	3-58
Inspection.....	3-58
Rocker Shaft Fit.....	3-58
Rocker Arm Shaft to Bushing.....	3-59
Replace Rocker Arm Bushings.....	3-59
Assembly.....	3-60
Installation Overview.....	3-60

3.22 PUSH RODS, LIFTERS AND COVERS

Removal Overview.....	3-62
Disassembly.....	3-62
Cleaning and Inspection.....	3-62
Lifter Inspection.....	3-63
Assembly.....	3-63
Installation Overview.....	3-64

3.23 CYLINDER HEAD

Removal Overview.....	3-65
Disassembly.....	3-65
Cleaning.....	3-66
Inspection.....	3-67
Cylinder Head.....	3-67
Valve Guides.....	3-67
Valves.....	3-67
Valve Springs.....	3-67
Tapered Keepers.....	3-68
Valve Seats.....	3-68
Valve Guide Replacement.....	3-68
Removal.....	3-68
Installation.....	3-69
Valve and Seat Refacing.....	3-72
Assembly.....	3-74
Installation Overview.....	3-75

3.24 CYLINDER

Removal Overview.....	3-76
Cleaning.....	3-76
Inspection.....	3-77
Deglazing Cylinder.....	3-78
Boring and Honing Cylinder.....	3-79
Installation Overview.....	3-79

3.25 PISTON

Removal Overview.....	3-80
Disassembly.....	3-80
Piston Rings.....	3-80

Cleaning.....	3-80
Inspection.....	3-81
Assembly.....	3-82
Checking Piston Ring Gap.....	3-82
Installing Piston Rings.....	3-83
Installation Overview.....	3-84

3.26 CAM SUPPORT PLATE AND COVER

Removal Overview.....	3-85
Camshafts.....	3-85
Removal.....	3-85
Assembly.....	3-85
Oil Pressure Relief Valve.....	3-87
Removal.....	3-87
Installation.....	3-87
Inspection.....	3-87
Cam Needle Bearings.....	3-87
Removal.....	3-87
Installation.....	3-89
Cleaning and Inspection.....	3-90
Oil Pressure Valve.....	3-90
Cam Support Plate.....	3-90
Installation Overview.....	3-90

3.27 OIL PUMP

Removal Overview.....	3-91
Cleaning and Inspection.....	3-91
Installation Overview.....	3-91

3.28 CRANKCASE

Removal Overview.....	3-92
Right Crankcase Half.....	3-92
Main Bearing Removal.....	3-92
Main Bearing Installation.....	3-92
Piston Jets Removal.....	3-93
Piston Jets Installation.....	3-93
Left Crankcase Half.....	3-93
Main Bearing Removal.....	3-93
Main Bearing Installation.....	3-95
Sprocket Shaft Bearing Inner Race.....	3-96
Removal.....	3-96
Installation.....	3-97
Cylinder Studs.....	3-98
Removal.....	3-98
Installation.....	3-98
Pipe Plug and Oil Fittings.....	3-99
Removal.....	3-99
Installation.....	3-99
Cleaning and Inspection.....	3-99
Installation Overview.....	3-99

3.29 FLYWHEEL AND CONNECTING RODS

Removal Overview.....	3-100
Inspection.....	3-100
Installation Overview.....	3-100

3.30 OIL PAN

Removal.....	3-101
Installation.....	3-101

TABLE OF CONTENTS

FUEL SYSTEM

4.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....4-1

4.2 SPECIFICATIONS: FUEL SYSTEM

Specifications.....4-3

4.3 ELECTRONIC FUEL INJECTION (EFI)

Troubleshooting.....4-4

4.4 IDLE SPEED

General.....4-5

4.5 AIR CLEANER ASSEMBLY

Removal.....4-6

Installation.....4-7

Backplate Assembly: HDI Models.....4-7

4.6 FUEL TANK

General.....4-9

Removal.....4-9

Cleaning and Inspection.....4-11

Installation.....4-11

Vapor Valve.....4-11

4.7 THROTTLE POSITION SENSOR (TPS)

General.....4-12

Removal.....4-12

Installation.....4-12

4.8 INTAKE AIR TEMPERATURE SENSOR (IAT)

General.....4-13

Removal.....4-13

Installation.....4-13

4.9 ENGINE TEMPERATURE SENSOR (ET)

General.....4-14

Removal.....4-14

Installation.....4-15

4.10 INDUCTION MODULE

Removal.....4-16

Installation.....4-17

4.11 IDLE AIR CONTROL (IAC)

General.....4-18

Removal.....4-18

Installation.....4-18

4.12 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)

General.....4-19

Removal.....4-19

Installation.....4-19

4.13 OXYGEN SENSOR

General.....4-20

Removal.....4-20

Installation.....4-20

4.14 FUEL INJECTORS

General.....4-21

Removal.....4-21

Installation.....4-21

4.15 FUEL PUMP

General.....4-23

Removal.....4-23

Disassembly/Assembly.....4-25

Fuel Filter.....4-25

Regulator.....4-25

Inlet Sock.....4-26

Fuel Pump.....4-27

Installation.....4-27

4.16 FUEL PRESSURE TEST

General.....4-31

Testing.....4-31

4.17 EXHAUST SYSTEM

Removal: All but FXDF.....4-33

Disassembly: All but FXDF.....4-35

Assembly: All but FXDF.....4-35

Installation: All but FXDF.....4-35

Removal: FXDF.....4-36

Installation: FXDF.....4-37

4.18 INTAKE LEAK TEST

General.....4-39

Leak Tester.....4-39

Parts List.....4-39

Tester Assembly.....4-39

Tester Adjustment.....4-39

Procedure.....4-39

4.19 EVAPORATIVE EMISSIONS CONTROL (CA MODELS)

General.....4-41

Charcoal Canister.....4-41

Removal.....4-41

Installation.....4-42

DRIVE

5.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....5-1

5.2 SPECIFICATIONS: DRIVE

Specifications.....5-2

5.3 PRIMARY CHAINCASE COVER

General.....5-3

Removal.....5-3

Installation.....5-3

TABLE OF CONTENTS

5.4 DRIVE COMPONENTS

Removal.....	5-4
Installation.....	5-5

5.5 PRIMARY CHAINCASE HOUSING

Removal.....	5-9
Inspection.....	5-9
Mainshaft Bearing and Lip Seal.....	5-9
Removal.....	5-9
Installation.....	5-9
Mainshaft Bearing Inner Race.....	5-10
Removal.....	5-10
Installation.....	5-11
Shifter Shaft Bushing.....	5-11
Installation.....	5-12

5.6 CLUTCH

Removal and Installation.....	5-14
Clutch Pack Only.....	5-14
Partial Disassembly.....	5-14
Cleaning And Inspection.....	5-14
Assembly.....	5-16
Clutch Pack and Bearing.....	5-16
Complete Disassembly.....	5-16
Assembly.....	5-17

5.7 TRANSMISSION SPROCKET

Removal.....	5-19
Cleaning and Inspection.....	5-19
Installation.....	5-20

5.8 DRIVE BELT

Removal.....	5-22
Installation.....	5-22

TRANSMISSION

6.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	6-1
---	-----

6.2 SPECIFICATIONS: TRANSMISSION

Specifications.....	6-2
Service Wear Limits.....	6-2

6.3 TRANSMISSION

Power Flow.....	6-3
Neutral.....	6-3
1st Gear.....	6-3
2nd Gear.....	6-3
3rd Gear.....	6-3
4th Gear.....	6-3
5th Gear.....	6-3
6th Gear.....	6-3

6.4 SHIFTER LINKAGE

Adjustment.....	6-5
-----------------	-----

6.5 CLUTCH RELEASE COVER

Removal and Disassembly.....	6-6
Cleaning and Inspection.....	6-7

Assembly and Installation.....	6-7
--------------------------------	-----

6.6 TRANSMISSION ASSEMBLY

Removal.....	6-8
Disassembly.....	6-9
Shifter Cam/Shifter Forks.....	6-9
Mainshaft.....	6-11
Countershaft.....	6-13
Replacing Side Door Bearings.....	6-14
Cleaning and Inspection.....	6-15
Assembly.....	6-15
Installing Side Door Bearings.....	6-15
Countershaft.....	6-16
Mainshaft.....	6-16
Shifter Cam/Shifter Forks.....	6-17
Installation.....	6-19

6.7 MAIN DRIVE GEAR AND BEARING

Removal.....	6-20
Cleaning and Inspection.....	6-21
Needle Bearing Replacement.....	6-22
Installation.....	6-23
Installing Main Drive Gear Bearing.....	6-23
Installing Main Drive Gear.....	6-24
Installing Main Drive Gear Large Seal.....	6-24

6.8 TRANSMISSION CASE

Removal.....	6-27
Installation.....	6-28
Disassembly.....	6-29
Shifter Arm Assembly.....	6-29
Cleaning and Inspection.....	6-29
Assembly.....	6-30
Countershaft Needle Bearing Replacement.....	6-30
Shifter Pawl Lever Assembly.....	6-30

ELECTRICAL

7.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	7-1
---	-----

7.2 SPECIFICATIONS: ELECTRICAL

Specifications.....	7-3
---------------------	-----

7.3 ELECTRICAL CADDY

Removal.....	7-4
Installation.....	7-4

7.4 ELECTRONIC CONTROL MODULE (ECM)

General.....	7-6
Replacement.....	7-6

7.5 SPARK PLUG CABLES

Removal.....	7-7
Installation.....	7-7

7.6 VOLTAGE REGULATOR

Removal.....	7-8
Installation.....	7-8

TABLE OF CONTENTS

7.7 FUSES AND RELAYS

General.....	7-9
Removal and Installation.....	7-9
Relays.....	7-9
Fuses.....	7-9

7.8 IGNITION SWITCH/FORK LOCK

General.....	7-10
FXD, FXDL, FXDB Models.....	7-10
Removal.....	7-10
Installation.....	7-11
FXDC, FXDF Models (Ignition Switch Only).....	7-13

7.9 BATTERY TRAY AND BATTERY CABLES

Battery Tray.....	7-14
Removal.....	7-14
Installation.....	7-14
Battery Cables.....	7-15
Routing.....	7-15

7.10 STARTER

General.....	7-16
Wiring Diagrams.....	7-16
Paint Touch-Up.....	7-16
Removal.....	7-16
Field Coil Assembly.....	7-16
Disassembly.....	7-16
Inspection.....	7-16
Assembly.....	7-17
Drive Assembly.....	7-18
Disassembly.....	7-18
Inspection.....	7-18
Assembly.....	7-18
Installation.....	7-19

7.11 STARTER SOLENOID

Solenoid Assembly.....	7-20
Disassembly.....	7-20
Assembly.....	7-20
Solenoid Plunger.....	7-20
Disassembly.....	7-20
Assembly.....	7-20
Solenoid Contacts.....	7-20
Disassembly.....	7-20
Assembly.....	7-21

7.12 HEADLAMP

General.....	7-23
Bulb Removal.....	7-23
Single Bulb Headlamp.....	7-23
Dual Bulb Headlamp.....	7-24
Bulb Installation.....	7-25
Headlamp Assembly Removal.....	7-25
Headlamp Assembly Installation.....	7-25

7.13 TAIL LAMP

General.....	7-26
Tail Lamp Bulb Replacement: Standard Style.....	7-26
Base Replacement: All But FXDB.....	7-26
Base Replacement: FXDB.....	7-28

7.14 TURN SIGNALS AND RUNNING LIGHTS

Bulb Replacement: Bullet Style.....	7-30
Front Lamp Housing Replacement.....	7-30
Rear Lamp Housing Replacement.....	7-31

7.15 STOP-TAIL-TURN (STT) MODULE: FXDB (DOMESTIC ONLY)

General.....	7-34
STT Module Replacement.....	7-34

7.16 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)

Removal.....	7-35
Installation.....	7-35

7.17 CRANK POSITION SENSOR (CKP)

General.....	7-37
Removal.....	7-37
Installation.....	7-37

7.18 ALTERNATOR AND STATOR

Removal.....	7-38
Installation.....	7-38

7.19 FUEL GAUGE

General.....	7-39
All But FXD Models.....	7-39
Removal.....	7-39
Installation.....	7-39
FXD Models.....	7-39
Console Removal.....	7-39
Gauge Removal.....	7-41
Gauge Installation.....	7-41
Console Installation.....	7-41

7.20 FUEL GAUGE SENDER

Removal.....	7-43
Installation.....	7-44

7.21 INSTRUMENTS: FXDC/FXDF

Removal.....	7-46
Speedometer.....	7-46
Installation.....	7-46
Speedometer.....	7-46

7.22 INSTRUMENTS: FXDB/FXDL

Removal.....	7-47
General.....	7-47
Speedometer.....	7-47
Tachometer: FXDL Only.....	7-47
Installation.....	7-47
General.....	7-47
Speedometer.....	7-47
Tachometer: FXDL Only.....	7-47

7.23 INSTRUMENTS: FXD

Removal.....	7-49
Installation.....	7-49

TABLE OF CONTENTS

7.24 VEHICLE SPEED SENSOR (VSS)

General.....	7-50
Removal.....	7-50
Installation.....	7-50

7.25 INDICATOR LAMPS

General.....	7-51
Removal.....	7-51
FXDC/FXDF Models.....	7-51
FXDB Models.....	7-51
FXD Models.....	7-52
FXDL Models.....	7-52
Installation.....	7-53
FXDC/FXDF Models.....	7-53
FXDB Models.....	7-53
FXD Models.....	7-53
FXDL Models.....	7-53

7.26 NEUTRAL SWITCH

General.....	7-54
Removal.....	7-54
Installation.....	7-54

7.27 OIL PRESSURE SWITCH

General.....	7-55
Removal.....	7-55
Installation.....	7-55

7.28 REAR STOPLIGHT SWITCH

General.....	7-56
Removal.....	7-56
Installation.....	7-56

7.29 HORN

Inspection.....	7-57
Replacement.....	7-57

7.30 ACTIVE EXHAUST

General.....	7-58
Removal.....	7-58
Repair.....	7-58
Installation.....	7-58

7.31 MAIN WIRING HARNESS

General.....	7-60
Removal.....	7-60
Installation.....	7-62

7.32 HANDLEBAR SWITCH ASSEMBLIES

General.....	7-65
Repair Procedures.....	7-65

7.33 RIGHT HANDLEBAR SWITCH

Removal.....	7-66
Installation.....	7-66
Disassembly.....	7-68
Switch Repair/Replacement.....	7-69
Upper Housing Repair.....	7-69
Lower Housing Repair.....	7-70
Turn-Right Signal Switch.....	7-70

Front Stoplight Switch.....	7-70
Assembly.....	7-70

7.34 LEFT HANDLEBAR SWITCH

Removal.....	7-72
Installation.....	7-72
Disassembly.....	7-73
Switch Repair/Replacement.....	7-73
Upper Housing Repair.....	7-73
Lower Housing Repair.....	7-74
Turn-Left Signal Switch.....	7-74
Clutch Interlock Switch.....	7-74
Assembly.....	7-74

APPENDIX A CONNECTOR REPAIR

A.1 AMP MULTILOCK CONNECTORS

AMP Multilock Connector Repair.....	A-1
General.....	A-1
Separating Pin and Socket Housings.....	A-1
Mating Pin and Socket Housings.....	A-1
Removing Terminals from Housing.....	A-1
Inserting Terminals into Housing.....	A-2
Preparing Wire Leads for Crimping.....	A-2
Crimping Terminals to Leads.....	A-3
Inspecting Crimped Terminals.....	A-4

A.2 AUTOFUSE ELECTRICAL CONNECTORS

Autofuse Connector Repair.....	A-5
General.....	A-5
Disassembly.....	A-5
Assembly.....	A-5

A.3 DELPHI CONNECTORS

Delphi Connector Repair.....	A-6
General.....	A-6
Separating Pin and Socket Housings.....	A-6
Mating Pin and Socket Housings.....	A-6
Removing Socket Terminals.....	A-6
Installing Socket Terminals.....	A-6

A.4 DELPHI MAXI FUSE HOUSING

Delphi Main Fuse Housing Repair.....	A-8
General.....	A-8
Removing Main Fuse.....	A-8
Installing Main Fuse.....	A-8
Removing Socket Terminals.....	A-8
Installing Socket Terminals.....	A-8

A.5 DEUTSCH ELECTRICAL CONNECTORS

Deutsch Connector Repair.....	A-10
General.....	A-10
Separating Pin and Socket Housings.....	A-10
Mating Pin and Socket Housings.....	A-10
Removing Socket Terminals.....	A-10
Installing Socket Terminals.....	A-10
Removing Pin Terminals.....	A-12
Installing Pin Terminals.....	A-12
Crimping Terminals.....	A-13

TABLE OF CONTENTS

A.6 DEUTSCH STANDARD TERMINAL REPAIR

Deutsch Standard Terminal Crimps.....	A-14
Preparing Wire Leads for Crimping.....	A-14
Crimping Terminal to Lead.....	A-14
Inspecting Crimps.....	A-14

A.7 DEUTSCH SOLID BARREL MINI TERMINAL REPAIR

Deutsch Solid Barrel Terminal Crimps.....	A-15
Preparing Wire Leads For Crimping.....	A-15
Adjusting Crimper Tool.....	A-15
Crimping a Barrel Contact To Wire Lead.....	A-15
Inspecting Crimps.....	A-15

A.8 DEUTSCH MINI TERMINAL REPAIR

Deutsch Mini Terminal Crimps.....	A-17
Preparing Wire Leads for Crimping.....	A-17
Crimping a Mini Terminal to Wire Lead.....	A-17
Inspecting Crimps.....	A-17

A.9 MOLEX CONNECTORS

Molex Connector Repair.....	A-18
Separating Pin and Socket Housings.....	A-18
Mating Pin and Socket Housings.....	A-18
Removing Terminals.....	A-18
Installing Terminals.....	A-18
Crimp Terminal to Lead.....	A-19
Prepare Lead.....	A-19
Prepare Tool.....	A-19
Position Terminal in the Punch/Die.....	A-20
Insert Stripped Lead.....	A-20
Crimp Terminal to Lead.....	A-21
Inspect Crimp.....	A-21

A.10 PACKARD 150 METRI-PACK CONNECTORS

150 Metri-Pack Connector Repair.....	A-22
General.....	A-22
Separating Pin and Socket Housings.....	A-22
Mating Pin and Socket Housings.....	A-22
Removing Socket Terminal.....	A-22
Inserting Socket Terminal.....	A-22

A.11 PACKARD 280 METRI-PACK RELAY AND FUSE BLOCK CONNECTORS

Fuse Block Repair.....	A-24
Removing Socket Terminals.....	A-24
Installing Socket Terminals.....	A-24
Crimping Terminals.....	A-24

A.12 PACKARD 480 METRI-PACK CONNECTORS

480 Metri-Pack Connector Repair.....	A-25
General.....	A-25
Separating Pin and Socket Housings.....	A-25
Mating Pin and Socket Housings.....	A-25
Removing Socket Terminals.....	A-25
Installing Socket Terminals.....	A-25

A.13 PACKARD 630 METRI-PACK CONNECTORS

630 Metri-Pack Connector Repair.....	A-26
General.....	A-26
Separating Pin and Socket Housings.....	A-26
Mating Pin and Socket Housings.....	A-26
Removing Socket Terminal.....	A-26
Installing Socket Terminal.....	A-26

A.14 PACKARD METRI-PACK TERMINALS

Metri-Pack Terminal Crimps.....	A-27
Matching Terminal To Crimper.....	A-27
Preparing Wire Lead.....	A-27
Crimping Wire Core.....	A-27
Crimping Insulation/Seal.....	A-27
Inspecting Crimps.....	A-28

A.15 PACKARD ECM CONNECTOR

Packard 100W Connector Repair.....	A-29
General.....	A-29
Separating Socket Housing From ECM.....	A-29
Mating Socket Housing To ECM.....	A-29
Removing Socket Terminal.....	A-29
Installing Socket Terminal.....	A-29
Crimping Terminals.....	A-29

A.16 PACKARD MICRO-64 CONNECTORS

Packard Micro-64 Connector Repair.....	A-31
General.....	A-31
Separating Pin and Socket Housings.....	A-31
Mating Pin and Socket Housings.....	A-31
Removing Terminal.....	A-31
Installing Terminal.....	A-32
Preparing Wire Leads for Crimping.....	A-32
Crimping Terminals.....	A-32
Inspecting Crimps.....	A-32

A.17 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-34
General.....	A-34
Preparing Wire Leads.....	A-34
Splicing Wire Leads.....	A-34
Inspecting Seals.....	A-34

APPENDIX B WIRING

B.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-3
Wire Color Codes.....	B-3
Wiring Diagram Symbols.....	B-3
2009 Dyna Wiring Diagrams.....	B-4



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

APPENDIX C CONVERSIONS

C.1 LENGTH CONVERSION

Conversion Table.....C-1

C.2 FLUID CONVERSION

United States System.....C-2

Metric System.....C-2

British Imperial System.....C-2

C.3 TORQUE CONVERSION

United States System.....C-3

Metric System.....C-3

APPENDIX D GLOSSARY

D.1 GLOSSARY

Acronyms and Abbreviations.....D-1

REFERENCE MATERIAL

TOOLS.....I

TORQUE VALUES.....VII

INDEX.....XV

NOTES

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>