



2010 Harley-Davidson Softail Models Service Manual

©2009 H-D.
ALL RIGHTS RESERVED
99482-10

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE
<http://www.harley-davidson.com>

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter..... 1-1

1.2 GENERAL

Servicing a New Motorcycle.....	1-4
Safe Operating Maintenance.....	1-4
Shop Practices.....	1-4
Repair Notes.....	1-4
Safety.....	1-4
Removing Parts.....	1-4
Cleaning.....	1-4
Disassembly and Assembly.....	1-5
Checking Torques on Fasteners.....	1-5
Magnetic Parts Trays.....	1-5
Repair and Replacement Procedures.....	1-5
Hardware and Threaded Parts.....	1-5
Threadlocking Agents.....	1-5
Wiring, Hoses and Lines.....	1-5
Instruments and Gauges.....	1-5
Bearings.....	1-5
Bushings.....	1-5
Gaskets.....	1-5
Lip-Type Seals.....	1-5
O-Rings (Pre-Formed Packings).....	1-5
Gears.....	1-6
Shafts.....	1-6
Part Replacement.....	1-6
Exhaust System Leakage.....	1-6
Cleaning.....	1-6
Part Protection.....	1-6
Cleaning Process.....	1-6
Rust or Corrosion Removal.....	1-6
Bearings.....	1-6
Tool Safety.....	1-6
Air Tools.....	1-6
Wrenches.....	1-6
Pliers/Cutters/Pry Bars.....	1-6
Hammers.....	1-6
Punches/Chisels.....	1-7
Screwdrivers.....	1-7
Ratchets and Handles.....	1-7
Sockets.....	1-7
Storage Units.....	1-7

1.3 FUEL AND OIL

Fuel.....	1-8
Gasoline Blends.....	1-8
Engine Lubrication.....	1-8
Winter Lubrication.....	1-9

1.4 BULB REQUIREMENTS

General..... 1-10

1.5 MAINTENANCE SCHEDULE

General..... 1-11

1.6 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-15
Type of Oil.....	1-15
Checking Oil Level.....	1-15
Changing Oil and Filter.....	1-15

1.7 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-17
Installation.....	1-18
Exhaust System Leak Check.....	1-19

1.8 TIRES AND WHEELS

Tires.....	1-20
Tire Replacement.....	1-21
Inspection.....	1-21
When To Replace Tires.....	1-21
Wheel Bearings.....	1-21
Wheel Spokes.....	1-21
Identify Wheel Spoke Groups.....	1-22
Wheel Spoke Adjustment.....	1-22

1.9 PRIMARY CHAINCASE LUBRICANT

General.....	1-23
Changing Primary Chaincase Lubricant.....	1-23

1.10 TRANSMISSION LUBRICANT

Changing Transmission Lubricant..... 1-25

1.11 CLUTCH

Adjustment..... 1-27

1.12 DRIVE BELT AND SPROCKETS

General.....	1-29
Cleaning.....	1-29
Inspection.....	1-29
Sprockets.....	1-29
Drive Belt.....	1-29
Checking Belt Deflection.....	1-30
Adjusting Belt Deflection.....	1-31

1.13 THROTTLE CABLES

Cable Inspection, Lubrication and Adjustment.....	1-33
Inspection and Lubrication.....	1-33
Adjustment.....	1-33

1.14 CABLE AND CHASSIS LUBRICATION

General.....	1-34
Cables and Hand Levers.....	1-34
Jiffy Stand.....	1-34
Steering Head Bearings.....	1-34

1.15 BRAKES

Fluid Inspection.....	1-35
Rear Brake Pedal.....	1-35
Pedal Height.....	1-35
Pedal Lubrication.....	1-35
Pedal Pad.....	1-35

1.16 BLEEDING BRAKES

General.....	1-37
Procedure.....	1-37

1.17 BRAKE PADS AND DISCS

Inspection.....	1-38
Brake Pads.....	1-38
Brake Disc.....	1-38
Brake Pad Replacement.....	1-38
Rear Brake Caliper.....	1-38
Front Brake Caliper.....	1-40

TABLE OF CONTENTS

1.18 SPARK PLUGS

Inspection.....	1-42
Spark Plug Cable Inspection.....	1-42

1.19 SUSPENSION ADJUSTMENTS

Shock Absorbers.....	1-44
Adjustment.....	1-44

1.20 STEERING HEAD BEARINGS: ALL BUT FLSTSB

Adjustment: FLST, FLSTC, FLSTF/B, FLSTN.....	1-45
Bearing Adjustment (Fall-away).....	1-45
Adjustment: FXST, FXSTC, FXCWC.....	1-45
Bearing Adjustment (Fall-away).....	1-45
Lubrication.....	1-47

1.21 STEERING HEAD BEARINGS: FLSTSB

General.....	1-48
Lubrication.....	1-48
Adjustment: FLSTSB.....	1-48
Bearing Adjustment (Fall-away).....	1-48

1.22 ROCKER BEARINGS: FLSTSB

Inspection.....	1-50
-----------------	------

1.23 HEADLAMP ALIGNMENT

Headlamp Alignment.....	1-52
Headlamp Adjustment.....	1-52

1.24 CRITICAL FASTENERS

Inspection.....	1-54
Checking Torques on Fasteners.....	1-54

1.25 BATTERY MAINTENANCE

General.....	1-55
Cleaning and Inspection.....	1-56
Voltmeter Test.....	1-56
Voltmeter Test.....	1-56
Charging Battery.....	1-56
Safety Precautions.....	1-56
Using a Battery Charger.....	1-56
Disconnection and Removal.....	1-57
Storage.....	1-58
Installation and Connection.....	1-59

1.26 ENGINE MOUNTS

Inspection.....	1-61
-----------------	------

1.27 STORAGE

General.....	1-62
Placing in Storage.....	1-62
Removal from Storage.....	1-62

1.28 TROUBLESHOOTING

General.....	1-64
Engine.....	1-64
Starter Motor Does Not Operate or Does Not Turn Engine Over	1-64
Engine Turns Over But Does Not Start	1-64
Starts Hard.....	1-64

Starts But Runs Irregularly or Misses	1-64
A Spark Plug Fouls Repeatedly.....	1-65
Pre-Ignition or Detonation (Knocks or Pings).....	1-65
Overheating.....	1-65
Valve Train Noise.....	1-65
Excessive Vibration.....	1-65
Check Engine Light Illuminates During Operation.....	1-65
Lubrication System.....	1-65
Oil Does Not Return To Oil Tank.....	1-65
Engine Uses Too Much Oil Or Smokes Excessively...1-65	
Engine Leaks Oil From Cases, Push Rods, Hoses, Etc.....	1-65
Low Oil Pressure.....	1-66
High Oil Pressure.....	1-66
Electrical System.....	1-66
Alternator Does Not Charge.....	1-66
Alternator Charge Rate Is Below Normal.....	1-66
Speedometer Operates Erratically.....	1-66
Transmission.....	1-66
Shifts Hard.....	1-66
Jumps Out Of Gear.....	1-66
Clutch Slips.....	1-66
Clutch Drags Or Does Not Release.....	1-66
Clutch Chatters.....	1-66
Handling.....	1-66
Irregularities.....	1-66
Brakes.....	1-66
Brake Does Not Hold Normally.....	1-66

CHASSIS

2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	2-1
---	-----

2.2 SPECIFICATIONS

Specifications.....	2-5
Chassis Specifications.....	2-5
Tire Specifications.....	2-6

2.3 VEHICLE IDENTIFICATION NUMBER (V.I.N.)

Vehicle Identification Number.....	2-8
------------------------------------	-----

2.4 FRONT WHEEL: ALL BUT FLSTSB

Removal.....	2-10
Disassembly.....	2-10
Disc Wheel.....	2-10
Laced Wheel.....	2-10
Cleaning and Inspection.....	2-12
Assembly.....	2-12
Disc Wheel.....	2-12
Laced Wheel.....	2-12
Installation.....	2-13

2.5 FRONT WHEEL: FLSTSB

Removal.....	2-14
Disassembly.....	2-14
Cleaning and Inspection.....	2-14
Assembly.....	2-14
Installation.....	2-15

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

2.6 REAR WHEEL

Removal.....2-16
 Disassembly.....2-16
 Cleaning and Inspection.....2-17
 Assembly.....2-17
 Installation.....2-18

2.7 SEALED WHEEL BEARINGS

Inspection.....2-19
 Removal.....2-19
 Installation.....2-20

2.8 WHEEL LACING

Wheel Lacing: Angle Flange Hub.....2-22

2.9 TRUING LACED WHEELS

General.....2-24
 Setting Rim Offset.....2-24
 Truing Wheels.....2-25
 Radial Truing.....2-25
 Lateral Truing.....2-26

2.10 CHECKING CAST WHEEL RUNOUT

General.....2-28
 Checking Wheel Runout.....2-28
 Lateral Runout.....2-28
 Radial Runout.....2-28
 Radial Runout.....2-28

2.11 VEHICLE ALIGNMENT

Inspection.....2-30

2.12 FRONT BRAKE MASTER CYLINDER

General.....2-31
 Removal and Disassembly.....2-31
 Cleaning and Inspection.....2-33
 Assembly and Installation.....2-33

2.13 FRONT BRAKE CALIPER: ALL BUT FLSTSB

Removal.....2-35
 Disassembly.....2-35
 Cleaning, Inspection and Repair.....2-37
 Assembly.....2-38
 Installation.....2-38

2.14 FRONT BRAKE CALIPER: FLSTSB

Removal.....2-40
 Disassembly.....2-41
 Cleaning and Inspection.....2-42
 Assembly.....2-43
 Installation.....2-44

2.15 REAR BRAKE MASTER CYLINDER

General.....2-46
 Removal.....2-46
 Installation.....2-46
 Disassembly.....2-48
 Cleaning and Inspection.....2-49
 Assembly.....2-49

2.16 REAR BRAKE CALIPER

Removal.....2-51
 Disassembly.....2-51
 Cleaning, Inspection and Repair.....2-53
 Assembly.....2-54
 Installation.....2-54

2.17 TIRES

General.....2-56
 Removal.....2-56
 Cleaning, Inspection and Repair.....2-57
 Installation.....2-57
 Tube Type Tires.....2-57
 Tubeless Tires.....2-57
 Checking Tire Runout.....2-58
 Lateral Runout.....2-58
 Radial Runout.....2-58
 Wheel Balancing.....2-59
 Weights.....2-59

2.18 FRONT FORK: TELESCOPIC

General.....2-60
 Replacing Fork Oil.....2-60
 Removal.....2-61
 Disassembly.....2-61
 Cleaning and Inspection.....2-61
 Assembly.....2-65
 Installation.....2-65

2.19 FRONT FORK: SPRINGER

General.....2-66
 Front Shock Absorber.....2-66
 Removal.....2-66
 Installation.....2-66
 Rigid Fork.....2-66
 Removal.....2-66
 Installation.....2-67
 Spring Fork.....2-67
 Disassembly.....2-67
 Assembly.....2-69
 Fork Rockers.....2-71
 Removal.....2-71
 Installation.....2-71
 Fork Stem Bearings.....2-72
 Removal and Installation.....2-72

2.20 STEERING HEAD

Removal.....2-73
 FLST, FLSTC, FLSTF/B, FLSTN Models.....2-73
 FXST, FXSTC Models.....2-73
 FXCWC Models.....2-73
 FLSTSB Models.....2-74
 Inspection.....2-74
 All Models.....2-74
 Disassembly.....2-74
 Removing Lower Bearings From Fork Stem.....2-74
 Steering Head Bearing Race Removal.....2-75
 Assembly.....2-75
 Installation.....2-76
 FLST, FLSTC, FLSTF/B, FLSTN Models.....2-76
 FXST, FXSTC Models.....2-76

TABLE OF CONTENTS

FXCWC Models.....	2-76	2.32 REAR FENDER: FLST/FLSTC	
FLSTSB Models.....	2-76	Removal.....	2-102
2.21 BELT GUARD AND DEBRIS DEFLECTOR		Installation.....	2-102
Removal.....	2-77	2.33 REAR FENDER: FLSTF/B	
Belt Guard.....	2-77	Removal.....	2-104
Debris Deflector.....	2-77	Installation.....	2-104
Installation.....	2-77	2.34 REAR FENDER: FXST/FXSTC/FLSTSB	
Belt Guard.....	2-77	Removal.....	2-106
Debris Deflector.....	2-77	Installation.....	2-106
2.22 REAR SHOCK ABSORBERS		2.35 REAR FENDER: FXCWC	
General.....	2-78	Removal.....	2-108
Removal.....	2-78	Installation.....	2-108
Installation.....	2-78	2.36 REAR FENDER: FLSTN	
Shock Disposal.....	2-79	Removal.....	2-110
2.23 REAR FORK		Disassembly.....	2-110
Removal.....	2-81	Assembly.....	2-112
Cleaning and Inspection.....	2-82	Installation.....	2-112
Pivot Bearing Replacement.....	2-82	2.37 REAR FENDER WIRE CONDUIT	
Installation.....	2-83	Installation.....	2-113
2.24 THROTTLE CONTROL		2.38 JIFFY STAND	
Removal/Disassembly.....	2-84	Cleaning.....	2-115
Cleaning and Inspection.....	2-84	Sensor (HDI Models).....	2-115
Assembly/Installation.....	2-84	Removal.....	2-116
Cable Routing.....	2-85	Installation.....	2-116
2.25 CLUTCH CONTROL		2.39 FORK LOCK	
Removal.....	2-86	Removal.....	2-117
Installation.....	2-86	Installation.....	2-117
2.26 HANDLEBARS: ALL BUT FLSTF/FLSTFB/FLSTSB/FXCWC		2.40 SEAT AND STRAP RETENTION NUT	
Removal.....	2-88	Replacement.....	2-118
Installation.....	2-89	2.41 SEAT: FXST	
2.27 HANDLEBARS: FLSTF/B		Removal and Installation.....	2-119
Removal.....	2-90	Seat Strap.....	2-119
Installation.....	2-91	Seat.....	2-119
2.28 HANDLEBARS: FLSTSB		2.42 SEAT: FXSTC	
Removal.....	2-93	Removal and Installation.....	2-120
Installation.....	2-93	Seat Strap.....	2-120
2.29 HANDLEBARS: FXCWC		Seat.....	2-120
Removal.....	2-95	2.43 SEAT: FXCWC	
Installation.....	2-96	Removal and Installation.....	2-121
2.30 FRONT FENDER: ALL BUT FLSTSB		Rider Seat.....	2-121
Removal.....	2-99	Passenger Seat Support.....	2-121
Installation.....	2-99	2.44 SEAT: FLSTN/FLSTF/FLSTFB/FLST/FLSTC	
2.31 FRONT FENDER: FLSTSB		Removal and Installation.....	2-122
Removal.....	2-100	2.45 SEAT: FLSTSB	
Installation.....	2-101	Seat: FLSTSB.....	2-123

Removal.....	2-123	Engine Removed from Chassis.....	3-21
Installation.....	2-123	3.11 BOTTOM END SERVICE	
Adjusting Seat Position.....	2-123	Engine in Chassis.....	3-22
2.46 LUGGAGE RACK: FLSTN		Engine Removed From Chassis.....	3-23
Removal and Installation.....	2-125	3.12 STRIPPING MOTORCYCLE FOR SERVICE	
2.47 SADDLEBAGS: FLSTC		Procedure.....	3-24
Removal.....	2-126	3.13 ASSEMBLING MOTORCYCLE AFTER SERVICE	
Installation.....	2-126	Procedure.....	3-25
2.48 WINDSHIELD: FLSTC		3.14 REMOVING ENGINE FROM CHASSIS	
Removal.....	2-127	Procedure.....	3-26
Installation.....	2-127	3.15 INSTALLING ENGINE IN CHASSIS	
ENGINE		Procedure.....	3-27
3.1 FASTENER TORQUE VALUES		3.16 TOP END OVERHAUL: DISASSEMBLY	
Fastener Torque Values in this Chapter.....	3-1	General.....	3-29
3.2 SPECIFICATIONS		Rocker Covers.....	3-29
Specifications.....	3-3	Rocker Arm Support Plate.....	3-29
3.3 SERVICE WEAR LIMITS		Push Rods, Lifters and Covers.....	3-31
General.....	3-5	Cylinder Head.....	3-32
3.4 ENGINE OIL FLOW		Cylinder.....	3-33
Oil Feed.....	3-7	Piston.....	3-33
Top End.....	3-8	3.17 TOP END OVERHAUL: ASSEMBLY	
Bottom End.....	3-9	General.....	3-35
Chain Guide Bracket.....	3-11	Piston.....	3-35
Oil Return.....	3-12	Cylinder.....	3-36
3.5 OIL PUMP OPERATION		Cylinder Head.....	3-38
General.....	3-13	Push Rods, Lifters and Covers.....	3-41
Operation.....	3-13	Rocker Arm Support Plate.....	3-42
3.6 BREATHER OPERATION		Breather Assembly.....	3-43
General.....	3-15	3.18 BOTTOM END OVERHAUL: DISASSEMBLY	
3.7 OIL PRESSURE		General.....	3-45
Oil Pressure Indicator Lamp.....	3-16	Cam Support Plate and Cover.....	3-45
Checking Oil Pressure.....	3-16	Prepare Engine.....	3-45
3.8 TROUBLESHOOTING		Cam Chain and Sprockets.....	3-45
Diagnosing Valve Train Noise.....	3-17	Cam Support Plate.....	3-46
Compression Test.....	3-17	Crankcase.....	3-47
Cylinder Leakdown Test.....	3-17	Counterbalancer Assembly.....	3-48
Diagnosing Smoking Engine or High Oil Consumption.....	3-18	3.19 BOTTOM END OVERHAUL: ASSEMBLY	
Check Prior To Cylinder Head Removal.....	3-18	General.....	3-51
Check After Cylinder Head Removal.....	3-18	Counterbalancer Assembly.....	3-51
3.9 HOW TO USE THIS SECTION		Crankcase.....	3-54
Top End Repair.....	3-19	Cam Support Plate and Cover.....	3-58
Bottom End Repair.....	3-19	3.20 BREATHER ASSEMBLY	
Typical Symptoms.....	3-19	Removal Overview.....	3-62
3.10 TOP END SERVICE		Disassembly.....	3-62
Engine in Chassis.....	3-20	Cleaning and Inspection.....	3-62
		Assembly.....	3-62
		Installation Overview.....	3-62

TABLE OF CONTENTS

3.21 ROCKER ARM SUPPORT PLATE

Removal Overview.....	3-63
Disassembly.....	3-63
Cleaning and Inspection.....	3-63
Inspection.....	3-63
Rocker Shaft Fit.....	3-63
Rocker Arm Shaft to Bushing.....	3-64
Replace Rocker Arm Bushings.....	3-64
Assembly.....	3-65
Installation Overview.....	3-65

3.22 PUSH RODS, LIFTERS AND COVERS

Removal Overview.....	3-66
Disassembly.....	3-66
Cleaning and Inspection.....	3-66
Lifter Inspection.....	3-67
Assembly.....	3-67
Installation Overview.....	3-67

3.23 CYLINDER HEAD

Removal Overview.....	3-68
Disassembly.....	3-68
Cleaning.....	3-69
Inspection.....	3-70
Cylinder Head.....	3-70
Valve Guides.....	3-70
Valves.....	3-70
Valve Springs.....	3-70
Tapered Keepers.....	3-71
Valve Seats.....	3-71
Valve Guide Replacement.....	3-71
Removal.....	3-71
Installation.....	3-72
Valve and Seat Refacing.....	3-75
Assembly.....	3-77
Installation Overview.....	3-78

3.24 CYLINDER

Removal Overview.....	3-79
Cleaning.....	3-79
Inspection.....	3-79
Deglazing Cylinder.....	3-81
Boring and Honing Cylinder.....	3-82
Installation Overview.....	3-82

3.25 PISTON

Removal Overview.....	3-84
Disassembly.....	3-84
Piston Rings.....	3-84
Cleaning.....	3-84
Inspection.....	3-85
Assembly.....	3-86
Checking Piston Ring Gap.....	3-86
Installing Piston Rings.....	3-87
Installation Overview.....	3-88

3.26 CAM SUPPORT PLATE AND COVER

Removal Overview.....	3-89
Camshafts.....	3-89
Removal.....	3-89
Assembly.....	3-89

Oil Pressure Relief Valve.....	3-91
Removal.....	3-91
Installation.....	3-91
Inspection.....	3-91
Cam Needle Bearings.....	3-91
Removal.....	3-91
Installation.....	3-93
Cleaning and Inspection.....	3-94
Oil Pressure Valve.....	3-94
Cam Support Plate.....	3-94
Installation Overview.....	3-94

3.27 OIL PUMP

Removal Overview.....	3-95
Cleaning and Inspection.....	3-95
Installation Overview.....	3-95

3.28 CRANKCASE

Removal Overview.....	3-96
Right Crankcase Half.....	3-96
Chain Guide Screen.....	3-96
Crankshaft (Roller) Bearing Removal.....	3-96
Crankshaft (Roller) Bearing Installation.....	3-97
Piston Jets Removal.....	3-97
Piston Jets Installation.....	3-97
Left Crankcase Half.....	3-98
Main Bearing Removal.....	3-98
Main Bearing Installation.....	3-99
Sprocket Shaft Bearing Inner Race.....	3-100
Removal.....	3-100
Installation.....	3-101
Cylinder Studs.....	3-102
Removal.....	3-102
Installation.....	3-102
Pipe Plugs and Oil Fittings.....	3-102
Removal/Installation.....	3-102
Cleaning and Inspection.....	3-103
Installation Overview.....	3-103

3.29 FLYWHEEL AND CONNECTING RODS

Removal Overview.....	3-104
Inspection.....	3-104
Installation Overview.....	3-104

3.30 COUNTERBALANCER ASSEMBLY

Removal Overview.....	3-105
Cleaning, Inspection, and Repair.....	3-105
General.....	3-105
Balance Shaft Removal.....	3-105
Balance Shaft Installation.....	3-106
Balance Shaft Support Bearings Removal.....	3-106
Balance Shaft Support Bearings Installation.....	3-106
Front and Rear Balance Sprockets.....	3-107
Hydraulic Tensioners.....	3-107
Chain Tensioner Guides.....	3-108
Chain Guide Bracket.....	3-108
Balance Chain.....	3-108
Installation Overview.....	3-108

3.31 OIL TANK: ALL BUT FXCWC

Removal and Disassembly.....	3-109
Oil Tank.....	3-109

Oil Line Fittings/Retainers.....	3-111	Installation.....	4-20
Installation.....	3-112		
3.32 OIL TANK: FXCWC		4.12 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)	
Removal and Disassembly.....	3-113	General.....	4-21
Oil Tank.....	3-113	Removal.....	4-21
Oil Line Fittings/Retainers.....	3-115	Installation.....	4-21
Installation.....	3-116		
FUEL SYSTEM		4.13 OXYGEN SENSOR	
4.1 FASTENER TORQUE VALUES		General.....	4-22
Fastener Torque Values in this Chapter.....	4-1	Removal.....	4-22
4.2 SPECIFICATIONS: FUEL SYSTEM		Installation.....	4-22
Specifications.....	4-3		
4.3 ELECTRONIC FUEL INJECTION (EFI)		4.14 FUEL INJECTORS	
Troubleshooting.....	4-4	General.....	4-24
4.4 IDLE SPEED		Removal.....	4-24
General.....	4-5	Installation.....	4-24
4.5 AIR CLEANER ASSEMBLY		4.15 FUEL PUMP AND FUEL GAUGE SENDING UNIT	
Removal.....	4-6	General.....	4-26
Installation.....	4-6	Removal.....	4-26
Backplate Assembly: HDI Models.....	4-7	Disassembly/Assembly.....	4-28
4.6 FUEL TANK		Fuel Filter.....	4-28
General.....	4-8	Regulator.....	4-28
Removal.....	4-8	Inlet sock.....	4-29
Cleaning and Inspection.....	4-12	Fuel Pump.....	4-30
Installation.....	4-12	Installation.....	4-30
All But FXCWC.....	4-12		
FXCWC.....	4-12	4.16 FUEL PRESSURE TEST	
4.7 THROTTLE POSITION SENSOR (TPS)		General.....	4-32
General.....	4-14	Testing.....	4-32
Removal.....	4-14		
Installation.....	4-14	4.17 EXHAUST SYSTEM: ALL BUT FLSTF/FLSTFB/FLSTN/FLSTSB	
4.8 INTAKE AIR TEMPERATURE SENSOR (IAT)		Mufflers.....	4-35
General.....	4-15	Removal.....	4-35
Removal.....	4-15	Assembly.....	4-35
Installation.....	4-15	System.....	4-35
4.9 ENGINE TEMPERATURE SENSOR (ET)		Removal.....	4-35
General.....	4-16	Installation.....	4-35
Removal.....	4-16		
Installation.....	4-16	4.18 EXHAUST SYSTEM: FLSTF/FLSTFB/FLSTN/FLSTSB	
4.10 INDUCTION MODULE		Mufflers.....	4-37
Removal.....	4-18	Removal.....	4-37
Installation.....	4-19	Assembly.....	4-37
4.11 IDLE AIR CONTROL (IAC)		System.....	4-37
General.....	4-20	Removal.....	4-37
Removal.....	4-20	Installation.....	4-37
		4.19 INTAKE LEAK TEST	
		General.....	4-39
		Leak Tester.....	4-39
		Parts List.....	4-39
		Tester Assembly.....	4-39
		Tester Adjustment.....	4-39
		Procedure.....	4-39

TABLE OF CONTENTS

4.20 EVAPORATIVE EMISSIONS CONTROL (CA MODELS)

General.....	4-41
Charcoal Canister.....	4-41
Removal.....	4-41
Installation.....	4-42
Hose Routing/Replacement.....	4-42

DRIVE

5.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	5-1
---	-----

5.2 SPECIFICATIONS: DRIVE

Specifications.....	5-2
---------------------	-----

5.3 PRIMARY CHAINCASE COVER

General.....	5-3
Removal.....	5-3
Installation.....	5-3

5.4 DRIVE COMPONENTS

Removal.....	5-4
Installation.....	5-6

5.5 PRIMARY CHAINCASE HOUSING

Removal.....	5-10
Inspection.....	5-10
Mainshaft Bearing and Lip Seal.....	5-10
Removal.....	5-10
Installation.....	5-10
Mainshaft Bearing Inner Race.....	5-11
Removal.....	5-11
Installation.....	5-11
Installation.....	5-12

5.6 CLUTCH

Removal and Installation.....	5-14
Clutch Pack Only.....	5-14
Partial Disassembly.....	5-14
Cleaning And Inspection.....	5-14
Assembly.....	5-15
Clutch Pack and Bearing.....	5-16
Complete Disassembly.....	5-16
Assembly.....	5-17

5.7 TRANSMISSION SPROCKET

Removal.....	5-19
Cleaning and Inspection.....	5-20
Installation.....	5-20

5.8 DRIVE BELT

Removal.....	5-22
Inspection.....	5-22
Installation.....	5-22

TRANSMISSION

6.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	6-1
---	-----

6.2 SPECIFICATIONS: TRANSMISSION

Specifications.....	6-2
Service Wear Limits.....	6-2

6.3 TRANSMISSION

Power Flow.....	6-3
Neutral.....	6-3
1st Gear.....	6-3
2nd Gear.....	6-3
3rd Gear.....	6-3
4th Gear.....	6-3
5th Gear.....	6-3
6th Gear.....	6-3

6.4 SHIFTER LINKAGE

Adjustment.....	6-5
Shifter Rod.....	6-5

6.5 CLUTCH RELEASE COVER

Removal and Disassembly.....	6-6
Cleaning and Inspection.....	6-6
Assembly and Installation.....	6-7

6.6 TRANSMISSION ASSEMBLY

Removal.....	6-8
Disassembly.....	6-9
Shifter Cam/Shifter Forks.....	6-9
Mainshaft.....	6-11
Countershaft.....	6-14
Replacing Side Door Bearings.....	6-15
Cleaning and Inspection.....	6-16
Assembly.....	6-16
Installing Side Door Bearings.....	6-16
Countershaft.....	6-16
Mainshaft.....	6-17
Shifter Cam/Shifter Forks.....	6-17
Installation.....	6-19

6.7 MAIN DRIVE GEAR AND BEARING

Removal.....	6-21
Cleaning and Inspection.....	6-22
Needle Bearing Replacement.....	6-23
Installation.....	6-24
Installing Main Drive Gear Bearing.....	6-24
Installing Main Drive Gear.....	6-25
Installing Main Drive Gear Large Seal.....	6-25

6.8 TRANSMISSION CASE

Removal.....	6-28
Installation.....	6-28
Disassembly.....	6-29
Shifter Arm Assembly.....	6-29
Cleaning and Inspection.....	6-29
Assembly.....	6-30
Countershaft Needle Bearing Replacement.....	6-30

Shifter Pawl Lever Assembly.....6-30

ELECTRICAL

7.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....7-1

7.2 SPECIFICATIONS: ELECTRICAL

Specifications.....7-4

7.3 ELECTRICAL PANEL

General.....7-5
 Removal: All But FXCWC.....7-5
 Installation: All But FXCWC.....7-5
 Removal: FXCWC.....7-5
 Installation: FXCWC.....7-6

7.4 ELECTRONIC CONTROL MODULE (ECM)

General.....7-7
 Removal: All But FXCWC.....7-7
 Installation: All But FXCWC.....7-7
 Removal: FXCWC.....7-8
 Installation: FXCWC.....7-8

7.5 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)

General.....7-9
 TSM/HFSM/TSSM Configuration.....7-9
 Removal.....7-9
 Installation.....7-9

7.6 VOLTAGE REGULATOR

General.....7-10

7.7 FRONT ELECTRICAL CADDY

General.....7-11
 Disassembly.....7-11
 Assembly.....7-11

7.8 FUSES

General.....7-12
 Removal.....7-12
 Installation.....7-12

7.9 RELAYS

General.....7-13
 Removal.....7-13
 Installation.....7-13

7.10 MAIN FUSE

Removal.....7-14
 Installation.....7-14

7.11 IGNITION AND LIGHT SWITCH

General.....7-15
 Removal and Installation: All But FXCWC.....7-15
 Removal and Installation: FXCWC.....7-16

7.12 BATTERY CABLES

Routing Procedure.....7-17

7.13 STARTER

General.....7-19
 Wiring Diagrams.....7-19
 Paint Touch-Up.....7-19
 Removal.....7-19
 Field Coil Assembly.....7-19
 Disassembly.....7-19
 Inspection.....7-19
 Assembly.....7-20
 Drive Assembly.....7-21
 Disassembly.....7-21
 Inspection.....7-21
 Assembly.....7-21
 Installation.....7-22

7.14 STARTER SOLENOID

Solenoid Assembly.....7-23
 Disassembly.....7-23
 Assembly.....7-23
 Solenoid Plunger.....7-23
 Disassembly.....7-23
 Assembly.....7-23
 Solenoid Contacts.....7-23
 Disassembly.....7-23
 Assembly.....7-24

7.15 HEADLAMP

General.....7-26
 Removal and Installation.....7-26
 FXSTC Models.....7-26
 FXCWC Models.....7-26
 FXST and FLSTSB Models.....7-26
 FLST, FLSTC, FLSTF/B, and FLSTN Models.....7-26

7.16 TAIL LAMP: ALL BUT FLSTN

General.....7-30
 Bulb Replacement.....7-30
 Base Replacement.....7-30

7.17 TAIL LAMP: FLSTN

Bulb Replacement.....7-32
 Tail Lamp Replacement.....7-32

7.18 AUXILIARY LAMPS: FLST/FLSTC/FLSTN

Auxiliary Lamp Bulb.....7-34
 Removal.....7-34
 Installation.....7-34
 FLST and FLSTC Models.....7-34
 Auxiliary Lamp Bracket Removal.....7-34
 Auxiliary Lamp Bracket Installation.....7-35
 Auxiliary Lamp Housing Removal.....7-35
 Auxiliary Lamp Housing Installation.....7-35
 FLSTN Models.....7-37
 Auxiliary Lamp Bracket Removal.....7-37
 Auxiliary Lamp Bracket Installation.....7-37
 Auxiliary Lamp Housing Removal.....7-38

TABLE OF CONTENTS

Auxiliary Lamp Housing Installation.....	7-38
Adjustment: FLST/FLSTC/FLSTN Models.....	7-39

7.19 TURN SIGNALS AND RUNNING LIGHTS

Bulb Replacement: Bullet Style.....	7-41
Bulb Replacement: Flat Lens Style.....	7-41
Lamp Replacement.....	7-41
All Models.....	7-41
Front Turn Signals: All But FLST, FLSTC, FLSTN.....	7-42
Front Turn Signals: FLST, FLSTC, FLSTN.....	7-42
Rear Turn Signals: All But FXCWC, FLSTN.....	7-42
Rear Turn Signals: FXCWC.....	7-43
Rear Turn Signals: FLSTN.....	7-44

7.20 CRANK POSITION SENSOR (CKP)

General.....	7-46
Removal.....	7-46
Installation.....	7-46

7.21 IGNITION COIL

Removal.....	7-47
All Except FXCWC.....	7-47
FXCWC Only.....	7-47
Installation.....	7-47
All Except FXCWC.....	7-47
FXCWC Only.....	7-47

7.22 SPARK PLUG CABLES

General.....	7-49
Removal.....	7-49
Installation.....	7-49

7.23 ALTERNATOR

Removal.....	7-50
Cleaning and Inspection.....	7-50
Installation.....	7-50

7.24 FUEL GAUGE

General.....	7-52
Removal.....	7-52
Installation.....	7-52

7.25 INSTRUMENT CONSOLE: FXCWC

Removal.....	7-54
Installation.....	7-54

7.26 SPEEDOMETER: ALL BUT FXCWC

Removal.....	7-55
Installation.....	7-55

7.27 SPEEDOMETER: FXCWC

Removal.....	7-56
Installation.....	7-56

7.28 VEHICLE SPEED SENSOR (VSS)

General.....	7-57
Removal.....	7-57
Installation.....	7-57

7.29 INDICATOR LAMPS: ALL BUT FXCWC

General.....	7-58
Removal.....	7-58
Installation.....	7-58

7.30 INDICATOR LAMPS: FXCWC

Removal.....	7-60
Installation.....	7-60

7.31 NEUTRAL SWITCH

General.....	7-61
Removal.....	7-61
Installation.....	7-61

7.32 OIL PRESSURE SWITCH

General.....	7-62
Removal.....	7-62
Installation.....	7-62

7.33 REAR STOPLIGHT SWITCH

General.....	7-63
Removal.....	7-63
Installation.....	7-63

7.34 HORN

Inspection.....	7-64
Removal and Installation: All But FXCWC.....	7-64
Removal and Installation: FXCWC.....	7-65

7.35 ACTIVE EXHAUST

General.....	7-66
Removal.....	7-66
Repair.....	7-66
Installation.....	7-66

7.36 MAIN WIRING HARNESS

Removal.....	7-67
Installation.....	7-68

7.37 HANDLEBAR SWITCH ASSEMBLIES

General.....	7-70
Repair Procedures.....	7-70

7.38 RIGHT HANDLEBAR SWITCH

Removal.....	7-71
Installation.....	7-71
Switch Repair/Replacement.....	7-73
Switch and Lead Replacement.....	7-73
Switch Only Replacement: Upper Housing.....	7-73
Switch Only Replacement: Lower Housing.....	7-74
Turn-Right Signal Switch Only.....	7-74
Front Stoplight Switch Only.....	7-74
Assembly.....	7-75

7.39 LEFT HANDLEBAR SWITCH

Removal.....	7-77
Installation.....	7-77
Switch Repair/Replacement.....	7-78
Switch and Lead Replacement.....	7-78
Switch Only Replacement: Upper Housing.....	7-78



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

Switch Only Replacement: Lower Housing.....7-79
 Turn-Left Signal Switch Only.....7-79
 Clutch Interlock Switch Only.....7-79
 Assembly.....7-79

7.40 HFSM MAINTENANCE

General.....7-81
 FOB Battery.....7-81
 Schedule.....7-81
 Battery Replacement.....7-81
 Smart Siren (If Installed).....7-81
 Schedule.....7-81
 Battery Replacement: Early Style Siren.....7-81
 Battery Replacement: Late Style Siren.....7-82

7.41 PERSONAL IDENTIFICATION NUMBER (PIN)

General.....7-83
 Initial Pin Entry.....7-83
 Changing the Pin.....7-83
 Modifying an Existing Pin.....7-83

7.42 H-DSSS ACTUATION

General.....7-85
 Sidecar Configuration.....7-85
 Actuation.....7-85
 Fob Assignment.....7-85
 Power Disruption and Configuring.....7-85

7.43 TSM/HFSM: PASSWORD LEARN

General.....7-86
 Password Learning.....7-86

APPENDIX A CONNECTOR REPAIR

A.1 AMP MULTILOCK CONNECTORS

AMP Multilock Connector Repair.....A-1
 General.....A-1
 Separating Pin and Socket Housings.....A-1
 Mating Pin and Socket Housings.....A-1
 Removing Terminals from Housing.....A-1
 Inserting Terminals into Housing.....A-2
 Preparing Wire Leads for Crimping.....A-2
 Crimping Terminals to Leads.....A-3
 Inspecting Crimped Terminals.....A-4

A.2 AUTOFUSE ELECTRICAL CONNECTORS

Autofuse Connector Repair.....A-5
 General.....A-5
 Disassembly.....A-5
 Assembly.....A-5

A.3 DELPHI CONNECTORS

Delphi Connector Repair.....A-6
 General.....A-6
 Separating Pin and Socket Housings.....A-6
 Mating Pin and Socket Housings.....A-6
 Removing Socket Terminals.....A-6
 Installing Socket Terminals.....A-6

A.4 DELPHI MAIN FUSE HOUSING

Delphi Main Fuse Housing Repair.....A-8
 General.....A-8
 Removing Main Fuse.....A-8
 Installing Main Fuse.....A-8
 Removing Socket Terminals.....A-8
 Installing Socket Terminals.....A-8

A.5 DEUTSCH ELECTRICAL CONNECTORS

Deutsch Connector Repair.....A-10
 General.....A-10
 Separating Pin and Socket Housings.....A-10
 Mating Pin and Socket Housings.....A-10
 Removing Socket Terminals.....A-10
 Installing Socket Terminals.....A-10
 Removing Pin Terminals.....A-12
 Installing Pin Terminals.....A-12
 Crimping Terminals.....A-13

A.6 DEUTSCH STANDARD TERMINAL REPAIR

Deutsch Standard Terminal Crimps.....A-14
 Preparing Wire Leads for Crimping.....A-14
 Crimping Terminal to Lead.....A-14
 Inspecting Crimps.....A-14

A.7 DEUTSCH SOLID BARREL MINI TERMINAL REPAIR

Deutsch Solid Barrel Terminal Crimps.....A-15
 Preparing Wire Leads For Crimping.....A-15
 Adjusting Crimper Tool.....A-15
 Crimping a Barrel Contact To Wire Lead.....A-15
 Inspecting Crimps.....A-15

A.8 DEUTSCH MINI TERMINAL REPAIR

Deutsch Mini Terminal Crimps.....A-17
 Preparing Wire Leads for Crimping.....A-17
 Crimping a Mini Terminal to Wire Lead.....A-17
 Inspecting Crimps.....A-17

A.9 MOLEX CONNECTORS

Molex Connector Repair.....A-18
 Separating Pin and Socket Housings.....A-18
 Mating Pin and Socket Housings.....A-18
 Removing Terminals.....A-18
 Installing Terminals.....A-18
 Crimp Terminal to Lead.....A-19
 Prepare Lead.....A-19
 Prepare Tool.....A-19
 Position Terminal in the Punch/Die.....A-20
 Insert Stripped Lead.....A-20
 Crimp Terminal to Lead.....A-20
 Inspect Crimp.....A-21

A.10 PACKARD 150 METRI-PACK CONNECTORS

150 Metri-Pack Connector Repair.....A-22
 General.....A-22
 Separating Pin and Socket Housings.....A-22
 Mating Pin and Socket Housings.....A-22

TABLE OF CONTENTS

Removing Socket Terminal.....	A-22
Inserting Socket Terminal.....	A-22
A.11 PACKARD 480 METRI-PACK CONNECTORS	
480 Metri-Pack Connector Repair.....	A-24
General.....	A-24
Separating Pin and Socket Housings.....	A-24
Mating Pin and Socket Housings.....	A-24
Removing Socket Terminals.....	A-24
Installing Socket Terminals.....	A-24
A.12 PACKARD 630 METRI-PACK CONNECTORS	
630 Metri-Pack Connector Repair.....	A-25
General.....	A-25
Separating Pin and Socket Housings.....	A-25
Mating Pin and Socket Housings.....	A-25
Removing Socket Terminal.....	A-25
Installing Socket Terminal.....	A-25
A.13 PACKARD METRI-PACK TERMINALS	
Metri-Pack Terminal Crimps.....	A-26
Matching Terminal To Crimper.....	A-26
Preparing Wire Lead.....	A-26
Crimping Wire Core.....	A-26
Crimping Insulation/Seal.....	A-26
Inspecting Crimps.....	A-27
A.14 PACKARD ECM CONNECTOR	
Packard 100W Connector Repair.....	A-28
General.....	A-28
Separating Socket Housing From ECM.....	A-28
Mating Socket Housing To ECM.....	A-28
Removing Socket Terminal.....	A-28
Installing Socket Terminal.....	A-28
Crimping Terminals.....	A-28
A.15 PACKARD MICRO-64 CONNECTORS	
Packard Micro-64 Connector Repair.....	A-30
General.....	A-30
Separating Pin and Socket Housings.....	A-30
Mating Pin and Socket Housings.....	A-30
Removing Terminal.....	A-30
Installing Terminal.....	A-30
Preparing Wire Leads for Crimping.....	A-31
Crimping Terminals.....	A-31
Inspecting Crimps.....	A-31

A.16 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-33
General.....	A-33
Preparing Wire Leads.....	A-33
Splicing Wire Leads.....	A-33
Inspecting Seals.....	A-33

APPENDIX B WIRING

B.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-3
Wire Color Codes.....	B-3
Wiring Diagram Symbols.....	B-3
2010 Softail Wiring Diagrams.....	B-5

APPENDIX C CONVERSIONS

C.1 METRIC CONVERSION

Conversion Table.....	C-1
-----------------------	-----

C.2 FLUID CONVERSIONS

United States System.....	C-2
Metric System.....	C-2
British Imperial System.....	C-2

C.3 TORQUE CONVERSIONS

United States System.....	C-3
Metric System.....	C-3

APPENDIX D GLOSSARY

D.1 GLOSSARY

Acronyms and Abbreviations.....	D-1
---------------------------------	-----

REFERENCE MATERIAL

TOOLS.....	I
------------	---

TORQUE VALUES.....	VII
--------------------	-----

INDEX.....	XIX
------------	-----

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>