



2010 Harley-Davidson Touring Models Service Manual

©2009 H-D.
ALL RIGHTS RESERVED
99483-10

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE
<http://www.harley-davidson.com>



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-4
Checking Torques on Fasteners.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip-Type Seals.....	1-4
O-Rings (Pre-Formed Packings).....	1-4
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Exhaust System Leakage.....	1-5
Cleaning.....	1-5
Part Protection.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry Bars.....	1-5
Hammers.....	1-5
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

1.3 FUEL AND OIL

Fuel.....	1-7
Gasoline Blends.....	1-7
Engine Lubrication.....	1-7
Winter Lubrication.....	1-8

1.4 BULB REQUIREMENTS

General.....1-9

1.5 MAINTENANCE SCHEDULE

General.....1-11

1.6 ENGINE OIL AND FILTER

Checking Oil Level.....	1-15
Oil Level Cold Check.....	1-15
Oil Level Hot Check.....	1-15
Changing Oil and Oil Filter.....	1-15

1.7 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-17
Installation.....	1-17
Exhaust System Leak Check.....	1-17

1.8 TIRES AND WHEELS

General.....	1-19
Tires.....	1-19
Tire Replacement.....	1-20
Inspection.....	1-20
When To Replace Tires.....	1-20
Wheel Bearings.....	1-20
Wheel Spokes.....	1-21
Identify Wheel Spoke Groups.....	1-21
Wheel Spoke Adjustment.....	1-21

1.9 PRIMARY CHAINCASE LUBRICANT

General.....	1-23
Primary Chaincase Lubricant.....	1-23
General.....	1-23
Check Lubricant Level.....	1-23
Changing Chaincase Lubricant.....	1-23

1.10 TRANSMISSION LUBRICANT

Transmission Lubrication.....	1-25
General.....	1-25
Check Lubricant Level.....	1-25
Changing Transmission Fluid.....	1-25

1.11 CLUTCH

Adjustment.....1-27

1.12 DRIVE BELT AND SPROCKETS

General.....	1-29
Cleaning.....	1-29
Inspection.....	1-29
Sprockets.....	1-29
Drive Belt.....	1-29
Checking Drive Belt Deflection.....	1-30
Setting Belt Deflection.....	1-31
Adjustment.....	1-31
Assembly.....	1-33

1.13 CABLE AND CHASSIS LUBRICATION

General.....	1-34
Steering Head Bearings.....	1-34
Jiffy Stand.....	1-34
Miscellaneous Lubrication.....	1-34
Hinges, Latches, Etc.....	1-34

1.14 BRAKES

Fluid Inspection.....1-35

1.15 BLEEDING BRAKES

General.....	1-36
Procedure.....	1-36

1.16 BRAKE PADS AND DISCS

Inspection.....	1-38
Brake Pads.....	1-38
Brake Disc Thickness.....	1-38
Brake Disc Lateral Runout.....	1-38
Brake Pad Replacement.....	1-38
Rear Brake Caliper.....	1-38
Front Brake Calipers.....	1-40

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

TABLE OF CONTENTS

1.17 SPARK PLUGS

Inspection.....	1-42
Spark Plug Cable Inspection.....	1-42

1.18 FRONT FORK OIL

Replacing Fork Oil.....	1-44
-------------------------	------

1.19 SUSPENSION ADJUSTMENTS

General.....	1-45
--------------	------

1.20 STEERING HEAD BEARINGS

Lubrication.....	1-47
Checking.....	1-47
Adjustment.....	1-48

1.21 HEADLAMP ALIGNMENT

Headlamp Alignment.....	1-49
Headlamp Adjustment: Single Headlamp Models.....	1-49
Headlamp Adjustment: Dual Headlamp Models.....	1-50
Auxiliary Lamp Alignment.....	1-50

1.22 CRITICAL FASTENERS

Inspection.....	1-52
Checking Torques on Fasteners.....	1-52

1.23 BATTERY MAINTENANCE

General.....	1-53
Cleaning and Inspection.....	1-54
Battery.....	1-54
Disconnection and Removal.....	1-54
Installation and Connection.....	1-54
Voltmeter Test.....	1-55
Voltmeter Test.....	1-55
Charging Battery.....	1-55
Safety Precautions.....	1-55
Using a Battery Charger.....	1-55
Storage.....	1-56

1.24 ENGINE MOUNTS

Inspection.....	1-58
General.....	1-58
Stabilizer Link.....	1-58
Front Engine Mount.....	1-58
Rear Frame Fasteners.....	1-58

1.25 STORAGE

General.....	1-59
Placing in Storage.....	1-59
Removal from Storage.....	1-59

1.26 TROUBLESHOOTING

General.....	1-61
Engine.....	1-61
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-61
Engine Turns Over But Does Not Start.....	1-61
Starts Hard.....	1-61
Starts But Runs Irregularly or Misses.....	1-61
A Spark Plug Fouls Repeatedly.....	1-62
Pre-Ignition or Detonation (Knocks or Pings).....	1-62

Overheating.....	1-62
Valve Train Noise.....	1-62
Excessive Vibration.....	1-62
Check Engine Light Illuminates During Operation.....	1-62
Lubrication System.....	1-62
Oil Does Not Return To Oil Reservoir.....	1-62
Engine Uses Too Much Oil Or Smokes Excessively.....	1-62
Engine Leaks Oil From Cases, Push Rods, Hoses, Etc.....	1-62
Low Oil Pressure.....	1-63
High Oil Pressure.....	1-63
Electrical System.....	1-63
Alternator Does Not Charge.....	1-63
Alternator Charge Rate Is Below Normal.....	1-63
Speedometer Operates Erratically.....	1-63
Transmission.....	1-63
Shifts Hard.....	1-63
Jumps Out Of Gear.....	1-63
Clutch Slips.....	1-63
Clutch Drags Or Does Not Release.....	1-63
Clutch Chatters.....	1-63
Handling.....	1-63
Irregularities.....	1-63
Brakes.....	1-64
Brake Does Not Hold Normally.....	1-64

CHASSIS

2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	2-1
---	-----

2.2 SPECIFICATIONS

Specifications.....	2-6
Chassis Specifications.....	2-6
Tire Specifications.....	2-7

2.3 VEHICLE IDENTIFICATION NUMBER (V.I.N.)

Vehicle Identification Number: Touring Models.....	2-9
--	-----

2.4 FRONT WHEEL

Removal.....	2-11
Cleaning and Inspection.....	2-12
Installation.....	2-12

2.5 REAR WHEEL

Removal.....	2-14
Cleaning and Inspection.....	2-15
Installation.....	2-15

2.6 REAR WHEEL COMPENSATOR

Isolator Replacement.....	2-18
Removal.....	2-18
Installation.....	2-18
Sprocket Bearing Replacement.....	2-18
Removal.....	2-18
Installation.....	2-18

2.7 WHEEL LACING: FRONT RIM

Wheel Lacing: Angle Flange Hub.....	2-20
-------------------------------------	------

TABLE OF CONTENTS

Wheel Lacing: Straight Flange Hub, Single Hole Circle.....	2-21
Wheel Lacing: Straight Flange Hub, Dual Hole Circle.....	2-22

2.8 WHEEL LACING: 16 INCH REAR RIM

Wheel Lacing: 16 In. Rear Wheel.....	2-25
--------------------------------------	------

2.9 CHECKING AND TRUING WHEELS

General.....	2-28
Checking Wheel Runout.....	2-28
Lateral Runout.....	2-28
Radial Runout.....	2-28
Setting Rim Offset.....	2-28
Truing Wheels.....	2-30
Radial Truing.....	2-30
Lateral Truing.....	2-31

2.10 SEALED WHEEL BEARINGS

Inspection.....	2-32
Removal.....	2-32
Installation.....	2-33

2.11 TIRES

General.....	2-35
Removal.....	2-35
Cleaning, Inspection and Repair.....	2-35
Installation.....	2-36
Tube Type Tires.....	2-36
Tubeless Tires.....	2-36
Checking Tire Runout.....	2-37
Lateral Runout.....	2-37
Radial Runout.....	2-37
Wheel Balancing.....	2-38
Weights.....	2-38

2.12 FRONT BRAKE MASTER CYLINDER

General.....	2-39
Removal and Disassembly.....	2-39
Removal.....	2-39
Disassembly.....	2-39
Cleaning and Inspection.....	2-41
Assembly and Installation.....	2-41
Assembly.....	2-41
Installation.....	2-41
Front Brake Line: Non-ABS Equipped.....	2-41
Removal.....	2-41
Installation.....	2-42

2.13 FRONT BRAKE CALIPER

Removal.....	2-44
Installation.....	2-44

2.14 REAR BRAKE MASTER CYLINDER

General.....	2-45
Removal and Disassembly.....	2-45
Removal.....	2-45
Disassembly.....	2-46
Cleaning and Inspection.....	2-47
Assembly and Installation.....	2-48
Assembly.....	2-48
Installation.....	2-48
Rear Brake Line: Non-ABS Equipped.....	2-48

Removal.....	2-48
Installation.....	2-49

2.15 REAR BRAKE CALIPER

Removal.....	2-51
Installation.....	2-51

2.16 FRONT FORK

Changing Fork Oil.....	2-52
Draining.....	2-52
Filling.....	2-52
Removal.....	2-53
Disassembly.....	2-53
Cleaning and Inspection.....	2-55
Assembly.....	2-56
Installation.....	2-56

2.17 STEERING HEAD BEARINGS

Removal.....	2-58
Inspection.....	2-59
Installation.....	2-60

2.18 REAR AIR SUSPENSION

Check for Air Leaks.....	2-61
Compression Fitting.....	2-61
Air Valve Assembly.....	2-61
Air Tubes.....	2-61

2.19 REAR SHOCK ABSORBERS

Removal.....	2-63
Cleaning and Inspection.....	2-63
Disassembly and Assembly.....	2-63
Installation.....	2-63

2.20 REAR FORK

Removal.....	2-64
Disassembly and Assembly.....	2-65
Bearing Removal.....	2-65
Bearing Installation.....	2-65
Pivot Shaft/Mount Disassembly.....	2-66
Installation.....	2-66

2.21 CLUTCH CABLE

Removal.....	2-67
Installation.....	2-67

2.22 HANDLEBARS

Adjustment.....	2-70
Removal.....	2-70
Installation.....	2-71
Left Handgrip.....	2-72
Removal.....	2-72
Installation.....	2-72
Heated Handgrips.....	2-72
Remove Left Handgrip.....	2-72
Install Left Handgrip.....	2-73
Remove Right Handgrip.....	2-73
Install Right Handgrip.....	2-73
Rubber Mounts.....	2-74
Removal.....	2-74
Installation.....	2-74

TABLE OF CONTENTS

2.23 MIRRORS

All Models Except FLHX.....	2-76
Removal.....	2-76
Installation.....	2-76
FLHX.....	2-76
Removal.....	2-76
Installation.....	2-76

2.24 SEAT

Seat: Models without Tour-Pak.....	2-77
Removal.....	2-77
Installation.....	2-77
Seat: Models with Tour-Pak.....	2-77
Removal.....	2-77
Installation.....	2-78
Seat: Road King Models.....	2-78
Removal.....	2-78
Installation.....	2-78
Seat Retention Nut Replacement.....	2-78

2.25 SADDLEBAGS

Removal.....	2-80
Installation.....	2-80

2.26 SADDLEBAG SERVICE

Saddlebag Hardware.....	2-81
Removal.....	2-81
Installation.....	2-82
Saddlebag Guard/Support Rail.....	2-82
Removal.....	2-82
Installation.....	2-82

2.27 TOUR-PAK

Removal/Installation.....	2-84
Removal.....	2-84
Installation.....	2-84
Adjustment.....	2-85
Luggage Rack/Tour-Pak Support.....	2-85
Removal.....	2-85
Assembly and Installation.....	2-85

2.28 TOUR-PAK SERVICE

Lockset.....	2-86
Removal.....	2-86
Installation.....	2-86
Hinges.....	2-86
Removal.....	2-86
Installation.....	2-86
Latches/Lockset Catch.....	2-87
Removal.....	2-87
Installation.....	2-87
Catches.....	2-87
Removal.....	2-87
Installation.....	2-87
Tether.....	2-87
Removal.....	2-87
Installation.....	2-87
Tether Brackets.....	2-88
Removing Tether Bracket from Tour-Pak.....	2-88
Removing Tether Bracket from Tour-Pak Lid.....	2-88
Installing Tether Bracket on Tour-Pak Lid.....	2-88

Installing Tether Bracket on Tour-Pak.....	2-88
Luggage Rack.....	2-88

2.29 TOUR-PAK LIGHTS

General.....	2-89
Side Marker Lights (if equipped).....	2-89
Removal.....	2-89
Installation.....	2-89
Tour-Pak Lights Harness.....	2-89
Removal.....	2-89
Installation.....	2-89
Wrap-Around Lights (if equipped).....	2-90
Bulb Replacement.....	2-90
Removal.....	2-90
Installation.....	2-91

2.30 TOUR-PAK BACKREST

Passenger Backrest.....	2-92
Removal.....	2-92
Installation.....	2-92
Rubber Isolators.....	2-92
Removal.....	2-92
Installation.....	2-92
Passenger Backrest Flap.....	2-93
Removal.....	2-93
Installation.....	2-93

2.31 TOUR-PAK SPEAKER BOX

Speaker Box.....	2-94
Removal.....	2-94
Installation.....	2-94

2.32 LOWER FAIRING AND ENGINE GUARD

Lower Fairing.....	2-95
Removal.....	2-95
Disassembly.....	2-95
Assembly.....	2-96
Installation.....	2-96
Serrated Washer Replacement.....	2-96
Removal.....	2-96
Installation.....	2-96
Engine Guard.....	2-96
Removal.....	2-96
Installation.....	2-96

2.33 UPPER FAIRING AND WINDSHIELD: FORK MOUNTED FAIRING MODELS

Outer Fairing and Windshield.....	2-98
Removal.....	2-98
Installation.....	2-98

2.34 FAIRING CAP: FORK MOUNTED FAIRING MODELS

Fairing Cap.....	2-99
Removal.....	2-99
Installation.....	2-99

2.35 INNER FAIRING: FORK MOUNTED FAIRING MODELS

Removal.....	2-100
--------------	-------

Installation.....2-102

2.36 AIR DEFLECTORS

Air Deflectors.....2-104
 Removal.....2-104
 Installation.....2-104

Mid-Frame Air Deflectors.....2-104
 Removal.....2-104
 Installation.....2-104

**2.37 UPPER FAIRING AND WINDSHIELD:
 FRAME MOUNTED FAIRING MODELS**

Windshield.....2-105
 Removal.....2-105
 Installation.....2-105

Outer Fairing.....2-105
 Removal.....2-105
 Installation.....2-106

**2.38 INSTRUMENT BEZEL: FRAME
 MOUNTED FAIRING MODELS**

Bezel.....2-108
 Removal.....2-108
 Installation.....2-109

**2.39 INSTRUMENT NACELLE: FRAME
 MOUNTED FAIRING MODELS**

Instrument Nacelle.....2-110
 Removal.....2-110
 Installation.....2-111

**2.40 INNER FAIRING: FRAME MOUNTED
 FAIRING MODELS**

Removal.....2-112
 Disassembly.....2-113

Installation.....2-114
 Outer Fairing.....2-114
 Inner Fairing.....2-114

**2.41 GLOVE BOX DOOR AND HINGE:
 FRAME MOUNTED FAIRING MODELS**

Glove Box Door and Hinge.....2-116
 Removal.....2-116
 Installation.....2-116

2.42 WINDSHIELD: ROAD KING MODELS

Windshield.....2-117
 Removal.....2-117
 Installation.....2-117

Windshield Window.....2-117
 Removal.....2-117
 Installation.....2-118

**2.43 HEADLAMP NACELLE: ROAD KING
 MODELS**

Removal.....2-120
 Installation.....2-121

2.44 FRONT FENDER

Removal.....2-122
 Installation.....2-122

2.45 REAR FENDER

Removal.....2-123
 Fender Repair.....2-124
 Mounting Hardware.....2-124
 Lights and Harnesses.....2-124
 Installation.....2-124

2.46 REAR FASCIA

Removal.....2-126
 Installation.....2-126

Stud Plate.....2-126
 Removal.....2-126
 Installation.....2-126

Rear Fascia Lamp.....2-126
 Removal.....2-126
 Installation.....2-126

2.47 REAR FRAME

Rear Frame.....2-127
 Removal.....2-127
 Installation.....2-128
 Thread Repair.....2-128

2.48 FOOTBOARDS AND FOOTRESTS

Rider Footboards.....2-129
 Removal.....2-129
 Installation.....2-129
 Disassembly.....2-129
 Assembly.....2-129

Passenger Footboard.....2-130
 Removal.....2-130
 Disassembly.....2-130
 Assembly.....2-130
 Installation.....2-130

Passenger Footrest: FLHX, FLTRX.....2-130
 Removal.....2-130
 Disassembly.....2-130
 Assembly.....2-131
 Installation.....2-131

2.49 JIFFY STAND

General.....2-132
 Leg Removal.....2-132
 Leg Installation.....2-132
 Jiffy Stand Bracket.....2-133
 Removal.....2-133
 Installation.....2-133

Jiffy Stand Interlock Sensor.....2-133
 Removal.....2-133
 Installation.....2-133

2.50 FRONT ENGINE MOUNT

Removal.....2-135
 Installation.....2-135

TABLE OF CONTENTS

ENGINE

3.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....3-1

3.2 SPECIFICATIONS

Specifications.....3-3

3.3 SERVICE WEAR LIMITS

General.....3-5

3.4 ENGINE OIL FLOW

Oil Feed.....3-7

Top End.....3-7

Bottom End.....3-9

Oil Return.....3-11

Oil Cooler Operation.....3-12

3.5 OIL PUMP OPERATION

General.....3-13

Operation.....3-13

3.6 BREATHER OPERATION

General.....3-15

3.7 OIL PRESSURE

Oil Pressure Indicator Lamp.....3-16

Checking Oil Pressure.....3-16

3.8 TROUBLESHOOTING

Diagnosing Valve Train Noise.....3-17

Compression Test.....3-17

Cylinder Leakdown Test.....3-18

Diagnosing Smoking Engine or High Oil Consumption.....3-18

 Check Prior To Cylinder Head Removal.....3-18

 Check After Cylinder Head Removal.....3-18

3.9 OIL COOLER

Removal.....3-19

Installation.....3-19

3.10 OIL COOLER ADAPTER

Removal.....3-20

Disassembly.....3-20

Assembly.....3-20

Installation.....3-20

3.11 HOW TO USE THIS SECTION

General.....3-22

Top End Overhaul.....3-22

Bottom End Overhaul.....3-22

Subassembly Service and Repair.....3-23

3.12 TOP END SERVICE

Engine in Chassis.....3-24

Engine Removed from Chassis.....3-25

3.13 BOTTOM END SERVICE

Engine in Chassis.....3-26

Engine Removed From Chassis.....3-27

3.14 STRIPPING MOTORCYCLE FOR SERVICE

Procedure.....3-28

 Cam Compartment Service Only.....3-28

 Top End Service.....3-28

3.15 ASSEMBLING MOTORCYCLE AFTER SERVICE

Procedure.....3-29

 After Top End Service.....3-29

 After Cam Compartment Service.....3-29

3.16 REMOVING ENGINE FROM CHASSIS

Procedure.....3-30

3.17 INSTALLING ENGINE IN CHASSIS

Procedure.....3-31

3.18 TOP END OVERHAUL: DISASSEMBLY

General.....3-32

Rocker Covers.....3-32

Rocker Arm Support Plate.....3-32

Push Rods, Lifters and Covers.....3-34

Cylinder Head.....3-35

Cylinder.....3-36

Piston.....3-36

3.19 TOP END OVERHAUL: ASSEMBLY

General.....3-38

Piston.....3-38

Cylinder.....3-39

Cylinder Head.....3-41

Push Rods, Lifters and Covers.....3-44

Rocker Arm Support Plate.....3-45

Breather Assembly.....3-46

3.20 BOTTOM END OVERHAUL: DISASSEMBLY

General.....3-48

Cam Support Plate and Cover.....3-48

 Prepare Engine.....3-48

 Cam Chain and Sprockets.....3-48

 Cam Support Plate.....3-49

Crankcase.....3-50

3.21 BOTTOM END OVERHAUL: ASSEMBLY

General.....3-52

Crankcase.....3-52

Cam Support Plate and Cover.....3-54

3.22 BREATHER ASSEMBLY

Removal Overview.....3-59

Disassembly.....3-59

Cleaning and Inspection.....3-59

Assembly.....3-59

Installation Overview.....3-59

3.23 ROCKER ARM SUPPORT PLATE

Removal Overview.....3-60
 Disassembly.....3-60
 Cleaning and Inspection.....3-60
 Inspection.....3-60
 Rocker Shaft Fit.....3-60
 Rocker Arm Shaft to Bushing.....3-61
 Replace Rocker Arm Bushings.....3-61
 Assembly.....3-62
 Installation Overview.....3-62

3.24 PUSH RODS, LIFTERS AND COVERS

Removal Overview.....3-63
 Disassembly.....3-63
 Cleaning and Inspection.....3-63
 Lifter Inspection.....3-64
 Assembly.....3-64
 Installation Overview.....3-64

3.25 CYLINDER HEAD

Removal Overview.....3-65
 Disassembly.....3-65
 Cleaning.....3-66
 Inspection.....3-67
 Cylinder Head.....3-67
 Valve Guides.....3-67
 Valves.....3-67
 Valve Springs.....3-67
 Tapered Keepers.....3-68
 Valve Seats.....3-68
 Valve Guide Replacement.....3-68
 Removal.....3-68
 Installation.....3-69
 Valve and Seat Refacing.....3-72
 Assembly.....3-74
 Installation Overview.....3-75

3.26 CYLINDER

Removal Overview.....3-76
 Cleaning.....3-76
 Inspection.....3-76
 Deglazing Cylinder.....3-78
 Boring and Honing Cylinder.....3-79
 Installation Overview.....3-79

3.27 PISTON

Removal Overview.....3-81
 Disassembly.....3-81
 Piston Rings.....3-81
 Cleaning.....3-81
 Inspection.....3-82
 Assembly.....3-83
 Checking Piston Ring Gap.....3-83
 Installing Piston Rings.....3-84
 Installation Overview.....3-85

3.28 CAM SUPPORT PLATE AND COVER

Removal Overview.....3-86
 Camshafts.....3-86
 Removal.....3-86
 Assembly.....3-86

Oil Pressure Relief Valve.....3-88
 Removal.....3-88
 Installation.....3-88
 Inspection.....3-88
 Cam Needle Bearings.....3-88
 Removal.....3-88
 Installation.....3-90
 Cleaning and Inspection.....3-91
 Oil Pressure Valve.....3-91
 Cam Support Plate.....3-91
 Installation Overview.....3-91

3.29 OIL PUMP

Removal Overview.....3-92
 Cleaning and Inspection.....3-92
 Installation Overview.....3-92

3.30 CRANKCASE

Removal Overview.....3-93
 Right Crankcase Half.....3-93
 Main Bearing Removal.....3-93
 Main Bearing Installation.....3-93
 Piston Jets Removal.....3-94
 Piston Jets Installation.....3-94
 Left Crankcase Half.....3-94
 Main Bearing Removal.....3-94
 Main Bearing Installation.....3-96
 Sprocket Shaft Bearing Inner Race.....3-97
 Removal.....3-97
 Installation.....3-98
 Cylinder Studs.....3-99
 Removal.....3-99
 Installation.....3-99
 Pipe Plug and Oil Fittings.....3-100
 Removal.....3-100
 Installation.....3-100
 Cleaning and Inspection.....3-100
 Installation Overview.....3-100

3.31 FLYWHEEL AND CONNECTING RODS

Removal Overview.....3-101
 Inspection.....3-101
 Installation Overview.....3-101

3.32 OIL PAN

Removal.....3-102
 Installation.....3-102

FUEL SYSTEM

4.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....4-1

4.2 SPECIFICATIONS: FUEL SYSTEM

Specifications.....4-3

4.3 ELECTRONIC FUEL INJECTION (EFI)

Troubleshooting.....4-4

TABLE OF CONTENTS

4.4 AIR CLEANER ASSEMBLY

Removal.....	4-5
Installation.....	4-5

4.5 FUEL TANK

Removal.....	4-7
Purge and Disconnect Fuel Line.....	4-7
Remove Tank.....	4-7
Installation.....	4-7
Evaporative Emissions Tube: Non-CA Models.....	4-8
Removal.....	4-8
Installation.....	4-8
Fuel Supply Check Valve/Tube.....	4-8
Removal.....	4-8
Installation.....	4-9

4.6 FUEL TANK TOP PLATE

Removal.....	4-10
Installation.....	4-11

4.7 FUEL FILTER

Removal.....	4-12
Installation.....	4-12

4.8 FUEL PRESSURE REGULATOR

Removal.....	4-13
Installation.....	4-13

4.9 FUEL LEVEL SENDER

Removal.....	4-14
Installation.....	4-14

4.10 TWIST GRIP SENSOR

Removal.....	4-15
Installation.....	4-16
Twist Grip Sensor Jumper Harness.....	4-17
Removal.....	4-17
Installation.....	4-17

4.11 THROTTLE CONTROL ACTUATOR (TCA)

General.....	4-18
--------------	------

4.12 ENGINE TEMPERATURE SENSOR (ET)

Removal.....	4-19
Installation.....	4-19

4.13 INDUCTION MODULE

Removal.....	4-20
Installation.....	4-21

4.14 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE SENSOR (TMAP)

General.....	4-22
Removal.....	4-22
Installation.....	4-22

4.15 OXYGEN SENSORS (O2)

General.....	4-23
--------------	------

Removal.....	4-23
Installation.....	4-23

4.16 FUEL INJECTORS

General.....	4-25
Removal.....	4-25
Installation.....	4-25

4.17 FUEL PUMP

General.....	4-27
Removal.....	4-27
Installation.....	4-27
Fuel Pump and Fuel Level Sender Wire Harness.....	4-28
Removal.....	4-28
Installation.....	4-28

4.18 FUEL PRESSURE TEST

General.....	4-29
Testing.....	4-29

4.19 EXHAUST SYSTEM

Mufflers.....	4-31
Removal.....	4-31
Installation.....	4-31
System Removal.....	4-31
System Installation.....	4-32

4.20 ACTIVE EXHAUST (HDI)

Exhaust Valve Actuator.....	4-34
Removal.....	4-34
Installation.....	4-34
Exhaust Valve Actuator Cable.....	4-34
Removal.....	4-34
Installation.....	4-34
Active Exhaust Valve.....	4-34
General.....	4-34

4.21 INTAKE LEAK TEST

General.....	4-35
Leak Tester.....	4-35
Parts List.....	4-35
Tester Assembly.....	4-35
Tester Adjustment.....	4-35
Procedure.....	4-35

4.22 EVAPORATIVE EMISSIONS CONTROL (CA MODELS)

General.....	4-37
Vapor Valve.....	4-37
Fuel Vapor Vent Tube.....	4-38
Removal.....	4-38
Installation.....	4-38
Canister-to-Solenoid Tube.....	4-38
Removal.....	4-38
Installation.....	4-38
Solenoid-to-Induction Module Tube.....	4-38
Removal.....	4-38
Installation.....	4-38
Purge Solenoid.....	4-39
Removal.....	4-39
Installation.....	4-39

Charcoal Canister.....4-39
 Removal.....4-39
 Installation.....4-39

DRIVE

5.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....5-1

5.2 SPECIFICATIONS: DRIVE

Specifications.....5-2

5.3 PRIMARY CHAINCASE COVER

General.....5-3
 Removal.....5-3
 Installation.....5-3

5.4 DRIVE COMPONENTS

Removal.....5-5
 Installation.....5-6

5.5 PRIMARY CHAINCASE HOUSING

Removal.....5-10
 Inspection.....5-10
 Mainshaft Bearing and Lip Seal.....5-10
 Removal.....5-10
 Installation.....5-10
 Mainshaft Bearing Inner Race.....5-11
 Removal.....5-11
 Installation.....5-11
 Shifter Shaft Bushings.....5-12
 Installation.....5-12

5.6 CLUTCH

Removal and Installation.....5-14
 Clutch Pack Only.....5-14
 Partial Disassembly.....5-14
 Cleaning And Inspection.....5-14
 Assembly.....5-15
 Clutch Pack and Bearing.....5-16
 Complete Disassembly.....5-16
 Assembly.....5-17

5.7 TRANSMISSION SPROCKET

Removal.....5-19
 Cleaning and Inspection.....5-19
 Installation.....5-19

5.8 DRIVE BELT

Removal and Adjustment.....5-21
 Adjustment.....5-21
 Removal.....5-21
 Installation.....5-21

TRANSMISSION

6.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....6-1

6.2 SPECIFICATIONS: TRANSMISSION

Specifications.....6-2
 Service Wear Limits.....6-2

6.3 TRANSMISSION

Power Flow.....6-3
 Neutral.....6-3
 1st Gear.....6-3
 2nd Gear.....6-3
 3rd Gear.....6-3
 4th Gear.....6-3
 5th Gear.....6-3
 6th Gear.....6-3

6.4 SHIFTER LINKAGE

Shifter Rod.....6-5

6.5 CLUTCH RELEASE COVER

Removal and Disassembly.....6-6
 Cleaning and Inspection.....6-6
 Assembly and Installation.....6-7

6.6 TRANSMISSION ASSEMBLY

Removal.....6-8
 Disassembly.....6-9
 Shifter Cam/Shifter Forks.....6-9
 Mainshaft.....6-11
 Countershaft.....6-13
 Replacing Side Door Bearings.....6-14
 Cleaning and Inspection.....6-15
 Assembly.....6-15
 Installing Side Door Bearings.....6-15
 Countershaft.....6-15
 Mainshaft.....6-16
 Shifter Cam/Shifter Forks.....6-16
 Installation.....6-18

6.7 MAIN DRIVE GEAR AND BEARING

Removal.....6-20
 Cleaning and Inspection.....6-21
 Needle Bearing Replacement.....6-22
 Mainshaft Seal Replacement.....6-23
 Installation.....6-24
 Installing Main Drive Gear Bearing.....6-24
 Installing Main Drive Gear.....6-24
 Installing Main Drive Gear Large Seal.....6-25

6.8 TRANSMISSION CASE

Removal.....6-27
 Installation.....6-27
 Disassembly.....6-28
 Shifter Arm Assembly.....6-28
 Cleaning and Inspection.....6-28
 Assembly.....6-29
 Countershaft Needle Bearing Replacement.....6-29
 Shifter Pawl Lever Assembly.....6-29

TABLE OF CONTENTS

ELECTRICAL

7.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	7-1
---	-----

7.2 SPECIFICATIONS: ELECTRICAL

Specifications.....	7-5
---------------------	-----

7.3 VOLTAGE REGULATOR

Removal.....	7-6
Installation.....	7-6

7.4 ELECTRONIC CONTROL MODULE (ECM)

ECM.....	7-7
Removal.....	7-7
Installation.....	7-7

7.5 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)

General.....	7-8
Removal.....	7-8
Installation.....	7-8
HFSM Antenna.....	7-8
Removal.....	7-8
Installation.....	7-9

7.6 IGNITION COIL

Removal.....	7-10
Installation.....	7-10

7.7 SYSTEM FUSES AND RELAYS

Main Fuse.....	7-11
Removal.....	7-11
Installation.....	7-11
Main Fuse Holder.....	7-11
Removal.....	7-11
Installation.....	7-11
System Fuses and Relays.....	7-11
Removal.....	7-11
Installation.....	7-11
Fuse Blocks.....	7-12
Removal.....	7-12
Installation.....	7-12

7.8 ELECTRICAL CADDIES

Top Caddy.....	7-13
Removal.....	7-13
Installation.....	7-13
Left Side Caddy.....	7-13
Removal.....	7-13
Installation.....	7-13
Battery Tray.....	7-15
Removal.....	7-15
Installation.....	7-16

7.9 SECURITY SIREN

Removal.....	7-17
Installation.....	7-17

7.10 STARTER

General.....	7-18
Wiring Diagrams.....	7-18
Paint Touch-Up.....	7-18
Removal.....	7-18
Field Coil Assembly.....	7-18
Disassembly.....	7-18
Inspection.....	7-18
Assembly.....	7-19
Drive Assembly.....	7-20
Disassembly.....	7-20
Inspection.....	7-20
Assembly.....	7-20
Installation.....	7-21

7.11 STARTER SOLENOID

Solenoid Assembly.....	7-22
Disassembly.....	7-22
Assembly.....	7-22
Solenoid Plunger.....	7-22
Disassembly.....	7-22
Assembly.....	7-22
Solenoid Contacts.....	7-22
Disassembly.....	7-22
Assembly.....	7-23

7.12 HEADLAMP: ALL EXCEPT ROAD GLIDE

Headlamp: Single Headlamp Models.....	7-25
Removal.....	7-25
Bulb Replacement.....	7-25
Installation.....	7-25

7.13 HEADLAMP: ROAD GLIDE

Headlamp Adjuster Assembly.....	7-26
Removal.....	7-26
Repair.....	7-26
Installation.....	7-26
Headlamp Bulb Replacement: Dual Headlamp Models.....	7-26
Removal.....	7-26
Bulb Replacement.....	7-26
Installation.....	7-27

7.14 AUXILIARY LAMPS AND BRACKETS

Auxiliary Lamp Bulb Replacement.....	7-28
Removal.....	7-28
Installation.....	7-28
Auxiliary Lamp Housing.....	7-28
Removal.....	7-28
Installation.....	7-29
Auxiliary Lamp Bracket.....	7-30
Removal.....	7-30
Installation.....	7-31
Adjustment.....	7-31

7.15 TAIL LAMP

Tail Lamp Bulb Replacement.....	7-32
Removal.....	7-32
Installation.....	7-32
Circuit Board/Chrome Base.....	7-32
Removal.....	7-32

TABLE OF CONTENTS

Installation.....	7-33
Rear Fender Lights Harness (all except FLHX, FLTRX).....	7-33
Removal.....	7-33
Installation.....	7-34
Rear Fender Lights Harness (FLHX, FLTRX).....	7-35
Removal.....	7-35
Installation.....	7-35

7.16 FENDER TIP LAMPS

Front Fender Tip Lamp.....	7-37
Removal.....	7-37
Installation.....	7-37
Front Fender Tip Lamp Jumper Harness.....	7-37
Removal.....	7-37
Installation.....	7-38
Rear Fender Tip Lamp.....	7-39
Removal.....	7-39
Installation.....	7-40

7.17 TURN SIGNAL LAMPS

Turn Signal Bulb Replacement: Bullet Style.....	7-41
Turn Signal Bulb Replacement: Flat Lens Style.....	7-41
Front Turn Signal Lamp.....	7-41
Removal: Flat Lens Style.....	7-41
Installation: Flat Lens Style.....	7-42
Removal: Bullet Style, Fork Mounted.....	7-43
Installation: Bullet Style, Fork Mounted.....	7-44
Removal: Bullet Style, Fairing Mounted.....	7-44
Installation: Bullet Style, Fairing Mounted.....	7-45
Rear Turn Signal Lamp.....	7-45
Removal: FLHR/C, FLHT/C/U, FLHTK.....	7-45
Installation: FLHR/C, FLHT/C/U, FLHTK.....	7-46
Removal: FLHX, FLTRX.....	7-46
Installation: FLHX, FLTRX.....	7-46
Rear Turn Signal Lamps Bracket.....	7-48
Removal: FLHR/C, FLHT/C/U, FLHTK.....	7-48
Installation: FLHR/C, FLHT/C/U, FLHTK.....	7-48
Removal: FLHX, FLTRX.....	7-48
Installation: FLHX, FLTRX.....	7-49

7.18 IGNITION/LIGHT KEY SWITCH AND FORK LOCK

Fairing Models.....	7-50
Removal.....	7-50
Installation.....	7-52
Road King Models.....	7-53
Ignition/Light Key Switch: Removal.....	7-53
Ignition/Light Key Switch: Installation.....	7-53
Fork Lock: Removal.....	7-53
Fork Lock: Installation.....	7-53

7.19 FAIRING CAP SWITCHES: FORK MOUNTED FAIRING MODELS

Removal.....	7-54
Installation.....	7-54

7.20 INSTRUMENT NACELLE SWITCHES: FRAME MOUNTED FAIRING MODELS

Removal.....	7-56
Left Side Switch.....	7-56
Right Side Switches.....	7-57

Installation.....	7-57
Left Side Switch.....	7-57
Right Side Switches.....	7-57

7.21 CRANKSHAFT POSITION SENSOR (CKP)

General.....	7-60
Removal.....	7-60
Installation.....	7-60

7.22 AUTOMATIC COMPRESSION RELEASE (ACR)

General.....	7-61
Removal.....	7-61
Installation.....	7-61

7.23 ALTERNATOR

Removal.....	7-63
Cleaning and Inspection.....	7-63
Installation.....	7-64

7.24 VEHICLE SPEED SENSOR (VSS)

VSS.....	7-65
Removal.....	7-65
Installation.....	7-65

7.25 NEUTRAL SWITCH

Removal.....	7-66
Installation.....	7-66

7.26 OIL PRESSURE SWITCH AND SENDER

Removal.....	7-67
Installation.....	7-67

7.27 STOPLIGHT SWITCHES

Front Stoplight Switch.....	7-68
Removal/Installation.....	7-68
Rear Stoplight Switch.....	7-68
Removal.....	7-68
Installation.....	7-68

7.28 HORN

Inspection.....	7-69
Removal.....	7-69
Installation.....	7-69

7.29 CIGARETTE LIGHTER: FAIRING MODELS

Troubleshooting.....	7-70
Removal.....	7-70
Installation.....	7-70

7.30 GAUGES AND INSTRUMENTS: FAIRING MODELS

2 Inch Diameter Gauges: Fuel Level, Ambient Air Temperature, Voltmeter, Oil Pressure.....	7-71
Removal.....	7-71
Installation.....	7-71
Tachometer.....	7-71

TABLE OF CONTENTS

Removal.....	7-71
Installation.....	7-71
Speedometer.....	7-72
Removal.....	7-72
Installation.....	7-72

7.31 INDICATOR LAMPS: FAIRING MODELS

Indicator Lamps.....	7-73
Removal.....	7-73
Installation.....	7-73

7.32 GAUGES AND INSTRUMENTS: ROAD KING MODELS

Fuel Gauge.....	7-74
Removal.....	7-74
Installation.....	7-74
Speedometer.....	7-74
Removal.....	7-74
Installation.....	7-75

7.33 INDICATOR LAMPS: ROAD KING MODELS

Indicator Lamps.....	7-76
Removal.....	7-76
Installation.....	7-76

7.34 ADVANCED AUDIO SYSTEM

Radio (Storage Box).....	7-77
Removal.....	7-77
Installation.....	7-77
Front Fairing Speakers.....	7-78
Removal.....	7-78
Installation.....	7-78
Front Headset Receptacle.....	7-78
Removal.....	7-78
Installation.....	7-78
Rear Headset Receptacle.....	7-79
Rear Passenger Switches.....	7-79
Removal.....	7-79
Installation.....	7-79
Rear Speakers.....	7-80
Removal.....	7-80
Installation.....	7-80
CB Module.....	7-81
Removal.....	7-81
Installation.....	7-81

7.35 WIRE TROUGH

Removal.....	7-82
Installation.....	7-83

7.36 MAIN WIRING HARNESS

Removal: All Models (Part 1).....	7-84
Removal: Road King Models (Part 2).....	7-84
Removal: Fork Mounted Fairing Models (Part 2).....	7-85
Removal: Frame Mounted Fairing Models (Part 2).....	7-86
Removal: All Models (Part 3).....	7-86
Installation: All Models (Part 1).....	7-88
Installation: Road King Models (Part 2).....	7-90
Installation: Fork Mounted Fairing Models (Part 2).....	7-91
Installation: Frame Mounted Fairing Models (Part 2).....	7-91

Installation: All Models (Part 3).....	7-91
--	------

7.37 INTERCONNECT HARNESS

Fork Mounted Fairing Models.....	7-92
Removal.....	7-92
Installation.....	7-93
Frame Mounted Fairing Models.....	7-95
Removal.....	7-95
Installation.....	7-97

7.38 RADIO ANTENNA CABLE

Models Equipped with Tour-Pak.....	7-99
Removal.....	7-99
Installation.....	7-99
Models without Tour-Pak.....	7-100
Removal.....	7-100
Installation.....	7-100

7.39 REAR AUDIO HARNESS: ULTRA MODELS

Removal.....	7-102
Installation.....	7-102

7.40 CB ANTENNA CABLE: ULTRA MODELS

Removal.....	7-104
Installation.....	7-104

7.41 HANDLEBAR SWITCH ASSEMBLIES

Removal.....	7-106
Right Handlebar Controls.....	7-106
Left Handlebar Controls.....	7-106
Disassembly.....	7-106
Right Side Handlebar Switches.....	7-106
Left Side Handlebar Switches.....	7-107
Specific Repair Procedures: Upper Switch Housings.....	7-107
Right Side Handlebar (All Models).....	7-107
Left Side Handlebar (All Models).....	7-108
Specific Repair Procedures: Right Side Lower Switch Housings.....	7-109
Preliminary Instructions.....	7-109
Turn-Right Signal Switch (All Models).....	7-109
Front Stoplight Switch (All Models).....	7-109
Mode Select Switch (Classic and Ultra Models).....	7-109
Cruise Set/Resume Switch (Road King Classic and Ultra Models).....	7-110
Final Instructions.....	7-111
Specific Repair Procedures: Left Side Lower Switch Housings.....	7-112
Preliminary Instructions.....	7-112
Turn-Left Signal Switch (All Models).....	7-112
Clutch Interlock Switch.....	7-112
Audio Control Switch (Classic and Ultra Models).....	7-114
CB Push-To-Transmit Switch (Ultra Models).....	7-114
Cruise On/Off Switch (Road King Classic Models).....	7-114
Final Instructions.....	7-115
General Repair Procedures.....	7-115
Assembly: Right Side Handlebar Switches.....	7-116
Assembly: Left Side Handlebar Switches.....	7-117
Installation.....	7-117
Right Handlebar Controls.....	7-117
Left Handlebar Controls.....	7-118

7.42 TSSM/HFSM MAINTENANCE

General.....7-121
 FOB Battery.....7-121
 Schedule.....7-121
 Battery Replacement.....7-121
 Smart Siren (If Installed).....7-121
 Schedule.....7-121
 Battery Replacement: Early Style Siren.....7-121
 Battery Replacement: Late Style Siren.....7-122

7.43 PERSONAL IDENTIFICATION NUMBER (PIN)

General.....7-123
 Initial Pin Entry.....7-123
 Changing the Pin.....7-123
 Modifying an Existing Pin.....7-123

7.44 H-DSSS ACTUATION

General.....7-125
 Sidecar Configuration.....7-125
 Actuation.....7-125
 Fob Assignment.....7-125
 Power Disruption and Configuring.....7-125

7.45 TSM/HFSM: PASSWORD LEARN

General.....7-126
 Password Learning.....7-126

APPENDIX A CONNECTOR REPAIR

A.1 AMP MULTILOCK CONNECTORS

AMP Multilock Connector Repair.....A-1
 General.....A-1
 Separating Pin and Socket Housings.....A-1
 Mating Pin and Socket Housings.....A-1
 Removing Terminals from Housing.....A-1
 Inserting Terminals into Housing.....A-2
 Preparing Wire Leads for Crimping.....A-2
 Crimping Terminals to Leads.....A-3
 Inspecting Crimped Terminals.....A-4

A.2 AUTOFUSE ELECTRICAL CONNECTORS

Autofuse Connector Repair.....A-5
 General.....A-5
 Disassembly.....A-5
 Assembly.....A-5

A.3 DELPHI CONNECTORS

Delphi Connector Repair.....A-6
 General.....A-6
 Separating Pin and Socket Housings.....A-6
 Mating Pin and Socket Housings.....A-6
 Removing Socket Terminals.....A-6
 Installing Socket Terminals.....A-6

A.4 DELPHI MAIN FUSE HOUSING

Delphi Main Fuse Housing Repair.....A-8
 Removing Socket Terminals.....A-8

Installing Socket Terminals.....A-8

A.5 DEUTSCH ELECTRICAL CONNECTORS

Deutsch Connector Repair.....A-9
 General.....A-9
 Separating Pin and Socket Housings.....A-9
 Mating Pin and Socket Housings.....A-9
 Removing Socket Terminals.....A-9
 Installing Socket Terminals.....A-9
 Removing Pin Terminals.....A-11
 Installing Pin Terminals.....A-11
 Crimping Terminals.....A-12

A.6 DEUTSCH STANDARD TERMINAL REPAIR

Deutsch Standard Terminal Crimps.....A-13
 Preparing Wire Leads for Crimping.....A-13
 Crimping Terminal to Lead.....A-13
 Inspecting Crimps.....A-13

A.7 DEUTSCH SOLID BARREL MINI TERMINAL REPAIR

Deutsch Solid Barrel Terminal Crimps.....A-14
 Preparing Wire Leads For Crimping.....A-14
 Adjusting Crimper Tool.....A-14
 Crimping a Barrel Contact To Wire Lead.....A-14
 Inspecting Crimps.....A-14

A.8 DEUTSCH MINI TERMINAL REPAIR

Deutsch Mini Terminal Crimps.....A-16
 Preparing Wire Leads for Crimping.....A-16
 Crimping a Mini Terminal to Wire Lead.....A-16
 Inspecting Crimps.....A-16

A.9 MOLEX CONNECTORS

Molex Connector Repair.....A-17
 Separating Pin and Socket Housings.....A-17
 Mating Pin and Socket Housings.....A-17
 Removing Terminals.....A-17
 Installing Terminals.....A-17
 Crimp Terminal to Lead.....A-18
 Prepare Lead.....A-18
 Prepare Tool.....A-18
 Position Terminal in the Punch/Die.....A-19
 Insert Stripped Lead.....A-19
 Crimp Terminal to Lead.....A-19
 Inspect Crimp.....A-20

A.10 PACKARD 150 METRI-PACK CONNECTORS

150 Metri-Pack Connector Repair.....A-21
 General.....A-21
 Separating Pin and Socket Housings.....A-21
 Mating Pin and Socket Housings.....A-21
 Removing Socket Terminal.....A-21
 Inserting Socket Terminal.....A-21

A.11 PACKARD 280 METRI-PACK RELAY AND FUSE BLOCK CONNECTORS

Fuse Block Repair.....A-23

TABLE OF CONTENTS

Removing Socket Terminals.....	A-23
Installing Socket Terminals.....	A-23
Crimping Terminals.....	A-23

A.12 PACKARD 480 METRI-PACK CONNECTORS

480 Metri-Pack Connector Repair.....	A-24
General.....	A-24
Separating Pin and Socket Housings.....	A-24
Mating Pin and Socket Housings.....	A-24
Removing Socket Terminals.....	A-24
Installing Socket Terminals.....	A-24

A.13 PACKARD 630 METRI-PACK CONNECTORS

630 Metri-Pack Connector Repair.....	A-25
General.....	A-25
Separating Pin and Socket Housings.....	A-25
Mating Pin and Socket Housings.....	A-25
Removing Socket Terminal.....	A-25
Installing Socket Terminal.....	A-25

A.14 PACKARD METRI-PACK TERMINALS

Metri-Pack Terminal Crimps.....	A-26
Matching Terminal To Crimper.....	A-26
Preparing Wire Lead.....	A-26
Crimping Wire Core.....	A-26
Crimping Insulation/Seal.....	A-26
Inspecting Crimps.....	A-27

A.15 ECM CONNECTOR

Delphi 73-Terminal ECM Connector.....	A-28
Separating Socket Housing From ECM.....	A-28
Mating Socket Housing To ECM.....	A-28
Socket Terminal.....	A-28
ECM Ground Terminal.....	A-28

A.16 PACKARD MICRO-64 CONNECTORS

Packard Micro-64 Connector Repair.....	A-30
General.....	A-30
Separating Pin and Socket Housings.....	A-30
Mating Pin and Socket Housings.....	A-30
Removing Terminal.....	A-30
Installing Terminal.....	A-30
Preparing Wire Leads for Crimping.....	A-31
Crimping Terminals.....	A-31
Inspecting Crimps.....	A-31

A.17 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-33
General.....	A-33
Preparing Wire Leads.....	A-33
Splicing Wire Leads.....	A-33
Inspecting Seals.....	A-33

APPENDIX B WIRING

B.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1

Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-6
Wire Color Codes.....	B-6
Wiring Diagram Symbols.....	B-6
2010 Touring Wiring Diagrams.....	B-8

APPENDIX C ABS

C.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	C-1
---	-----

C.2 ABS MODULE

Hydraulic Control Unit (HCU).....	C-2
Removal.....	C-2
Installation.....	C-3
Electronic Control Unit (ECU).....	C-3
Removal.....	C-3
Installation.....	C-4

C.3 WHEEL SPEED SENSORS

Front Wheel Speed Sensor.....	C-5
Removal.....	C-5
Installation.....	C-5
Rear Wheel Speed Sensor.....	C-6
Removal.....	C-6
Installation.....	C-6

C.4 ABS BRAKE LINES

Front Master Cylinder to ABS Module.....	C-7
Removal.....	C-7
Installation.....	C-8
ABS Module to Front Brake Calipers.....	C-8
Removal.....	C-8
Installation.....	C-9
Rear Master Cylinder to ABS Module.....	C-10
Removal.....	C-10
Installation.....	C-11
ABS Module to Rear Brake Caliper.....	C-12
Removal.....	C-12
Installation.....	C-12

APPENDIX D CONVERSIONS

D.1 METRIC CONVERSION

Conversion Table.....	D-1
-----------------------	-----

D.2 FLUID CONVERSIONS

United States System.....	D-2
Metric System.....	D-2
British Imperial System.....	D-2

D.3 TORQUE CONVERSIONS

United States System.....	D-3
Metric System.....	D-3

APPENDIX E GLOSSARY

E.1 GLOSSARY

Acronyms and Abbreviations.....E-1

REFERENCE MATERIAL

TOOLS.....I

TORQUE VALUES.....VII

INDEX.....XXIII

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>