
WD1203 PIN #Y8G661200 AND ABOVE SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 25 - FRONT MECHANICAL DRIVE	5
SECTION 29 - HYDROSTATIC TRANSMISSION	6
SECTION 33 - BRAKES AND CONTROLS	10
SECTION 35 - HYDRAULIC SYSTEMS	11
SECTION 44 - REAR AXLE	16
SECTION 50 - CLIMATE CONTROL	18
SECTION 55 - ELECTRICAL SYSTEMS	22
SECTION 58 - HEADER ATTACHMENTS	38
SECTION 88 - OPTIONAL EQUIPMENT	41
SECTION 90 - PLATFORM, CAB AND DECALS	42

The following pages are the collation of the contents pages from each section and chapter of the WD1203 Service manual. Complete Service part # 84211440.

The sections used through out all Case IH product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the WD1203 Self-Propelled Windrower PIN #Y8G661200 and above.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84211441

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Precautionary Statements	2
	Safety	3
	General Safety Information	5
	Protecting the Electronic/Electrical Systems During Charging or Welding	7
	Introduction	8
	About Improvements	8
	Product Identification Numbers (PIN)	9
	Engine PIN Number	9
	Company Policy	10
	Parts and Accessories	10
	Lubrication	10
	Minimum Hardware Tightening Torques	11
	Installation of Adjustable Fittings in Straight Thread O-ring Bosses	13
	Standard Torque Data for Hydraulic Tubes and Fittings	13
	Pipe Thread Fitting Torque	14
	Installation of ORFS (O-ring Flat Faced) Fittings	14
	Specifications	15

SECTION 10 - ENGINE

BOOK 1 - 84211441

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Description of Operation	2
	Specifications	2
	Overhaul	3
	Engine	3
	Removal	3
	Installation	9
	Troubleshooting	15

SECTION 10 - ENGINE

BOOK 1 - 84211441

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Fuel System	2
	Injection System Bleeding	2
	Fuel Tanks	3
	Removal	3
	Install	7

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

SECTION 10 - ENGINE

BOOK 1 - 84211441

Chapter 3 - Air Intake

CONTENTS

Section	Description	Page
	Description of Operation - Air Intake System	2
	Air Intake System	2
	Specifications	3
	Air Cleaner	3
	Description of Operation - Air Filter	4
	Air Filter	4
	Inspection	4
	Removal	5
	Installation	6
	Troubleshooting	8

SECTION 10 - ENGINE

BOOK 1 - 84211441

Chapter 4 - Cooling System

CONTENTS

Section	Description	Page
	Specifications	2
	Cooling System	2
	Overview - Cooling System	3
	Description of Operation	5
	Radiator	6
	Removal	6
	Installation	8
	Troubleshooting	11

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 1 - 84211441

Chapter 1 - Front Mechanical Drive

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	6
	Front Mechanical Drive	6
	Removal	6
	Installation	9
	Planetary Gearbox Drive	12
	Disassembly	13
	Assembly	17

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211441

Chapter 1 - Ground Drive

CONTENTS

Section	Description	Page
	Specifications	4
	Hydrostatic Transmission Identification	5
	Torque Specifications	6
	Torque Chart	6
	Motor Area	6
	Description Of Operation	7
	Pumps	8
	High-pressure Relief Valves	9
	Check Valves	9
	Charge Pump	10
	Charge Relief Valve (Pump)	10
	Header Lift Pump	10
	Motors	10
	Variable Displacement Motor	10
	Reservoir	12
	Oil Flow	12
	Neutral	12
	Forward/Reverse	12
	WD1203 Hydraulic System Diagram	13
	Solenoid Valve (2-speed Drive Motor Only)	15
	Low-range Operation	15
	High-range Operation	15
	Cooling Circuit	15
	Relief Valve	15
	Operation	15
	Linkage	16
	Operation	16
	Sauer-danfoss Authorized Service Centers - North America	17
	Troubleshooting	21
	Excessive Noise	21
	Overheating Transmissions	21
	Loss Of Propulsion	21

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211441

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Control Linkage Inspection	22
	High-pressure Relief Valve Check	22
	Charge Pump Relief Valve	23
	Check Valve	23
	Pressure Testing	24
	Port Locations	26
	Charge Pressure	27
	Charge Pressure System Test	28
	Tandem Pump Charge Pressure Test	28
	Complete Charge System Test	30
	High Pressure Relief Valve Test	32
	Gage Port and Relief Valve Locations	32
	Pressure Port Locations	34
	Case Pressure Test (Pump)	35
	Case Pressure Test (Motor)	35
	Suction Test	36
	Case Flow Test	36
	Ground Speed Circuit	37
	Operation	37
	Troubleshooting	37
	Ground Speed Display Does Not Function	38
	Troubleshooting Charts	40
	Windrower Will Not Shift Into High Range	40
	Windrower Will Not Shift Into Low Range	41
	Charge Pump	42
	Hydrostatic System	43
	Explanation Of Terms Used In Failure Analysis	46
	Lack Of Lubrication	46
	Operating At Excessive Temperature Levels	46
	Cavitation	46
	Overspeeding Of the Unit	46

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211441

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Parts Worn Or Scored From Contamination	46
	Abrasive Contaminants	46
	Plates Scored From Water In Oil (Non-particle Contaminants)	46
Minor Repairs		47
	Tandem Pump	48
	Port Locations	48
	Rear Half Pump Breakdown	49
	Front Half Pump Breakdown	51
	Shaft Seal Replacement	53
	Charge Pump Removal	54
	Charge Pump Inspection	55
	Charge Pump Assembly	56
	O-ring Seals	57
	Trunnion Seal (Control Shaft Side)	58
	Trunnion Cover (Plain)	60
	Tandem Pump Removal	61
	Tandem Pump Installation	64
	Ground Drive Motor	66
	Removal	66
	Inspection/Parts Breakdown	67
	Installation	69
	Start-up	70
	Maintenance	70
	Worm Shaft	71
	Removal	71
	Installation	72

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211441

Chapter 2 - Propulsion System

CONTENTS

Section	Description	Page
	Theory of Operation	2
	Pintle Arm Position Sensor (B-02)	3
	Removal	3
	Installation	3
	Testing	4
	Adjustment	5
	Propulsion Rotary Position Sensor (R-23)	6
	Removal	6
	Installation	6
	Testing	7
	MFH Rotary Position Sensor (R-18)	8
	Removal	8
	Installation	9
	Testing	10
	Neutral Adjustment	11

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211441

Chapter 3 - Active Calibrations

CONTENTS

Section	Description	Page
	Active Calibrations	2

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 84211441

Chapter 4 - MFH Calibration

CONTENTS

Section	Description	Page
	Dealer Setup Menu Navigation	2
	MFH Calibration	2

SECTION 33 - BRAKES AND CONTROLS

BOOK 1 - 84211441

Chapter 1 - Brakes and Controls

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	2
	Brake Assembly	2
	Removal	2
	Installation	5
	Disassembly	6
	Rotating, Stationary, and Primary Disc Assembly	12
	Installation	12
	Brake Bleeding Procedure	16

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211442

Chapter 1 - Hydraulic Systems

CONTENTS

Section	Description	Page
	Introduction	5
	System Component Locations	6
	Hydraulic Manifolds With Factory Draper	9
	Reading Diagram Symbols	10
	Hydraulic System Diagram	15
	Hydraulic System Operation	17
	Ground Drive	17
	Circuit Diagrams	18
	Header Drive	23
	Circuit Diagrams	24
	Theory of Operation	28
	Header Lift	28
	Circuit Diagrams	29
	Header Tilt	34
	Circuit Diagrams	34
	Auxiliary Engine mounted Hydraulic Pump (Optional)	37
	Control Valve Manifold	38
	Service Parts	38
	Valve Identification Codes	39
	Component Identification and Location	40
	Right-hand (RH) View	40
	Plan View	41
	Front View	42
	Rear View	43
	Bottom View	44
	Back View (Hidden Against Mounting Plate)	45
	Solenoid Engagement Chart	46
	Auxiliary Control Valve (Speed Control) Manifold	47
	Service Parts	47
	Valve Identification Codes	48
	Auxiliary control manifold	49
	Component Identification and Location	49
	Right-Hand (RH) View	49
	Top View	50
	Back View (Hidden Against Mounting Plate)	51

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211442

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Header Control Valve Manifold	52
	Service Parts	52
	Valve Identification Codes	53
	Header Drive With Reverser	54
	Component Identification and Location	54
	Right-hand (RH) View	54
	Front View	55
	Top View	56
	Cartridge Valves (Solenoid-operated)	57
	Main Control Manifold Valves	58
	Two-way Two-position (Normally Closed) Poppet Valves	58
	Three-way Two-position Spool Valve	60
	Two-way Two-position (Normally Open) Poppet Valve	61
	Two-way Two-position (Normally Open) Poppet Valve with Proportional Control	61
	(Normally Open) Pressure Reducing/Relieving Valves	62
	(Normally Open) Solenoid-operated Relief Valves	63
	(Normally Closed) Solenoid-operated Proportional Flow Control	63
	Main Manifold – Cartridge Torque Requirements	64
	Replacement	65
	Installation	66
	Solenoid Coils	67
	Removal	67
	Installation	67
	Cartridge Valves (Non-solenoid-operated)	68
	Direct-acting Flow Control Needle Valve	68
	Pilot-operated Relief Valve	69
	Differential-Pressure-Sensing Valve	70
	Header Control Manifold – Cartridge Torque Requirements	71
	Needle Valve (AD) and Piloted Relief Valves	72
	Replacement	72
	Adjustment	72

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211442

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Minor Repairs	73
	Accumulators	73
	Header Lift	73
	Removal	73
	Inspection	74
	Installation	74
	Major Components	76
	Header Drive Pump	76
	Removal	76
	Inspection	77
	Installation	77
	Splitter Gear Box (Below PIN 35065720)	78
	Disassembly	78
	Assembly	80
	Splitter Gear Box (PIN 35065720 and later)	86
	Disassembly	86
	Assembly	88
	Header Lift Pump	93
	Removal	93
	Disassembly	93
	Inspection	95
	Assembly	95
	Installation	98
	Auxiliary Engine Mounted Hydraulic Pump (optional)	99
	Removal	99
	Inspection	99
	Installation	99
	Start-Up Procedure	100
	Maintenance	100
	Cooling Circuit Bypass Pressure	101
	Temperatures	101

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211442

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting - Component	102
	General	102
	Reduced System Pressure	102
	Reduced Hydraulic Flow	102
	Excessive Noise	102
	Overheating	102
	Power Loss	102
	Explanation of Terms Used In Failure Analysis	103
	Parts Evaluation	104
	Discoloration	104
	Scratches or Grooves	104
	Rework	104
	Repeat Failures	104
	Header Drive System	105
	Header Drive Pump	107
	Header Drive Motor	108
	Charge Pump	109
	Service Techniques	110
	General	110
	Oil Level	110
	Hoses and Tubes	111
	O Ring Flat Face Seal Fittings	111
	O Ring Flat Face Seal Fitting Torque Values	111
	Adjustments	112
	Header Drive Motors	112
	Sauer-Danfoss Authorized Service Centers - North America	113
	Tilt Cylinder	117
	Removal	117
	Inspection	121
	Assembly	121

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84211442

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Lift Cylinders	125
	Removal	125
	Inspection	129
	Assembly	129
	Zero-Leak Plugs	133
	Removal	133
	Install	133
	Plug Torque Requirements	134
	Zero-Leak Plug to SAE J514 ORB Plug Cross Reference	134
	Hydraulic Reservoir Replacement	135
	Removal	135
	Installation	136
	Troubleshooting - System	138
	Header Drive System	138
	Further Troubleshooting Tips	141

SECTION 44 - REAR AXLE

BOOK 2 - 84211442

Chapter 1 - Non-Suspended Rear Axle

CONTENTS

Section	Description	Page
	Introduction	2
	Overview	2
	Specifications	3
	Special Tools	3
	Description of Operation	4
	Extensions and Axle Tube	4
	Adjustments	8
	Wheel Width	8
	Channel Widths (Spindle to Spindle)	8
	Axle Extension Position	8
	Overhaul	9
	Wheel, Axle Shaft and Hub	9
	Removal	9
	Inspection	11
	Installation	12
	Axle Support Fork	15
	Removal	15
	Inspection	15
	Installation	16
	Rear Axle Extension	18
	Removal	18
	Inspection	19
	Installation	19
	Axle Tube and Center Pivot Pin	20
	Removal	20
	Inspection	21
	Installation	22

SECTION 44 - REAR AXLE

BOOK 2 - 84211442

Chapter 2 - Suspended Rear Axle

CONTENTS

Section	Description	Page
	Introduction	2
	Overview	2
	Special Tools	2
	Specifications	3
	Description of Operation	4
	Extensions and Axle Tubes	4
	Adjustments	7
	Wheel Width	7
	Extension Widths (Spindle to Spindle)	7
	Axle Extension Position	7
	Overhaul	8
	Wheel, Axle Shaft and Hub	8
	Removal	8
	Inspection	10
	Installation	11
	Axle Support Fork	13
	Removal	13
	Inspection	13
	Installation	14
	Extension	15
	Removal	15
	Inspection	16
	Installation	17
	Air Spring	18
	Removal	18
	Inspection	19
	Installation	20
	Axle Tubes and Pivot Pins	21
	Removal	21
	Inspection	22
	Installation	23

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 84211442

Chapter 1 - Climate Control

CONTENTS

Section	Description	Page
	Specifications	5
	Compressor	5
	Refrigerant	5
	Refrigerant Oil	5
	Special Tools	5
	Description of Operation – Air Conditioning System	6
	The Basics of Refrigeration	6
	Air Conditioning Process	7
	R134a Refrigerant Information	8
	Refrigerant Ingredients	8
	Lubricants	8
	Refrigerant (R134a)	8
	Cab Air Flow	9
	System Components	11
	Compressor Pump	11
	Compressor Clutch (L-27)	11
	Air Conditioning Filters	12
	Removal/Replacement	12
	Recirculation Filter	14
	Removal	15
	Cleaning With Air	16
	Condenser	16
	Receiver/Drier	17
	Expansion Valve	18
	Valve Components	18
	Operation	19
	Port Identification	22
	Evaporator	22
	Blower Fan	22
	Description of Operation – Climate Controls	23

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 84211442

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Cab Environment	23
	Standard Temperature Control	23
	Vents	23
	Deluxe HVAC Control - Optional Factory Installed Only	24
	Climate Control	24
	Automatic Temperature Control (ATC)	24
	Temperature Control, 1	24
	Display Unit, 2	24
	Blower Speed Control, 3	25
	Defog Control, 4	25
	ATC Control, 5	26
	Troubleshooting the Temperature Control System	26
	Compressor Protection Switches	27
	High-pressure Cutout Switch (S-40)	27
	Low-pressure Cutout Switch (S-39)	27
	Troubleshooting and Servicing Air Conditioning System	28
	General Safety and Service Precautions	28
	Cleanliness	29
	Preliminary Troubleshooting and Testing	29
	Operational Checks	29
	Diagnosis Charts – Climate Control System	30
	Test Procedure: Stabilizing the System	30
	Test Ports	33
	Pressure/Temperature Relationships	34
	Leak Testing	34
	Refilling	35
	Contaminants	35
	General	35
	Preventing Mixing of Service Equipment	35
	Refrigerant Extraction and Recycling Equipment	35
	Using Extraction Equipment	36
	Using Recycling Equipment	36

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 84211442

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Recycling Vs. Reclaiming	36
	Containment of Air Conditioning Refrigerants	36
	Recovery	37
	Recharging/Refilling	37
	Using a Manifold Gauge Set	38
	Checking Refrigerant for Excess Air	38
	Containers for Storing Recycled Refrigerant	39
	Disposal of Empty or Near-empty Disposable Containers	39
	Refrigerant Oil	39
	General	39
	Contaminants	40
	Compressor Oil Level - Dipstick Method	41
	Pressure Diagnosis	43
	Manifold Gauge Readings and Interpretations	45
	Overhaul - Air Conditioning System	55
	Condenser	55
	Removal	55
	Repair or Replace	55
	Receiver/Drier	56
	Removal	56
	Installation	56
	High (S-40) Pressure Switch	57
	Removal	57
	Installation	57
	Low (S-39) Pressure Switch	57
	Removal	57
	Installation	58
	Blower Motor	59
	Removal	59
	Disassembly	60
	Assembly	62
	Installation	64

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 84211442

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Expansion Valve	66
	Removal	66
	Installation	67
	HVAC Cores	69
	Inspection and Cleaning	69
	Removal	69
	Installation	70
	Heater Core	71
	Removal	71
	Installation	73
	Evaporator Core	74
	Removal	74
	Installation	76
	Temperature Probe	77
	Removal	77
	Installation	78
	Temperature Sensor	80
	Removal	80
	Installation	80
	Heater Control Valve	81
	Removal	81
	Installation	82
	Compressor and Clutch	84
	Removal	84
	Installation	86
	Overhaul - Compressor	87
	Clutch and Seal Replacement	87
	Removal	87
	Inspection and Assembly	91

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Troubleshooting	3
	Fault Codes and Fault Finding	4
	Electrical Terms and Equipment	5
	Definitions	5
	Electrical System Components	7
	Electrical Components Chart	7
	Rocker Switches	13
	Momentary Rocker Switches	13
	Circuit Breakers	13
	Location of Circuit Breakers	14
	Fuses	15
	Fuse Panel Identification Tables	16
	Basic Circuitry/Component Testing	17
	Continuity Test for Open Circuits	17
	Continuity Test for Short to Ground	18
	Resistance Test for Electrical Components	19
	Measuring Voltage	20
	Diodes	21
	Diode Test Procedure	21
	Electro-hydraulic Solenoid Valve Coils	22
	Test Procedure	22
	Operational Check	22
	Relays	23
	Test Procedure	24
	Welding on the Machine	24
	Protecting The Electronic/Electrical Systems During Charging or Welding	25
	Wiring Harnesses and Connectors - All Models	28
	Connectors	28
	Harness Splices	28

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Fuses, Relays, and Switches	28
	Switch and Relay Contacts	28
	Grounds	28
	Power Sources	28
	Wire Harness Identification	28
	Wire Color Codes	29
	Ground Distribution System	30
	Ground Points	30
	Ground Point R	31
	Ground Point 1	31
	Ground Point 4	32
	Ground Point 5	33
	Ground Point 7	34
	Ground Point 8	34
	Electronic Components	35
	Function Monitoring, Machine Configuration, and Diagnostics Menus	36
	Selectable Functions Monitoring	36
	Configuration Mode	38
	Warning Mode	45
	Critical Warning Displays - Automatic Shutdown	45
	Warning Displays - No Shutdown	47
	Non-Critical Warning Displays	48
	Electronic Fault Codes	48
	System Monitoring	49

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 2 - Power Distribution

CONTENTS

Section	Description	Page
	Operation and Troubleshooting	2
	XCM Power	2
	Unswitched XCM Power	2
	Operation	2
	Switched XCM Power	3
	Operation	3
	Power Distribution	4
	Introduction	4
	Main Distribution Panel – Fuse Block	5
	Unswitched Power	6
	Independent Fuses	6
	Battery Busbar	6
	Switched Power	7
	Troubleshooting	8
	XCM Function and Configure Select Switches	20
	Operation	20
	Troubleshooting	20

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 3 - Environmental Control - Heating, Ventilation and Air-Conditioning

CONTENTS

Section	Description	Page
	Environment Control - Heating, Ventilation and Air-Conditioning	2
	Introduction	2
	ATC Fault Codes	3
	Fault #1 - High Pressure Switch	3
	Fault #2 - Low Pressure Switch	7
	Fault #3 - Blower Speed Select Potentiometer	11
	Fault #4 - Temperature Select Potentiometer	15
	Fault #7 - Cab Temperature Sensor	18
	Fault #8 - Evaporator Temperature Sensor	21
	Fault #9 - Outlet Temperature Sensor	24
	Fault #19 - No Data from Control Module	27
	Testing Display Data Line	28
	Testing ATC Control Switch and Mode Control Switch	32
	Testing ATC Control Panel Power Supply	35
	Component Troubleshooting	39
	Compressor Magnetic Clutch	39
	Testing Clutch Coil	39
	Testing Clutch Circuit	39
	Heater Valve Test	45
	Expansion Valve Testing	49
	Blower Motor Testing	49

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 4 - Lighting Systems

CONTENTS

Section	Description	Page
	Introduction	2
	Lamp Replacement Chart	2
	Flashing Lights and Turn Signals	2
	General	2
	Operation	2
	Troubleshooting	3
	Road Lights, Tail Lights and Console Light Circuits	10
	Operation	10
	Troubleshooting	10
	Work Lights Circuits	19
	Operation	19
	Troubleshooting	19
	Exit Lighting (Left Side Stubble Light)	27
	Operation	27
	Procedure	27
	Console and Dome Lights Circuits	28
	Operation	28
	Troubleshooting	28

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 5 - Engine Electrical Systems

CONTENTS

Section	Description	Page
	General Information	2
	Introduction	2
	Engine Functions for the XCM	2
	Starting Circuits	2
	Air Filter Restriction Switch Circuit	3
	Troubleshooting	4
	Fuel Level Sender Circuit	7
	Troubleshooting	9
	Coolant Temperature Circuit	11
	4-Line Display - Engine Coolant Temperature Scale	12
	A-Pillar Display - Engine Coolant Temperature Scale	12
	Troubleshooting	13
	Engine Fuel Solenoid Circuit	15
	Troubleshooting	15
	Engine Oil Pressure Sensor Circuit	18
	Troubleshooting	20
	Engine Starting Motor Circuit	22
	Cold-Start Injection Advance Circuit (KSB)	26
	Fuel Injection Pump Harness Connections	27
	Preheat Circuit (If Equipped)	28

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 6 - Charging Electrical Systems

CONTENTS

Section	Description	Page
	Introduction	3
	Battery	5
	Size and Rating	5
	How a Battery Works	5
	Battery Troubleshooting	5
	Determining the Cause of Failure	6
	Application and Installation	6
	Service History	6
	Visual Inspection	6
	Troubleshooting Summary	8
	Testing The Battery - General	9
	"Key Off" Current Drain	10
	Voltage Drop Test	11
	Charging the Battery	12
	Determining Battery Charge Procedure	12
	Slow Charge Procedure: For Batteries with Charges Below 11.0V	12
	Selecting Battery Charging Method	13
	Slow Charge Procedure	14
	Standard Charge Procedure: Preferred Method for Batteries with Voltage of 11 - 12.5 V	15
	Fast Charge Procedure: Alternative Method for Batteries with Voltages of 11 - 12.5 V	15
	Battery Charging Precautions	16
	Battery Specifications	16
	Alternator	17
	Charging System Excitation Circuit Operation	17
	Alternator and Voltage Regulator	17
	Maintaining the Alternator	18
	Alternator Connections	19
	Alternator and Voltage Regulator Precautions	19

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 6 - Charging Electrical Systems (Continued)

CONTENTS

Section	Description	Page
	Belts - Engine	20
	Belt Inspection (check every 1200 hours)	20
	Compressor Belt Replacement	21
	Drive Belt Replacement	22
	Welding On the Machine	23
	Troubleshooting	23
	Testing the Alternator	23
	Alternator Removal	25
	Alternator Installation	27

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 7 - Electro-Hydraulic Systems

CONTENTS

Section	Description	Page
	Hydraulic Oil Level Switch Circuit	2
	Troubleshooting	3
	Hydraulic Oil Temperature Switch Circuit	7
	Troubleshooting	8
	Hydraulic Charge Pressure Switch	12
	Troubleshooting	13
	Seat Occupied Circuit	17
	Troubleshooting	18
	Header Drive Circuit	20
	Header Reverse Circuit	23
	Master Hydraulic Solenoid Circuit	25
	Hydrostatic High Speed Circuit	27

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 8 - Dealer Setup/Diagnostics Tests

CONTENTS

Section	Description	Page
	Accessing Diagnostic Mode	2
	Inputs	3
	Engine Inputs	4
	Fuel Inputs	5
	Header Inputs	5
	Hydraulics Inputs	6
	Lights Inputs	7
	Preheat Inputs	7
	Propulsion Inputs	8
	PTO Inputs	8
	Reel Inputs	9
	Outputs	9
	Header Outputs	10
	Preheat Outputs	11
	Wiggle Test	11
	Display (LCD) Test	11
	Fault History Screen	12

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 9 - Audible Alarm

CONTENTS

Section	Description	Page
	Enable/Disable the Low and Medium Priority Fault/Warning Messages	2
	Select Audible Alarm Volume	2
	Audible Alarm Priorities	2
	Low Priority Warnings	2
	Medium Priority Warnings	2
	High Priority Warnings	3

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 84211443

Chapter 10 - Controller Area Network (CAN)

CONTENTS

Section	Description	Page
55 000	CAN Network Basics	2

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211444

Chapter 11 - Fault Codes

CONTENTS

Section	Description	Page
	Introduction	4
	Fault Code Format (SPN/FMI codes)	5
	SPN/FMI Code Charts	6
	FMI Codes	6
	SPN Codes	7
	Troubleshooting	9
	Engine Fault Codes	9
	Fault Code - 101-03 Oil Pressure Switch Shorted to High Source	9
	Fault Code - 101-04 Oil Pressure Switch Shorted to Low Source	11
	Fault Code - 102-03 Air Filter Restriction Switch Shorted to High Source	13
	Fault Code - 104-04 Engine Coolant Temp Sensor Shorted to Low Source	16
	Hydraulic Fault Codes	18
	Fault Code - 001-03 Hydraulic Charge Pressure Switch Shorted to High Source ..	18
	Fault Code - 002-03 Hydraulic Reservoir Level Sensor Shorted to High Source	21
	Fault Code - 003-03 Hydraulic Oil Temperature Switch Shorted to High Source	24
	Propulsion Fault Codes	27
	Fault Code - 404-03 MFH Position Sensor Shorted to High Source	27
	Fault Code - 404-04 MFH Position Sensor Shorted to Low Source	31
	Fault Code - 404-14 MFH Position Sensor Special Instructions	35
	Fault Code - 405-03 Pintle Arm Position Sensor Shorted to High Source	39
	Fault Code - 405-04 Pintle Arm Position Sensor Shorted to Low Source	43
	Fault Code - 406-03 Propulsion Cylinder Position Pot A Shorted to High Source	47
	Fault Code - 406-04 Propulsion Cylinder Position Pot A Shorted to Low Source	50
	Fault Code - 406-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration	53
	Fault Code - 407-03 Propulsion Cylinder Position Pot B Shorted to High Source	56
	Fault Code - 407-04 Propulsion Cylinder Position Pot B Shorted to Low Source	59
	Fault Code - 407-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration	62

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211444

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	Fault Code – 408-03 MFH Neutral Switch Shorted to High Source	65
	Fault Code – 408-07 MFH Neutral Switch Mechanical Out Of Range	67
	Fault Code – 409-03 Park Brake Switch Shorted to High Source	69
	Fault Code – 411-13 Propulsion Cylinder Position Pot A Needs Calibration	72
	Fault Code – 412-13 Propulsion Cylinder Position Pot A Needs Calibration	75
	Fault Code – 413-13 Propulsion Cylinder Position Pot A Needs Calibration	78
	Fault Code – 414-13 Propulsion Cylinder Position Pot B Needs Calibration	81
	Fault Code – 415-13 Propulsion Cylinder Position Pot B Needs Calibration	84
	Fault Code – 416-13 Propulsion Cylinder Position Pot B Needs Calibration	87
	Fault Code – 418-03 MFH Position Sensor Shorted to High Source	90
	Fault Code – 418-04 MFH Position Sensor Shorted to Low Source	94
	Fault Code – 418-13 MFH Position Sensor Needs Calibration	98
	Fault Code – 419-03 MFH Position Sensor Shorted to High Source	101
	Fault Code – 419-04 MFH Position Sensor Shorted to Low Source	105
	Fault Code – 419-07 MFH Position Sensor Mechanical Out Of Range	109
	Fault Code – 419-13 MFH Position Sensor Needs Calibration	112
	Fault Code – 420-03 MFH Position Sensor Shorted to High Source	115
	Fault Code – 420-04 MFH Position Sensor Shorted to Low Source	119
	Fault Code – 420-07 MFH Position Sensor Mechanical Out Of Range	123
	Fault Code – 420-13 MFH Position Sensor Needs Calibration	128
	Fault Code – 421-03 MFH Position Sensor Shorted to High Source	131
	Fault Code – 421-04 MFH Position Sensor Shorted to Low Source	135
	Fault Code – 421-13 MFH Position Sensor Needs Calibration	139
	Fault Code – 424-03 Propulsion Forward Solenoid L-14p Shorted to High Source	142
	Fault Code – 424-04 Propulsion Forward Solenoid L-14p Shorted to Low Source	147
	Fault Code – 424-13 Propulsion Forward Coil Needs Calibration	151
	Fault Code – 425-03 Propulsion Forward Solenoid L-14t Shorted to High Source	155
	Fault Code – 425-04 Propulsion Forward Solenoid L-14t Shorted to Low Source	160
	Fault Code – 425-13 Propulsion Forward Coil Needs Calibration	164

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 84211444

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	Fault Code - 426-03 Propulsion Reverse Solenoid L-15p Shorted to High Source	166
	Fault Code - 426-04 Propulsion Reverse Solenoid L-15p Shorted to Low Source	171
	Fault Code - 426-13 Propulsion Reverse Coil Needs Calibration	175
	Fault Code - 427-03 Propulsion Reverse Solenoid L-15t Shorted to High Source	177
	Fault Code - 427-04 Propulsion Reverse Solenoid L-15t Shorted to Low Source	182
	Fault Code - 427-13 Propulsion Reverse Coil Needs Calibration	184
	Fault Code - 428-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	186
	Fault Code - 429-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	190
	Fault Code - 430-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	194
	Fault Code - 431-03 MFH Position Sensor R-18 Shorted to High Source	197
	Fault Code - 432-03 MFH Position Sensor R-18 Shorted to High Source	200
	Fault Code - 433-03 Propulsion Cylinder Shorted to High Source	203
	Fault Code - 434-03 Propulsion Cylinder Shorted to High Source	205
	Fault Code - 435-03 Propulsion Enable Relay K-35 Shorted to High Source ..	207
	Fault Code - 435-04 Propulsion Enable Relay K-35 Shorted to Low Source ...	209
	PTO Fault Codes	211
	Fault Code - 200-12 Header Speed Sensor Bad Intelligent Device	211

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 84211445

Chapter 12 - Standard Wiring Harnesses

CONTENTS

Section	Description	Page
	Standard Wiring Harnesses	2
	Wiring Harnesses	2
	FM Harness (Front)	3
	FM Harness (Rear)	4
	FM Harness (Engine LH)	5
	FM Harness (Engine RH)	6
	LL and RL Harnesses (Lighting)	7
	CM Harness (Electrical Panel)	8
	CM Harness (Inside Cab)	9
	CM Harness (Seat and Right Hand Console)	10
	OR Harness (Outside Roof)	11
	RM Harness (Inside Roof)	12
	SC-D Harness (Steering Column)	13

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 84211445

Chapter 13 - Connector Information

CONTENTS

Section	Description	Page
	Connector Information	2

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 84211445

Chapter 14 - Troubleshooting Optional Equipment

CONTENTS

Section	Description	Page
	A-Pillar Display	2
	Wire Harness Routing/Connections	3
	Troubleshooting	4
	Cold Start (Thermostart)	7
	Circuit Description	7
	Switch Removal	7
	Switch Connections	8
	Wire Harness Routing	8
	Troubleshooting	9
	Deluxe Mirrors	12
	Circuit Description	12
	Switch Removal	13
	Switch Connectors and Circuitry	13
	Accessing the Outer Roof (OR) Harness	14
	Roof Panel Installation	15
	Wiring Harness Routing	15
	Troubleshooting	17
	Beacon Mount	21
	Circuit Description	21
	Switch Removal	21
	Connectors and Circuitry	22
	Accessing the Outer Roof (OR) Harness	23
	Roof Panel Installation	24
	Wiring Harness Routing and Connections	24
	Troubleshooting	26
	Adjustable Windrow Shields	29
	Circuit Description	29
	Windrow Shields Wide (Open)	30
	Windrow Shields Narrow (Close)	30
	Switch Connection	30
	Troubleshooting	31
	Position Sensor Potentiometer Test	32
	Sickle Header Drive Adapter (2300 and HS Series)	36
	Troubleshooting	37
	Draper Header Drive Adapter	37

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 84211445

Chapter 15 - Electrical Schematics

CONTENTS

Section	Description	Page
	Introduction	2
	Using Schematics	3
	Power	4
	Grounds	4
	Connections	4
	Harnesses	5
	Standard Harnesses	5
	Optional Harnesses	5
	Wire Harness Routing	6
	Circuit Identification	6
	Windrower Electrical Schematic	7

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 84211446

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Overview	2
	Draper Floatation	2
	Operation	2
	Overhaul	3
	Cut Height Cylinders	3
	Removal	3
	Inspection	4
	Installation	5
	Hydraulic System Check	6
	Hydraulic System Check with Header Installed	6
	Electrical System - Fuse and Relay	6
	Removal	6
	Switches	7
	Removal	7
	Solenoid Connectors	7
	Inspection	7
	Energized Components	11
	Header to Machine Connector	12
	Flow Divider	13
	Theory of Operation	13
	Logic	14
	Wire Harnesses	15
	Troubleshooting	36
	Diagnostic Charts	36

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 84211446

Chapter 2 - Factory Installed Draper Header

CONTENTS

Section	Description	Page
	Cartridge Valves	2
	Removal	2
	Installation	3
	Hose Routing - Cut Height Cylinders	4
	Hose Routing	5
	Removal	5
	Installation	5
	Hoses - Valve to Valve	5
	Removal	5
	Installation	5
	Relay Panel	8
	Wire Harnesses	9
	Schematics	11

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 84211446

Chapter 3 - Dealer Installed Draper Header

CONTENTS

Section	Description	Page
	Cartridge Valves	2
	Removal	2
	Installation	3
	Hose Routing - Cut Height Cylinders	4
	Hose Routing	5
	Removal	5
	Installation	5

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 84211446

Chapter 3 - Dealer Installed Draper Header (Continued)

CONTENTS

Section	Description	Page
	Hoses - Valve to Valve	5
	Removal	5
	Installation	5
	Wire Harnesses	10
	Fuse F-01 Power Chart	12
	Fuse F-02 Power Chart	12
	Schematics	13

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 84211446

Chapter 4 - Draper Setup

CONTENTS

Section	Description	Page
	Accessing Dealer Setup	2
	Multi-Function Handle (MFH)	2
	Dealer Setup Navigation	2
	Dealer Setup Menu	3
	DIA Options Menu	3
	User Configure Menu	4
	Draper Head PTO Calibration	5

SECTION 88 - OPTIONAL EQUIPMENT

BOOK 6 - 84211446

Chapter 1 - Optional Equipment

CONTENTS

Section	Description	Page
	Deluxe Cab Upgrade Package	2
	A-Pillar Display	2
	Automatic Temperature Control (ATC)	3
	Window Screen Kit	3
	Premium Speaker Kit	3
	Optional Kits	4
	Radio (A-17)	4
	Service Floodlight	4
	Cold Start Kit	5
	Deluxe Mirror	5
	Rearview Mirror	6
	Wiper/Washer	6
	Deluxe Header Tilt Indicator	6
	Beacon Mount Kit	7
	Adjustable Windrow Shield	7
	Model HDX2 Sickle Header Drive Adapter Kit	7
	Model HDX1 Sickle Header Drive Adapter Kit	8
	Draper Header Drive Adapter Kit	8
	Deck Shift Draper Header Adapter Kit	8
	Hydraulic Reel Drive	9
	Auxiliary Drive - Engine Mounted	9
	Rear Suspension Damper	9
	Rear Suspended Axle	10
	Weight Carrier Kit	10
	Swath Roller Hitch	10

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 6 - 84211446

Chapter 1 - WD1203

CONTENTS

Section	Description	Page
	Overview	3
	Deluxe Operator's Seat	3
	Controls	3
	Armrest Height	3
	Height/Weight Adjustments	3
	Backrest Angle	3
	Fore/Aft Position	3
	Lumbar Adjustment Knob	4
	Seat Belt	4
	Cleaning the Seat Belt	4
	Seat Air Compressor	4
	Height Adjustment	4
	Overhaul	5
	Seat Belt	5
	Replacing the Seat Belt	5
	Seat	5
	Removing the Seat from the Seat Base	5
	Disassembling the Seat	5
	Upper Seat	6
	Removing Armrest	6
	Armrest Adjustment	7
	Replacing Seat Height Switch	9
	Cushions	10
	Removing Bottom Seat Cushion	10
	Removing Seat Back Cushion	11
	Fore/Aft Adjustment Rails	11
	Removing Seat from Slide Rails	11
	Removing Slide Rails from Suspension	11
	Seat Suspension	12
	Disassembly of Seat Suspension	12
	Rubber Bumpers	15
	Inspection of the Seat Suspension Components	15



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 6 - 84211446

Chapter 1 - WD1203

CONTENTS

Section	Description	Page
	Release Valve/Solenoid	15
	Inspection	15
	Air Compressor	16
	Inspection	16
	Fore/Aft Adjustment Lever	17
	Inspection	17
	Damping Shock Absorber	18
	Inspection	18
	Scissors Suspension	18
	Inspection	18
	Circuit Description	19
	Troubleshooting	21
	Seat Air Compressor Does Not Run	21
	Cab Door	22
	Removal	22
	Installation	22
	Cab Door Handle	22
	Disassembly	22
	Installation	22
	Cab Floor Mat	23
	Removal	23
	Inspection	23
	Cab Suspension	23
	Remove and Replace - Front Cab Mounts	24
	Remove and Replace - Rear Cab Suspension	25
	Console	25
	Removal	25
	Installation	26
	Overhead Switches	26
	Removal/Installation	27
	Stereo System	27
	Removal/Installation	28

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 6 - 84211446

Chapter 1 - WD1203

CONTENTS

Section	Description	Page
	Wiper Motor/Washer	29
	Removal	29
	Installation	33
	Steering Column	36
	Cover Removal	36
	Cover Installation	37
	Column Removal	39
	Column Installation	39
	Cab Roof	40
	Removal	40
	Inspection	43
	Installation	43
	Safety Decals	46

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>