
WD1203 REPAIR MANUAL

COMPLETE CONTENTS

| | |
|---|----|
| SECTION 00 - GENERAL INFORMATION | 2 |
| SECTION 10 - ENGINE | 3 |
| SECTION 25 - FRONT MECHANICAL DRIVE | 5 |
| SECTION 29 - HYDROSTATIC TRANSMISSION | 6 |
| SECTION 33 - BRAKES AND CONTROLS | 10 |
| SECTION 35 - HYDRAULIC SYSTEMS | 11 |
| SECTION 44 - REAR AXLE | 16 |
| SECTION 50 - CLIMATE CONTROL | 18 |
| SECTION 55 - ELECTRICAL SYSTEMS | 22 |
| SECTION 58 - HEADER ATTACHMENTS | 39 |
| SECTION 88 - OPTIONAL EQUIPMENT | 42 |
| SECTION 90 - PLATFORM, CAB AND DECALS | 43 |

The following pages are the collation of the contents pages from each section and chapter of the WD1203 Repair manual. Complete Repair part # 87744701.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the WD1203 Self-Propelled Windrowers.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87744702

Chapter 1 - General Information

CONTENTS

| Section | Description | Page |
|---------|--|------|
| 00 000 | Precautionary Statements | 2 |
| | Safety | 3 |
| | General Safety Information | 5 |
| | Protecting the Electrical Systems During Charging or Welding | 7 |
| | Introduction | 8 |
| | About Improvements | 8 |
| | Product Identification Numbers (PIN) | 9 |
| | Engine PIN Number | 9 |
| | Company Policy | 10 |
| | Parts and Accessories | 10 |
| | Lubrication | 10 |
| | Minimum Hardware Tightening Torques | 11 |
| | Installation of Adjustable Fittings in Straight Thread O-ring Bosses | 13 |
| | Standard Torque Data for Hydraulic Tubes and Fittings | 13 |
| | Pipe Thread Fitting Torque | 14 |
| | Installation of ORFS (O-ring Flat Faced) Fittings | 14 |
| | Specifications | 15 |

SECTION 10 - ENGINE

BOOK 1 - 87744702

Chapter 1 - Engine

CONTENTS

| Section | Description | Page |
|---------|--------------------------------|------|
| | Description of Operation | 2 |
| | Specifications | 2 |
| | Overhaul | 3 |
| | Engine | 3 |
| | Removal | 3 |
| | Installation | 9 |
| | Troubleshooting | 15 |

SECTION 10 - ENGINE

BOOK 1 - 87744702

Chapter 2 - Fuel System

CONTENTS

| Section | Description | Page |
|---------|---------------------------------|------|
| | Fuel System | 2 |
| | Injection System Bleeding | 2 |
| | Fuel Tanks | 3 |
| | Removal | 3 |
| | Install | 7 |

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

SECTION 10 - ENGINE

BOOK 1 - 87744702

Chapter 3 - Air Intake

CONTENTS

| Section | Description | Page |
|----------------|--------------------------------|-------------|
| | Description of Operation | 2 |
| | Air Intake System | 2 |
| | Specifications | 3 |
| | Air Cleaner | 3 |
| | Description of Operation | 4 |
| | Air Filter | 4 |
| | Inspection | 4 |
| | Removal | 5 |
| | Installation | 6 |
| | Troubleshooting | 8 |

SECTION 10 - ENGINE

BOOK 1 - 87744702

Chapter 4 - Cooling System

CONTENTS

| Section | Description | Page |
|----------------|---------------------------------|-------------|
| | Specifications | 2 |
| | Cooling System | 2 |
| | Overview - Cooling System | 3 |
| | Description of Operation | 5 |
| | Radiator | 6 |
| | Removal | 6 |
| | Installation | 8 |
| | Troubleshooting | 11 |

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 1 - 87744702

Chapter 1 - Front Mechanical Drive

CONTENTS

| Section | Description | Page |
|----------------|--------------------------------|-------------|
| | Description of Operation | 2 |
| | Special Tools | 2 |
| | Overhaul | 6 |
| | Front Mechanical Drive | 6 |
| | Removal | 6 |
| | Installation | 9 |
| | Planetary Gearbox Drive | 12 |
| | Disassembly | 13 |
| | Assembly | 17 |

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 1 - Ground Drive

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Specifications | 4 |
| | Hydrostatic Transmission Identification | 5 |
| | Torque Specifications | 6 |
| | Torque Chart | 6 |
| | Motor Area | 6 |
| | Description Of Operation | 7 |
| | Pumps | 8 |
| | High-pressure Relief Valves | 9 |
| | Check Valves | 9 |
| | Charge Pump | 10 |
| | Charge Relief Valve (Pump) | 10 |
| | Header Lift Pump | 10 |
| | Motors | 10 |
| | Variable Displacement Motor | 10 |
| | Reservoir | 12 |
| | Oil Flow | 12 |
| | Neutral | 12 |
| | Forward/Reverse | 12 |
| | WD1203 Hydraulic System Diagram | 13 |
| | WD1203 Hydraulic System Diagram - Dealer Installed Draper Kit | 15 |
| | Solenoid Valve (2-speed Drive Motor Only) | 17 |
| | Low-range Operation | 17 |
| | High-range Operation | 17 |
| | Cooling Circuit | 17 |
| | Relief Valve | 17 |
| | Operation | 17 |
| | Linkage | 18 |
| | Operation | 18 |
| | Sauer-danfoss Authorized Service Centers - North America | 19 |
| | Troubleshooting | 23 |
| | Excessive Noise | 23 |

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 1 - Ground Drive (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Overheating Transmissions | 23 |
| | Loss Of Propulsion | 23 |
| | Control Linkage Inspection | 24 |
| | High-pressure Relief Valve Check | 24 |
| | Charge Pump Relief Valve | 25 |
| | Check Valve | 25 |
| | Pressure Testing | 26 |
| | Port Locations | 28 |
| | Charge Pressure | 29 |
| | Charge Pressure System Test | 30 |
| | Tandem Pump Charge Pressure Test | 30 |
| | Complete Charge System Test | 32 |
| | High Pressure Relief Valve Test | 34 |
| | Gage Port and Relief Valve Locations | 34 |
| | Pressure Port Locations | 36 |
| | Case Pressure Test (Pump) | 37 |
| | Case Pressure Test (Motor) | 37 |
| | Suction Test | 38 |
| | Case Flow Test | 38 |
| | Ground Speed Circuit | 39 |
| | Operation | 39 |
| | Troubleshooting | 39 |
| | Ground Speed Display Does Not Function | 40 |
| | Troubleshooting Charts | 42 |
| | Windrower Will Not Shift Into High Range | 42 |
| | Windrower Will Not Shift Into Low Range | 43 |
| | Charge Pump | 44 |
| | Hydrostatic System | 45 |
| | Explanation Of Terms Used In Failure Analysis | 48 |
| | Lack Of Lubrication | 48 |
| | Operating At Excessive Temperature Levels | 48 |

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 1 - Ground Drive (Continued)

CONTENTS

| Section | Description | Page |
|--|---|------|
| | Cavitation | 48 |
| | Overspeeding Of the Unit | 48 |
| | Parts Worn Or Scored From Contamination | 48 |
| | Abrasive Contaminants | 48 |
| | Plates Scored From Water In Oil (Non-particle Contaminants) | 48 |
| Minor Repairs | | 49 |
| Tandem Pump | | 50 |
| Port Locations | | 50 |
| Rear Half Pump Breakdown | | 51 |
| Front Half Pump Breakdown | | 53 |
| Shaft Seal Replacement | | 55 |
| Charge Pump Removal | | 56 |
| Charge Pump Inspection | | 57 |
| Charge Pump Assembly | | 58 |
| O-ring Seals | | 59 |
| Trunnion Seal (Control Shaft Side) | | 60 |
| Trunnion Cover (Plain) | | 62 |
| Tandem Pump Removal | | 63 |
| Tandem Pump Installation | | 66 |
| Ground Drive Motor | | 68 |
| Removal | | 68 |
| Inspection/Parts Breakdown | | 69 |
| Installation | | 71 |
| Start-up | | 72 |
| Maintenance | | 72 |
| Worm Shaft | | 73 |
| Removal | | 73 |
| Installation | | 74 |

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 2 - Propulsion System

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Theory of Operation | 2 |
| | Pintle Arm Position Sensor (B-02) | 3 |
| | Removal | 3 |
| | Installation | 3 |
| | Testing | 4 |
| | Adjustment | 5 |
| | Propulsion Rotary Position Sensor (R-23) | 6 |
| | Removal | 6 |
| | Installation | 6 |
| | Testing | 7 |
| | MFH Rotary Position Sensor (R-18) | 8 |
| | Removal | 8 |
| | Installation | 9 |
| | Testing | 10 |
| | Neutral Adjustment | 11 |

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 3 - Active Calibrations

CONTENTS

| Section | Description | Page |
|---------|---------------------------|------|
| | Active Calibrations | 2 |

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 1 - 87744702

Chapter 4 - MFH Calibration

CONTENTS

| Section | Description | Page |
|---------|------------------------------------|------|
| | Dealer Setup Menu Navigation | 2 |
| | MFH Calibration | 2 |

SECTION 33 - BRAKES AND CONTROLS

BOOK 1 - 87744702

Chapter 1 - Brakes and Controls

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Description of Operation | 2 |
| | Special Tools | 2 |
| | Overhaul | 2 |
| | Brake Assembly | 2 |
| | Removal | 2 |
| | Installation | 5 |
| | Disassembly | 6 |
| | Rotating, Stationary, and Primary Disc Assembly | 12 |
| | Installation | 12 |
| | Brake Bleeding Procedure | 16 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87744703

Chapter 1 - Hydraulic Systems

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Introduction | 5 |
| | System Component Locations | 6 |
| | Bleeding the Hydraulic System | 7 |
| | Hydraulic Manifolds with Factory Draper | 9 |
| | Reading Diagram Symbols | 10 |
| | Hydraulic System Diagram | 15 |
| | Hydraulic System Operation | 17 |
| | Ground Drive | 17 |
| | Header Drive | 23 |
| | Theory of Operation | 28 |
| | Header Lift | 28 |
| | Header Tilt | 34 |
| | Auxiliary Engine Mounted Hydraulic Pump (optional) | 37 |
| | Control Valve Manifold | 38 |
| | Service Parts | 38 |
| | Valve Identification Codes | 39 |
| | Component Identification and Location | 40 |
| | Right-hand (RH) View | 40 |
| | Top View | 41 |
| | Front View | 42 |
| | Rear View | 43 |
| | Bottom View | 44 |
| | Back View (Hidden Against Mounting Plate) | 45 |
| | Solenoid Engagement Chart | 46 |
| | Auxiliary Control Valve (Speed Control) Manifold | 47 |
| | Service Parts | 47 |
| | Valve Identification Codes | 48 |
| | Auxiliary Control Valve Manifold | 49 |
| | Component Identification and Location | 49 |
| | Right-Hand (RH) View | 49 |
| | Top View | 50 |
| | Back View (Hidden Against Mounting Plate) | 51 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87744703

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Header Control Valve Manifold | 52 |
| | Service Parts | 52 |
| | Valve Identification Codes | 53 |
| | Header Drive With Reverser | 54 |
| | Component Identification and Location | 54 |
| | Right-hand (RH) View | 54 |
| | Front View | 55 |
| | Top View | 56 |
| | Cartridge Valves (Solenoid-operated) | 57 |
| | Main Control Manifold Valves | 58 |
| | Two-way Two-position (Normally Closed) Poppet Valves | 58 |
| | Three-way Two-position Spool Valve | 60 |
| | Two-way Two-position (Normally Open) Poppet Valve | 61 |
| | (Normally Open) Pressure Reducing/Relieving Valves | 62 |
| | (Normally Open) Solenoid-operated Relief Valves | 63 |
| | (Normally Closed) Solenoid-operated Proportional Flow Control | 63 |
| | Replacement | 64 |
| | Main Manifold - Cartridge Torque Requirements | 65 |
| | Installation | 66 |
| | Solenoid Coils | 67 |
| | Removal | 67 |
| | Installation | 67 |
| | Cartridge Valves (Non-Solenoid-Operated) | 68 |
| | Direct-acting Flow Control Needle Valve | 68 |
| | Pilot-operated Relief Valve | 69 |
| | Differential-Pressure-Sensing Valve | 70 |
| | Header Control Manifold - Cartridge Torque Requirements | 71 |
| | Needle Valve (AD) and Piloted Relief Valves | 72 |
| | Replacement | 72 |
| | Adjustment | 72 |
| | Minor Repairs | 73 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87744703

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Accumulators - Header Lift | 73 |
| | Removal | 73 |
| | Inspection | 74 |
| | Installation | 74 |
| | Accumulator - Surge Suppression | 76 |
| | Specifications | 76 |
| | Breakdown | 77 |
| | Pre-Charge | 78 |
| | Checking | 78 |
| | Charging | 79 |
| | Removal | 80 |
| | Installation | 80 |
| | Major Components | 81 |
| | Header Drive Pump | 81 |
| | Removal | 81 |
| | Inspection | 82 |
| | Installation | 82 |
| | Splitter Gear Box | 83 |
| | Disassembly | 83 |
| | Assembly | 85 |
| | Adjustment Instructions | 90 |
| | Header Drive System Pressure Adjustment (Valve L-30) | 91 |
| | Pump Flow | 98 |
| | Header Lift Pump | 99 |
| | Removal | 99 |
| | Disassembly | 99 |
| | Inspection | 101 |
| | Assembly | 101 |
| | Installation | 104 |
| | Adjustment Instructions | 105 |
| | Header Lift System Pressure Adjustment (Valve L-03) | 106 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87744703

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Auxiliary Engine Mounted Hydraulic Pump (optional) | 111 |
| | Removal | 111 |
| | Inspection | 111 |
| | Installation | 111 |
| | Start-up Procedure | 112 |
| | Maintenance | 112 |
| | Cooling Circuit Bypass Pressure | 113 |
| | Temperatures | 113 |
| | Troubleshooting - Component | 114 |
| | General | 114 |
| | Reduced System Pressure | 114 |
| | Reduced Hydraulic Flow | 114 |
| | Excessive Noise | 114 |
| | Overheating | 114 |
| | Power Loss | 114 |
| | Explanation of Terms Used in Failure Analysis | 115 |
| | Parts Evaluation | 116 |
| | Discoloration | 116 |
| | Scratches or Grooves | 116 |
| | Rework | 116 |
| | Repeat Failures | 116 |
| | Header Drive System | 117 |
| | Header Drive Pump | 120 |
| | Charge Pump | 121 |
| | Header Drive Motor | 122 |
| | Service Techniques | 123 |
| | General | 123 |
| | Oil Level | 123 |
| | Hoses and Tubes | 124 |
| | O Ring Flat Face Seal Fittings | 124 |
| | O Ring Flat Face Seal Fitting Torque Values | 124 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87744703

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

| Section | Description | Page |
|----------------|--|-------------|
| | Adjustments | 125 |
| | Header Drive Motors | 125 |
| | Sauer-Danfoss Authorized Service Centers - North America | 126 |
| | Tilt Cylinder | 130 |
| | Removal | 130 |
| | Inspection | 134 |
| | Assembly | 134 |
| | Lift Cylinders | 138 |
| | Removal | 138 |
| | Inspection | 142 |
| | Assembly | 142 |
| | Zero-Leak Plugs | 146 |
| | Removal | 146 |
| | Install | 146 |
| | Plug Torque Requirements | 147 |
| | Zero-Leak Plug to SAE J514 ORB Plug Cross Reference | 147 |
| | Hydraulic Reservoir Replacement | 148 |
| | Removal | 148 |
| | Installation | 149 |
| | Troubleshooting - System | 151 |
| | Header Drive System | 151 |
| | Further Troubleshooting Tips | 154 |

SECTION 44 - REAR AXLE

BOOK 2 - 87744703

Chapter 1 - Non-Suspended Rear Axle

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Introduction | 2 |
| | Overview | 2 |
| | Specifications | 3 |
| | Special Tools | 3 |
| | Description of Operation | 4 |
| | Extensions and Axle Tube | 4 |
| | Adjustments | 8 |
| | Wheel Width | 8 |
| | Channel Widths (Spindle to Spindle) | 8 |
| | Axle Extension Position | 8 |
| | Overhaul | 9 |
| | Wheel, Axle Shaft and Hub | 9 |
| | Removal | 9 |
| | Inspection | 11 |
| | Installation | 12 |
| | Axle Support Fork | 15 |
| | Removal | 15 |
| | Inspection | 15 |
| | Installation | 16 |
| | Rear Axle Extension | 18 |
| | Removal | 18 |
| | Inspection | 19 |
| | Installation | 19 |
| | Axle Tube and Center Pivot Pin | 20 |
| | Removal | 20 |
| | Inspection | 21 |
| | Installation | 22 |

SECTION 44 - REAR AXLE

BOOK 2 - 87744703

Chapter 2 - Suspended Rear Axle

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Introduction | 2 |
| | Overview | 2 |
| | Special Tools | 2 |
| | Specifications | 3 |
| | Description of Operation | 4 |
| | Extensions and Axle Tubes | 4 |
| | Adjustments | 7 |
| | Wheel Width | 7 |
| | Extension Widths (Spindle to Spindle) | 7 |
| | Axle Extension Position | 7 |
| | Overhaul | 8 |
| | Wheel, Axle Shaft and Hub | 8 |
| | Removal | 8 |
| | Inspection | 10 |
| | Installation | 11 |
| | Axle Support Fork | 13 |
| | Removal | 13 |
| | Inspection | 13 |
| | Installation | 14 |
| | Extension | 15 |
| | Removal | 15 |
| | Inspection | 16 |
| | Installation | 17 |
| | Air Spring | 18 |
| | Removal | 18 |
| | Inspection | 19 |
| | Installation | 20 |
| | Axle Tubes and Pivot Pins | 21 |
| | Removal | 21 |
| | Inspection | 22 |
| | Installation | 23 |

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 87744703

Chapter 1 - Climate Control

CONTENTS

| Section | Description | Page |
|---------|-------------------------------------|------|
| | Specifications | 4 |
| | Compressor | 4 |
| | Refrigerant | 4 |
| | Refrigerant Oil | 4 |
| | Special Tools | 4 |
| | Description of Operation | 5 |
| | The Basics of Refrigeration | 5 |
| | Air Conditioning Process | 6 |
| | R134a Refrigerant Information | 7 |
| | Refrigerant Ingredients | 7 |
| | Lubricants | 7 |
| | Refrigerant (R134a) | 7 |
| | Cab Air Flow | 8 |
| | System Components | 10 |
| | Compressor Pump | 10 |
| | Compressor Clutch (L-27) | 10 |
| | Air Conditioning Filters | 11 |
| | Removal/Replacement | 11 |
| | Recirculation Filter | 13 |
| | Removal | 14 |
| | Cleaning with Air | 15 |
| | Condenser | 15 |
| | Receiver/Drier | 16 |
| | Expansion Valve | 17 |
| | Valve Components | 17 |
| | Operation | 18 |
| | Port Identification | 21 |
| | Evaporator | 21 |
| | Blower Fan | 21 |

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 87744703

Chapter 1 - Climate Control (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Description of Operation - Climate Controls | 22 |
| | Control Panel - Manual Temperature Control - (A-05) | 22 |
| | Blower Fan Switch | 22 |
| | Temperature Control Switch | 22 |
| | Control Panel - (ATC) Automatic Temperature Control (if equipped) | 23 |
| | Control Operation Specifications | 23 |
| | ATC Operator Controls | 23 |
| | ON/OFF | 23 |
| | LED Display | 23 |
| | AUTO | 23 |
| | DEF | 23 |
| | Fan UP/DOWN | 24 |
| | Temperature UP/DOWN | 24 |
| | EXT (External Temperature) | 24 |
| | ECON (Economy Mode) | 24 |
| | Celsius/Fahrenheit button | 24 |
| | Compressor Protection Switches | 25 |
| | High-pressure Cutout Switch (S-40) | 25 |
| | Low-pressure Cutout Switch (S-39) | 25 |
| | Troubleshooting and Servicing Air Conditioning System | 26 |
| | General Safety and Service Precautions | 26 |
| | Cleanliness | 27 |
| | Preliminary Troubleshooting and Testing | 27 |
| | Operational Checks | 27 |
| | ATC Troubleshooting Fault Code Chart | 28 |
| | Display Fault Codes | 28 |
| | Advanced Diagnostics | 31 |
| | Diagnosis Charts - Air Conditioning System | 35 |
| | Test Procedure: Stabilizing the System | 39 |
| | Test Ports | 39 |

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 87744703

Chapter 1 - Climate Control (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Pressure/Temperature Relationships | 40 |
| | Leak Testing | 40 |
| | Refilling | 40 |
| | Contaminants | 41 |
| | General | 41 |
| | Preventing Mixing of Service Equipment | 41 |
| | Refrigerant Extraction And Recycling Equipment | 41 |
| | Using Extraction Equipment | 42 |
| | Using Recycling Equipment | 42 |
| | Recycling vs. Reclaiming | 42 |
| | Containment of Air Conditioning Refrigerants | 42 |
| | Recovery | 43 |
| | Flushing | 43 |
| | Recharging/Refilling | 43 |
| | Using a Manifold Gauge Set | 44 |
| | Checking Refrigerant for Excess Air | 44 |
| | Containers for Storing Recycled Refrigerant | 45 |
| | Disposal of Empty or Near-Empty Disposable Containers | 45 |
| | Applicable SAE Standards | 45 |
| | Gauge Readings | 46 |
| | Manifold Gauge Readings and Interpretations | 50 |
| | Performance Test Examples | 50 |
| | Overhaul | 61 |
| | Condenser | 61 |
| | Removal | 61 |
| | Inspection and Repair | 61 |
| | Installation | 61 |
| | Receiver/Drier | 62 |
| | Removal | 62 |
| | Installation | 62 |
| | High (S-40) Pressure Switches | 62 |
| | Removal | 62 |
| | Installation | 62 |

SECTION 50 - CLIMATE CONTROL

BOOK 2 - 87744703

Chapter 1 - Climate Control (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Low (S-39) Pressure Switches | 62 |
| | Removal | 62 |
| | Installation | 62 |
| | Blower Motor | 63 |
| | Removal | 63 |
| | Inspection | 65 |
| | Assembly | 66 |
| | Installation | 67 |
| | Blower Fan Resistor | 69 |
| | Removal | 69 |
| | Installation | 69 |
| | Expansion Valve | 70 |
| | Removal | 70 |
| | Installation | 70 |
| | HVAC Cores | 71 |
| | Inspection and Cleaning | 71 |
| | Removal | 71 |
| | Installation | 72 |
| | Heater Core and/or Evaporator Core | 74 |
| | Removal | 74 |
| | Inspection | 75 |
| | Installation | 76 |
| | Compressor and Clutch - Special Tools | 79 |
| | Compressor Clutch Components | 79 |
| | Removal | 79 |
| | Installation | 80 |
| | Checking Compressor Oil for Contamination | 81 |
| | Adding Compressor Oil | 81 |
| | Overhaul Compressor | 82 |
| | Clutch and Seal Replacement | 82 |
| | Removal | 82 |
| | Inspection and Assembly | 86 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 1 - General Information

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Introduction | 3 |
| | Troubleshooting | 3 |
| | Fault Codes and Fault Finding | 4 |
| | Electrical Terms and Equipment | 5 |
| | Definitions | 5 |
| | Electrical System Components | 7 |
| | Electrical Components Chart | 7 |
| | Rocker Switches | 13 |
| | Momentary Rocker Switches | 13 |
| | Circuit Breakers | 13 |
| | Location of Circuit Breakers | 14 |
| | Fuses | 15 |
| | Fuse Panel Identification Tables | 16 |
| | Basic Circuitry/Component Testing | 17 |
| | Continuity Test for Open Circuits | 17 |
| | Continuity Test for Short to Ground | 18 |
| | Resistance Test for Electrical Components | 19 |
| | Measuring Voltage | 20 |
| | Diodes | 21 |
| | Test Procedure | 21 |
| | Electro-hydraulic Solenoid Valve Coils | 22 |
| | Test Procedure | 22 |
| | Operational Check | 22 |
| | Relays | 23 |
| | Test Procedure | 24 |
| | Welding on the Machine | 24 |
| | Protecting The Electronic/Electrical Systems During Charging or Welding | 25 |
| | Wiring Harnesses and Connectors - All Models | 28 |
| | Connectors | 28 |
| | Harness Splices | 28 |
| | Fuses, Relays, and Switches | 28 |
| | Switch and Relay Contacts | 28 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 1 - General Information (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Grounds | 28 |
| | Power Sources | 28 |
| | Wire Harness Identification | 28 |
| | Wire Color Codes | 29 |
| | Ground Distribution System | 30 |
| | Ground Points | 30 |
| | Ground Point R | 31 |
| | Ground Point 1 | 31 |
| | Ground Point 4 | 32 |
| | Ground Point 5 | 33 |
| | Ground Point 7 | 34 |
| | Ground Point 8 | 34 |
| | Electronic Components | 35 |
| | Function Monitoring, Machine Configuration, and Diagnostics Menus | 36 |
| | Selectable Functions Monitoring | 36 |
| | Machine Configuration/User Setup Menu | 38 |
| | Critical Warning Displays - Automatic Shutdown | 44 |
| | Critical Warning Displays - No Shutdown | 46 |
| | Non-Critical Warning Displays | 47 |
| | Electrical Fault Codes | 47 |
| | System Monitoring | 48 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 2 - Power Distribution

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Operation and Troubleshooting | 2 |
| | XCM Power | 2 |
| | Unswitched XCM Power | 2 |
| | Operation | 2 |
| | Switched XCM Power | 3 |
| | Operation | 3 |
| | Power Distribution | 4 |
| | Introduction | 4 |
| | Main Distribution Panel – Fuse Block | 5 |
| | Unswitched Power | 6 |
| | Independent Fuses | 6 |
| | Battery Busbar | 6 |
| | Switched Power | 7 |
| | Troubleshooting | 8 |
| | XCM Function and Configure Select Switches | 15 |
| | Operation | 15 |
| | Troubleshooting | 15 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 3 - Air Conditioning Systems

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Air Conditioning Systems | 3 |
| | Introduction | 3 |
| | General Principles of Operation (Manual and ATC Systems) | 3 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 3 - Air Conditioning Systems

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Manual HVAC System (Standard) | 5 |
| | Operation | 5 |
| | Troubleshooting | 5 |
| | A/C Clutch Circuit (Manual HVAC) | 9 |
| | Operation | 9 |
| | Troubleshooting | 9 |
| | Automatic (ATC) HVAC System | 11 |
| | Operation | 11 |
| | Control Operation Specifications | 11 |
| | General Operation | 12 |
| | Heater Operation | 12 |
| | Heater Operation - Sequence of Events | 12 |
| | Defrosting/Defogging Operation | 13 |
| | Air Conditioner (A/C) Operation | 13 |
| | Ventilation | 13 |
| | System Component Functions | 13 |
| | Automatic Fan Speed Control (AUTO) | 13 |
| | Manual Mode Fan Speed Control (Up/Down) | 13 |
| | A/C Compressor Clutch Control | 13 |
| | Heater Water Valve | 14 |
| | Cab Air Temperature Sensor | 14 |
| | Evaporator Probe | 14 |
| | ATC HVAC Component Usage | 14 |
| | Troubleshooting | 15 |
| | Fault Codes | 15 |
| | Advanced Diagnostics Display Mode | 18 |
| | Revision Level | 19 |
| | Setting Parameters | 20 |
| | ATC Troubleshooting Quick-Checks | 20 |
| | A/C Clutch Circuit (ATC HVAC) | 26 |
| | Operation | 26 |
| | Troubleshooting | 26 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 4 - Lighting Systems

CONTENTS

| Section | Description | Page |
|----------------|--|-------------|
| | Introduction | 2 |
| | Lamp Replacement Chart | 2 |
| | Turn Signals and Hazard Lights | 2 |
| | Description | 2 |
| | Operation | 3 |
| | Troubleshooting | 3 |
| | Road Lights, Tail Lights and Console Light | 12 |
| | Operation | 12 |
| | Troubleshooting | 12 |
| | Work Lights | 26 |
| | Operation | 26 |
| | Exit Lighting (Left Side Stubble Light) | 26 |
| | Operation | 26 |
| | Functional Check | 27 |
| | Procedure | 27 |
| | Troubleshooting | 27 |
| | Console and Dome Lights | 40 |
| | Operation | 40 |
| | Troubleshooting | 40 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 5 - Engine Electrical Systems

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | General Information | 2 |
| | Introduction | 2 |
| | Engine Functions for the XCM | 2 |
| | Starting Circuits | 2 |
| | Air Filter Restriction Switch Circuit | 3 |
| | Troubleshooting | 4 |
| | Fuel Level Sender Circuit | 7 |
| | Troubleshooting | 9 |
| | Coolant Temperature Circuit | 11 |
| | 4-Line Display - Engine Coolant Temperature Scale | 12 |
| | A-Pillar Display - Engine Coolant Temperature Scale | 12 |
| | Troubleshooting | 13 |
| | Engine Fuel Solenoid Circuit | 15 |
| | Troubleshooting | 15 |
| | Engine Oil Pressure Sensor Circuit | 18 |
| | Troubleshooting | 20 |
| | Engine Starting Motor Circuit | 22 |
| | Cold-Start Injection Advance Circuit (KSB) | 26 |
| | Fuel Injection Pump Harness Connections | 27 |
| | Preheat Circuit (If Equipped) | 28 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 6 - Charging Electrical Systems

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Introduction | 3 |
| | Battery | 5 |
| | Size and Rating | 5 |
| | How a Battery Works | 5 |
| | Battery Troubleshooting | 5 |
| | Determining the Cause of Failure | 6 |
| | Application and Installation | 6 |
| | Service History | 6 |
| | Visual Inspection | 6 |
| | Troubleshooting Summary | 8 |
| | Testing The Battery - General | 9 |
| | "Key Off" Current Drain | 10 |
| | Voltage Drop Test | 11 |
| | Charging the Battery | 12 |
| | Determining Battery Charge Procedure | 12 |
| | Slow Charge Procedure: For Batteries with Charges Below 11.0V | 12 |
| | Selecting Battery Charging Method | 13 |
| | Slow Charge Procedure | 14 |
| | Standard Charge Procedure: Preferred Method for Batteries with Voltage of 11 - 12.5 V | 15 |
| | Fast Charge Procedure: Alternative Method for Batteries with Voltages of 11 - 12.5 V | 15 |
| | Battery Charging Precautions | 16 |
| | Battery Specifications | 16 |
| | Alternator | 17 |
| | Charging System Excitation Circuit Operation | 17 |
| | Alternator and Voltage Regulator | 17 |
| | Maintaining the Alternator | 18 |
| | Alternator Connections | 19 |
| | Alternator and Voltage Regulator Precautions | 19 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 6 - Charging Electrical Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Belts - Engine | 20 |
| | Belt Inspection (check every 1200 hours) | 20 |
| | Compressor Belt Replacement | 21 |
| | Drive Belt Replacement | 22 |
| | Welding On the Machine | 23 |
| | Troubleshooting | 23 |
| | Testing the Alternator | 23 |
| | Alternator Removal | 25 |
| | Alternator Installation | 27 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 7 - Electro-Hydraulic Systems

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Hydraulic Oil Level Switch Circuit | 2 |
| | Troubleshooting | 3 |
| | Hydraulic Oil Temperature Switch Circuit | 7 |
| | Troubleshooting | 8 |
| | Hydraulic Charge Pressure Switch | 12 |
| | Troubleshooting | 13 |
| | Seat Occupied Circuit | 17 |
| | Troubleshooting | 18 |
| | Header Drive Circuit | 20 |
| | Header Reverse Circuit | 22 |
| | Master Hydraulic Solenoid Circuit | 24 |
| | Hydrostatic High Speed Circuit | 27 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 8 - Diagnostic Test Mode

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Accessing Diagnostic Mode | 2 |
| | Inputs | 3 |
| | Engine Inputs | 4 |
| | Fuel Inputs | 5 |
| | Header Inputs | 5 |
| | Hydraulics Inputs | 6 |
| | Lights Inputs | 7 |
| | Preheat Inputs | 7 |
| | Propulsion Inputs | 8 |
| | PTO Inputs | 8 |
| | Reel Inputs | 9 |
| | Outputs | 9 |
| | Header Outputs | 10 |
| | HVAC Outputs | 11 |
| | Preheat Outputs | 11 |
| | Inputs and Outputs Component Chart | 12 |
| | Wiggle Test | 16 |
| | Display (LCD) Test | 16 |
| | Fault History Screen | 17 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 9 - Audible Alarm

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Audible Warnings | 2 |
| | Critical Warnings - Automatic Shutdown | 2 |
| | Critical Warnings - No Shutdown | 2 |
| | Non-Critical Warnings | 2 |
| | Audible Alarm Priorities | 3 |
| | Low Priority Warnings | 3 |
| | Medium Priority Warnings | 3 |
| | High Priority Warnings | 3 |
| | Enable/Disable the Low Fault Warning | 4 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 3 - 87744704

Chapter 10 - Controller Area Network (CAN)

CONTENTS

| Section | Description | Page |
|---------|--------------------------|------|
| | CAN Network Basics | 2 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87744705

Chapter 11 - Fault Codes

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Introduction | 4 |
| | Fault Code Format (SPN/FMI codes) | 5 |
| | SPN/FMI Code Charts | 5 |
| | FMI Codes | 5 |
| | SPN Codes | 6 |
| | Troubleshooting | 9 |
| | Engine Fault Codes | 9 |
| | Fault Code - 101-03 Oil Pressure Switch Shorted to High Source | 9 |
| | Fault Code - 101-04 Oil Pressure Switch Shorted to Low Source | 11 |
| | Fault Code - 102-03 Air Filter Restriction Switch Shorted to High Source | 13 |
| | Fault Code - 104-04 Engine Coolant Temp Sensor Shorted to Low Source | 16 |
| | Hydraulic Fault Codes | 18 |
| | Fault Code - 001-03 Hydraulic Charge Pressure Switch Shorted to High Source | 18 |
| | Fault Code - 002-03 Hydraulic Reservoir Level Sensor Shorted to High Source | 21 |
| | Fault Code - 003-03 Hydraulic Oil Temperature Switch Shorted to High Source | 24 |
| | Propulsion Fault Codes | 27 |
| | Fault Code - 404-03 MFH Position Sensor Shorted to High Source | 27 |
| | Fault Code - 404-04 MFH Position Sensor Shorted to Low Source | 31 |
| | Fault Code - 404-14 MFH Position Sensor Special Instructions | 35 |
| | Fault Code - 405-03 Pintle Arm Position Sensor Shorted to High Source | 39 |
| | Fault Code - 405-04 Pintle Arm Position Sensor Shorted to Low Source | 43 |
| | Fault Code - 406-03 Propulsion Cylinder Position Pot A Shorted to High Source | 47 |
| | Fault Code - 406-04 Propulsion Cylinder Position Pot A Shorted to Low Source | 50 |
| | Fault Code - 406-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration | 53 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87744705

Chapter 11 - Fault Codes (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Fault Code – 407-03 Propulsion Cylinder Position Pot B Shorted to High Source | 56 |
| | Fault Code – 407-04 Propulsion Cylinder Position Pot B Shorted to Low Source | 59 |
| | Fault Code – 407-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration | 62 |
| | Fault Code – 408-03 MFH Neutral Switch Shorted to High Source | 65 |
| | Fault Code – 408-07 MFH Neutral Switch Mechanical Out Of Range | 67 |
| | Fault Code – 409-03 Park Brake Switch Shorted to High Source | 69 |
| | Fault Code – 411-13 Propulsion Cylinder Position Pot A Needs Calibration | 72 |
| | Fault Code – 412-13 Propulsion Cylinder Position Pot A Needs Calibration | 75 |
| | Fault Code – 413-13 Propulsion Cylinder Position Pot A Needs Calibration | 78 |
| | Fault Code – 414-13 Propulsion Cylinder Position Pot B Needs Calibration | 81 |
| | Fault Code – 415-13 Propulsion Cylinder Position Pot B Needs Calibration | 84 |
| | Fault Code – 416-13 Propulsion Cylinder Position Pot B Needs Calibration | 87 |
| | Fault Code – 418-03 MFH Position Sensor Shorted to High Source | 90 |
| | Fault Code – 418-04 MFH Position Sensor Shorted to Low Source | 94 |
| | Fault Code – 418-13 MFH Position Sensor Needs Calibration | 98 |
| | Fault Code – 419-03 MFH Position Sensor Shorted to High Source | 101 |
| | Fault Code – 419-04 MFH Position Sensor Shorted to Low Source | 105 |
| | Fault Code – 419-07 MFH Position Sensor Mechanical Out Of Range | 109 |
| | Fault Code – 419-13 MFH Position Sensor Needs Calibration | 112 |
| | Fault Code – 420-03 MFH Position Sensor Shorted to High Source | 115 |
| | Fault Code – 420-04 MFH Position Sensor Shorted to Low Source | 119 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87744705

Chapter 11 - Fault Codes (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Fault Code – 420-07 MFH Position Sensor Mechanical Out Of Range | 123 |
| | Fault Code – 420-13 MFH Position Sensor Needs Calibration | 128 |
| | Fault Code – 421-03 MFH Position Sensor Shorted to High Source | 131 |
| | Fault Code – 421-04 MFH Position Sensor Shorted to Low Source | 135 |
| | Fault Code – 421-13 MFH Position Sensor Needs Calibration | 139 |
| | Fault Code – 424-03 Propulsion Forward Solenoid L-14p Shorted to High Source | 142 |
| | Fault Code – 424-04 Propulsion Forward Solenoid L-14p Shorted to Low Source | 147 |
| | Fault Code – 424-13 Propulsion Forward Coil Needs Calibration | 151 |
| | Fault Code – 425-03 Propulsion Forward Solenoid L-14t Shorted to High Source | 155 |
| | Fault Code – 425-04 Propulsion Forward Solenoid L-14t Shorted to Low Source | 160 |
| | Fault Code – 425-13 Propulsion Forward Coil Needs Calibration | 164 |
| | Fault Code – 426-03 Propulsion Reverse Solenoid L-15p Shorted to High Source | 166 |
| | Fault Code – 426-04 Propulsion Reverse Solenoid L-15p Shorted to Low Source | 171 |
| | Fault Code – 426-13 Propulsion Reverse Coil Needs Calibration | 175 |
| | Fault Code – 427-03 Propulsion Reverse Solenoid L-15t Shorted to High Source | 177 |
| | Fault Code – 427-04 Propulsion Reverse Solenoid L-15t Shorted to Low Source | 182 |
| | Fault Code – 427-13 Propulsion Reverse Coil Needs Calibration | 184 |
| | Fault Code – 428-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source | 186 |
| | Fault Code – 429-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source | 190 |
| | Fault Code – 430-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source | 194 |
| | Fault Code – 431-03 MFH Position Sensor R-18 Shorted to High Source | 197 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87744705

Chapter 11 - Fault Codes (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Fault Code – 432-03 MFH Position Sensor R-18 Shorted to High Source | 200 |
| | Fault Code – 433-03 Propulsion Cylinder Shorted to High Source | 203 |
| | Fault Code – 434-03 Propulsion Cylinder Shorted to High Source | 205 |
| | Fault Code – 435-03 Propulsion Enable Relay K-35 Shorted to High Source | 207 |
| | Fault Code – 435-04 Propulsion Enable Relay K-35 Shorted to Low Source | 209 |
| | PTO Fault Codes | 211 |
| | Fault Code – 200-12 Header Speed Sensor Bad Intelligent Device | 211 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87744705

Chapter 12 - Standard Wiring Harnesses

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Standard Wiring Harnesses | 2 |
| | Wiring Harnesses | 2 |
| | FM Harness (Front) | 3 |
| | FM Harness (Rear) | 4 |
| | FM Harness (Engine LH) | 5 |
| | FM Harness (Engine RH) | 6 |
| | LL and RL Harnesses (Lighting) | 7 |
| | CM Harness (Electrical Panel) | 8 |
| | CM Harness (Inside Cab) | 9 |
| | CM Harness (Seat and Right Hand Console) | 10 |
| | OR Harness (Outside Roof) | 11 |
| | RM Harness (Inside Roof) | 12 |
| | SC-D Harness (Steering Column) | 13 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87744706

Chapter 13 - Standard Wire Harness Connector Information

CONTENTS

| Section | Description | Page |
|---------|-------------------------------|------|
| | Standard Wire Harnesses | 2 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87744706

Chapter 14 - Troubleshooting Optional Equipment

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | A-Pillar Display | 3 |
| | Wire Harness Routing/Connections | 4 |
| | Troubleshooting | 5 |
| | Automatic Temperature Control (ATC) | 8 |
| | Radio | 8 |
| | Circuit Description | 8 |
| | Wire Harness Routing | 9 |
| | Troubleshooting | 10 |
| | Premium Speakers | 15 |
| | Troubleshooting | 16 |
| | Cold Start (Thermostart) | 21 |
| | Circuit Description | 21 |
| | Switch Removal | 21 |
| | Switch Connections | 22 |
| | Wire harness routing | 22 |
| | Troubleshooting | 23 |
| | Deluxe Mirrors | 26 |
| | Circuit Description | 26 |
| | Switch Removal | 27 |
| | Switch Connectors | 27 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87744706

Chapter 14 - Troubleshooting Optional Equipment (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Accessing the Outer Roof (OR) Harness | 28 |
| | Roof Panel Installation | 29 |
| | Wiring harness routing | 29 |
| | Troubleshooting | 31 |
| | Windshield Wiper/Washer | 35 |
| | Windshield Wiper Circuit Description | 35 |
| | Windshield Washer Circuit Description | 36 |
| | Switch Removal | 36 |
| | Switch Connections | 37 |
| | Troubleshooting | 38 |
| | Beacon Mount | 42 |
| | Circuit Description | 42 |
| | Switch Removal | 42 |
| | Connectors and Circuitry | 43 |
| | Accessing the Outer Roof (OR) Harness | 44 |
| | Roof Panel Installation | 45 |
| | Wiring Harness Routing and Connections | 46 |
| | Troubleshooting | 47 |
| | Adjustable Windrow Shields | 50 |
| | Circuit Description | 50 |
| | Switch Connection | 51 |
| | Troubleshooting | 52 |
| | Sickle Header Drive Adapter (2300 and HS Series) | 56 |
| | Header Speed Does Not Indicate on the Display | 57 |
| | Draper Header Drive Adapter | 59 |

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87744706

Chapter 15 - Electrical Schematics

CONTENTS

| Section | Description | Page |
|---------|--------------------------------------|------|
| | Introduction | 2 |
| | Using Schematics | 3 |
| | Power | 4 |
| | Grounds | 4 |
| | Connections | 4 |
| | Harnesses | 5 |
| | Standard Harnesses | 5 |
| | Optional Harnesses | 5 |
| | Wire Harness Routing | 6 |
| | Circuit Identification | 6 |
| | Windrower Electrical Schematic | 7 |

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 87744707

Chapter 1 - General Information

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Overview | 2 |
| | Draper Floatation | 2 |
| | Operation | 2 |
| | Overhaul | 3 |
| | Cut Height Cylinders | 3 |
| | Removal | 3 |
| | Inspection | 4 |
| | Installation | 5 |
| | Hydraulic System Check | 6 |
| | Hydraulic System Check with Header Installed | 6 |
| | Electrical System - Fuse and Relay | 6 |
| | Removal | 6 |
| | Switches | 7 |
| | Removal | 7 |
| | Solenoid Connectors | 7 |
| | Inspection | 7 |
| | Energized Components | 10 |
| | Header to Machine Connector | 11 |
| | Flow Divider | 12 |
| | Theory of Operation | 12 |
| | Logic | 13 |
| | Wire Harnesses | 14 |
| | Troubleshooting | 35 |
| | Diagnostic Charts | 35 |

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 87744707

Chapter 2 - Factory Installed Draper Header

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Cartridge Valves | 2 |
| | Removal | 2 |
| | Installation | 3 |
| | Hose Routing - Cut Height Cylinders | 4 |
| | Hose Routing | 5 |
| | Removal | 5 |
| | Installation | 5 |
| | Hoses - Valve to Valve | 5 |
| | Removal | 5 |
| | Installation | 5 |
| | Wire Harnesses | 8 |
| | Factory Installed | 9 |
| | Relay Panel | 10 |
| | Schematics | 11 |

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 87744707

Chapter 3 - Dealer Installed Draper Header

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Cartridge Valves | 2 |
| | Removal | 2 |
| | Installation | 3 |
| | Hose Routing - Cut Height Cylinders | 4 |
| | Hose Routing | 5 |
| | Removal | 5 |
| | Installation | 5 |
| | Hoses - Valve to Valve | 5 |
| | Removal | 5 |
| | Installation | 5 |
| | Wire Harnesses | 10 |
| | Fuse F-01 Power Chart | 12 |
| | Fuse F-02 Power Chart | 12 |
| | Schematics | 13 |

SECTION 58 - HEADER ATTACHMENTS

BOOK 6 - 87744707

Chapter 4 - Draper Setup

CONTENTS

| Section | Description | Page |
|---------|-----------------------------------|------|
| | Accessing Dealer Setup | 2 |
| | Multi-Function Handle (MFH) | 2 |
| | Dealer Setup Navigation | 2 |
| | Dealer Setup Menu | 3 |
| | DIA Options Menu | 3 |
| | User Configure Menu | 4 |
| | Draper Head PTO Calibration | 5 |

SECTION 88 - OPTIONAL EQUIPMENT

BOOK 6 - 87744707

Chapter 1 - Optional Equipment

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Deluxe Cab Upgrade Package | 2 |
| | A-Pillar Display | 2 |
| | Automatic Temperature Control (ATC) | 3 |
| | Window Screen Kit | 3 |
| | Premium Speaker Kit | 3 |
| | Optional Kits | 4 |
| | Radio (A-17) | 4 |
| | Service Floodlight | 4 |
| | Cold Start Kit | 5 |
| | Deluxe Mirror | 5 |
| | Rear View Mirror | 6 |
| | Wiper/Washer | 6 |
| | Deluxe Header Tilt Indicator | 6 |
| | Beacon Mount Kit | 7 |
| | Adjustable Windrow Shield | 7 |
| | Model HDX2 Sickle Header Drive Adapter Kit | 7 |
| | Model HDX1 Sickle Header Drive Adapter Kit | 8 |
| | Draper Header Drive Adapter Kit | 8 |
| | Deck Shift Draper Header Adapter Kit | 8 |
| | Hydraulic Reel Drive | 9 |
| | Auxiliary Drive - Engine Mounted | 9 |
| | Rear Suspension Damper | 9 |
| | Rear Suspended Axle | 10 |
| | Weight Carrier Kit | 10 |
| | Swath Roller Hitch | 10 |

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 6 - 87744707

Chapter 1 - WD1203

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Overview | 3 |
| | Deluxe Operator's Seat | 3 |
| | Controls | 3 |
| | Armrest Height | 3 |
| | Height/Weight Adjustments | 3 |
| | Backrest Angle | 3 |
| | Fore/Aft Position | 3 |
| | Lumbar Adjustment Knob | 4 |
| | Seat Belt | 4 |
| | Cleaning the Seat Belt | 4 |
| | Seat Air Compressor | 4 |
| | Height Adjustment | 4 |
| | Overhaul | 5 |
| | Seat Belt | 5 |
| | Replacing the Seat Belt | 5 |
| | Seat | 5 |
| | Removing the Seat from the Seat Base | 5 |
| | Disassembling the Seat | 5 |
| | Upper Seat | 6 |
| | Removing Armrest | 6 |
| | Armrest Adjustment | 7 |
| | Replacing Seat Height Switch | 9 |
| | Cushions | 10 |
| | Removing Bottom Seat Cushion | 10 |
| | Removing Seat Back Cushion | 11 |
| | Fore/Aft Adjustment Rails | 11 |
| | Removing Seat from Slide Rails | 11 |
| | Removing Slide Rails from Suspension | 11 |
| | Seat Suspension | 12 |
| | Disassembly of Seat Suspension | 12 |



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 6 - 87744707

Chapter 1 - WD1203 (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Rubber Bumpers | 15 |
| | Inspection of the Seat Suspension Components | 15 |
| | Release Valve/Solenoid | 15 |
| | Inspection | 15 |
| | Air Compressor | 16 |
| | Inspection | 16 |
| | Fore/Aft Adjustment Lever | 17 |
| | Inspection | 17 |
| | Damping Shock Absorber | 18 |
| | Inspection | 18 |
| | Scissors Suspension | 18 |
| | Inspection | 18 |
| | Circuit Description | 19 |
| | Troubleshooting | 21 |
| | Seat Air Compressor Does Not Run | 21 |
| | Cab Door | 22 |
| | Removal | 22 |
| | Installation | 22 |
| | Cab Door Handle | 22 |
| | Disassembly | 22 |
| | Installation | 22 |
| | Cab Floor Mat | 23 |
| | Removal | 23 |
| | Inspection | 23 |
| | Cab Suspension | 23 |
| | Remove and Replace - Front Cab Mounts | 24 |
| | Remove and Replace - Rear Cab Suspension | 25 |
| | Console | 25 |
| | Removal | 25 |
| | Installation | 26 |

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 6 - 87744707

Chapter 1 - WD1203 (Continued)

CONTENTS

| Section | Description | Page |
|---------|----------------------------|------|
| | Overhead Switches | 26 |
| | Removal/Installation | 27 |
| | Stereo System | 27 |
| | Removal/Installation | 28 |
| | Wiper Motor/Washer | 29 |
| | Removal | 29 |
| | Installation | 33 |
| | Steering Column | 36 |
| | Cover Removal | 36 |
| | Cover Installation | 37 |
| | Column Removal | 39 |
| | Column Installation | 39 |
| | Cab Roof | 40 |
| | Removal | 40 |
| | Inspection | 43 |
| | Installation | 43 |
| | Safety Decals | 46 |

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>