
RBX452, RBX462, RBX552, RBX562 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 31 - IMPLEMENT DRIVELINE	3
SECTION 35 - HYDRAULICS	7
SECTION 39 - FRAME	11
SECTION 44 - AXLES AND WHEELS	12
SECTION 55 - ELECTRICAL SYSTEMS	13
SECTION 60 - PRODUCT FEEDING	20
SECTION 62 - PRESSING	25
SECTION 68 - WRAPPING	32
SECTION 70 - EJECTION	35
SECTION 90 - SHIELDING	35

The following pages are the collation of the contents pages from each section and chapter of the RBX452, RBX462, RBX552, and RBX562 Repair manual. Complete Repair part # 87352306.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the RBX452, RBX462, RBX552, and RBX562 Round Balers.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87352307

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Introduction	2
	Precautionary Statements	3
	Safety	4
	Fluid Safety	6
	Safety Decals	7
	Information Decals	11
	Torques and Adjustment	13
	Technical Information	14
	Minimum Hardware Tightening Torques	15
	Retaining Compounds and Sealants	18
	Standard Torque Data for Hydraulic Tubes and Fittings	19
	Recommended Lubricants	21
	Roller Chains	23
	Conversion Charts	25
	Ecology and the Environment	29
	Baler Components	30
	Power Flow - Baler with Stuffer	31
	Power Flow - Baler with Rotor	32
	Driveline Components Baler with Standard Pickup	33
	Driveline Components Baler with Stuffer and Wide Pickup	34
	Driveline Components Baler with Rotor and Wide Pickup	35
	Specifications	36
	Storage and Seasonal Preparation	44

SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

Chapter 1 - PTO Driveline

CONTENTS

Section	Description	Page
	Specifications	2
	PTO Constant Velocity	2
	Description of Operation	5
	Overhaul	6
31 201	Front PTO and CV U-joint	6
	Disassembly	6
	Inspection	9
	Replacement	9
	Assembly	9
	Installation	13
31 201	Rear PTO	14
	Removal	14
	Disassembly	15
	Inspection	16
	Assembly	17
	Installation	19
31 201	Shear Bolt Hub	22
31 201	Shear Bolt Hub Bearing Balls	22
	Replacement	22
31 201	Slide Collar Quick - Disconnect	23
	Removal	23
	Replacement	23

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

Chapter 2 - Gearbox

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	2
	Description of Operation	2
	Overhaul	3
31 220	Gearbox	3
	Removal	3
	Gearbox Coupler Seal	5
	Replacement	5
	Gearbox	6
	Sectional Views	6
	Disassembly	10
	Inspection	13
	Assembly	14
	Installation	21

SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

Chapter 3 - Clutches

CONTENTS

Section	Description	Page
	Specifications	3
	Special Tools	3
	Description of Operation	6
	Overhaul	7
31 225	Main Drive Slip Clutch (RBX452, RBX462, RBX552)	7
	Removal	7
	Disassembly	7
	Inspection	8
	Replacement	8
	Assembly	8
	Installation	9
	Burnishing	11
	Adjustment	12
31 225	Main Drive Slip Clutch (RBX562)	14
	Removal	14
	Disassembly	15
	Inspection	15
	Assembly	15
	Installation	16
	Burnishing	19
	Adjustment	21
31 225	Sledge Roll Drive Slip Clutch	22
	Removal	22
	Disassembly	23
	Inspection	23
	Assembly	24
	Installation	24
	Burnishing	25
	Adjustment	25
31 225	Pickup Slip Clutch – Standard Pickup	27
	Removal	27

SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

Chapter 3 - Clutches (Continued)

CONTENTS

Section	Description	Page
	Disassembly	28
	Inspection	28
	Assembly	28
	Installation	28
	Burnishing	29
	Adjustment	29
31 225	Pickup Jaw Clutch - 1.8 & 2.1 M Wide Pickup	30
	Removal	30
	Inspection	33
	Installation	33
60 280	Pickup Jaw Clutch - 1.5 M Wide Pickup	37
	Removal	37
	Inspection	38
	Installation	38
31 225	Pickup Over-run Clutch - 2.1 Wide Pickups (Rotor Units)	39
	Removal	39
	Inspection	41
	Assembly	42
31 225	Belts Drive Linear Clutch (RBX462 and RBX562)	45
	Removal	45
	Inspection	47
	Installation	48
	Adjustment	50
31 225	Belts Drive Over-run Clutch (RBX552 Standard)	53
	Removal	53
	Inspection	54
	Installation	54
31 225	Belts Drive Radial Arm Clutch (RBX552 Option)	57
	Removal	57
	Inspection	58
	Installation	59

SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

Chapter 4 - Drives

CONTENTS

Section	Description	Page
	Specifications	2
	Gearbox Output Shaft Cluster Sprocket Location	2
	Description of Operation	2
	Overhaul	3
31 230	Gearbox Output Driveshaft	3
	Disassembly	3
	Inspection	6
	Assembly	6

SECTION 35 - HYDRAULICS

BOOK 1 - 87352307

Chapter 1 - Tailgate Lift System

CONTENTS

Section	Description	Page
35 550	Description of Operation	2
	Overhaul	4
	Tailgate Cylinder	4
	Removal	4
	Disassembly	6
	Inspection	7
	Assembly	7
	Installation	8
	Tailgate Lockout Valve	10
	Adjustment	10
	Testing	11
	Disassembly	12
	Assembly	12
	Replacement	13
	Troubleshooting	14
	Tailgate Cylinders	14

SECTION 35 - HYDRAULICS

BOOK 1 - 87352307

Chapter 2 - Belt Tension System

CONTENTS

Section	Description	Page
	Description of Operation	2
35 540	Belt Tension System	2
	Density Cylinder System	2
	Oil – Density Cylinder System	4
	Overhaul	4
	Density Cylinder System	4
	Adjustment	4
	Belt Tension Removal	5
	Bale Density Pressure	6
	Adjustment	6
	Belt Tension Cylinder	7
	Removal	7
	Disassembly	9
	Inspection	10
	Assembly	11
	Installation	12
	Relief Valve Operation	16
	Relief Valve	18
	Removal	18
	Installation	18
	Cleaning	18
	Relief Valve Seals	19
	Removal	19
	Installation	19
	Relief Valve	19
	Adjustment (The Maximum Pressure of the Relief Valve)	19
	Troubleshooting	20
	Density Cylinders	20

SECTION 35 - HYDRAULICS

BOOK 1 - 87352307

Chapter 3 - Feeding - Pickup Lift Cylinder/Rotor Knives and Reverse Cylinders

CONTENTS

Section	Description	Page
35 000	General Procedures	2
	Description of Operation	3
35 560	Pickup Lift Cylinder	3
	Overhaul	3
35 560	Pickup Lift Cylinder	3
	Removal	3
	Disassembly	4
	Assembly	4
	Installation	4
35 565	Rotor Knife Cylinder	5
	Removal	5
	Disassembly	6
	Inspection	6
	Assembly	7
	Installation	8
35 764	Hydraulic Reverser Cylinder	9
	Removal	9
	Disassembly	10
	Inspection	10
	Assembly	11
	Installation	12
35 204	Splitter Valve	13
	Removal	13
	Disassembly	14
	Inspection	14
	Assembly	14
	Troubleshooting	17
	All Cylinders	17
	Pickup Cylinders	17
	Rotor Cylinders	17

SECTION 35 - HYDRAULICS

BOOK 1 - 87352307

Chapter 4 - Lubrication - Greaselines and Oiler

CONTENTS

Section	Description	Page
35 000	General Procedures	2
	Overhaul	3
35 595	Grease System	3
	Inspection	3
35 597	Oiler	4
	Oil Tank	4
	Removal	4
	Inspection	4
	Installation	4
	Oil Feed Lines	4
	Inspection	4
	Oil Brushes	6
	Replacement	6
	Pump	6
	Removal	6
	Disassembly	7
	Installation	7
	Oil Flow	8
	Adjustment	8

SECTION 39 - FRAME

BOOK 2 - 87352308

Chapter 1 - Tailgate

CONTENTS

Section	Description	Page
	Overhaul	2
55 435	Tailgate (RBX462 & RBX562)	2
	Removal	3
	Inspection	16
	Disassembly	16
	Assembly	17
	Installation	17
	Adjustment	32
55 435	Tailgate (RBX452 & RBX552)	33
	Removal	34
	Inspection	45
	Disassembly	46
	Assembly	46
	Installation	47
	Adjustment	66

SECTION 44 - AXLES AND WHEELS

BOOK 2 - 87352308

Chapter 1 - Axles and Wheels

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	2
	Description of Operation	2
	Overhaul	3
44 101	Axle	3
	Adjustment	3
44 520	Tire Pressure	5
	Wheel Torques	5
	Wheel Bearings	5
	Inspection	5

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Definition of Terms	2
	Electricity	2
	Voltage	2
	Current	2
	Resistance	2
	Open Circuit	2
	Short Circuit	2
	Continuity	2
	Voltage Drop	2
	Diode	2
	Solenoid	2
	Relay	2
	Overhaul	3
	Protecting the Electrical/Electronic Systems During Charging or Welding	3
	Special Tools	3
	Troubleshooting	4
	Electrical Test Procedures	4
	Standard Electrical Tests	5
	Wire Identification	9
	Net-Twine Wrapper Diagnostic Mode Quick Reference Card	10

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

Chapter 2 - Harness and Connectors

CONTENTS

Section	Description	Page
	Description of Operation	2
	Tractor Harness	2
	Main Baler Harness (Net Twine Wrapper)	4
	Rotor Knife/Rotor Reverse Solenoid Valve Baler Harness	6
	Electric Wrap Tractor Harness	8
	Electric Wrap Monitor Harness	10
	Electric Wrap Baler Harness	12
	Main Lights Baler Harness	14
	Right Lights Baler Harness	16
	Overhaul	18
	Wire Harness Connector	18
	18-pin Connector	18
	Inspection	18
	Round Connector	19
	Disassembly	19
	Assembly	20
	Gray Rectangular Connector	21
	Disassembly	21
	Assembly	22
	Light Plug	22
	Inspection	22
	Power Plug	23
	Inspection	23

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

Chapter 3 - Components - Operation, Location, and Testing

CONTENTS

Section	Description	Page
55 100	Description of Operation	3
	Components	3
	Switches	3
	Remote Over Ride Rocker Switch	3
	Testing	4
	Micro Switch - Electric Wrap Full Bale	4
	Relays	5
	Operator's Panel Internal Relay	5
	Electronic Control Unit Internal Relays	5
	Main Power Relay	6
	Testing (Internal Relays)	6
	Testing (Main Power Relay)	7
	Circuit Breakers	9
	Operator's Panel Circuit Breaker	9
	Testing	9
	Backlights	10
	Operator's Panel Internal Backlights	10
	Backlight Bulb and Holder	10
	Testing	10
	Horn	11
	Inspection	11
	Operator's Panel Internal Horn	11
	Testing	11
	Ferrous Proximity Sensor	12
	Tail Gate Ferrous Proximity Sensor	12
	Rotor Knives Cylinder Ferrous Proximity Sensor	12
	Testing (Ferrous Proximity Sensor)	13
	Rotary Potentiometer	13

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

Chapter 3 - Components - Operation, Location, and Testing (Continued)

CONTENTS

Section	Description	Page
	Bale Size Rotary Potentiometer	14
	Bale Shape Rotary Potentiometer - Right and Left Side (right side shown)	14
	Twine Wrapper Rotary Potentiometer	14
	Net Wrapper Rotary Potentiometer	15
	Testing (Rotary Potentiometer)	15
	Hall Effect Sensor	16
	Net Counter Roll Sensor and Magnet	16
	Testing (Hall Effect Sensor)	16
	Actuator	17
	Twine Wrapper Actuator	17
	Net Wrapper Actuator	17
	Testing	17
	Solenoids	18
	Hydraulic Rotor Reverse Solenoids (Option)	18
	Testing	18

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

Chapter 4 - Net-Twine Wrapper Electrical System, Troubleshooting - Component Adjustment and Calibration

CONTENTS

Section	Description	Page
	Description of Operation	2
	Calibration (Adjustments)	5
	Power to Tractor Connector and Operator's Panel	5
	Testing	5
	Operator Panel Programming for Model	8
	Operator's Panel Keys (Function)	9
	Main Display Window Indicators	10
	Bale Shape Display Window	11
	Operator's Panel Self Diagnostic Test	11
	Setup/Diagnostic Key	12
	Setup/Diagnostic Mode	14
	Setup Items	15
	Troubleshooting	52
	Error Codes	52
	"Error" and Flashing Full Bale Pointer	53
	"Error" and Flashing Tailgate Pointer	55
	"Error" and Flashing Left Bale Shape Bars (Right Side Art Shown)	57
	"Error" and Flashing Right Bale Shape Bars	59
	"Error" and Flashing Bale Wrap/Actuator Pointer	61
	Twine Bale Wrap System	65
	Electronic Circuit	69
	Testing	69
	Rotor Knife/Rotor Reverse Solenoid Valves Circuit	69
	Rotor Knife Ferrous Proximity Switch Circuit	71
	Manual Override Switch Circuit	72
	Status Light Circuit	73
	RBX Series Round Baler EST Software Download Instructions	75

SECTION 55 - ELECTRICAL SYSTEM

BOOK 2 - 87352308

Chapter 5 – Electric /Twine Wrapper – Electrical System Troubleshooting – Component Adjustment and Calibration

CONTENTS

Section	Description	Page
	Description of Operation	2
	Calibrations (Adjustments)	4
	Power to Tractor Connector and Operator's Panel	4
	Testing	4
	Operator's Panel Programming	5
	Operator Panel Keys and Display (Function)	6
	Setup/Diagnostic Mode	7
	Setup Items	8
	Troubleshooting	24
	Twine Wrapper Actuator Position Potentiometer Circuit	24
	Twine Wrapper Actuator Circuit	26
	Full Bale Switch Circuit	28
	Right Bale Shape Potentiometer Circuit	30
	Left Bale Shape Potentiometer Circuit	31
	Horn/Alarm Circuit	34

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87352308

Chapter 6 - Lights

CONTENTS

Section	Description	Page
55 000	Description of Operation	2
	Wiring Diagram	3
55 404	Troubleshooting	4
	Light Module	14
	Overhaul	14
55 404	Light Bulbs	14
	Removal	14
	Inspection	14
	Installation	14

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

Chapter 1 - Standard Pickup

CONTENTS

Section	Description	Page
	Description of Operation	2
	Overhaul	2
60 220	Standard Pickup	2
	Removal	2
	Installation	4
60 220	Tines and Guards – Standard Pickup	7
	Removal	7
	Installation	7
60 220	Cam Bearing – Standard Pickup	7
	Removal	7
	Installation	9
60 220	Cam Track – Standard Pickup	10
	Removal	10
	Inspection	12
	Installation	12
60 220	Tine Bar and Bearings – Standard Pickup	15
	Removal	15
	Inspection	16
	Installation	16
60 220	Reel Disc and Shaft – Standard Pickup	18
	Removal	18
	Inspection	20
	Assembly	21

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

Chapter 2 - Wide Pickup with Stuffer - 1.5 M

CONTENTS

Section	Description	Page
	Description of Operation	3
	Overhaul	3
60 220	Wide Pickup with Stuffer – 1.5 M	3
	Removal	3
	Installation	6
60 220	Tines and Guards – 1.5 M Wide Pickup	9
	Center Tine	9
	Removal	9
	Installation	9
	End Tine	10
	Removal	10
	Installation	10
60 220	Cam Bearing – 1.5 M Wide Pickup	11
	Removal	11
	Installation	12
60 220	Cam Track – 1.5 M Wide Pickup	14
	Removal	14
	Inspection	15
	Installation	15
60 220	Tine Bar – 1.5 M Wide Pickup	17
	Removal	17
	Installation	18
60 220	Reel Disc, Cam Arm Shafts and Reel Shaft – 1.5 M Wide Pickup	20
	Removal	20
	Inspection	22
	Installation	22
60 220	Auger, Bearing and Drive Chain – 1.5 M Wide Pickup	26
	Removal	26
	Assembly	27

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

Chapter 2 - Wide Pickup with Stuffer - 1.5 M (Continued)

CONTENTS

Section	Description	Page
60 220	Reel Sprocket and Bearing– 1.5 M Wide Pickup	30
	Removal	30
	Installation	30
60 220	Stuffer– 1.5 M Wide Pickup	32
	Removal	32
	Installation	34

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

Chapter 3 - Wide Pickup with Stuffer - 1.8 M and 2.1 M

CONTENTS

Section	Description	Page
60 000	Description of Operation	3
	Overhaul	3
60 220	Wide Pickup with Stuffer – 1.8 & 2.1 M	3
	Removal	3
	Installation	7
60 220	Tines and Guards –1.8 & 2.1 M Pickup	10
	Removal	10
	Installation	10
60 220	Cam Bearing – 1.8 & 2.1 M Pickup	11
	Removal	11
	Installation	15
60 220	Cam Track –1.8 & 2.1 M Pickup	17
	Removal	17
	Inspection	20
	Installation	21

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

Chapter 3 - Wide Pickup with Stuffer - 1.8 M and 2.1 M (Continued)

CONTENTS

Section	Description	Page
60 220	Tine Pipe and Bearings – 1.8 & 2.1 M Pickup	24
	Removal	24
	Inspection	25
	Installation	25
60 220	Reel Disc and Hex Shaft – 1.8 & 2.1 M Pickup	27
	Removal	27
	Inspection	28
	Installation	29
60 220	Auger, Bearing and Drive Chain – 1.8 & 2.1 M Pickup	33
	Removal	33
	Installation	34
60 280	Pickup Stuffer Frame – 1.8 & 2.1 M Pickup	36
	Removal	36
	Inspection	42
	Assembly	43
	Installation	43
60 280	Jackshaft Outer Bearing – 1.8 & 2.1 M Pickup	51
	Removal	51
	Installation	52
60 280	Jackshaft Inner Bearing – 1.8 & 2.1 M Pickup	54
	Removal	54
	Installation	57
60 280	Jackshaft - 1.8 & 2.1 M Pickup (With Jaw Clutch)	61
	Removal	61
	Inspection	64
	Assembly	65
60 280	Stuffer Fork - 1.8 & 2.1 M Pickup	70
	Removal	70
	Inspection	73
	Assembly	73
	Installation	74

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

Chapter 4 - Wide Pickup with Rotor - 2.1 M

CONTENTS

Section	Description	Page
	Special Tools	3
	Description of Operation	3
	Overhaul	4
60 260	Rotor Pickup	4
	Removal	4
	Installation	8
60 260	Rotor Knife Carriage	13
	Removal	13
	Disassembly	16
	Assembly	20
	Installation	24
60 260	Rotor Knife Spring	26
	Removal	26
	Installation	27
60 260	Rotor	29
	Removal	29
	Inspection	33
	Installation	34
60 260	Rotor Frame	39
	Removal	39
	Disassembly (Rotor)	43
	Inspection (Rotor)	45
	Assembly (Rotor)	45
	Disassembly (Rotor Knife Carriage)	48
	Replacement (Rotor Knife Carriage)	50
	Assembly (Rotor Knife Carriage)	50
	Installation	53

SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87352309

Chapter 4 - Wide Pickup with Rotor - 2.1 M (Continued)

CONTENTS

Section	Description	Page
60 260	Rotor Left Bearing and Jackshaft	57
	Removal	57
	Disassembly	58
	Inspection	59
	Assembly	60
	Installation	63
60 260	Rotor Right Bearing and Jackshaft	65
	Removal	65
	Disassembly	66
	Inspection	67
	Assembly	68
	Installation	68

SECTION 62 - PRESSING

BOOK 4 - 87352310

Chapter 1 - Take up Arm

CONTENTS

Section	Description	Page
62 080	Description of Operation	2
	Overhaul	2
	Take Up Arm	2
	Removal	2
	Inspection	9
	Assembly	9

SECTION 62 - PRESSING

BOOK 4 - 87352310

Chapter 2 - Belts

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	2
	Description of Operation	3
	Troubleshooting	4
62 140	Belt Failure Analysis	4
62 140	Overhaul	8
	Belt Tension Removal	8
62 140	Belt Lacing Cables	9
	Removal	9
	Installation	9
62 140	Laced Belt	10
	Removal	10
	Repair	10
	Installation	14
62 140	Belt Storage	15
62 140	Belt Tracking	15
62 140	Belt Slippage	16
62 140	Endless Belt	17
	Replacement	17
	Removal	18
	Inspection	27
	Installation	27

SECTION 62 - PRESSING

BOOK 4 - 87352310

Chapter 3 - Starter Roll

CONTENTS

Section	Description	Page
62 000	Description of Operation	2
	Overhaul	2
62 150	Starter Roll	2
	Removal	2
	Disassembly	5
	Inspection	6
	Assembly	6

SECTION 62 - PRESSING

BOOK 4 - 87352310

Chapter 4 - Stationary Roll

CONTENTS

Section	Description	Page
62 000	Description of Operation	2
	Overhaul	2
62 150	Stationary Roll	2
	Removal	2
	Inspection	5
	Assembly	5



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

SECTION 62 - PRESSING

BOOK 4 - 87352310

Chapter 5 - Floor Roll

CONTENTS

Section	Description	Page
62 000	Description of Operation	2
	Overhaul	2
62 160	Floor Roll	2
	Removal	2
	Disassembly	4
	Inspection	4
	Assembly	5
	Installation	5

SECTION 62 - PRESSING

BOOK 4 - 87352310

Chapter 6 - Belt Rolls

CONTENTS

Section	Description	Page
62 000	Description of Operation	3
	Overhaul	4
62 140	Drive Roll	4
	Removal	4
	Inspection	11
	Installation	11
62 140	Drive Shaft Bearings	24
	Removal	24
	Inspection	29
	Installation	29
62 140	Backwrap Roll	38
	Removal	38
	Inspection	41
	Installation	41

SECTION 62 - PRESSING

BOOK 4 - 87352310

Chapter 6 - Belt Rolls (Continued)

CONTENTS

Section	Description	Page
62 140	Tailgate Nose Roll	43
	Removal	44
	Disassembly	45
	Inspection	45
	Assembly	45
	Installation	46
62 140	Take-up Arm Rolls	49
	Removal	49
	Inspection	55
	Installation	56
62 140	Tailgate Top Rear Idler Roll	60
	Removal	60
	Inspection	62
	Installation	62
62 140	Tailgate Top Front Idler Roll	63
	Removal	63
	Inspection	65
	Installation	65
62 140	Adjustable Tailgate Roll	67
	Removal	67
	Disassembly	69
	Assembly	70
	Installation	70
62 140	Lower Tailgate Roll (RBX462 and RBX562)	73
	Removal	73
	Disassembly	74
	Assembly	74
	Installation	74

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>