

---

# **RBX453, RBX463, RBX553, RBX563 REPAIR MANUAL COMPLETE CONTENTS**

<b>SECTION 00 - GENERAL INFORMATION .....</b>	<b>2</b>
<b>SECTION 31 - IMPLEMENT DRIVELINE .....</b>	<b>3</b>
<b>SECTION 35 - HYDRAULICS .....</b>	<b>7</b>
<b>SECTION 39 - FRAME .....</b>	<b>11</b>
<b>SECTION 44 - AXLES AND WHEELS .....</b>	<b>11</b>
<b>SECTION 55 - ELECTRICAL SYSTEMS .....</b>	<b>12</b>
<b>SECTION 60 - PRODUCT FEEDING .....</b>	<b>19</b>
<b>SECTION 62 - PRESSING .....</b>	<b>24</b>
<b>SECTION 68 - WRAPPING .....</b>	<b>31</b>
<b>SECTION 70 - EJECTION .....</b>	<b>34</b>
<b>SECTION 90 - SHIELDING .....</b>	<b>34</b>

**The following pages are the collation of the contents pages from each section and chapter of the RBX453, RBX463, RBX553, RBX563 Repair manual. Complete Repair part # 87606505.**

**The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.**

**The sections listed above are the sections utilized for the RBX453, RBX463, RBX553, RBX563 Round Balers.**

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87606506

## Chapter 1 - General Information

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
00 000	Introduction .....	2
	Precautionary Statements .....	3
	Safety .....	4
	Fluid Safety .....	6
	Safety Decals .....	7
	Information Decals .....	11
	Torques and Adjustment .....	13
	Technical Information .....	14
	Minimum Hardware Tightening Torques .....	15
	Retaining Compounds and Sealants .....	18
	Standard Torque Data for Hydraulic Tubes and Fittings .....	19
	Recommended Lubricants .....	21
	Roller Chains .....	23
	Conversion Charts .....	25
	Ecology and the Environment .....	29
	Baler Components .....	30
	Power Flow - Baler with Stuffer .....	31
	Power Flow - Baler with Rotor .....	32
	Driveline Components Baler with Standard Pickup .....	33
	Driveline Components Baler with Stuffer and Wide Pickup .....	34
	Driveline Components Baler with Rotor and Wide Pickup .....	35
	Specifications .....	36
	Storage and Seasonal Preparation .....	44

---

# SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87606506

## Chapter 1 - PTO Driveline

### CONTENTS

Section	Description	Page
	Specifications .....	2
	PTO Constant Velocity .....	2
	Description of Operation .....	5
	Overhaul .....	6
31 201	Front PTO and CV U-joint .....	6
	Disassembly .....	6
	Inspection .....	9
	Replacement .....	9
	Assembly .....	9
	Installation .....	13
31 201	Rear PTO .....	14
	Removal .....	14
	Disassembly .....	15
	Inspection .....	16
	Assembly .....	17
	Installation .....	19
31 201	Shear Bolt Hub .....	22
31 201	Shear Bolt Hub Bearing Balls .....	22
	Replacement .....	22
31 201	Slide Collar Quick - Disconnect .....	23
	Removal .....	23
	Replacement .....	23

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

---

# SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87606506

## Chapter 2 - Gearbox

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	2
	Description of Operation .....	2
	Overhaul .....	3
31 220	Gearbox .....	3
	Removal .....	3
	Gearbox Coupler Seal .....	5
	Replacement .....	5
	Gearbox .....	6
	Sectional Views .....	6
	Disassembly .....	10
	Inspection .....	13
	Assembly .....	14
	Installation .....	21

---

# SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87606506

## Chapter 3 - Clutches

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Special Tools .....	3
	Description of Operation .....	6
	Overhaul .....	7
31 225	Main Drive Slip Clutch (RBX453, RBX463, RBX553) .....	7
	Removal .....	7
	Disassembly .....	7
	Inspection .....	8
	Replacement .....	8
	Assembly .....	8
	Installation .....	9
	Burnishing .....	11
	Adjustment .....	12
31 225	Main Drive Slip Clutch (RBX563) .....	14
	Removal .....	14
	Disassembly .....	15
	Inspection .....	15
	Assembly .....	15
	Installation .....	16
	Burnishing .....	19
	Adjustment .....	21
31 225	Sledge Roll Drive Slip Clutch .....	22
	Removal .....	22
	Disassembly .....	23
	Inspection .....	23
	Assembly .....	24
	Installation .....	24
	Burnishing .....	25
	Adjustment .....	25

---

# SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87606506

## Chapter 3 - Clutches (Continued)

### CONTENTS

Section	Description	Page
31 225	Pickup Slip Clutch - Standard Pickup .....	27
	Removal .....	27
	Disassembly .....	28
	Inspection .....	28
	Assembly .....	28
	Installation .....	28
	Burnishing .....	29
	Adjustment .....	29
31 225	Pickup Jaw Clutch - 1.8 & 2.1 M Wide Pickup .....	30
	Removal .....	30
	Inspection .....	33
	Installation .....	33
60 280	Pickup Jaw Clutch - 1.5 M Wide Pickup .....	37
	Removal .....	37
	Inspection .....	38
	Installation .....	38
31 225	Pickup Over-run Clutch - 2.1 Wide Pickups (Rotor Units) .....	39
	Removal .....	39
	Inspection .....	41
	Assembly .....	42
31 225	Belts Drive Linear Clutch (RBX463 and RBX563) .....	45
	Removal .....	45
	Inspection .....	47
	Installation .....	48
	Adjustment .....	50
31 225	Belts Drive Over-run Clutch (RBX553 Standard) .....	53
	Removal .....	53
	Inspection .....	54
	Installation .....	54
31 225	Belts Drive Radial Arm Clutch (RBX553 Option) .....	57
	Removal .....	57
	Inspection .....	58
	Installation .....	59

---

## SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87606506

### Chapter 4 - Drives

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Gearbox Output Shaft Cluster Sprocket Location .....	2
	Description of Operation .....	2
	Overhaul .....	3
31 230	Gearbox Output Driveshaft .....	3
	Disassembly .....	3
	Inspection .....	6
	Assembly .....	6

## SECTION 35 - HYDRAULICS

BOOK 1 - 87606506

### Chapter 1 - Tailgate Lift System

#### CONTENTS

Section	Description	Page
35 550	Description of Operation .....	2
	Tailgate Lift System .....	2
	Overhaul .....	4
	Tailgate Cylinder .....	4
	Removal .....	4
	Disassembly .....	6
	Inspection .....	7
	Assembly .....	7
	Installation .....	8
	Tailgate Lockout Valve .....	10
	Adjustment .....	10
	Testing .....	11
	Disassembly .....	12
	Assembly .....	12
	Replacement .....	13
	Troubleshooting .....	14
	Tailgate Cylinders .....	14

---

# SECTION 35 - HYDRAULICS

BOOK 1 - 87606506

## Chapter 2 - Belt Tension System

### CONTENTS

Section	Description	Page
	Description of Operation .....	2
35 540	Belt Tension System .....	2
	Density Cylinder System .....	2
	Oil – Density Cylinder System .....	4
	Overhaul .....	4
	Density Cylinder System .....	4
	Adjustment .....	4
	Belt Tension Removal .....	5
	Bale Density Pressure .....	6
	Adjustment .....	6
	Belt Tension Cylinder .....	7
	Removal .....	7
	Disassembly .....	9
	Inspection .....	10
	Assembly .....	11
	Installation .....	12
	Relief Valve Operation .....	16
	Relief Valve .....	18
	Removal .....	18
	Installation .....	18
	Cleaning .....	18
	Relief Valve Seals .....	19
	Removal .....	19
	Installation .....	19
	Relief Valve .....	19
	Adjustment (The Maximum Pressure of the Relief Valve) .....	19
	Troubleshooting .....	20
	Density Cylinders .....	20

---

# SECTION 35 - HYDRAULICS

BOOK 1 - 87606506

## Chapter 3 - Feeding - Pickup Lift Cylinder/Rotor Knives and Reverse Cylinders

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
35 000	General Procedures .....	2
	Description of Operation .....	3
35 560	Pickup Lift Cylinder .....	3
	Overhaul .....	3
35 560	Pickup Lift Cylinder .....	3
	Removal .....	3
	Disassembly .....	4
	Assembly .....	4
	Installation .....	4
35 565	Rotor Knife Cylinder .....	5
	Removal .....	5
	Disassembly .....	6
	Inspection .....	6
	Assembly .....	7
	Installation .....	8
35 764	Hydraulic Reverser Cylinder .....	9
	Removal .....	9
	Disassembly .....	10
	Inspection .....	10
	Assembly .....	11
	Installation .....	12
35 204	Splitter Valve .....	13
	Removal .....	13
	Disassembly .....	14
	Inspection .....	14
	Assembly .....	14
	Troubleshooting .....	17
	All Cylinders .....	17
	Pickup Cylinders .....	17
	Rotor Cylinders .....	17

---

# SECTION 35 - HYDRAULICS

BOOK 1 - 87606506

## Chapter 4 - Lubrication - Greaselines and Oiler

### CONTENTS

Section	Description	Page
35 000	General Procedures .....	2
	Overhaul .....	3
35 595	Grease System .....	3
	Inspection .....	3
35 597	Oiler .....	4
	Oil Tank .....	4
	Removal .....	4
	Inspection .....	4
	Installation .....	4
	Oil Feed Lines .....	5
	Inspection .....	5
	Oil Brushes .....	6
	Replacement .....	6
	Pump .....	6
	Removal .....	6
	Disassembly .....	6
	Installation .....	6
	Oil Flow .....	7
	Adjustment .....	7

---

## SECTION 39 - FRAME

BOOK 2 - 87390181

### Chapter 1 - Tailgate

#### CONTENTS

Section	Description	Page
	Overhaul . . . . .	2
55 435	Tailgate (RBX463 & RBX563) . . . . .	2
	Removal . . . . .	3
	Inspection . . . . .	16
	Disassembly . . . . .	16
	Assembly . . . . .	17
	Installation . . . . .	17
	Adjustment . . . . .	32
55 435	Tailgate (RBX453 & RBX553) . . . . .	33
	Removal . . . . .	34
	Inspection . . . . .	45
	Disassembly . . . . .	46
	Assembly . . . . .	46
	Installation . . . . .	47
	Adjustment . . . . .	66

## SECTION 44 - AXLES AND WHEELS

BOOK 2 - 87390181

### Chapter 1 - Axles and Wheels

#### CONTENTS

Section	Description	Page
	Specifications . . . . .	2
	Special Tools . . . . .	2
	Description of Operation . . . . .	2
	Overhaul . . . . .	3
44 101	Axle . . . . .	3
	Adjustment . . . . .	3
44 520	Tire Pressure . . . . .	5
	Wheel Torques . . . . .	5
	Wheel Bearings . . . . .	5
	Inspection . . . . .	5

---

# SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87390181

## Chapter 1 - General Information

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Definition of Terms .....	2
	Electricity .....	2
	Voltage .....	2
	Current .....	2
	Resistance .....	2
	Open Circuit .....	2
	Short Circuit .....	2
	Continuity .....	2
	Voltage Drop .....	2
	Diode .....	2
	Solenoid .....	2
	Relay .....	2
	Overhaul .....	3
	Protecting the Electrical/Electronic Systems During Charging or Welding .....	3
	Special Tools .....	3
	Troubleshooting .....	4
	Electrical Test Procedures .....	4
	Standard Electrical Tests .....	5
	Wire Identification .....	9
	Net-Twine Wrapper Diagnostic Mode Quick Reference Card .....	10

---

# SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87390181

## Chapter 2 - Harness and Connectors

### CONTENTS

Section	Description	Page
	Description of Operation .....	2
	Tractor Harness .....	2
	Main Baler Harness (Net Twine Wrapper) .....	4
	Rotor Knife/Rotor Reverse Solenoid Valve Baler Harness .....	6
	Electric Wrap Tractor Harness .....	8
	Electric Wrap Monitor Harness .....	10
	Electric Wrap Baler Harness .....	12
	Main Lights Baler Harness .....	14
	Right Lights Baler Harness .....	16
	Overhaul .....	18
	Wire Harness Connector .....	18
	18-pin Connector .....	18
	Inspection .....	18
	Round Connector .....	19
	Disassembly .....	19
	Assembly .....	20
	Gray Rectangular Connector .....	21
	Disassembly .....	21
	Assembly .....	22
	Light Plug .....	22
	Inspection .....	22
	Power Plug .....	23
	Inspection .....	23

---

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87390181

### Chapter 3 - Components - Operation, Location, and Testing

#### CONTENTS

Section	Description	Page
55 100	Description of Operation .....	3
	Components .....	3
	Switches .....	3
	Remote Over Ride Rocker Switch .....	3
	Testing .....	4
	Micro Switch - Electric Wrap Full Bale .....	4
	Relays .....	5
	Operator's Panel Internal Relay .....	5
	Electronic Control Unit Internal Relays .....	5
	Main Power Relay .....	6
	Testing (Internal Relays) .....	6
	Testing (Main Power Relay) .....	7
	Circuit Breakers .....	9
	Operator's Panel Circuit Breaker .....	9
	Testing .....	9
	Backlights .....	10
	Operator's Panel Internal Backlights .....	10
	Backlight Bulb and Holder .....	10
	Testing .....	10
	Horn .....	11
	Inspection .....	11
	Operator's Panel Internal Horn .....	11
	Testing .....	11
	Ferrous Proximity Sensor .....	12
	Tail Gate Ferrous Proximity Sensor .....	12
	Rotor Knives Cylinder Ferrous Proximity Sensor .....	12
	Testing (Ferrous Proximity Sensor) .....	13
	Rotary Potentiometer .....	13

---

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87390181

### Chapter 3 - Components - Operation, Location, and Testing (Continued)

#### CONTENTS

Section	Description	Page
	Bale Size Rotary Potentiometer .....	14
	Bale Shape Rotary Potentiometer - Right and Left Side (right side shown) .....	14
	Twine Wrapper Rotary Potentiometer .....	14
	Net Wrapper Rotary Potentiometer .....	15
	Testing (Rotary Potentiometer) .....	15
	Hall Effect Sensor .....	16
	Net Counter Roll Sensor and Magnet .....	16
	Testing (Hall Effect Sensor) .....	16
	Actuator .....	17
	Twine Wrapper Actuator .....	17
	Net Wrapper Actuator .....	17
	Testing .....	17
	Solenoids .....	18
	Hydraulic Rotor Reverse Solenoids (Option) .....	18
	Testing .....	18

---

# SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87390181

## Chapter 4 - Net-Twine Wrapper Electrical System, Troubleshooting - Component Adjustment and Calibration

### CONTENTS

Section	Description	Page
	Description of Operation .....	2
	Calibration (Adjustments) .....	5
	Power to Tractor Connector and Operator's Panel .....	5
	Testing .....	5
	Operator Panel Programming .....	8
	Operator's Panel Keys (Function) .....	9
	Main Display Window Indicators .....	10
	Bale Shape Display Window .....	11
	Operator's Panel Self Diagnostic Test .....	11
	Setup/Diagnostic Key .....	12
	Setup/Diagnostic Mode .....	14
	Setup Items .....	15
	Troubleshooting .....	52
	Error Codes .....	52
	"Error" and Flashing Full Bale Pointer .....	53
	"Error" and Flashing Tailgate Pointer .....	55
	"Error" and Flashing Left Bale Shape Bars (Right Side Art Shown) .....	57
	"Error" and Flashing Right Bale Shape Bars .....	59
	"Error" and Flashing Bale Wrap/Actuator Pointer .....	61
	Twine Bale Wrap System .....	65
	Electronic Circuit .....	69
	Testing .....	69
	Rotor Knife/Rotor Reverse Solenoid Valves Circuit .....	69
	Rotor Knife Ferrous Proximity Switch Circuit .....	71
	Manual Override Switch Circuit .....	72
	Status Light Circuit .....	73
	Net/Twine Wrapper Operator's Panel (display does not come on, but backlight comes on) .....	75
	RBX Series Round Baler EST Software Download Instructions .....	77

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 2 - 87390181

## Chapter 5 – Electric /Twine Wrapper – Electrical System Troubleshooting – Component Adjustment and Calibration

### CONTENTS

Section	Description	Page
	Description of Operation .....	2
	Calibrations (Adjustments) .....	4
	Power to Tractor Connector and Operator's Panel .....	4
	Testing .....	4
	Operator Panel Programming .....	5
	Operator Panel Keys and Display (Function) .....	6
	Setup/Diagnostic Mode .....	7
	Setup Items .....	8
	Troubleshooting .....	24
	Twine Wrapper Actuator Position Potentiometer Circuit .....	24
	Twine Wrapper Actuator Circuit .....	26
	Full Bale Switch Circuit .....	28
	Right Bale Shape Potentiometer Circuit .....	30
	Left Bale Shape Potentiometer Circuit .....	31
	Horn/Alarm Circuit .....	34

---

# SECTION 55 - ELECTRICAL SYSTEMS

BOOK 2 - 87390181

## Chapter 6 - Lights

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
55 000	Description of Operation .....	2
	Wiring Diagram .....	3
55 404	Troubleshooting .....	4
	Light Module .....	14
	Overhaul .....	14
55 404	Light Bulbs .....	14
	Removal .....	14
	Inspection .....	14
	Installation .....	14

---

# SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87390182

## Chapter 1 - Standard Pickup

### CONTENTS

Section	Description	Page
	Description of Operation .....	2
	Overhaul .....	2
60 220	Standard Pickup .....	2
	Removal .....	2
	Installation .....	4
60 220	Tines and Guards – Standard Pickup .....	7
	Removal .....	7
	Installation .....	7
60 220	Cam Bearing – Standard Pickup .....	7
	Removal .....	7
	Installation .....	9
60 220	Cam Track – Standard Pickup .....	10
	Removal .....	10
	Inspection .....	12
	Installation .....	12
60 220	Tine Bar and Bearings – Standard Pickup .....	15
	Removal .....	15
	Inspection .....	16
	Installation .....	16
60 220	Reel Disc and Shaft – Standard Pickup .....	18
	Removal .....	18
	Inspection .....	20
	Assembly .....	21

---

# SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87390182

## Chapter 2 - Wide Pickup with Stuffer - 1.5 M

### CONTENTS

Section	Description	Page
	Description of Operation .....	3
	Overhaul .....	3
60 220	Wide Pickup with Stuffer – 1.5 M .....	3
	Removal .....	3
	Installation .....	6
60 220	Tines and Guards – 1.5 M Wide Pickup .....	9
	Center Tine .....	9
	Removal .....	9
	Installation .....	9
	End Tine .....	10
	Removal .....	10
	Installation .....	10
60 220	Cam Bearing – 1.5 M Wide Pickup .....	11
	Removal .....	11
	Installation .....	12
60 220	Cam Track – 1.5 M Wide Pickup .....	14
	Removal .....	14
	Inspection .....	15
	Installation .....	15
60 220	Tine Bar – 1.5 M Wide Pickup .....	17
	Removal .....	17
	Installation .....	18
60 220	Reel Disc, Cam Arm Shafts and Reel Shaft – 1.5 M Wide Pickup .....	20
	Removal .....	20
	Inspection .....	22
	Installation .....	22
60 220	Auger, Bearing and Drive Chain – 1.5 M Wide Pickup .....	26
	Removal .....	26
	Assembly .....	27

---

## SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87390182

### Chapter 2 - Wide Pickup with Stuffer - 1.5 M (Continued)

#### CONTENTS

Section	Description	Page
60 220	Reel Sprocket and Bearing– 1.5 M Wide Pickup .....	30
	Removal .....	30
	Installation .....	30
60 220	Stuffer– 1.5 M Wide Pickup .....	32
	Removal .....	32
	Installation .....	34

## SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87390182

### Chapter 3 - Wide Pickup with Stuffer - 1.8 M and 2.1 M

#### CONTENTS

Section	Description	Page
60 000	Description of Operation .....	3
	Overhaul .....	3
60 220	Wide Pickup with Stuffer – 1.8 & 2.1 M .....	3
	Removal .....	3
	Installation .....	7
60 220	Tines and Guards – 1.8 & 2.1 M Pickup .....	10
	Removal .....	10
	Installation .....	10
60 220	Cam Bearing – 1.8 & 2.1 M Pickup .....	11
	Removal .....	11
	Installation .....	15
60 220	Cam Track – 1.8 & 2.1 M Pickup .....	17
	Removal .....	17
	Inspection .....	20
	Installation .....	21

---

## SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87390182

### Chapter 3 - Wide Pickup with Stuffer - 1.8 M and 2.1 M (Continued)

#### CONTENTS

Section	Description	Page
60 220	Tine Pipe and Bearings – 1.8 & 2.1 M Pickup .....	24
	Removal .....	24
	Inspection .....	25
	Installation .....	25
60 220	Reel Disc and Hex Shaft – 1.8 & 2.1 M Pickup .....	27
	Removal .....	27
	Inspection .....	28
	Installation .....	29
60 220	Auger, Bearing and Drive Chain – 1.8 & 2.1 M Pickup .....	33
	Removal .....	33
	Installation .....	34
60 280	Pickup Stuffer Frame – 1.8 & 2.1 M Pickup .....	36
	Removal .....	36
	Inspection .....	42
	Assembly .....	43
	Installation .....	43
60 280	Jackshaft Outer Bearing – 1.8 & 2.1 M Pickup .....	51
	Removal .....	51
	Installation .....	52
60 280	Jackshaft Inner Bearing – 1.8 & 2.1 M Pickup .....	54
	Removal .....	54
	Installation .....	57
60 280	Jackshaft Replacement – 1.8 & 2.1 M Pickup (With Jaw Clutch) .....	61
	Removal .....	61
	Inspection .....	64
	Assembly .....	65
60 280	Stuffer Fork – 1.8 & 2.1 M Pickup .....	70
	Removal .....	70
	Inspection .....	73
	Assembly .....	73
	Installation .....	74

---

# SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87390182

## Chapter 4 - Wide Pickup with Rotor - 2.1 M

### CONTENTS

Section	Description	Page
	Special Tools .....	3
	Description of Operation .....	3
	Overhaul .....	4
60 260	Rotor Pickup .....	4
	Removal .....	4
	Installation .....	8
60 260	Rotor Knife Carriage .....	13
	Removal .....	13
	Disassembly .....	16
	Assembly .....	20
	Installation .....	24
60 260	Rotor Knife Spring .....	26
	Removal .....	26
	Installation .....	27
60 260	Rotor .....	29
	Removal .....	29
	Inspection .....	33
	Installation .....	34
60 260	Rotor Frame .....	39
	Removal .....	39
	Disassembly (Rotor) .....	43
	Inspection (Rotor) .....	45
	Assembly (Rotor) .....	45
	Disassembly (Rotor Knife Carriage) .....	48
	Replacement (Rotor Knife Carriage) .....	50
	Assembly (Rotor Knife Carriage) .....	50
	Installation .....	53

---

## SECTION 60 - PRODUCT FEEDING

BOOK 3 - 87390182

### Chapter 4 - Wide Pickup with Rotor - 2.1 M (Continued)

#### CONTENTS

Section	Description	Page
60 260	Rotor Left Bearing and Jackshaft .....	57
	Removal .....	57
	Disassembly .....	58
	Inspection .....	59
	Assembly .....	60
	Installation .....	63
60 260	Rotor Right Bearing and Jackshaft .....	65
	Removal .....	65
	Disassembly .....	66
	Inspection .....	67
	Assembly .....	68
	Installation .....	68

## SECTION 62 - PRESSING

BOOK 4 - 87606507

### Chapter 1 - Take up Arm

#### CONTENTS

Section	Description	Page
62 080	Description of Operation .....	2
	Overhaul .....	2
	Take Up Arm .....	2
	Removal .....	2
	Inspection .....	9
	Assembly .....	9

---

# SECTION 62 - PRESSING

BOOK 4 - 87606507

## Chapter 2 - Belts

### CONTENTS

	Specifications .....	2
	Special Tools .....	2
	Description of Operation .....	3
	Troubleshooting .....	4
62 140	Belt Failure Analysis .....	4
62 140	Overhaul .....	8
	Belt Tension Removal .....	8
62 140	Belt Lacing Cables .....	9
	Removal .....	9
	Installation .....	9
62 140	Laced Belt .....	10
	Removal .....	10
	Repair .....	10
	Installation .....	14
62 140	Belt Storage .....	15
62 140	Belt Tracking .....	15
62 140	Belt Slippage .....	16
62 140	Endless Belt .....	17
	Replacement .....	17
	Removal .....	18
	Inspection .....	27
	Installation .....	27

---

## SECTION 62 - PRESSING

BOOK 4 - 87606507

### Chapter 3 - Starter Roll

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
62 000	Description of Operation .....	2
	Overhaul .....	2
62 150	Starter Roll .....	2
	Removal .....	2
	Disassembly .....	5
	Inspection .....	6
	Assembly .....	6

## SECTION 62 - PRESSING

BOOK 4 - 87606507

### Chapter 4 - Stationary Roll

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
62 000	Description of Operation .....	2
	Overhaul .....	2
62 150	Stationary Roll .....	2
	Removal .....	2
	Inspection .....	5
	Assembly .....	5

---

## SECTION 62 - PRESSING

BOOK 4 - 87606507

### Chapter 5 - Floor Roll

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
62 000	Description of Operation .....	2
	Overhaul .....	2
62 160	Floor Roll .....	2
	Removal .....	2
	Disassembly .....	4
	Inspection .....	4
	Assembly .....	5
	Installation .....	5

## SECTION 62 - PRESSING

BOOK 4 - 87606507

### Chapter 6 - Belt Rolls

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
62 000	Description of Operation .....	3
	Overhaul .....	4
62 140	Drive Roll .....	4
	Removal .....	4
	Inspection .....	11
	Installation .....	11
62 140	Drive Shaft Bearings .....	24
	Removal .....	24
	Inspection .....	29
	Installation .....	29
62 140	Backwrap Roll .....	38
	Removal .....	38
	Inspection .....	41
	Installation .....	41

---

# SECTION 62 - PRESSING

BOOK 4 - 87606507

## Chapter 6 - Belt Rolls (Continued)

### CONTENTS

Section	Description	Page
62 140	Tailgate Nose Roll .....	43
	Removal .....	44
	Disassembly .....	45
	Inspection .....	45
	Assembly .....	45
	Installation .....	46
62 140	Take-up Arm Rolls .....	49
	Removal .....	49
	Inspection .....	55
	Installation .....	56
62 140	Tailgate Top Rear Idler Roll .....	60
	Removal .....	60
	Inspection .....	62
	Installation .....	62
62 140	Tailgate Top Front Idler Roll .....	63
	Removal .....	63
	Inspection .....	65
	Installation .....	65
62 140	Adjustable Tailgate Roll .....	67
	Removal .....	67
	Disassembly .....	69
	Assembly .....	70
	Installation .....	70
62 140	Lower Tailgate Roll (RBX463 and RBX563) .....	73
	Removal .....	73
	Disassembly .....	74
	Assembly .....	74
	Installation .....	75

---

# SECTION 62 - PRESSING

BOOK 4 - 87606507

## Chapter 7 - Sledge Assembly

### CONTENTS

Section	Description	Page
62170	Description of Operation .....	3
	Overhaul .....	4
	Sledge Assembly .....	4
	Disassembly .....	4
	Follower Roll Scraper .....	7
	Removal .....	7
	Follower Roll .....	8
	Removal .....	8
	Stripper Roll .....	9
	Removal .....	9
	Idler Gear .....	10
	Removal .....	10
	Pivot Roll .....	11
	Removal .....	11
	Sledge Frame .....	13
	Removal .....	13
	Sledge Assembly .....	14
	Inspection .....	14
	Follower Roll .....	14
	Inspection .....	14
	Stripper Roll (Drive End) .....	15
	Inspection .....	15
	Stripper Roll (Right Side) .....	16
	Inspection .....	16
	Idler Gear .....	16
	Inspection .....	16
	Pivot Roll (Drive End) .....	17
	Inspection .....	17

---

## SECTION 62 - PRESSING

BOOK 4 - 87606507

### Chapter 7 - Sledge Assembly (Continued)

#### CONTENTS

Section	Description	Page
	Pivot Roll (Right Side) .....	18
	Inspection .....	18
	Sledge Frame .....	18
	Inspection .....	18
	Assembly .....	18
	Pivot Roll .....	21
	Assembly .....	21
	Idler Gear .....	26
	Assembly .....	26
	Sledge Assembly .....	27
	Assembly .....	27
	Stripper Roll .....	28
	Assembly .....	28
	Follower Roll .....	31
	Assembly .....	31
	Follower Roll Scraper .....	31
	Assembly .....	31

---

# SECTION 68 - WRAPPING

BOOK 4 - 87606507

## Chapter 1 - Net Wrapper Mechanical System

### CONTENTS

Section	Description	Page
68 000	Description Of Operation .....	3
	Adjustments .....	9
	Knife Spring .....	9
	Knife Link .....	9
	Brake Spring .....	9
	Brake Link .....	10
	Duckbill Spring .....	11
	Duckbill Baffle .....	11
	Knives .....	12
	Overhaul .....	12
68 170	Duckbill .....	12
	Removal .....	12
	Disassembly .....	18
	Duckbill Roller Bearing .....	19
	Replacement .....	19
	Duckbill .....	19
	Inspection .....	19
	Installation .....	19
68 170	Net Wrapper Adjustment .....	30
	Mechanical .....	30
	Electronic .....	33
68 170	Net Knife .....	36
	Replacement .....	36
68 170	Net Knife Mounting .....	37
	Removal .....	37
	Inspection .....	39
	Installation .....	39

---

## SECTION 68 - WRAPPING

BOOK 4 - 87606507

### Chapter 1 - Net Wrapper Mechanical System (Continued)

#### CONTENTS

Section	Description	Page
68 170	Net Brake System .....	44
	Removal .....	44
	Installation .....	45
	Adjustment .....	46
68 170	Net Rolls .....	46
	Removal .....	46
	Installation .....	47
68 170	Baffle .....	49
	Removal .....	49
	Installation .....	49
68 170	Net Mounting .....	50
	Net Loading Brake Release .....	50
	Adjustment .....	50
	Brake Drum Bushings .....	50

---

# SECTION 68 - WRAPPING

BOOK 4 - 87606507

## Chapter 2 - Twine Wrapper Mechanical System

### CONTENTS

Section	Description	Page
68 000	Description of Operation .....	2
	Adjustments .....	4
	Twine Installation .....	4
	Twine Tension .....	7
	Twine Knives .....	7
	Twine Knife Tension .....	8
	Twine Tubes .....	9
	Twine Tube Breakaway .....	10
	Overhaul .....	11
68 180	Twine Tube Pivot .....	11
	Disassembly .....	11
	Inspection .....	15
	Assembly .....	15
68 180	Twine Tube Breakaway .....	20
	Removal .....	20
	Installation .....	22
68 180	Extendable Twine Tubes .....	23
68 180	Twine Tube "Bullets" .....	23
68 180	Twine Tube Leaf Springs .....	23
68 180	Twine Knife Shaft and Bearings .....	25
	Operation .....	25
	Removal .....	26
	Inspection .....	27
	Installation .....	27
	Adjustment .....	30
68 180	Twine Actuator and Drag Link Pivot .....	31
	Removal .....	31
	Installation .....	32
	Adjustment .....	33
68 180	Twine Boxes .....	35
	Removal .....	35
	Installation .....	35



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

---

## SECTION 70 - EJECTION

BOOK 4 - 87606507

### Chapter 1 - Bale Ejector

#### CONTENTS

Section	Description	Page
	Description of Operation .....	2
	Overhaul .....	2
	Bale Ejector .....	2
	Disassembly .....	2
	Assembly .....	3

## SECTION 90 - SHIELDING

BOOK 4 - 87606507

### Chapter 1 - Side Doors

#### CONTENTS

Section	Description	Page
90 000	Description of Operation .....	2
	Overhaul .....	2
90 102	Left and Right Side Doors .....	2
	Gas Spring .....	2
	Removal .....	2
	Latch .....	4
	Removal .....	4
	Door Stop .....	4
	Removal .....	4
	Door Hinge .....	5
	Removal .....	5
	Gas Spring Hinge .....	5
	Removal .....	5
	Lower Gas Spring Mounting and Latch Pin .....	5
	Removal .....	5

---

# SECTION 90 - SHIELDING

BOOK 4 - 87606507

## Chapter 2 - Net and Twine Boxes

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
90 000	Description of Operation .....	2
	Overhaul .....	2
90 102	Net Wrapper Box .....	2
	Cover .....	2
	Removal .....	2
	Latch .....	2
	Removal .....	2
	Latch Pin .....	3
	Removal .....	3
90 102	Side Twine Boxes .....	3
	Installation .....	3
90 102	Front Twine Box .....	5
	Installation .....	5

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**