
WDX1902, WDX2302 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 25 - FRONT MECHANICAL DRIVE	10
SECTION 29 - HYDROSTATIC TRANSMISSION	11
SECTION 33 - BRAKES AND CONTROLS	15
SECTION 35 - HYDRAULIC SYSTEMS	16
SECTION 44 - REAR AXLE	21
SECTION 50 - CLIMATE CONTROL	23
SECTION 55 - ELECTRICAL SYSTEMS	26
SECTION 58 - HEADER ATTACHMENTS	45
SECTION 88 - OPTIONAL EQUIPMENT	47
SECTION 90 - PLATFORM, CAB AND DECALS	49

The following pages are the collation of the contents pages from each section and chapter of the WDX1902 and WDX2302 Repair manual. Complete Repair part # 87579338.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the WDX1902 and WDX2302 Self-Propelled Windrowers.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87579339

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Precautionary Statements	2
	Safety	3
	General Safety Information	5
	Introduction	8
	About Improvements	8
	Product Identification Numbers (PIN)	9
	Engine PIN Number	9
	Company Policy	10
	Parts and Specification	10
	Lubrication	10
	Recommended Lubricants and Coolants	11
	Sealants	12
	Minimum Hardware Tightening Torques	13
	Installation of Adjustable Fittings in Straight Thread O ring Bosses	15
	Standard Torque Data for Hydraulic Tubes and Fittings	15
	Pipe Thread Fitting Torque	16
	Installation of ORFS (O ring Flat Faced) Fittings	16
	Specifications	17

SECTION 10 - ENGINE

BOOK 1 - 87579339

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	4
	Torque Values	13
	Special Tools	15
	Troubleshooting	16
	Description of Operation	20
	Cylinder Block Assembly	20
	Cylinder Head Assembly	21
	Camshaft Assembly	21
	Crankshaft Assembly	21
	Connecting Rods	22
	Pistons	22
	Manifolds	23
	Timing Gears	23
	Lubrication System	24
	Crankcase Breather	27
	Overhaul	28
	Engine - Complete	28
	Removal	28
	Flywheel	35
	Removal	35
	Installation	35
	Engine - Complete	37
	Installation	37
	Engine Overhaul - Introduction	44
	Timing Check	45
	Component Overhaul	48

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

SECTION 10 - ENGINE

BOOK 1 - 87579339

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Cylinder Head, Valves, and Related Parts	48
	Cylinder Head Removal	48
	Cylinder Head Disassembly	52
	Inspection and Repair, Cylinder Head	53
	Valve Inserts	54
	Valve Guides	55
	Valve Springs	56
	Rocker Shaft Inspection and Reassembly	56
	Cylinder Head Reassembly	57
	Hydraulic Tappets	60
	Engine Front Cover and Timing Gears	62
	Timing Gears Checking and Removal	62
	Inspection and Repair of Gears	65
	Installation	65
	Oil Pan	68
	Removal	68
	Inspection and Repair	68
	Installation	68
	Rear Cover Plate	69
	Removal	69
	Installation	69
	Oil Pump	71
	Removal	71
	Disassembly	71
	Inspection and Repair	72
	Installation	72
	Oil Pressure Relief Valve	73
	Removal	73
	Installation	73
	Camshaft	74
	Removal	74
	Inspection and Repair	74

SECTION 10 - ENGINE

BOOK 1 - 87579339

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Camshaft Bearings	75
	Installation	75
	Pistons	76
	Removal	76
	Inspection and Repair	77
	Connecting Rod Bush Replacement	79
	Cylinder Block Overhaul	80
	Cylinder Bore	81
	Specifications	81
	Sleeving - Boring and Honing	82
	Reassembly	83
	Installing Piston Assembly Into Block	85
	Crankshaft	86
	Removal	86
	Inspection and Repair	87
	Reassembly	88
	Front Seal	91
	Installation	91
	Engine Compression Test	93
	Test Procedure	93
	Test Readings	93
	Test Conclusion	93

SECTION 10 - ENGINE

BOOK 1 - 87579339

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	3
	Fuel System Torque Chart	4
	Special Tools	5
	Fuel System	6
	Fuel Shut Off (Injection Pump)	6
	Description of Operation	7
	6-cylinder Fuel and Induction System	7
	Bosch VP Distributor - Type Fuel Injection System	7
	Fuel Tank	8
	Electric Lift Pump	8
	Fuel Filters	8
	Electric Lift Pump	10
	Removal	10
	Testing	10
	Bleeding Air From Filter	10
	Injection System Bleeding	11
	Air Leakage Test	12
	Fuel Injection Pump	13
	Fuel Injectors	13
	Cold Start Assist (Option)	14
	Plumbing	14
	Fuel Tanks	15
	Removal	15
	Installation	18
	Connecting Fuel Tanks	19
	Electronically Controlled Fuel Injection Pump	21
	Bosch VP Fuel Injection Pump - (Electronically Controlled)	22
	Removal	22
	Inspection	22

SECTION 10 - ENGINE

BOOK 1 - 87579339

Chapter 2 - Fuel System (Continued)

CONTENTS

Section	Description	Page
	Injection Pump Timing Check	23
	Fuel Injectors	27
	Removal	27
	Testing and Overhaul	27
	Disassembly	28
	Inspection and Repair	29
	Reassembly	31
	Nozzle Opening Pressure	32
	Installation	32

SECTION 10 - ENGINE

BOOK 1 - 87579339

Chapter 3 - Air Induction System

CONTENTS

Section	Description	Page
	Specifications	2
	Air Cleaner	2
	General Torques	2
	Description of Operation - Air Cleaner	3
	Air Cleaner	3
	Inner Element	3
	Troubleshooting - Air Cleaner	4
	Overhaul -Air Cleaner	5
	Inspection	5
	Clean or Replace Primary (Outer) Air Filter	5
	Replace the Secondary (Inner) Air Filter	9
	Air Intake Hoses	9
	Removal	10
	Installation	11
	Description of Operation - Turbocharger	12
	Troubleshooting - Turbocharger	14
	Overhaul - Turbocharger	17
	Removal	17
	Disassembly	17
	Cleaning	18
	Inspection	18
	Center Shaft Radial Check	19
	Axial Clearance Check	20
	Reassembly	21
	Installation	22
	Leak Diagnosis	22

SECTION 10 - ENGINE

BOOK 1 - 87579339

Chapter 4 - Cooling System

CONTENTS

Section	Description	Page
	Description of Operation	2
	Cooling System (CNH 7.5 Liter Engine)	2
	Troubleshooting	4
	Specifications	5
	Tightening Torques	5
	Thermostat	5
	Water Pump	5
	Drive Belt	5
	Cooling Capacities	5
	Coolant Flow	5
	Cooling Fluid	5
	Overhaul	6
	Radiator	6
	Removal	6
	Installation	9
	Thermostat	13
	Removal	13
	Inspection and Repair	13
	Installation	14
	Temperature Warning Sender	14
	Installation	14
	Belt Tensioner	15
	Removal	15
	Inspection and Repair	15
	Reassembly	15
	Idler Pulley	16
	Water Pump	16
	Removal	16
	Disassembly	17
	Inspection and Repair	17
	Reassembly: 6-cylinder	18
	Installation: 6-cylinder	20

SECTION 10 - ENGINE

BOOK 1 - 87579339

Chapter 5 - Lubrication System

CONTENTS

Section	Description	Page
	Description of Operation	2
	Lubrication System	3
	Troubleshooting	4
	Engine Oil Consumption	5
	Evaluating Oil Consumption	5

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 1 - 87579340

Chapter 1 - Front Mechanical Drive

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	7
	Front Mechanical Drive	7
	Removal	7
	Installation	9
	Planetary Gearbox Drive	14
	Disassembly	15
	Assembly	19
	Labor Guide	25

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87579340

Chapter 1 - Ground Drive

CONTENTS

Section	Description	Page
	Specifications	5
	Hydrostatic Transmission Identification	6
	Torque Specifications	7
	Torque Chart	7
	Motor Area	7
	Description of Operation	8
	Pumps	9
	High Pressure Relief Valves	10
	Check Valves	10
	Charge Pump	11
	Charge Relief Valve (Pump)	11
	Header Lift Pump	11
	Motors	11
	Variable Displacement Motor	11
	Reservoir	13
	Oil Flow	13
	Neutral	13
	Forward/Reverse	13
	Hydraulic System Diagram	14
	Solenoid Valve	16
	Low-Range Operation	16
	High-Range Operation	16
	Cooling Circuit	16
	Relief Valve	16
	Operation	16
	Linkage	17
	Operation	17
	Sauer-Danfoss Authorized Service Centers - North America	18
	Troubleshooting	22
	Excessive Noise	22
	Overheating Transmissions	22
	Loss of Propulsion	22

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87579340

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Control Linkage Inspection	23
	High-Pressure Relief Valve Check	23
	Charge Pump Relief Valve	24
	Check Valve	24
	Pressure Testing	25
	Port Locations	27
	Charge Pressure	28
	Charge Pressure System Test	29
	Tandem Pump Charge Pressure Test	29
	Complete Charge System Test	31
	High Pressure Relief Valve Test	33
	Case Pressure Test (Pump)	36
	Case Pressure Test (Motor)	36
	Suction Test	37
	Case Flow Test	37
	Ground Speed Circuit	38
	Operation	38
	Troubleshooting	38
	Troubleshooting Charts	41
	Windrower Will Not Shift into High Range	41
	Windrower Will Not Shift into Low Range	42
	Charge Pump	43
	Hydrostatic System	44
	Explanation of Terms Used in Failure Analysis	47
	Lack of Lubrication	47
	Operating at Excessive Temperature Levels	47
	Use of Improper Fluid	47
	Cavitation	47
	Overspeeding of the Unit	47
	Parts Worn or Scored From Contamination	47
	Abrasive Contaminants	47
	Plates Scored from Water in Oil (Non-Particle Contaminants)	47

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87579340

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Minor Repairs	48
	Tandem Pump	49
	Port Locations	49
	Rear Half Pump Breakdown	50
	Front Half Pump Breakdown	52
	Shaft Seal Replacement	54
	Charge Pump Removal	55
	Charge Pump Inspection	56
	Charge Pump Assembly	57
	O ring Seals	58
	Trunnion Seal (Control Shaft Side)	59
	Trunnion Cover (Plain)	61
	Tandem Pump Removal	62
	Tandem Pump Installation	65
	Ground Drive Motor	67
	Removal	67
	Installation	70
	Shaft Seal Replacement	71
	Start-Up	72
	Maintenance	72
	Worm Shaft	73
	Removal	73
	Installation	74

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87579340

Chapter 2 - Propulsion System

CONTENTS

Section	Description	Page
	Theory of Operation	2
	Pintle Arm Rotary Potentiometer (R21)	3
	Removal	3
	Installation	3
	Testing	4
	Propulsion Rotary Position Sensor (R23)	5
	Removal	5
	Installation	5
	Testing	6
	MFH Rotary Position Sensor (R18)	7
	Removal	7
	Installation	8
	Testing	9
	Neutral Adjustment	10

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87579340

Chapter 3 - Active Calibrations

CONTENTS

Section	Description	Page
	Active Calibrations	2

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87579340

Chapter 4 - MFH Calibration

CONTENTS

Section	Description	Page
	Dealer Setup Menu Navigation	2
	MFH Calibration	2

SECTION 33 - BRAKES AND CONTROLS

BOOK 2 - 87579340

Chapter 1 - Brakes and Controls

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	2
	Brake Assembly	2
	Removal	2
	Installation	5
	Disassembly	6
	Rotating, Stationary, and Primary Disc Assembly	12
	Installation	12
	Brake Bleeding Procedure	16
	Labor Guide	18

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87579341

Chapter 1 - Hydraulic Systems

CONTENTS

Section	Description	Page
	Introduction	5
	System Component Locations	6
	Reading Diagram Symbols	7
	Hydraulic System Diagram	12
	Theory of Operation - Ground Drive	14
	Ground Drive	14
	Circuit Diagrams	16
	Service Techniques	21
	General	21
	Oil Level	21
	Hoses and Tubes	22
	O Ring Flat Face Seal Fittings	22
	O Ring Flat Face Seal Fitting Torque Values	22
	Theory of Operation - Header Drive	23
	Header Drive	23
	Electronic Displacement Control (EDC)	25
	Circuit Diagrams	26
	Theory of Operation - Header Lift System	30
	Header Lift System	30
	Neutral State	31
	Header Lift	31
	Accumulator Charge	31
	Header Lower/Flotation	31
	Theory of Operation - Floatation/Accumulators	32
	Floatation/Accumulators	32
	Increase/Decrease Floatation	32
	Circuit Diagrams	33
	Theory of Operation - Header Tilt System	38
	Header Tilt System	38
	Circuit Diagrams	39
	Theory of Operation - Auxiliary Hydraulic Pump	42
	Auxiliary Hydraulic Pump (optional)	42
	Independent Control Valve (ICV) Manifold (HW345/365)	43
	Service Parts	43
	Valve Identification Codes	44
	Component Identification and Location	45

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87579341

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Right-Hand (RH) View	45
	Plan View	46
	Front View	47
	Rear View	48
	Bottom View	49
	Left-hand (LH) View (Hidden Against Mounting Plate)	50
	Energized Solenoid Chart	51
	Zero-Leak Plugs	52
	Removal	52
	Install	52
	Plug Torque Requirements	53
	Zero-Leak Plug to SAE J514 ORB Plug Cross Reference	53
	Auxiliary Control Valve (Speed Control) Manifold (HW345/365)	54
	Service Parts	54
	Valve Identification Codes	55
	Auxiliary Control Valve	56
	Component Identification and Location	56
	Right-Hand (RH) View	56
	Plan View	57
	Bottom View	58
	Left-hand (LH) View (Hidden Against Mounting Plate)	59
	Theory of Operation - Cartridge Valves	60
	Cartridge Valves (Solenoid-operated)	60
	Two-way Two-position (Normally Closed) Poppet Valves	61
	Three-way Two-position Spool Valve	63
	Two-way Two-position (Normally Open) Poppet Valve	64
	(Normally Open) Pressure Reducing/Relieving Valves	65
	(Normally Open) Solenoid-operated Relief Valves	66
	(Normally Closed) Solenoid-operated Proportional Flow Control	67
	Main Manifold Cartridge Torque Requirement	68
	Replacement	70
	Installation	71
	Solenoid Coils	72
	Removal	72
	Installation	73
	Cartridge Valves (Non-solenoid-operated)	74
	Direct-acting Flow Control Needle Valve	74

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87579341

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Pilot-operated Relief Valve	75
	Differential-Pressure-Sensing Valve	76
	Replacement	76
	Adjustment	77
Minor Repairs		78
	Header Drive Pump	78
	Removing the Multifunction Valve Cartridge	78
	Installing the Multifunction Valve Cartridge	79
	Removing the Charge Pressure Relief Valve	79
	Installing the Charge Pressure Relief Valve	80
	Diagnosing the EDC and Pilot Control Valve Assembly	80
	Dealer Setup Menu Navigation	81
	Removing the EDC and PCP Valve Assembly	83
	Installing the EDC and PCP Valve Assembly	84
	Removing the Charge Cooling Circuit Manifold	86
	Installing the Remote Charge Cooling Circuit Manifold	87
Major Components		88
	Header Drive Pump	88
	Removal	88
	Removing the Pump Shaft Seal	93
	Installing the Pump Shaft Seal	94
	Inspection	95
	Installation	96
	Start-up Procedure	98
	Pressure Checks – Header Drive System	102
	Test Equipment	102
	Pressure Readings	103
	Charge Pressure – Header Drive Pump	103
	Charge Pressure – Header Drive Motor	103
	Pump Gauge Information	104
	Case Pressure	105
	High Pressure	105
	Motor Gauge Information	106
	Inlet Vacuum	107
	Case Drain Flow	108
	Cooling Circuit Bypass Pressure	109

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87579341

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting - Header Drive System	110
	General	110
	Reduced System Pressure	110
	Reduced Hydraulic Flow	110
	Excessive Noise	110
	Overheating	110
	Power Loss	110
	Explanation Of Terms Used In Failure Analysis	111
	Parts Evaluation	112
	Discoloration	112
	Scratches or Grooves	112
	Rework	112
	Repeat Failures	112
	Hydraulic Oil Temperatures	113
	Header Drive System	114
	Further Troubleshooting Tips	117
	Header Drive Pump	118
	Charge Pump	119
	Header Drive Motor	120
	Adjustments	121
	Header Drive Pump	121
	Neutral Adjustment	121
	Diagnosing the Multifunction Valves	125
	Diagnosing the Charge Pressure Relief Valve	126
	Header Drive Motors	127
	Header Drive Speed Sensor Gap	127
	Sauer-Danfoss Authorized Service Centers - North America	128
	Header Lift Pump	132
	Removal	132
	Disassembly	132
	Inspection	134
	Assembly	134
	Installation	137
	Adjustment Instructions	138
	Six Cylinder - RH Header Lift Relief Valve (L-03) Pressure Adjustment	139
	Six Cylinder - LH Header Lift Relief Valve (L-04) Pressure Adjustment	142

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87579341

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Accumulators - Header Lift	146
	Removal	146
	Inspection	147
	Installation	147
	Accumulator - Surge Suppression	149
	Specifications	149
	Hydraulic Accumulator Breakdown	150
	Checking Pre-Charge	151
	Pre-Charging Procedure	152
	Removal	153
	Installation	153
	Lift Cylinders	154
	Removal	154
	Inspection	158
	Assembly	159
	Tilt Cylinder	163
	Removal	163
	Inspection	167
	Assembly	168
	Maintenance	171
	Auxiliary Engine Mounted Hydraulic Pump (optional)	172
	Removal	172
	Inspection	172
	Installation	173
	Hydraulic Reservoir Replacement	174
	Removal	174
	Installation	175
	Tank Preparation (Plastic Tanks only)	176

SECTION 44 - REAR AXLE

BOOK 3 - 87579341

Chapter 1 - Non-Suspended Rear Axle

CONTENTS

Section	Description	Page
44 000	Introduction	2
	Overview	2
	Special Tools	2
	Specifications	3
	Description of Operation	4
	Extensions and Axle Tube	4
	Adjustments	8
	Wheel Width	8
	Extension Widths (Spindle to Spindle)	8
	Overhaul	9
	Wheel, Axle Shaft and Hub	9
	Removal	9
	Inspection	11
	Installation	12
	Axle Support Fork	14
	Removal	14
	Inspection	14
	Installation	15
	Extension	16
	Removal	16
	Inspection	18
	Installation	18
	Axle Tube and Pivot Pin	20
	Removal	20
	Inspection	21
	Installation	22
	Labor Guide	24

SECTION 44 - REAR AXLE

BOOK 3 - 87579341

Chapter 2 - Suspended Rear Axle

CONTENTS

Section	Description	Page
44 000	Introduction	2
	Overview	2
	Special Tools	2
	Specifications	3
	Description of Operation	4
	Extensions and Axle Tubes	4
	Adjustments	7
	Wheel Width	7
	Extension Widths (spindle to spindle)	7
	Overhaul	8
	Wheel, Axle Shaft and Hub	8
	Removal	8
	Inspection	10
	Installation	11
	Axle Support Fork	13
	Removal	13
	Inspection	14
	Installation	14
	Extension	15
	Removal	15
	Inspection	16
	Installation	17
	Air Spring	18
	Removal	18
	Inspection	19
	Installation	19
	Axle Tubes and Pivot Pins	20
	Removal	20
	Inspection	21
	Installation	22
	Labor Guide	24

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87579341

Chapter 1 - Climate Control

CONTENTS

Section	Description	Page
	Specifications	4
	Description of Operation	5
	The Basics of Refrigeration	5
	Air Conditioning Process	6
	R134a Refrigerant Information	7
	Refrigerant Ingredients	7
	Lubricants	7
	Refrigerant (R134a)	7
	Cab Air Flow	8
	System Components	10
	Compressor Pump	10
	Compressor Clutch (L-27)	10
	External Cab Filter	11
	Removal/Replacement	11
	Recirculation Filter	13
	Removal	14
	Cleaning With Air	15
	Condenser	15
	Receiver/Drier	16
	Expansion Valve	17
	Description	17
	Valve Components	17
	Operation	18
	Port Identification	21
	Evaporator	21
	Blower Fan	21
	Description of Operation - Climate Controls	22
	Control Panel – Manual Temperature Control (A-05)	22
	Blower Fan Switch	22
	Temperature Control Switch	22
	Control Panel – (ATC) Automatic Temperature Control (If Equipped)	23
	Control Operation Specifications	23
	ATC Operator Controls	24
	Compressor Protection Switches	25
	High-pressure Cutout Switch (S-40)	25

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87579341

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Low-pressure Cutout Switch (S-69)	25
	Troubleshooting and Servicing Air Conditioning System	26
	General Safety and Service Precautions	26
	Cleanliness	27
	Preliminary Troubleshooting and Testing	27
	Operational Checks	27
	Troubleshooting - Fault Code Chart	28
	Display Fault Codes	28
	Advanced Diagnostics	31
	Diagnosis Charts - Air Conditioning System	35
	Test Procedure: Stabilizing the System	39
	Test Ports	39
	Pressure/Temperature Relationships	40
	Leak Testing	40
	Refilling	40
	Contaminants	41
	Refrigerant Extraction and Recycling Equipment	41
	Using Extraction Equipment	42
	Using Recycled Equipment	42
	Recycling Vs. Reclaiming	42
	Containment of Air Conditioning Refrigerants	42
	Recovery	43
	Flushing	43
	Recharging/Refilling	43
	Using a Manifold Gauge Set	44
	Checking Refrigerant for Excess Air	44
	Containers for Storing Recycled Refrigerant	45
	Disposal of Empty or Near-empty Disposable Containers	45
	Applicable SAE Standards	45
	Manifold Gauge Readings and Interpretations	46
	Performance Test Examples	46
	Overhaul	57
	Condenser	57
	Removal	57
	Inspection and Repair	57

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87579341

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Installation	57
	Receiver/Drier	58
	Removal	58
	Installation	58
	High (S-40) Pressure Switches	58
	Low (S-69) Pressure Switches	58
	Removal	58
	Installation	58
	Blower Motor	59
	Removal	59
	Inspection	61
	Assembly	62
	Installation	63
	Blower Fan Resistor	65
	Removal	65
	Installation	65
	Expansion Valve	65
	Removal	65
	Installation	65
	HVAC Cores	66
	Inspection and Cleaning	66
	Removal	66
	Heater Core and/or Evaporator Core	68
	Removal	68
	Inspection	69
	Installation	70
	Compressor and Clutch	73
	Compressor Clutch Components	73
	Removal	73
	Installation	74
	Checking Compressor Oil for Contamination	75
	Adding Compressor Oil	75

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87579341

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Clutch Procedures	76
	Clutch Run-In	76
	Clutch Test	76
	Clutch Removal	76
	Clutch Inspection	78
	Clutch Installation	79
	Electrical Connection	80
	Tightening Torques	81
	Labor Guide	87

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Troubleshooting	3
	Fault Codes and Fault Finding	4
	Electrical Terms and Equipment	5
	Definition	5
	Electrical System Components	7
	Electrical Components Chart	7
	Rocker Switches	13
	Momentary Rocker Switches	13
	Circuit Breakers	13
	Location of Circuit Breakers	14
	Fuses	15
	Fuse Panel Identification Table	15

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Basic Circuitry/Component Testing	17
	Continuity Test for Open Circuits	17
	Continuity Test for Short to Ground	18
	Resistance Test for Electrical Components	19
	Measuring Voltage	20
	Diodes	21
	Test Procedure	21
	Electro-hydraulic Solenoid Valve Coils	22
	Test Procedure	22
	Operational Check	22
	Relays	23
	Test Procedure	25
	Welding on the Machine	25
	Wiring Harnesses, Connectors, Power Sources and Controls	28
	Connectors	28
	Harness Splices	28
	Fuses, Relays and Switches	28
	Switch and Relay Contacts	28
	Grounds	28
	Power Sources	28
	Wire Harness Identification	28
	Wire Color Codes	29
	Primary Harness Connectors	29
	Ground System	30
	Introduction	30
	Ground Points	30
	Windrower Electronic System	36
	Introduction	36
	Function Monitoring, Machine Configuration and Diagnostics Menus	37
	Selectable Functions Monitoring	37
	Machine Configuration/User Setup Menu	39

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Critical Warning Displays - Automatic Shutdown	45
	Critical Warning Displays - No Shutdown	47
	Non-critical Warning Displays	48
	Electrical Fault Codes	48
	System Monitoring	49

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 2 - Power Distribution

CONTENTS

Section	Description	Page
	Description, Power Distribution, and Troubleshooting	2
	XCM Power	2
	Unswitched XCM Power	2
	Operation	2
	Switched XCM Power	3
	Operation	3
	Power Distribution	4
	Main Distribution Panel – Fuse Block	5
	Unswitched Power	6
	Q-09 #2 Main Circuit Breaker	6
	Q-11 #4 Main Circuit Breaker Busbar	6
	Battery Busbar	6
	Q-08 #1 Main Circuit Breaker Busbar	7
	Switched Power	7

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 2 - Power Distribution (Continued)

CONTENTS

Section	Description	Page
	K-33 VI Supply Busbar	7
	K-38 IGN Control Busbar	7
	K-04 ACC Control Busbar	8
	XCM Function and Configure Select Switches	17
	Operation	17
	Troubleshooting	17
	Troubleshooting	18

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 3 - Air Conditioning Systems

CONTENTS

Section	Description	Page
	Air Conditioning Systems	2
	Introduction	2
	General Principles of Operation (Manual and ATC Systems)	2
	Manual HVAC System (Standard)	4
	Operation	4
	Troubleshooting	4
	A/C Clutch Circuit (Manual HVAC)	8
	Operation	8
	Troubleshooting	8
	Automatic (ATC) HVAC System	11
	Operation	11
	Control Operation Specifications	11
	General Operation	12

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 3 - Air Conditioning Systems (Continued)

CONTENTS

Section	Description	Page
	Heater Operation	12
	Heater Operation – Sequence of Events	12
	Defrosting/Defogging Operation	13
	Air Conditioner (A/C) Operation	13
	Ventilation	13
	System Component Functions	13
	Automatic Fan Speed Control (AUTO)	13
	Manual Mode Fan Speed Control (Up/Down)	13
	A/C Compressor Clutch Control	13
	Heater Water Valve	14
	Cab Air Temperature Sensor	14
	Evaporator Probe	14
	ATC HVAC Component Usage	14
	Troubleshooting	15
	Fault Codes	15
	Advanced Diagnostics Display Mode	18
	Revision Level	19
	Setting Parameters	20
	ATC Troubleshooting Quick-Checks	20
	A/C Clutch Circuit (ATC HVAC)	26
	Operation	26
	Troubleshooting	26

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 4 - Lighting Systems

CONTENTS

Section	Description	Page
	Introduction	2
	Lamp Replacement Chart	2
	Flashing Lights and Turn Signals	2
	General	2
	Operation	2
	Troubleshooting	3
	Road Lights, Tail Lights and Console Light Circuits	10
	Operation	10
	Troubleshooting	10
	Work Lights Circuits	19
	Operation	19
	Troubleshooting	19
	Exit Lighting (Left Side Stubble Light)	27
	Operation	27
	Procedure	27
	Console and Dome Lights Circuits	28
	Operation	28
	Troubleshooting	28

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 5 - Engine Electrical Systems

CONTENTS

Section	Description	Page
	General Information	2
	Introduction	2
	Engine Functions for the XCM (Inputs)	2
	Engine Functions for the XCM (Outputs)	2
	Starting Circuits	2
	Air Filter Switch Circuit	3
	Troubleshooting	4
	Fuel Level Gauge Circuit	6
	Sender Resistance Chart	8
	Troubleshooting	8
	Coolant Temperature Circuit	10
	4-Line Display - Engine Coolant Temperature Scale	11
	A-Pillar Display - Engine Coolant Temperature Scale	11
	Troubleshooting	12
	Engine Fuel Solenoid Circuit	14
	Engine Oil Pressure Switch (S-72) Circuit	16
	Troubleshooting	18
	Engine Starting Motor Circuit	20
	Troubleshooting	22
	Fuel Lift Pump Circuit	27
	Removal/Testing	27
	Troubleshooting	28
	Fuel Water Switch (S-59)	30
	Draining the Fuel System Water (Switch Off)	31
	Fuel Injection Pump	33
	Fuel Injection Pump Module (A-04) Connections	34
	Thermostart System Circuit (If equipped)	36
	Troubleshooting	36
	Engine Boost Temperature/Pressure Sender (B-13)	38
	Rotary Radiator Screen Cleaner Circuit	38
	Troubleshooting	39

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 6 - Charging Electrical System

CONTENTS

Section	Description	Page
	Introduction	3
	Battery	5
	Size and Rating	5
	How a Battery Works	5
	Battery Troubleshooting	5
	Determining the Cause of Battery Failure	6
	Application and Installation	6
	Service History	6
	Visual Inspection	6
	Troubleshooting Summary	8
	Testing the Battery - General	9
	"Key Off" Current Drain	10
	Voltage Drop Test	11
	Charging the Battery	12
	Determining Battery Charge Procedure	12
	Slow Charge Procedure: For Batteries with Charges Below 11.0 V	12
	Selecting Battery Charging Method	13
	Slow Charge Procedure	14
	Standard Charge Procedure: Preferred Method for Batteries with Voltage of 11 to 12.5 V	15
	Fast Charge Procedure: Alternative Method for Batteries with Voltage of 11 to 12.5 V	15
	Battery Charging Time Standard Charge Procedure	15
	Battery Charging Precautions	16
	Battery Specifications	16
	Alternator	17
	Charging System Excitation Circuit Operation	17
	Alternator and Voltage Regulator	17
	Maintaining the Alternator	19
	Alternator Connections	19
	Alternator and Voltage Regulator Precautions	19
	Alternator Belt Tension	20

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 6 - Charging Electrical System (Continued)

CONTENTS

Section	Description	Page
	Alternator Drive Belt Removal	20
	Alternator Drive Belt Replacement	20
	Welding on the Machine	21
	Troubleshooting	21
	Testing the Alternator	23
	Alternator Removal	24
	Alternator Installation	25
	Replacing the Regulator	25

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 7 - Electro-Hydraulic Electrical Systems

CONTENTS

Section	Description	Page
	Description of Operation	2
	Introduction	2
	Hydraulic Oil Level Switch Circuit	2
	Troubleshooting	4
	Hydraulic Oil Temperature Switch Circuit	7
	Troubleshooting	8
	Hydraulic Charge Pressure Switch Circuit	11
	Troubleshooting	12
	Seat Occupied Circuit	15
	Troubleshooting	16
	Header Drive Circuit	18

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 7 - Electro-Hydraulic Electrical Systems (Continued)

CONTENTS

Section	Description	Page
	Header Reverse Circuit	20
	Header Speed Circuit	22
	Master Hydraulic Solenoid Circuit	25
	Header Raise/Lower Circuit	27
	Header Raise Circuit	27
	Header Lower Circuit	27
	Header Tilt Up/Tilt Down Circuit	30
	Header Tilt Up Circuit	30
	Header Tilt Down Circuit	30
	Header Flotation Trim Circuit	32
	Hydrostatic High Speed Circuit	35

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 8 - Dealer Setup/Diagnostics Tests

CONTENTS

Section	Description	Page
	Accessing Diagnostic Mode	2
	Inputs	3
	Engine Inputs	4
	Fuel Inputs	5
	Header Inputs	5
	Hydraulics Inputs	6
	Lights Inputs	7
	Preheat Inputs	7
	Propulsion Inputs	8
	PTO Inputs	8
	Reel Inputs	9
	Outputs	9
	Fuel Outputs	10
	Header Outputs	10
	HVAC Outputs	11
	Preheat Outputs	12
	Inputs and Outputs Component Chart	13
	Wiggle Test	16
	Display (LCD) Test	16
	Fault History Screen	17

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 9 - Audible Alarm

CONTENTS

Section	Description	Page
	Enable/Disable the Low and Medium Priority Fault/Warning Messages	2
	Select Audible Alarm Volume	2
	Audible Alarm Priorities	2
	Low Priority Warnings	2
	Medium Priority Warnings	2
	High Priority Warnings	3

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87579342

Chapter 10 - Controller Area Network (CAN)

CONTENTS

Section	Description	Page
55 000	CAN Network Basics	2

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87579343

Chapter 11 - Fault Codes

CONTENTS

Section	Description	Page
	Introduction	4
	Fault Code Format (SPN/FMI Codes)	5
	SPN/FMI Code Charts	5
	FMI Codes	5
	SPN Codes	6
	Troubleshooting	9
	Engine Fault Codes	9
	FAULT CODE - 101-03 Oil Pressure Switch Shorted to High Source	9
	FAULT CODE - 101-04 Oil Pressure Switch Shorted to Low Source	11
	FAULT CODE - 102-03 Air Filter Restriction Switch Shorted to High Source ...	13
	Fuel Fault Codes	16
	FAULT CODE - 301-04 Fuel Water Switch Shorted to Low Source	16
	Hydraulic Fault Codes	19
	FAULT CODE - 001-03 Hydraulic Charge Pressure Switch Shorted to High Source	19
	FAULT CODE - 002-03 Hydraulic Reservoir Level Sensor Shorted to High Source	22
	FAULT CODE - 003-03 Hydraulic Oil Temperature Switch Shorted to High Source	25
	Propulsion Fault Codes	28
	FAULT CODE - 404-03 MFH Position Sensor Shorted to High Source	28
	FAULT CODE - 404-04 MFH Position Sensor Shorted to Low Source	32
	FAULT CODE - 404-14 MFH Position Sensor Special Instructions	36
	FAULT CODE - 405-03 Pintle Arm Position Sensor Shorted to High Source ...	39
	FAULT CODE - 405-04 Pintle Arm Position Sensor Shorted to Low Source	42
	FAULT CODE - 406-03 Propulsion Cylinder Position Pot A Shorted to High Source	45
	FAULT CODE - 406-04 Propulsion Cylinder Position Pot A Shorted to Low Source	49

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87579343

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 406-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration	53
	FAULT CODE - 407-03 Propulsion Cylinder Position Pot B Shorted to High Source	57
	FAULT CODE - 407-04 Propulsion Cylinder Position Pot B Shorted to Low Source	61
	FAULT CODE - 407-13 Propulsion Cylinder Position Pot A and Pot B Needs Calibration	65
	FAULT CODE - 408-03 MFH Neutral Switch Shorted to High Source	69
	FAULT CODE - 408-07 MFH Neutral Switch Mechanical Out of Range	71
	FAULT CODE - 409-03 Park Brake Switch Shorted to High Source	73
	FAULT CODE - 411-13 Propulsion Cylinder Position Pot A Needs Calibration	76
	FAULT CODE - 412-13 Propulsion Cylinder Position Pot A Needs Calibration	80
	FAULT CODE - 413-13 Propulsion Cylinder Position Pot A Needs Calibration	84
	FAULT CODE - 414-13 Propulsion Cylinder Position Pot B Needs Calibration	88
	FAULT CODE - 415-13 Propulsion Cylinder Position Pot B Needs Calibration	92
	FAULT CODE - 416-13 Propulsion Cylinder Position Pot B Needs Calibration	96
	FAULT CODE - 418-03 MFH Position Sensor Shorted to High Source	100
	FAULT CODE - 418-04 MFH Position Sensor Shorted to Low Source	104
	FAULT CODE - 418-13 MFH Position Sensor Needs Calibration	108
	FAULT CODE - 419-03 MFH Position Sensor Shorted to High Source	111
	FAULT CODE - 419-04 MFH Position Sensor Shorted to Low Source	115
	FAULT CODE - 419-07 MFH Position Sensor Mechanical Out of Range	119
	FAULT CODE - 419-13 MFH Position Sensor Needs Calibration	122
	FAULT CODE - 420-03 MFH Position Sensor Shorted to High Source	125
	FAULT CODE - 420-04 MFH Position Sensor Shorted to Low Source	129

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87579343

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 420-07 MFH Position Sensor Mechanical Out of Range	133
	FAULT CODE - 420-13 MFH Position Sensor Needs Calibration	136
	FAULT CODE - 421-03 MFH Position Sensor Shorted to High Source	139
	FAULT CODE - 421-04 MFH Position Sensor Shorted to Low Source	143
	FAULT CODE - 421-13 MFH Position Sensor Needs Calibration	147
	FAULT CODE - 424-03 Propulsion Forward Solenoid L-14p Shorted to High Source	150
	FAULT CODE - 424-04 Propulsion Forward Solenoid L-14p Shorted to Low Source	153
	FAULT CODE - 424-13 Propulsion Forward Coil Needs Calibration	155
	FAULT CODE - 425-03 Propulsion Forward Solenoid L-14t Shorted to High Source	157
	FAULT CODE - 425-04 Propulsion Forward Solenoid L-14t Shorted to Low Source	160
	FAULT CODE - 425-13 Propulsion Forward Coil Needs Calibration	162
	FAULT CODE - 426-03 Propulsion Reverse Solenoid L-15p Shorted to High Source	164
	FAULT CODE - 426-04 Propulsion Reverse Solenoid L-15p Shorted to Low Source	167
	FAULT CODE - 426-13 Propulsion Reverse Coil Needs Calibration	169
	FAULT CODE - 427-03 Propulsion Reverse Solenoid L-15t Shorted to High Source	171
	FAULT CODE - 427-04 Propulsion Reverse Solenoid L-15t Shorted to Low Source	174
	FAULT CODE - 427-13 Propulsion Reverse Coil Needs Calibration	176
	FAULT CODE - 428-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	178
	FAULT CODE - 429-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	183
	FAULT CODE - 430-03 Propulsion Cylinder Position Sensor R-23A Shorted to High Source	188
	FAULT CODE - 431-03 MFH Position Sensor R-18 Shorted to High Source . .	192
	FAULT CODE - 432-03 MFH Position Sensor R-18 Shorted to High Source . .	195

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87579343

Chapter 11 - Fault Codes (Continued)

CONTENTS

Section	Description	Page
	FAULT CODE - 433-03 Propulsion Cylinder Shorted to High Source	198
	FAULT CODE - 434-03 Propulsion Cylinder Shorted to High Source	202
	FAULT CODE - 435-03 Propulsion Enable Relay K-35 Shorted to High Source	206
	FAULT CODE - 435-04 Propulsion Enable Relay K-35 Shorted to Low Source	208
	PTO Fault Codes	210
	FAULT CODE - 200-12 Header Speed Sensor Bad Intelligent Device	210

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87579343

Chapter 12 - Wiring Harnesses

CONTENTS

Section	Description	Page
	Wiring Harnesses	2
	FM Harness (Front)	2
	FM Harness (Rear)	4
	LL and LR Harnesses (Lighting)	6
	FM Harness (Engine LH)	8
	FM Harness (Engine RH)	10
	CM Harness (Electrical Panel)	12
	CM Harness (Inside Cab)	14
	CM Harness (Seat and Right Hand Console)	16
	OR Harness (Outside Roof)	18
	RM Harness (Inside Roof)	20

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87579344

Chapter 13 - Connector Information

CONTENTS

Section	Description	Page
	Standard Wire Harnesses	2
	FM Wire Harness Connectors	2
	CM Wire Harness Connectors	19
	SC Wire Harness Connectors	38
	RM Wire Harness Connectors	39
	OR Wire Harness Connectors	48
	Optional Wire Harnesses	50
	AD Wire Harness – Header Adapter to Old Header	50
	BE Wire Harness – Beacon Light	51
	CN-C Wire Harness – Common Draper/Merger, Cab	51
	CN-F Wire Harness – Common Draper/Merger, Main Frame	54
	DR-C Wire Harness – Draper, Cab	55
	DRA-F Wire Harness – Draper, Main Frame – Diode	60
	DRB-F Wire Harness – Draper, Main Frame – Power Supply	61
	DR-F Wire Harness – Draper, Main Frame	62
	MA Wire Harness – Mirror Assembly	64
	PH-C Wire Harness – Cold Start, Cab	65
	PH-F Wire Harness – Cold Start, Main Frame	66
	RS-C Wire Harness – Reel Speed, Cab	67
	RS-F Wire Harness – Reel Speed, Main Frame	69
	WS-C Wire Harness – Windrow Shields, Cab	70
	WS-F Wire Harness – Windrow Shields, Main Frame	71
	Electrical System Labor Guide	73

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87579344

Chapter 14 - Troubleshooting Optional Equipment (Electrical)

CONTENTS

Section	Description	Page
	A-Pillar Display	2
	Wire Harness Routing/Connections	3
	Troubleshooting	4
	Automatic Temperature Control (ATC)	9
	Cold Start (Thermostart)	9
	Circuit Description	9
	Switch Removal	9
	Switch Connections	10
	Wire Harness Routing	10
	Troubleshooting	11
	Deluxe Mirrors	14
	Circuit Description	14
	Switch Removal	15
	Switch Connectors and Circuitry	15
	Accessing the Outer Roof (OR) Harness	16
	Roof Panel Installation	17
	Wiring Harness Routing	17
	Troubleshooting	19
	Beacon Mount	25
	Circuit Description	25
	Switch Removal	25
	Connectors and Circuitry	26
	Accessing the Outer Roof (OR) Harness	27
	Roof Panel Installation	28
	Wiring Harness Routing and Connections	28
	Troubleshooting	30
	Adjustable Windrow Shields	38
	Circuit Description	38
	Windrow Shields Wide (Open)	39
	Windrow Shields Narrow (Close)	39
	Switch Connection	39

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87579344

Chapter 14 - Troubleshooting Optional Equipment (Electrical) (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting	40
	Position Sensor Potentiometer Test	41
	Sickle Header Drive Adapter (HDX1 and HDX2 Series)	46
	Troubleshooting	47
	Draper Header Drive Adapter	47

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87579344

Chapter 15 - Electrical Schematics

CONTENTS

Section	Description	Page
	Introduction	2
	Electrical Components Index	3
	Using Schematics	9
	Power	10
	Grounds	10
	Connections	10
	Harnesses	11
	Standard Harnesses	11
	Optional Harnesses	11
	Wire Harness Routing	12
	Circuit Identification	12
	Windrower Electrical Schematic	13

SECTION 58 - HEADER ATTACHMENTS

BOOK 7 - 87579345

Chapter 1 - Draper Header WDX1902/2302

CONTENTS

Section	Description	Page
	Overview	3
	WDX1902 and WDX2302 Draper Floatation	3
	Operation	3
	Overhaul	4
	Cut Height Cylinders	4
	Removal	4
	Inspection	5
	Installation	6
	Cartridge Valves	7
	Removal	7
	Installation	7
	Valve Component Location	7
	Reel Lift Valve	7
	Removal	7
	Draper Cut Height Control Valve Manifold	8
	Remove and Replace	8
	Flow Divider Manifold	8
	Removal	8
	Replacement	9
	Control Valve Manifold	11
	Remove and Replace	11
	Hose Routing - Cut Height Cylinders	12
	Hoses - Valve to Valve	13
	Removal	13
	Installation	13
	Hydraulic System Check	17
	Hydraulic System Check with Header Installed	17
	Electrical System - Fuse and Relay	17
	Removal	17
	Switches	18
	Removal	18

SECTION 58 - HEADER ATTACHMENTS

BOOK 7 - 87579345

Chapter 1 - Draper Header WDX1902/2302 (Continued)

CONTENTS

Section	Description	Page
	Solenoid Connectors	18
	Inspection	18
	Troubleshooting - Wire Harnesses	19
	Harness Connectors and Wires	19
	CN-C Wire Harness (Common Draper/Merger, Cab)	19
	RS-C Wire Harness (Common Reel Speed/Draper, Cab)	22
	DR-C Wire Harness (Draper, Cab)	23
	Wire Harness DV-CD6	25
	Wire Harness DV-FD6 Flow Divider	27
	Wire Harness DRD6	28
	DR-F Wire Harness (Draper, Main Frame)	29
	DR-F (REV C) Wire Harness (Draper, Main Frame)	31
	CN-F Wire Harness (Common Draper/Merger, Main Frame)	32
	DRB-F Wire Harness (Draper, Main Frame-Power Supply)	33
	DRA-F Wire Harness (Draper, Main Frame-Diode)	34
	Troubleshooting - Draper System	35
	Diagnostic Charts	35
	Preliminary Diagnostic Chart	35
	Energized Components	37
	Header to Machine Connector	38
	Hydraulic Hose Routing	39
	Wire Identification	40
	Theory of Operation - Flow Divider	41
	Hydraulic Components, Flow Divider Circuit	42
	Height Control Logic	43
	Valves Energized During Indicated Function	43
	Accessing Diagnostic Mode	44
	Fuse F-41 Power Chart	46
	Fuse F-42 Power Chart	46
	Schematics	47
	Hydraulic Schematics	54

SECTION 58 - HEADER ATTACHMENTS

BOOK 7 - 87579345

Chapter 2 - Draper Setup

CONTENTS

Section	Description	Page
	Accessing Dealer Setup	2
	WDX1902/WDX2302	2
	Case IH Multi-Function Handle (MFH)	2
	Dealer Setup Navigation	2
	WDX1902/WDX2302	2
	Dealer Setup Menu	3
	DIA Options Menu	3
	User Configure Menu	4
	Draper Head PTO Calibration (WDX1902, WDX2302 only)	5

SECTION 88 - OPTIONAL EQUIPMENT

BOOK 7 - 87579345

Chapter 1 - Optional Equipment

CONTENTS

Section	Description	Page
	Deluxe Cab Upgrade Package	3
	A-Pillar Display	3
	Removal	4
	Installation	4
	Automatic Temperature Control (ATC)	5
	Removal	5
	Installation	6
	Window Screen Kit	6
	Removal	7
	Installation	7

SECTION 88 - OPTIONAL EQUIPMENT

BOOK 7 - 87579345

Chapter 1 - Optional Equipment (Continued)

CONTENTS

Section	Description	Page
	Premium Speaker Kit	8
	Removal	8
	Installation	9
	Optional Kits	10
	Radio (A-11)	10
	Removal	10
	Installation	11
	Service Floodlight	11
	Replacing Power Outlets	11
	Cold Start Kit	12
	Removal and Replacement	12
	Deluxe Mirror	12
	Removal	13
	Installation	13
	Beacon Mount Kit	14
	Removal	14
	Installation	14
	Adjustable Windrow Shield	15
	Removal	15
	Installation	16
	Deck Shift Draper Header Adapter Kit	17
	Hydraulic Reel Drive Kit	17
	Engine Mounted Auxillary Hydraulic Pump	17
	HDX2 Sickle Header Drive Adapter Kit	18
	Removal	18
	Disassembly	18
	Shaft	19
	Removal	19
	Assembly	20
	Installation	22

SECTION 88 - OPTIONAL EQUIPMENT

BOOK 7 - 87579345

Chapter 1 - Optional Equipment (Continued)

CONTENTS

Section	Description	Page
	HDX1 Sickle Header Drive Adapter Kit	23
	Removal	23
	Repair	24
	Disassembly	24
	Inspection	29
	Assembly	31
	Installation	36
	Draper Header Drive Adapter Kit	37
	Auxiliary Hydraulic Filter Kit	37
	Swath Roller Hitch	37
	Removal	38
	Installation	38
	Chaff Wiper Kit	38
	Removal	39
	Installation	40

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 7 - 87579345

Chapter 1 - Platform, Cab and Decals

CONTENTS

Section	Description	Page
	Description of Operation - Platform	3
	Deluxe Operator's Seat	3
	Controls	3
	Armrest Height	3
	Height/Weight Adjustment	3
	Backrest Angle	3
	Fore/Aft Position	3



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 7 - 87579345

Chapter 1 - Platform, Cab and Decals (Continued)

CONTENTS

Section	Description	Page
	Lumbar Adjustment Knob	4
	Seat Belt	4
	Cleaning	4
	Replacement	4
	Lower Seat	5
	Removal of Seat from Seat Base	5
	Disassembly	5
	Upper Seat	6
	Removing Armrest	6
	Armrest	6
	Removal	7
	Replacing Seat Height Switch	8
	Removing Bottom Seat Cushion	10
	Removing Seat Back Cushion	10
	Fore/Aft Adjustment Rails	10
	Removing Seat from Slide Rails	10
	Removing Slide Rails from Suspension	11
	Seat Suspension System	11
	Seat Air Compressor	11
	Height Adjustment	11
	Overhaul - Platform	12
	Seat Suspension	12
	Disassembly	12
	Seat Suspension Components	15
	Rubber Bumpers	15
	Inspection	15
	Release Valve/Solenoid	15
	Inspection	15
	Air Compressor	16
	Inspection	16
	Fore/Aft Adjustment Lever	17
	Inspection	17

SECTION 90 - PLATFORM, CAB AND DECALS

BOOK 7 - 87579345

Chapter 1 - Platform, Cab and Decals (Continued)

CONTENTS

Section	Description	Page
	Damping Shock Absorber	18
	Inspection	18
	Scissors Suspension	18
	Inspection	18
	Troubleshooting	19
	Seat Air Compressor Does Not Run	19
	Overhaul - Cab	20
	Cab Door	20
	Removal	20
	Installation	20
	Cab Door Handle	20
	Removal	20
	Installation	20
	Cab Floor Mat	21
	Removal	21
	Inspection	21
	Cab Suspension	21
	Removal and Replacement	22
	Cab Roof	23
	Removal	23
	Inspection	26
	Installation	26
	Multi-Function Handle (MFH)	29
	Removal	29
	Disassembly	33
	Assembly	36
	Installation	38
	Safety Decals	41

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>