

HYDRAULIC EXCAVATOR

**SHOP
MANUAL** model **SK80CS-1E**

INDEX

1	SPECIFICATION SECTION
2	MAINTENANCE SECTION
3	SYSTEM SECTION
4	DISASSEMBLY SECTION
5	TROUBLESHOOTING
6	ENGINE SECTION
7	INSTALLATION PROCEDURES FOR OPTIONAL ATTACHMENT

SPECIFICATION

MAINTENANCE

SYSTEM

DISASSEMBLING

TROUBLESHOOTING

E/G

OPT.

KOBELCO

Book code No. S5LF0004E

Book Code No. Distribution Year—Month		Index No.	Title	
S5LF0104E 2003-03		SPECIFICATION	OUTLINE	LF01
S5LF0204E 2003-03			SPECIFICATION	LF02
S5LF0304E 2003-03			ATTACHMENT DIMENSION	LF03
S5LF1104E 2003-03		MAINTENANCE	TOOLS	LF11
S5LF1204E 2003-03			STANDARD MAINTENANCE TIME SCHEDULE	LF12
S5LF1304E 2003-03			MAINTENANCE STANDARD AND TEST PROCEDURE	LF13
S5LF2104E 2003-03		SYSTEM	MECHATRO CONTROL SYSTEM	LF21
S5LF2204E 2003-03			HYDRAULIC SYSTEM	LF22
S5LF2304E 2003-03			ELECTRICAL SYSTEM	LF23
S5LF2404E 2003-03			COMPONENTS SYSTEM	LF24
S5LF2504E 2003-03			AIR-CONDITIONER SYSTEM	LF25
—			—	
S5LF3104E 2003-03		DISASSEMBLING	DISASSEMBLING AND ASSEMBLING	LF31
S5LF3204E 2003-03			ATTACHMENT	LF32
S5LF3304E 2003-03			UPPER STRUCTURE	LF33
S5LF3404E 2003-03			TRAVEL SYSTEM	LF34
S5LF4104E 2003-03		TROUBLESHOOTING	MECHATRO CONTROL	LF41
S5LF4204E 2003-03			HYDRAULIC	LF42
S5LF4304E 2003-03			ELECTRICAL	LF43
S5LF4404E 2003-03			ENGINE	LF44
S5LF5104E 2003-03		E/G	ENGINE	LF51
LF02-01001~			APPLICABLE MACHINES	

SAFETY

 **WARNING**

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO are outlined in the OPERATION & MAINTENANCE GUIDE for this machine.

Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATION & MAINTENANCE GUIDE before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this Manual. Use proper lifting procedures when removing any components.

Following is a list of basic precautions that should always be observed.

1. Read and understand all Warning plates and decals on the machine before operating, lubricating or repairing this product.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when pounding on any part of the machine or its attachments with a hammer or sledge. Use welders gloves, hood/goggles, apron and other protective clothing appropriate to the welding job being performed. Do not wear loose-fitting or torn clothing. Remove all rings from fingers when working on machinery.
3. Disconnect battery and discharge any capacitors before starting to work on machine. Hang "Do Not Operate" tag in the Operator's Cab.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block machine so it does not roll while working on or under machine.
5. Do not work on any machine that is supported only by lift jacks or a hoist. Always use blocks or jack stands to support the machine before performing any disassembly.

 **WARNING**

Do not operate this machine unless you have read and understand the instructions in the OPERATORS MANUAL. Improper machine operation is dangerous and could result in injury or death.

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, blade, ripper or other attachment to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, blade, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lb) or more. Make sure all chains, hooks, slings, etc., are in good condition and are in the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and components.
11. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

 **WARNING**

13. Always use tools that are in good condition and be sure you understand how to use them before performing any service work.
14. Reinstall all fasteners with same part number. Do not use a lesser quality fastener if replacements are necessary.
15. Repairs which require welding should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of parent metal. Always disconnect battery during welding operations to protect sensitive electric equipment.
16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will it be damaged in operation by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution.
18. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Pin hole (very small) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pin hole leaks.
19. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
20. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing.
21. On track-type machines, be careful when servicing or separating tracks. Chips can fly when removing or installing a track pin. Wear safety glasses and long sleeve shirts. Track can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks are disengaged from the sprockets. Block the machine to prevent it from moving.

KOBELCO

Book code No.

S5**LF01**04E

SHOP MANUAL

SK80MSR-1E **SK80CS-1E**

LF01

OUTLINE

TABLE OF CONTENTS

1. GENERAL PRECAUTIONS FOR MAKING REPAIRS 1
2. INTERNATIONAL UNIT CONVERSION SYSTEM 4

KOBELCO CONSTRUCTION MACHINERY CO., LTD.

Applicable Machines
LF02-01001~

Revision	Date of Issue	Remarks
First edition	March, 2003	S5LF0104E K

1. GENERAL PRECAUTIONS FOR MAKING REPAIRS



1.1 PREPARATION BEFORE DISASSEMBLING


- (1) Knowledge of operating procedure
Read Operator's Manual carefully to understand the operating procedure.
- (2) Cleaning machines
Clean machines of soil, mud, and dust before carrying into the service shop.
Carrying a soiled machine into the service shop, causes making less efficient work and damage of parts, and interferes with rust prevention and dust protection while reassembling.
- (3) Inspecting machines
Confirm the disassembling section before starting work, determine the disassembly procedure taking the conditions in work shop into account, and request to procure necessary parts in advance.
- (4) Recording
Record the following items to keep contact and prevent malfunction from recurring.
 - 1) Inspecting date, place
 - 2) Model name, applicable machine No., Records on hour meter
 - 3) Trouble condition, place, cause
 - 4) Visible oil leakage, water leakage and damage
 - 5) Clogging of filters, etc., oil level, oil quality, oil contamination and looseness which can be inspected.
- (5) Examine the problems on the basis of operation rate with the last inspection date and records on hour meter.
- (5) Arrangement and cleaning in repair shop
 - 1) Tools required for repair work.
 - 2) Specify places to put the disassembled parts on in advance.
 - 3) Prepare oil pans for leaking oil, etc.



1.2 SAFETY WHEN DISASSEMBLING AND ASSEMBLING

- (1) Safety
 - 1) Wear appropriate, safety shoes, safety helmet, goggles, and clothes with long sleeves.
 - 2) Hang warning tag "Don't operate" on control lever, and begin preliminaries before getting down to work.
 - 3) Before starting inspection and maintenance which contain the danger of being caught in machine, stop the engine.

- 4) Confirm the position of first-aid box and fire extinguisher, and also where to make contact for emergency measure and ambulance to prepare for accidents and fire.
- 5) Choose a hard, flat and safe place, and put attachment on the ground without fail.
- 6) Use crane, etc. to remove parts of heavy weight (20kg [44 lb] or more).
- 7) Use proper tools, and change or repair defective tools.
- 8) Machine and attachment required to work in the lifting condition should be supported with supports or blocks securely.

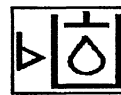

1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT

- (1) Removing hydraulic equipment assy
 - 1) Before removing pipes, release the pressure of hydraulic oil tank, or open the cover on the return side to tank, and take out the filter.
 - 2) Put the oil in the removed pipes in reservoir taking care it is not spilled on the ground.
 - 3) Pipes with plugs, caps, etc. to prevent oil leaking, entry of dust, etc.
 - 4) Clean the outside surface of equipment, etc. before disassembling, and drain hydraulic oil and gear oil before putting them on working bench.
- (2) Disassembling hydraulic equipment
 - 1) Since performance and function of hydraulic equipment after disassembly and assembly results in immunity from responsibility on the manufacturer's side, disassembly, assembly and conversion without permission are strictly prohibited.
 - 2) If it is unavoidably necessary to disassemble and reassemble, it should be carried out by experts or personnel authorized through service training.
 - 3) Make match mark on parts for reassembling.
 - 4) Before disassembling, read Disassembling Instruction supplied with equipment in advance, and determine if the disassembly and assembly are permitted or not.
 - 5) For parts which are required to use jig and tools, don't fail to use the specified jig and tools.
 - 6) For parts which can not be removed in the specified procedure, never force removal. First check for the cause.

- 7) The removed parts should be put in order and tagged so as to install on proper places without confusion.
 - 8) For common parts, pay attention to the quantity and places.
- (3) Inspecting parts
- 1) Check that the disassembled parts are free from score, dent and seizure.
 - 2) Measure the wear of parts and clearance, and record the measured values.
 - 3) If an abnormality is detected, repair or replace the parts.
- (4) Reassembling hydraulic equipment
- 1) Before cleaning, turn the fan on or open doors to ventilate air.
 - 2) Before assembly, clean parts roughly first, and then completely.
 - 3) Remove oil by compressed air, and apply hydraulic oil or gear oil, and then assemble them.
 - 4) Replace the removed O ring, back-up rings and oil seal with new ones, and apply grease on them before assembling.
 - 5) Removes stain and water on the surface on which liquid sealant are applied, decrease them, and apply liquid sealant on them.
 - 6) Before assembling, remove rust preventives on new parts.
 - 7) Use special tools to fit bearings, bushing and oil seal.
 - 8) Assemble parts matching to the marks.
 - 9) After completion, check that there is no omission of parts.

(5) Installing hydraulic equipment

- 1) Confirm hydraulic oil and lubrication oil.
- 2) Air release is required in the following cases ;
 - a. Change of hydraulic oil
 - b. Replacement of parts on suction pipe side
 - c. Hydraulic pump
 - d. Swing motor
 - e. Travel motor
 - f. Hydraulic cylinder


! If hydraulic oil and lubricating oil are not filled and also air bleed is not performed, the hydraulic equipment may be damaged.

- 3) For air bleed of hydraulic pump and swing motor, loosen drain plug on the upper part, start engine, and run in low idling, then bleed air until hydraulic oil is oozed out. After completion of air bleed, tighten plug securely.
- 4) For air bleed of travel motor and hydraulic cylinder, starts engine and operate it for 10 minutes or more at no-load and low speed.


! For cylinder, don't move it to the stroke end at beginning.

- 5) Air in pilot circuit can be bled out by only operating digging, swing and traveling motions thoroughly.
- 6) Check hydraulic oil level.
Move attachments to hydraulic oil check position, and check hydraulic oil level of tank. Refill oil if the oil level is lower than the minimum level.

How to check oil level of hydraulic oil tank

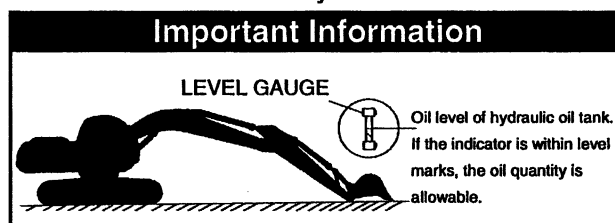

! 1.4 ELECTRICAL EQUIPMENT

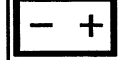

- (1) The disassembly of electrical equipment is not allowed.
- (2) Handle equipment with care so as not to drop it or bump it.
- (3) Connector should be removed by unlocking while holding the connector.
Never stress in tension to the locked section by pulling wire.
- (4) Check that connector is connected and locked completely.
- (5) Switch key off before removing and connecting connector
- (6) Switch key off before touching terminals of starter and alternator.
- (7) Remove battery grounding terminal before beginning work close to battery and battery relay with tools.
- (8) Wash machine with care so as not to splash water on electrical equipment and connector.

- (9) When water has entered in the waterproofed connector, the removing of water is not easy. So check the removed waterproofed connector with care to protect it from entry of water. If water adheres on it, dry it completely before connecting.



Battery electrolyte is dangerous. The battery electrolyte is dilute sulfuric acid, and causes scald and loss of eyesight by adhering on eyes and skin. When the electrolyte has adhered on them, take an emergency measure immediately and see a doctor for medical advice.

- When it has adhered on skin ;
Wash with soap and water.
- When it has got in eyes ;
Wash in water for 10 minutes or more immediately.
- When it has spilled out in large quantity ;
Use sodium bicarbonate to neutralize, or wash away with water.
- When it was swallowed ;
Drink milk or water.
- When it has adhered on clothes ;
Wash it immediately.



1.5 HYDRAULIC PARTS

1) O ring

- Check that O ring is free from flaw and has elasticity before fitting.
- Even if the size of O ring is equal, the usage differs, for example in dynamic and static sections, the rubber hardness also differs according to the pressure, and also the quality differs depending on the materials to be seated. So, choose proper O ring.
- Fit O ring so as to be free from distortion and twist.
- Floating seal should be put in pairs.

2) Flexible hose (F hose)

- Even if the connector and length of hose are the same, the parts differ according to the withstanding pressure. Use proper parts.

- Tighten it to the specified torque, and check that it is free from distortion, over tension, interference and oil leakage.

1.6 WELD REPAIR

- (1) The weld repair should be carried out by authorized personnel in the specified procedure after disconnecting the grounding cable of battery. If the grounding cable is not disconnected, the electrical equipment may be damaged.
- (2) Remove parts which may cause flame due to the entry of spark beforehand.
- (3) Repair attachments which are damaged, giving particular attention to the plated section of piston rod to protect it from sparks, and don't fail to cover the section with fire clothes.

1.7 ENVIRONMENTAL ISSUES

- (1) Engine should be started and operated in the place where air can be sufficiently ventilated.
- (2) Industrial waste disposal
The following parts follows the regulation.
Waste oil, waste container
Battery
- (3) Asbestos parts
Breathing dust that may be generated when handling components containing asbestos fibers raises danger of getting lung cancer. Don't raise dust by compressed air and breath it.
Parts to be handled with care :
Brake parts, gasket, etc.
- (4) Precautions for handling hydraulic oil
Hydraulic oil may cause inflammation of eyes. Wear goggles to protect eyes on handling it.
 - When it has got in eyes ;
Wash eyes with water until the stimulus is gone.
 - When breathed dust ;
Immediately see a doctor for medical advice.
 - When it has adhered on skin ;
Wash with soap and water.
- (5) Others
For spare parts, grease and oil, use KOBELCO genuine ones.

2. INTERNATIONAL UNIT CONVERSION SYSTEM

Introduction

Although this manual uses the JIS unit system.

If you need SI unit, refer to following international system of units.


Given hereinunder are an excerpt of the units that are related to this manual :

1. Etymology of SI Units

French : Le Système International d' Unités

English: International System of Units

2. Construction of SI Unit System

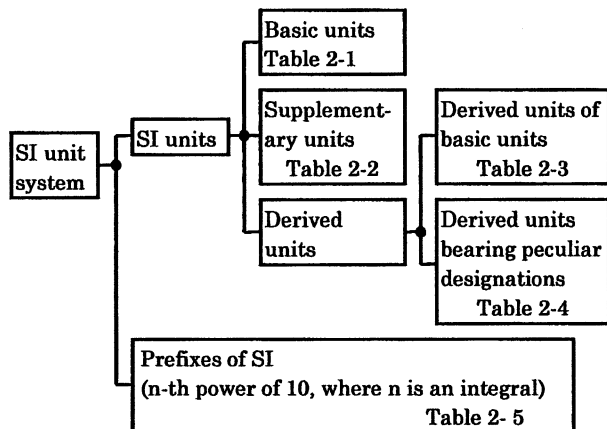

(1) Basic Units

Table 2-1

QUANTITIES	DESIGNATION	SIGN
Length	Meter	m
Mass	Kilogram	kg
Time	Second	s
Current	Ampere	A
Thermodynamic temperature	Kelvin	K
Gram molecule	Mol	mol
Luminous intensity	Candela	cd

(2) Supplementary Units

Table 2-2

QUANTITIES	DESIGNATION	SIGN
Plane angle	Radian	rad
Solid angle	Steradian	sr

(3) Derived Units of Basic Units

Table 2-3

QUANTITIES	DESIGNATION	SIGN
Area	Square meter	m ²
Volume	Cubic meter	m ³
Velocity	Meter per second	m/s
Acceleration	Meter per second / second	m/s ²
Density	Kilogram per cubic meter	kg/m ³

(4) Derived Units bearing Peculiar Designations

Table 2-4

QUANTITIES	DESIGNATION	SIGN	DERIVED UNIT
Frequency	Hertz	Hz	1Hz=1s ⁻¹
Force	Newton	N	1N=1kgf·m/s ²
Pressure, Stress	Pascal	Pa	1Pa=1N/m ²
Energy Work, Quantity of heat	Joule	J	1J=1N·m
Power Motive power, Electric power	Watt	W	1W=1J/s
Charge, Quantity of electricity	Coulomb	C	1C=1A·s
Potential Voltage, Electromotive force	Volt	V	1V=1J/C (1W/A)
Quantity of static electricity Capacitance	Farad	F	1F=1C/V
Electric resistance	Ohm	Ω	1Ω=1V/A
Celcius degree temperature	Celcius degree or degree	°C	t°C=(t+273.15)K
Illuminance	lux	lx	1lx=1lm/m ²

(5) Prefixes of SI

Table 2-5

PREFIX		POWER
DESIGNATION	SIGN	
Giga-	G	10 ⁹
Mega-	M	10 ⁶
Kilo-	k	10 ³
Hecto-	h	10 ²
Deca-	da	10
Deci-	d	10 ⁻¹
Centi-	c	10 ⁻²
Milli-	m	10 ⁻³
Micro-	μ	10 ⁻⁶
Nano-	n	10 ⁻⁹
Pico-	p	10 ⁻¹²

(6) Unit Conversion Table

Table 2-6

QUANTITIES	JIS	SI	REMARKS
Mass	kg	kg	
Force	kgf	10N	9.807N
Torque	kgf·m	10N·m	9.807N·m
Pressure	kgf/cm ²	0.1MPa	0.098MPa
Motive power	PS	0.7355kW	
Revolution	rpm	min ⁻¹	r/min

KOBELCO

Book code No.

S5LF02_{04E}

SHOP MANUAL **SK80CS-1E**

LF02

— SPECIFICATION —

TABLE OF CONTENTS


1. NAME OF COMPONENTS	1
2. GENERAL DIMENSIONS	2
3. WEIGHT OF COMPONENTS	3
4. TRANSPORTATION DIMENSION AND WEIGHT	4
5. LIFTING DIAGRAM	6
6. SPECIFICATIONS AND PERFORMANCE	9
7. CRAWLER	10
8. BUCKET	10
9. COMBINATIONS OF ATTACHMENT	11
10. ENGINE SPECIFICATIONS	12

KOBELCO CONSTRUCTION MACHINERY CO., LTD.

Applicable Machines
LF02-01001~

Revision	Date of Issue	Remarks
First edition	March, 2003	S5LF0204E K


1. NAME OF COMPONENTS

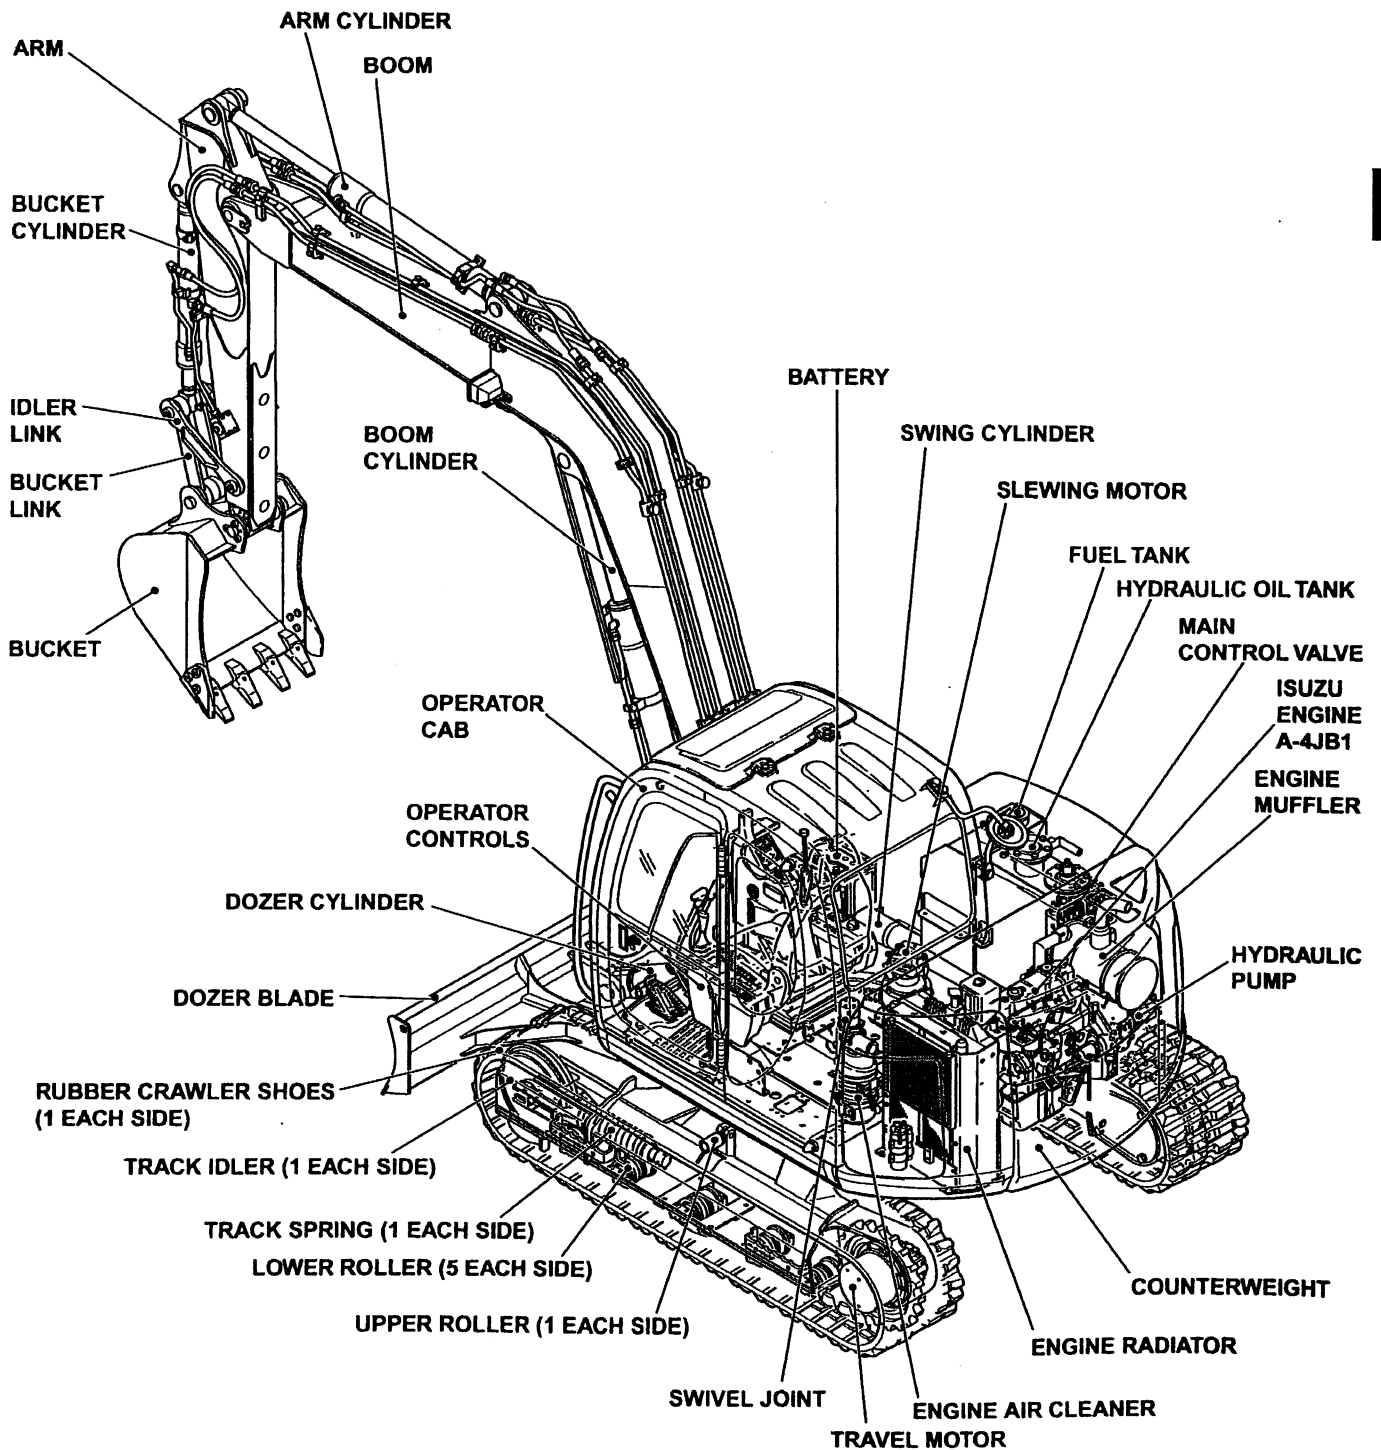

2. GENERAL DIMENSIONS

2.1 3.72m (12ft-2in) Boom+1.8m (5ft-11in) Arm+0.28m³ (0.37cu-yd) Bucket

Unit : mm (ft-in)

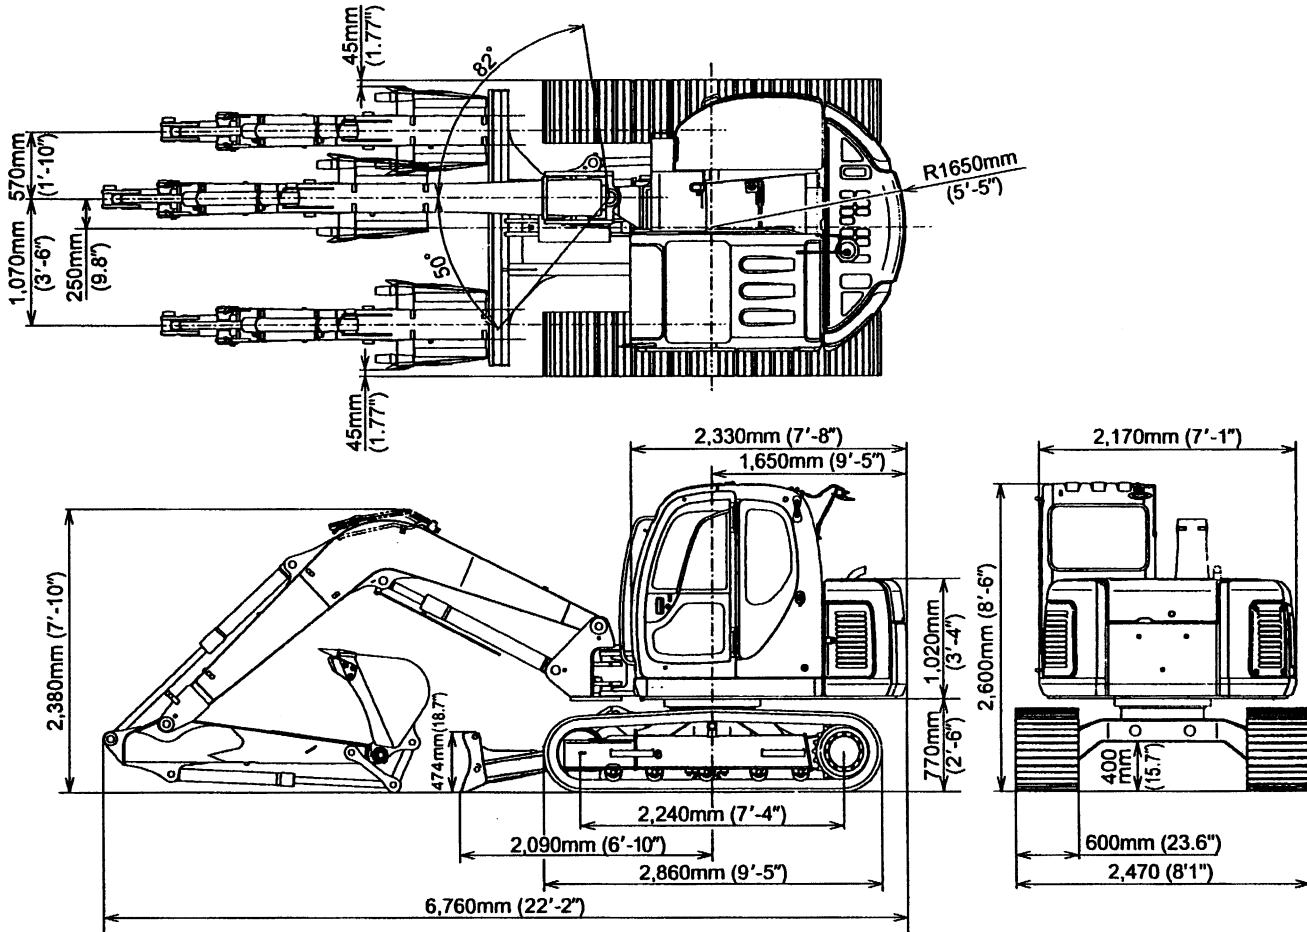

3. WEIGHT OF COMPONENTS

Unit : kg (lb)


Machine complete (3.72m (12ft-12in) Boom+1.80m (5ft-11in) Arm+0.28m ³ (0.37cu-yd) Bucket)	SK80CS-1E
	8,260 (18,210)
1. Upper frame assy (including the following :)	3,930 (8,660)
1.1 Counterweight	820 (1,810)
1.2 Cab	188 (410)
1.3 Engine	※ 250 (550)
1.4 Hydraulic oil tank	※ 66 (145)
1.5 Fuel tank	※ 59 (130)
1.6 Slewing motor (including reduction unit)	67 (148)
1.7 Control valve	63 (140)
1.8 Boom cylinder	※ 92 (200)
1.9 Pin (2 pcs. for mounting boom)	14 (31)
1.10 Pump	44 (97)
1.11 Radiator & Oil cooler	※ 39 (86)
1.12 Swing cylinder	※ 59 (130)
1.13 Swing bracket	240 (530)
2. Lower frame assy (including the following :)	3,000 (6,610)
2.1 Slewing bearing	115 (254)
2.2 Travel motor (including reduction unit)	81 (180)×2
2.3 Upper roller	4 (9)×2
2.4 Lower roller	15 (33)×10
2.5 Front idler	44 (97)×2
2.6 Track tension adjuster	29 (64)×2
2.7 Sprocket	27 (60)×2
2.8 Swivel joint	21 (46)
2.9 Dozer blade	330 (730)
2.10 Dozer cylinder	※ 60 (130)
2.11 Grouser shoe [600mm (23.6in) width]	530 (1,170)×2
3. Attachment (3.72m (12ft-12in) Boom+1.80m (5ft-11in) Arm+0.28m ³ (0.37cu-yd) Bucket)	1,060 (2,340)
3.1 Bucket assy	202 (445)
3.2 Arm assy (including the following :)	332 (730)
3.2.1 Arm [1.8m (5ft-11in)]	190 (420)
3.2.2 Bucket cylinder	※ 48 (106)
3.2.3 Idler link	9 (20)×2
3.2.4 Bucket link	17 (37)
3.2.5 Pin (2pcs. for attaching bucket cylinder / 2pcs. for attaching bucket)	18 (40)
3.3 Boom assy (including the following :)	530 (1,170)
3.3.1 Boom	390 (860)
3.3.2 Arm cylinder	※ 72 (160)
3.3.3 Pin (Mounting arm • Mounting arm cylinder)	16 (35)
4. Lubricant and water (including the following :)	189 (420)
4.1 Hydraulic oil	87 (192)
4.2 Engine oil	9 (20)
4.3 Fuel	83 (183)
4.4 Water	10 (22)

NOTE : Numerical values marked ※ indicate the dry weight.

4. TRANSPORTATION DIMENSION AND WEIGHT


● OVERALL DIMENSIONS OF BOOM

Item	Type	3.72m (12ft-2in) Boom
Length × Height × Width L × H × W	m (ft-in)	3.86 × 1.42 × 0.40 (12' 8" × 4' 8" × 1' 4")
Weight	kg (lb)	530 (1,170)

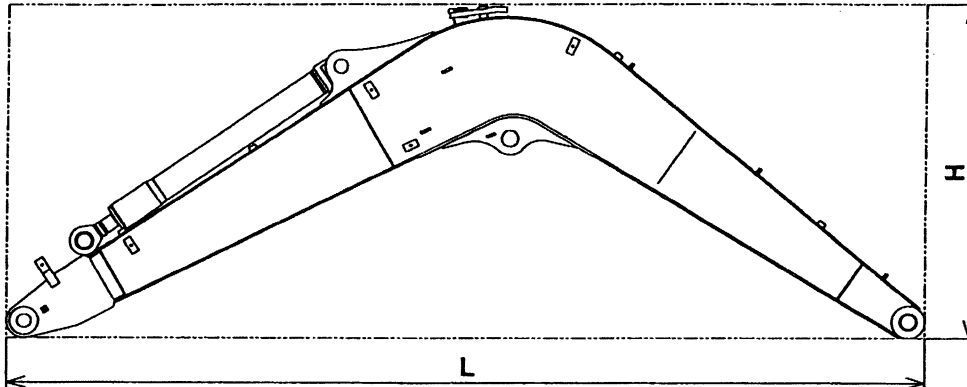


● OVERALL DIMENSIONS OF ARM + BUCKET

Item	Type	1.80m (5ft-11in) Arm + 0.28m ³ (0.37cu·yd) Bucket	2.07m (6ft-9in) Arm + 0.22m ³ (0.29cu·yd) Bucket
Length × Height × Width L × H × W	m (ft-in)	3.34 × 0.71 × 0.75 (10' 11" × 2' 4" × 2' 6")	3.61 × 0.71 × 0.65 (11' 10" × 2' 4" × 2' 2")
Weight	kg (lb)	520 (1,150)	540 (1,190)

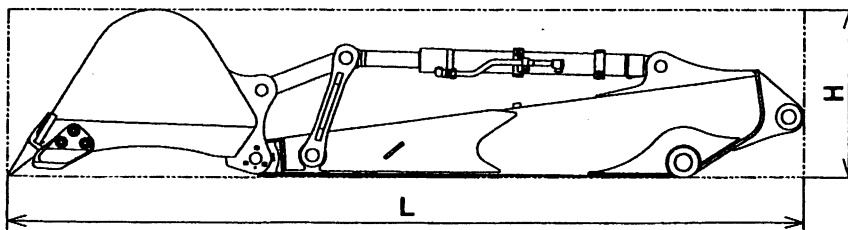


● OVERALL DIMENSIONS OF ARM

Item	Type	1.80m (5ft-11in) Arm	2.07m (6ft-9in) Arm
Length × Height × Width L × H × W	m (ft-in)	2.37 × 0.54 × 0.36 (7' 9" × 1' 9" × 1' 2")	2.64 × 0.53 × 0.36 (8' 8" × 1' 9" × 1' 2")
Weight	kg (lb)	320 (705)	350 (770)

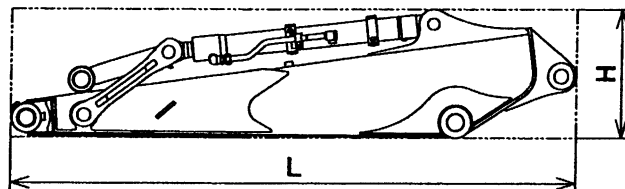


● OVERALL DIMENSIONS OF DOZER

Length × Height × Width L × H × W	m (ft-in)	1.52 × 0.47 × 2.32 (5' 0" × 1' 7" × 7' 7")
Weight	kg (lb)	330 (730)

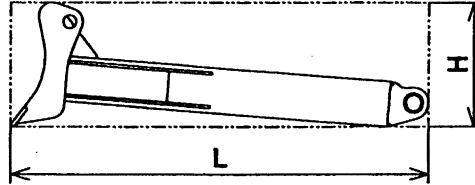

● OVERALL DIMENSIONS OF BUCKET (REFERENCE ONLY)


Length × Height × Width L × H × W	m (ft-in)	0.98 × 0.89 × 0.75 (3' 3" × 2' 11" × 2' 6")
Weight	kg (lb)	202 (445)
Bucket capacity	m ³ (cu·yd)	0.28 (0.37)

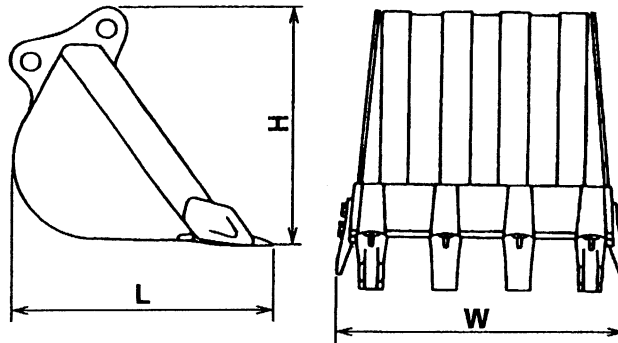

5. LIFTING DIAGRAM

5.1 LIFTING CAPACITIES

Model		SK80CS-1E	
Arm length		1.8m (5ft-11in)	2.07m (6ft-9in)
Shoe type	Rubber crawler 450mm (17.7in)	(1) LF20T01004P2	(2) LF20T01007P2
	Iron crawler 450mm (17.7in)	(3) LF20T01002P2	(4) LF20T01005P2
	Iron crawler 600mm (23.6in)	(5) LF20T01003P2	(6) LF20T01006P2

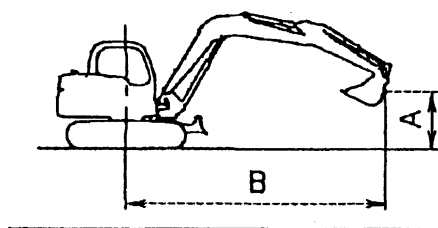

1. Do not attempt to lift or hold any load that is greater than these rated values at their specified load radius and height. Weight of all accessories must be deducted from the above lifting capacities.
2. Lifting capacities are based on machine standing on level, firm, and uniform ground.
User must make allowance for job conditions such as soft or uneven ground out of level conditions, side loads, sudden stopping of loads, hazardous conditions, experience of personnel, etc.
3. Ratings at bucket lift hook.
4. The above rated loads are in compliance with BS1757 : 1986.
They do not exceed 67% of hydraulic lifting capacity or 75% of tipping load.
Rated loads marked with an asterisk (*) are limited by hydraulic capacity rather than tipping load.
5. Operator should be fully acquainted with the operator's and Maintenance Instructions before operating this machine and rules for safe operation of equipment should be adhered to at all times.
6. Capacities apply to only machine as originally manufactured and normally equipped by KOBELCO CONSTRUCTION MACHINERY CO. LTD

(1) LF20T01004P2

SK80CS LIFTING CAPACITIES											
Based on machine equipped with Arm 1800mm (5' 11") arm Bucket 0.28m ³ SAE (0.37cu. yd) Shoe 450mm (17.7") rubber shoe Dozer Blade Up											
A \ B		LOAD RADIUS									
		5' (1.5m)		10' (3.0m)		15' (4.6m)		20' (6.1m)		25' (7.6m)	
		ib	kg	ib	kg	ib	kg	ib	kg	ib	kg
15'	ib					** 3600	** 3330				
(4.6m)	kg					1830	1510				
10'	ib					3560	3160				
(3.0m)	kg					1610	1430				
5'	ib			6140	5280	3260	2870	2020	1780		
(1.5m)	kg			2780	2390	1480	1300	910	800		
GROUND	ib			5700	4870	3020	2640				
LEVEL	kg			2580	2210	1370	1200				
-5'	ib	* 7750	* 7750	5690	4870	2960	2580				
(-1.5m)	kg	* 3510	* 3510	2580	2200	1340	1170				
-10'	ib			5910	5070						
(-3.0m)	kg			2680	2300						

(2) LF20T01007P2

SK80CS LIFTING CAPACITIES

Based on machine equipped with
 Arm 2070mm (6' 9") arm
 Bucket 0.22m³ SAE (0.29cu. yd)
 Shoe 450mm (17.7") rubber shoe
 Dozer Blade Up

A \ B		LOAD RADIUS											
		5' (1.5m)		10' (3.0m)		15' (4.6m)		20' (6.1m)		5' (1.5m)		10' (3.0m)	
15'	lb					** 3290	** 3290						
(4.6m)	kg					** 1480	** 1480						
10'	lb					3590	3190	2130	1890				
(3.0m)	kg					1620	1440	960	850				
5'	lb			6240	5380	3270	2860	2010	1770				
(1.5m)	kg			2830	2440	1480	1300	910	800				
GROUND	lb			5670	4840	3000	2620	1910	1670				
LEVEL	kg			2570	2190	1360	1190	860	750				
-5'	lb	** 6170	** 6170	5610	4790	2910	2530						
(-1.5m)	kg	** 2800	** 2800	2540	2170	1320	1150						
-10'	lb	** 10660	** 10660	5790	4950	3000	2620						
(-3.0m)	kg	** 4830	** 4830	2620	2240	1360	1190						

(3) LF20T01002P2

SK80CS LIFTING CAPACITIES

Based on machine equipped with
 Arm 1800mm (5' 11") arm
 Bucket 0.28m³ SAE (0.37cu. yd)
 Shoe 450mm (17.7") triple grouser shoe
 Dozer Blade Up

A \ B		LOAD RADIUS											
		5' (1.5m)		10' (3.0m)		15' (4.6m)		20' (6.1m)		5' (1.5m)		10' (3.0m)	
15'	lb					** 3600	** 3350						
(4.6m)	kg					** 1630	** 1520						
10'	lb					3600	3180						
(3.0m)	kg					1630	1440						
5'	lb			6200	5320	3290	2890	2040	1800				
(1.5m)	kg			2810	2410	1490	1310	920	810				
GROUND	lb			5760	4910	3060	2670						
LEVEL	kg			2610	2220	1380	1210						
-5'	lb	** 7750	** 7750	5750	4900	2990	2600						
(-1.5m)	kg	** 3510	** 3510	2610	2220	1350	1180						
-10'	lb			5970	5100								
(-3.0m)	kg			2700	2310								

(4) LF20T01005P2

SK80CS LIFTING CAPACITIES


 

 

 

 

 
Based on machine equipped with
 Arm 2070mm (6' 9") arm
 Bucket 0.22m³ SAE (0.29cu. yd)
 Shoe 450mm (17.7") triple grouser shoe
 Dozer Blade Up

A \ B		LOAD RADIUS											
		5' (1.5m)		10' (3.0m)		15' (4.6m)		20' (6.1m)		5' (1.5m)		10' (3.0m)	
15'	lb					** 3290	** 3290						
(4.6m)	kg					** 1480	** 1480						
10'	lb					3620	3210	2150	1900				
(3.0m)	kg					1640	1450	970	860				
5'	lb			6300	5410	3300	2900	2040	1790				
(1.5m)	kg			2860	2450	1490	1310	920	810				
GROUND	lb			5730	4880	3040	2650	1930	1680				
LEVEL	kg			2600	2210	1380	1200	870	760				
-5'	lb	** 6170	** 6170	5670	4830	2940	2550						
(-1.5m)	kg	** 2790	** 2790	2570	2190	1330	1150						
-10'	lb	** 10660	** 10660	5850	4990	3040	2640						
(-3.0m)	kg	** 4830	** 4830	2650	2260	1370	1200						

(5) LF20T01003P2

SK80CS LIFTING CAPACITIES


 

 

 

 

 
Based on machine equipped with
 Arm 1800mm (5' 11") arm
 Bucket 0.28m³ SAE (0.37cu. yd)
 Shoe 600mm (23.6") triple grouser shoe
 Dozer Blade Up

A \ B		LOAD RADIUS									
		5' (1.5m)		10' (3.0m)		15' (4.6m)		20' (6.1m)			
											
15'	lb					* 3600	3450				
(4.6m)	kg					* 1630	1560				
10'	lb					3700	3290				
(3.0m)	kg					1680	1490				
5'	lb			6380	5500	3400	2990	2120	1870		
(1.5m)	kg			2890	2490	1540	1350	960	840		
GROUND	lb			5940	5080	3160	2770				
LEVEL	kg			2690	2300	1430	1250				
-5'	lb	* 7750	* 7750	5940	5080	3090	2700				
(-1.5m)	kg	* 3510	* 3510	2690	2300	1400	1220				
-10'	lb			6150	5280						
(-3.0m)	kg			2790	2390						

(6) LF20T01006P2

SK80CS LIFTING CAPACITIES

Based on machine equipped with
 Arm 2070mm (6' 9") arm
 Bucket 0.22m³ SAE (0.29cu. yd)
 Shoe 600mm (23.6") triple grouser shoe
 Dozer Blade Up

A \ B		LOAD RADIUS									
		5' (1.5m)		10' (3.0m)		15' (4.6m)		20' (6.1m)			
											
15'	lb					* 3290	* 3290				
(4.6m)	kg					* 1480	* 1480				
10'	lb					3730	3310	2230	1970		
(3.0m)	kg					1680	1500	1010	890		
5'	lb			6490	5590	3400	3000	2110	1860		
(1.5m)	kg			2940	2530	1540	1360	950	840		
GROUND	lb			5920	5060	3140	2750	2000	1750		
LEVEL	kg			2680	2290	1420	1240	900	790		
-5'	lb	* 6170	* 6170	5860	5000	3050	2650				
(-1.5m)	kg	* 2790	* 2790	2650	2270	1380	1200				
-10'	lb	* 10660	* 10660	6030	5170	3140	2740				
(-3.0m)	kg	* 4830	* 4830	2730	2340	1420	1240				

6. SPECIFICATIONS AND PERFORMANCE

6.1 SPEED AND CLIMBING CAPABILITY

Item	Model	SK80CS-1E
Slewing speed		12.5rpm
TRAVEL SPEED (1st speed/2nd speed) km/h		3.1 / 5.5
Gradeability	%(degree)	70 (35)

6.2 ENGINE

Engine model	ISUZU CC-4JG1
Type	Water-cooled 4-cycle direct injection type engine
Number of cylinders—Bore×Stroke	4—95.4mm×107mm (3.76in×4.21in)
Total displacement	3,059cc (187cu-in)
Rated output / Rotation speed	40.5kW (55PS) / 2,100rpm
Maximum torque / Rotation speed	19.1kgf·m (138 lbf-ft) / 1,800rpm
Starter	24V / 3.2kW
Alternator	24V / 30A

6.3 HYDRAULIC COMPONENTS


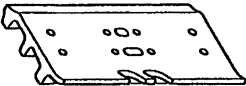
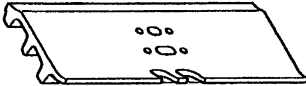
Hydraulic pump	Variable displacement axial piston+gear pump
Hydraulic motor (slewing)	Axial piston motor
Hydraulic motor (travel)	2-speed axial piston motor
Control valve	6-spool control valve
Cylinder (Boom, Arm, Swing and Bucket)	Double action cylinder
Oil cooler	Air-cooled type

6.4 WEIGHT


Unit : kg (lb)

	Grouser shoe	Rubber shoe
Fully equipped weight	8,260 (18,210)	7,970 (17,570)
Upper structure	3,930 (8,660)	
Lower machinery (With 450mm (17.7in) shoe)	3,000 (6,610)	2,830 (6,240)
Attachment [Boom+1.80m(5ft-11in) Arm+0.28m ³ (0.37cu-yd)Bucket]	1,060 (2,340)	

7. CRAWLER

Shape	Shoe width mm (in)	Overall width of crawler mm (ft-in)	Ground pressure kgf /cm ² (psi)
Rubber crawler 	450 (17.7)	2,320 (7' 7")	0.36 (5.1)
YR61D00009P1 	450 (17.7)	2,320 (7' 7")	0.36 (5.1)
Assy No. YT60D00001F1 P/No. YR60D00002P1 	600 (23.6)	2,470 (8' 1")	0.28 (4.0)
Assy No. YT60D00001F2 P/No. LE60D00002P1			

8. BUCKET (Reference only)

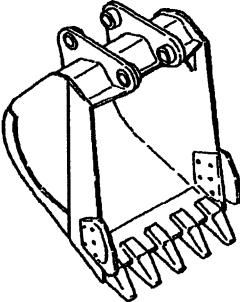Hoe bucket 	Heaped capacity m ³ (cu-yd)	Struck m ³ (cu-yd)	Outer width mm (ft-in)		Number of tooth	W or W/O side cutter	Availability of face shovel	Weight kg (lb)
			With side cutter	Without side cutter				
	STD 0.28 (0.37)	0.22 (0.29)	750 (2' 6")	680 (2' 3")	4	Yes	Yes	200 (440)



Suggest:

For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.


Thank you so much for reading

9. COMBINATIONS OF ATTACHMENT

Bucket			Applicable Arm	
Type	Heaped capacity m ³ (cu·yd)	Struck m ³ (cu·yd)	2.07m(6ft-9in) Arm	1.8m (5ft-11in) Arm
Hoe bucket	0.11 (0.14)	0.09(0.12)	○	○
	0.14 (0.18)	0.12(0.16)	○	○
	0.18 (0.24)	0.14(0.18)	○	○
	0.22 (0.29)	0.18(0.24)	◎	○
	STD 0.28 (0.37)	0.22(0.29)	△	◎
	0.35 (0.46)	0.26(0.34)	×	△
V-bucket	0.24 (0.31)	0.16(0.21)	△	△
Slope finishing bucket	0.26 (0.34)	0.14(0.18)	△	△
Breaker	—	—	○	○
Nibbler	—	—	○	○

NOTE :

- ◎ Standard combination
- General operation : Excavation or loading of sand, gravel, and clay
- △ Light operation : Mainly loading or loose gravel (e.g., cultivation or loading of sand or gravel)
- × Prohibited combination : There are problems from the view points of strength and stability.

- 
 - Use the attachments recommended by KOBELCO. Reinforcement of arm allows to use it as nibbler and breaker.
The trouble due to the use in the condition "Use not allowed" described in the above table is not included in our responsibility
 - When bucket marked by △ has been attached or nibbler has been attached on long arm, the specified stability may not be obtained. So add weight 400kg (880 lbs) in add-on type as required.

 **CAUTION**

If any other bucket, except for the backhoe bucket, is turned over and used for excavation, damage to the arm and bucket may occur.

10. ENGINE SPECIFICATION

10.1 SPECIFICATIONS

Model		SK80CS-1E		
Engine model		ISUZU CC-4JG1		
Type		Diesel, 4-cycle water-cooled, in-line, Direct injection		
Number of cylinder—Bore×Stroke		4—95.4mm(3.76in)×107mm(4.21in)		
Total displacement		3,059cc (187cu-in)		
Compression ratio		18.6		
Rated out put		55PS (40.5kW) at 2,100rpm		
Maximum torque		19.1kgf·m (138 lbf·ft) at 1,800rpm		
High idling		2,310±25rpm		
Low idling		1,000±25rpm		
Injection valve opening pressure		185kgf/cm ² (2,632 psi)		
Thermostat action		Start 82°C (180°F) / Full open 95°C (203°F)		
Firing order		1—3—4—2		
Compression pressure		30kgf/cm ² (427 psi) at 200rpm		
Lubrication oil pressure		—		
Fuel injection timing		10±1° before top dead point		
Valve clearance		Valve clearance	Open	Close
	Intake valve	0.4mm (0.016") in cold condition	24.5° before top dead point	55.5° after bottom dead point
	Exhaust valve	0.4mm (0.016") in cold condition	54° before bottom dead point	26° after top dead point
Starter capacity		3.2kW×24V		
Generator capacity (Alternator)		24V×30A		
Cooling fan drive method		Ø450 (17.7in) suction type seven fans V-belt drive, pulley ratio Crank / Fan= 1.12		
Engine oil quantity		Full level 10.6ℓ (2.8gal) Low level sensor actuation Oil filter, etc.		
Dry weight		250kg (550 lb)		
Fuel consumption ratio		176g / PS · h		
Allowable inclination		Front / Rear and Right / Left : 35°		
Dimension (L×W×H)		760mm×610mm×710mm (29.9in×24.0in×28.0in)		
Rotating direction		Counterclockwise seeing from flywheel side		

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>