

 
PC800LC-8 S/N 50001-UP (ecot3)
PC800LC-8 S/N 50001-UP (ecot3)

Item	Part Name
	SAA6D140E-5F-03 S/N 530001-UP
B0	ENGINE RELATED PARTS
C0	COOLING SYSTEM
D0	FUEL TANK AND RELATED PARTS
E0	ELECTRICAL SYSTEM
H0	HYDRAULIC SYSTEM
J0	MAIN/REVOLVING FRAME AND RELATED PARTS
K0	OPERATOR'S COMPARTMENT AND CONTROL SYSTEM
M0	GUARD
N0	SWING CIRCLE AND RELATED PARTS
P0	TRAVEL AND LOWER PIPING
R0	UNDER CARRIAGE
T0	WORK EQUIPMENT
U0	MARKS AND PLATES
V0	ACCESSORY
W0	MISCELLANEOUS
Y0	SERVICE KIT AND COMPONENT PARTS

**PC800LC-8 S/N 50001-UP (ecot3)
ENGINE RELATED PARTS**

Item	Part Name	Qty
10	BRACKET	1
20	BLOCK(#55011-)	1
30	ENGINE MOUNTING	1
40	ENGINE MOUNTING (OIL FILTER PIPING) (HOSE)(#50001-55000)	1
50	ENGINE MOUNTING (OIL FILTER PIPING) (HOSE)(#55001-55010)	1
60	ENGINE MOUNTING (OIL FILTER PIPING) (HOSE)(#55011-)	1
70	ENGINE MOUNTING (OIL FILTER PIPING) (OIL FILTER)(#50001-55000)	1
80	ENGINE MOUNTING (OIL FILTER PIPING) (OIL FILTER)(#55001-)	1
90	ENGINE MOUNTING (AIR CLEANER SENSOR)(#50001-55000)	1
100	ENGINE MOUNTING (AIR CLEANER SENSOR)(#55001-55045)	1
110	ENGINE MOUNTING (AIR CLEANER SENSOR)(#55046-55065)	1
120	ENGINE MOUNTING (AIR CLEANER SENSOR)(#55066-)	1
130	EXHAUST PIPE	1
140	EXHAUST PIPE (EU SPEC.)(#55001-)	1
150	POWER TAKE OFF (COUPLING ASS'Y)	1
160	POWER TAKE OFF (OIL CHECK GAUGE)	1
170	POWER TAKE OFF (LUBRICATION PIPING)	1
180	POWER TAKE OFF (LUBRICATION PIPING) (FOR COUNTERWEIGHT REMOVER)	1

PC800LC-8 S/N 5001-UP (ecot3)
00041284

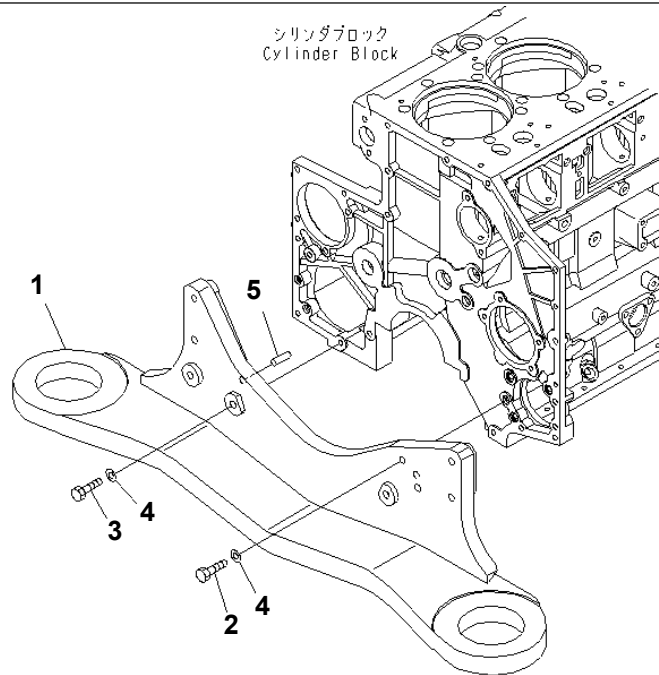

00041284

Ref. B0000-01A0

Page 030010

PC800LC-8 S/N 5001-UP (ecot3)
BRACKET

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41110	BRACKET	1	50001-
2	01011-81240	BOLT	6	50001-
3	01011-81245	BOLT	3	50001-
4	01643-31232	WASHER	9	50001-
5	04020-01434	PIN	2	50001-

<https://www.ebooklibonline.com>

Hello dear friend!

 
Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>

PC800LC-8 S/N 50001-UP (ecot3)
00089817

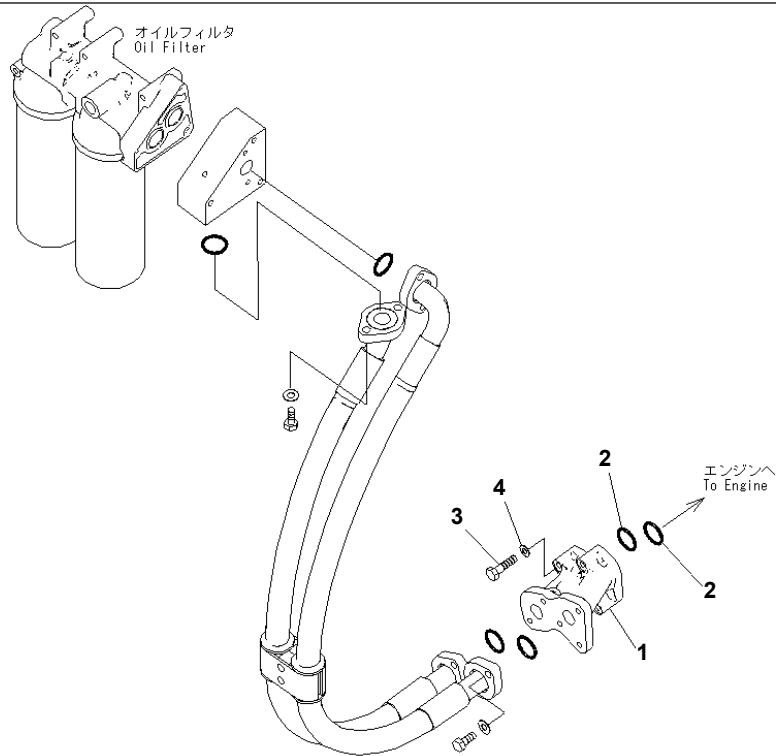

Ref. B0000-02A0


00089817-V

Page 030020

PC800LC-8 S/N 50001-UP (ecot3)
BLOCK(#55011-)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41211	BLOCK	1	55011-
2	07000-73038	O-RING	2	55011-
3	01010-81065	BOLT	4	55011-
4	01643-31032	WASHER	4	55011-

 PC800LC-8 S/N 50001-UP (ecot3)
00041649

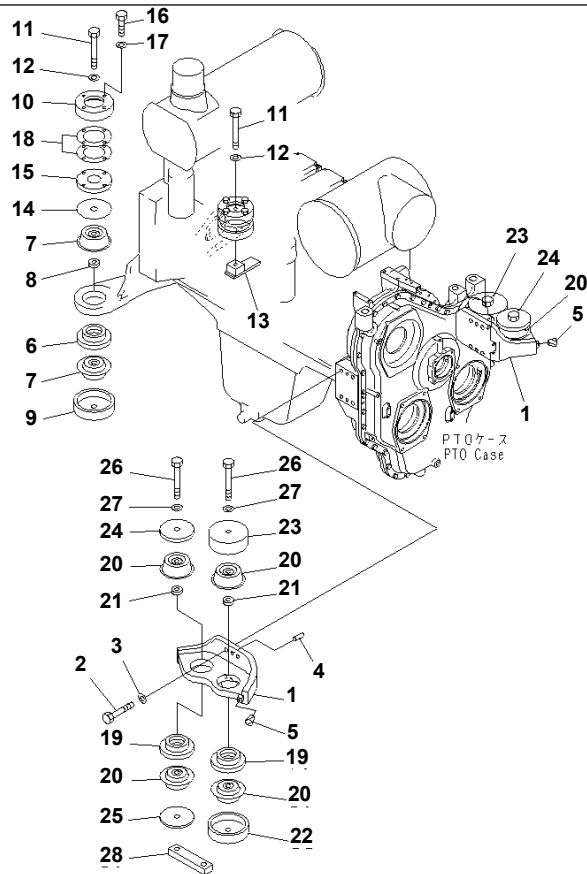

00041649

Ref. B0100-01A0

Page 030030

PC800LC-8 S/N 50001-UP (ecot3)
ENGINE MOUNTING


Item	Part No.	Part Name	Qty	Serial No.
1	21N-01-11170	BRACKET	2	50001-
2	01010-82060	BOLT	8	50001-
3	01643-32060	WASHER	8	50001-
4	04020-01842	PIN	4	50001-
5	07049-01215	PLUG	2	50001-
6	21T-01-11210	COLLAR	2	50001-
7	21N-01-11120	CUSHION	4	50001-
8	21T-01-11220	COLLAR	2	50001-
9	209-01-51133	STOPPER	2	50001-
10	209-01-51190	STOPPER	2	50001-
11	208-01-11181	BOLT	2	50001-
12	01643-32460	WASHER	2	50001-
13	209-01-77140	PLATE	1	50001-
14	209-01-51210	SPACER	2	50001-
15	209-01-51220	PLATE	2	50001-
16	01010-81235	BOLT	8	50001-
17	01643-31232	WASHER	8	50001-
18	209-01-00020	SHIM ASS'Y	2	50001-
	☆	・ SHIM, 1.0MM	5	50001-
	☆	・ SHIM, 0.5MM	1	50001-
19	21T-01-11210	COLLAR	4	50001-
20	21T-01-11150	CUSHION	8	50001-
21	21T-01-11220	COLLAR	4	50001-
22	209-01-51133	STOPPER	2	50001-
23	209-01-51142	STOPPER	2	50001-
24	21T-01-11180	WASHER	2	50001-
25	21T-01-11190	WASHER	2	50001-
26	208-01-11181	BOLT	4	50001-
27	01643-32460	WASHER	4	50001-

PC800LC-8 S/N 50001-UP (ecot3)

ENGINE MOUNTING

Item	Part No.	Part Name	Qty	Serial No.
28	21T-01-11230	PLATE	2	50001-

 PC800LC-8 S/N 50001-UP (ecot3)
00041650

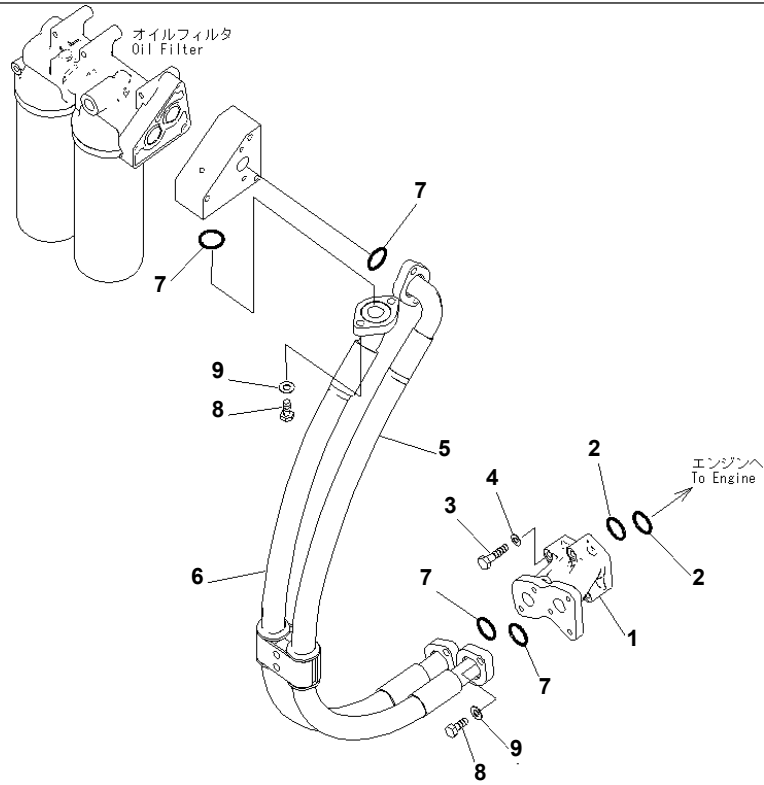

Ref. B0100-02A0


00041650

Page 030040

PC800LC-8 S/N 50001-UP (ecot3)
ENGINE MOUNTING (OIL FILTER PIPING) (HOSE)(#50001-55000)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41211	BLOCK	1	50001-@
2	07000-73038	O-RING	2	50001-@
3	01010-81065	BOLT	4	50001-@
4	01643-31032	WASHER	4	50001-@
5	209-01-41420	HOSE	1	50001-@
6	209-01-41430	HOSE	1	50001-@
7	07000-73038	O-RING	4	50001-@
8	01010-81240	BOLT	8	50001-@
9	01643-31232	WASHER	8	50001-@

 PC800LC-8 S/N 50001-UP (ecot3)
00041650

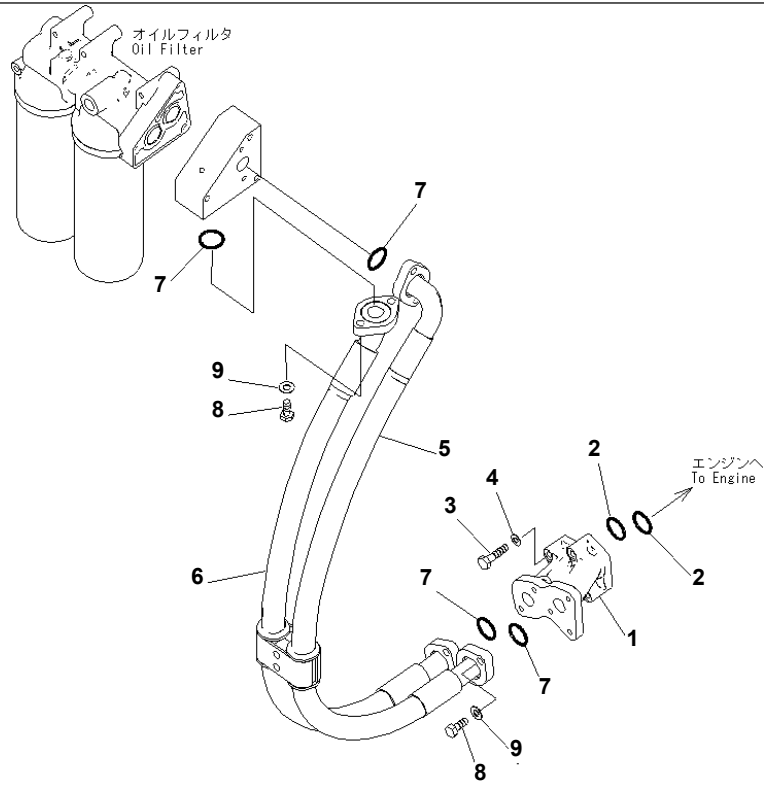

Ref. B0100-02A0A


00041650

Page 030050

PC800LC-8 S/N 50001-UP (ecot3)
ENGINE MOUNTING (OIL FILTER PIPING) (HOSE)(#55001-55010)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41211	BLOCK	1	50001-55010
2	07000-73038	O-RING	2	50001-55010
3	01010-81065	BOLT	4	50001-55010
4	01643-31032	WASHER	4	50001-55010
5	209-01-41420	HOSE	1	50001-@
6	209-01-41430	HOSE	1	50001-@
7	07000-73038	O-RING	4	50001-@
8	01010-81240	BOLT	8	50001-@
9	01643-31232	WASHER	8	50001-@

 PC800LC-8 S/N 50001-UP (ecot3)
00058347

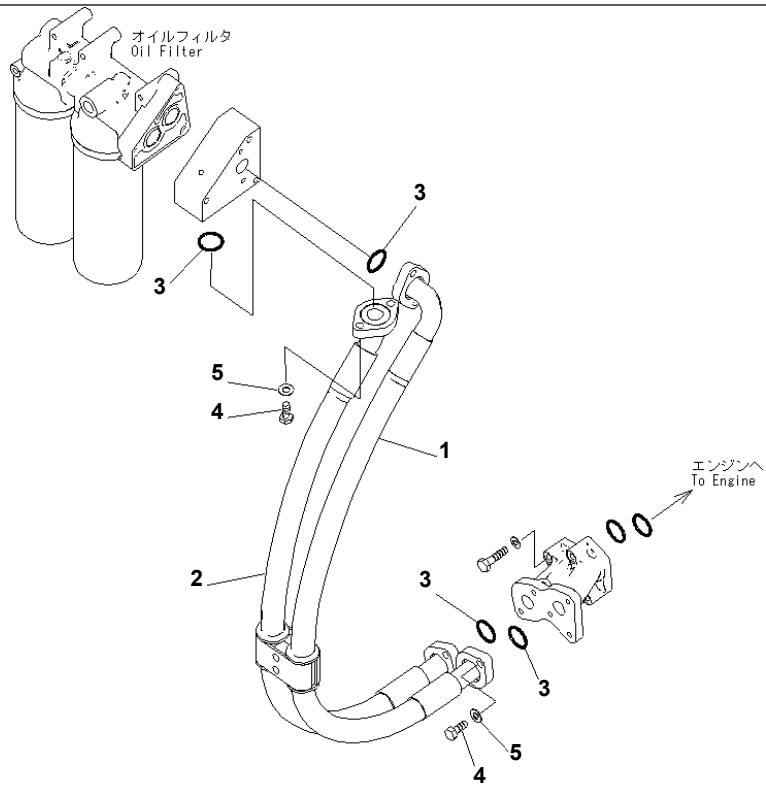

Ref. B0100-02A0B


00058347-V

Page 030060

PC800LC-8 S/N 50001-UP (ecot3)
ENGINE MOUNTING (OIL FILTER PIPING) (HOSE)(#55011-)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41420	HOSE	1	50001-
2	209-01-41430	HOSE	1	50001-
3	07000-73038	O-RING	4	50001-
4	01010-81240	BOLT	8	50001-
5	01643-31232	WASHER	8	50001-

 PC800LC-8 S/N 50001-UP (ecot3)
00041651

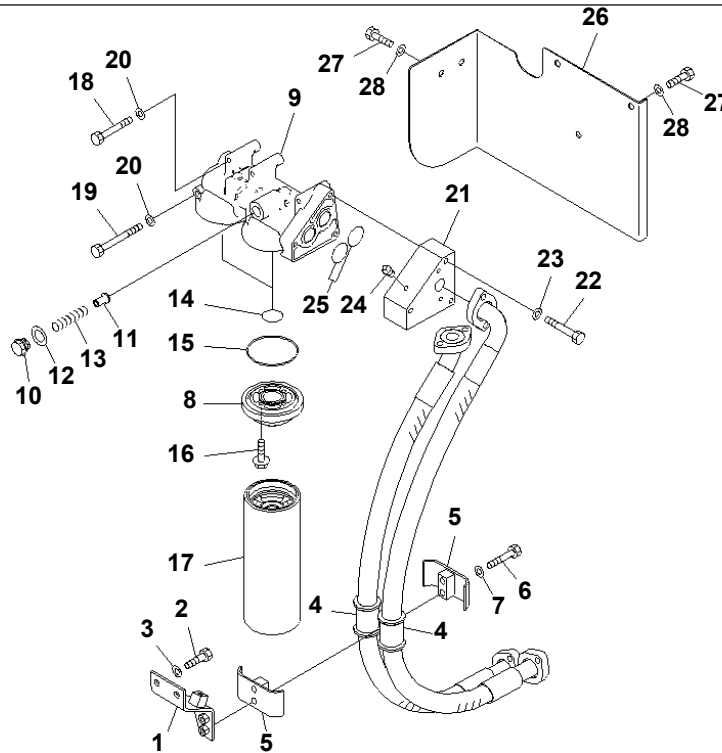

00041651

Ref. B0100-03A0

Page 030070

PC800LC-8 S/N 50001-UP (ecot3)
ENGINE MOUNTING (OIL FILTER PIPING) (OIL FILTER)(#50001-55000)


Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41470	BRACKET	1	50001-@
2	01010-81230	BOLT	2	50001-@
3	01643-31232	WASHER	2	50001-@
4	07095-01038	CUSHION	2	50001-@
5	07094-31024	CLAMP	2	50001-@
6	01010-81285	BOLT	2	50001-@
7	01643-31232	WASHER	2	50001-@
	(6261-51-5100)	HEAD ASS'Y	1	50001-@
8	☆	· ADAPTER	1	50001-@
9	☆	· HEAD	1	50001-@
10	6217-51-5660	· CAP	1	50001-@
11	6162-55-5230	· VALVE	1	50001-@
12	6162-53-5430	· PACKING	1	50001-@
13	600-211-1890	· SPRING	1	50001-@
14	07000-72040	· O-RING	2	50001-@
15	07000-72105	· O-RING	2	50001-@
16	01435-00845	· BOLT	8	50001-@
17	600-211-1340	CARTRIDGE	2	50001-@
18	01011-81000	BOLT	3	50001-@
19	01011-81040	BOLT	3	50001-@
20	01643-31032	WASHER	6	50001-@
21	209-01-41442	BLOCK	1	50012-@
	209-01-41441	BLOCK	1	50001-50011
22	01010-81090	BOLT	3	50001-@
23	01643-31032	WASHER	3	50001-@
24	07042-30108	PLUG	1	50001-@
25	07000-73040	O-RING	2	50001-@
26	209-54-42351	COVER	1	50001-@
27	01010-81225	BOLT	5	50001-@

PC800LC-8 S/N 50001-UP (ecot3)

ENGINE MOUNTING (OIL FILTER PIPING) (OIL FILTER)(#50001-55000)

Item	Part No.	Part Name	Qty	Serial No.
28	01643-31232	WASHER	5	50001-@

 PC800LC-8 S/N 50001-UP (ecot3)
00041651

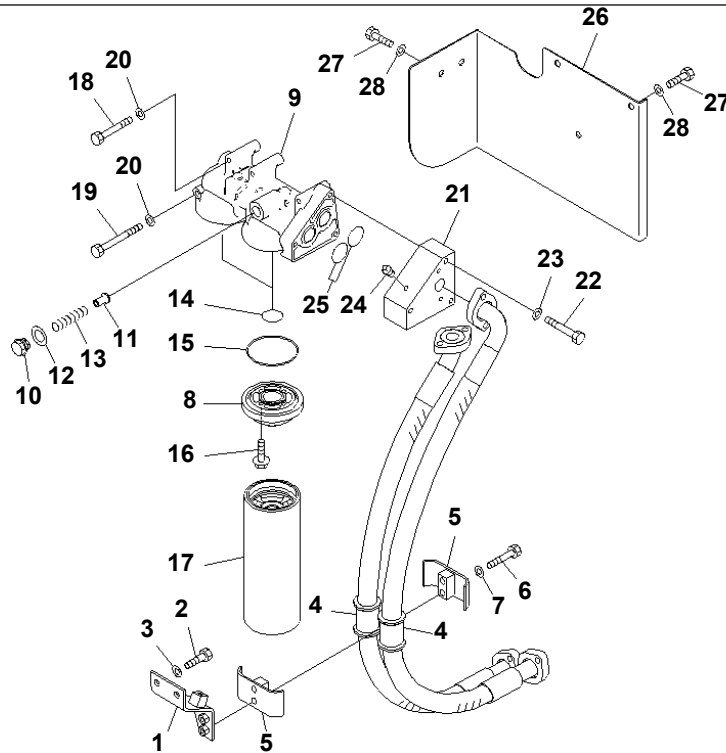

00041651

Ref. B0100-03A0A

Page 030080

PC800LC-8 S/N 50001-UP (ecot3)
ENGINE MOUNTING (OIL FILTER PIPING) (OIL FILTER)(#55001-)


Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41470	BRACKET	1	50001-
2	01010-81230	BOLT	2	50001-
3	01643-31232	WASHER	2	50001-
4	07095-01038	CUSHION	2	50001-
5	07094-31024	CLAMP	2	50001-
6	01010-81285	BOLT	2	50001-
7	01643-31232	WASHER	2	50001-
	(6261-51-5101)	HEAD ASS'Y	1	55202-
	(6261-51-5100)	HEAD ASS'Y	1	50001-55201
8	☆	· ADAPTER	1	55202-
	☆	· ADAPTER	1	50001-55201
9	☆	· HEAD	1	50001-
10	6217-51-5660	· CAP	1	50001-
11	6162-55-5230	· VALVE	1	50001-
12	6162-53-5430	· PACKING	1	50001-
13	600-211-1890	· SPRING	1	50001-
14	07000-72040	· O-RING	2	50001-
15	07000-72105	· O-RING	2	50001-
16	01435-00845	· BOLT	8	50001-
17	600-211-1340	CARTRIDGE	2	50001-
18	01011-81000	BOLT	3	50001-
19	01011-81040	BOLT	3	50001-
20	01643-31032	WASHER	6	50001-
21	209-01-41442	BLOCK	1	50012-
22	01010-81090	BOLT	3	50001-
23	01643-31032	WASHER	3	50001-
24	07042-30108	PLUG	1	50001-
25	07000-73040	O-RING	2	50001-
26	209-54-42351	COVER	1	50001-

PC800LC-8 S/N 50001-UP (ecot3)

ENGINE MOUNTING (OIL FILTER PIPING) (OIL FILTER)(#55001-)

Item	Part No.	Part Name	Qty	Serial No.
27	01010-81230	BOLT	5	55046-
	01010-81225	BOLT	5	50001-55045
28	01643-31232	WASHER	5	50001-

 PC800LC-8 S/N 5001-UP (ecot3)
00045192

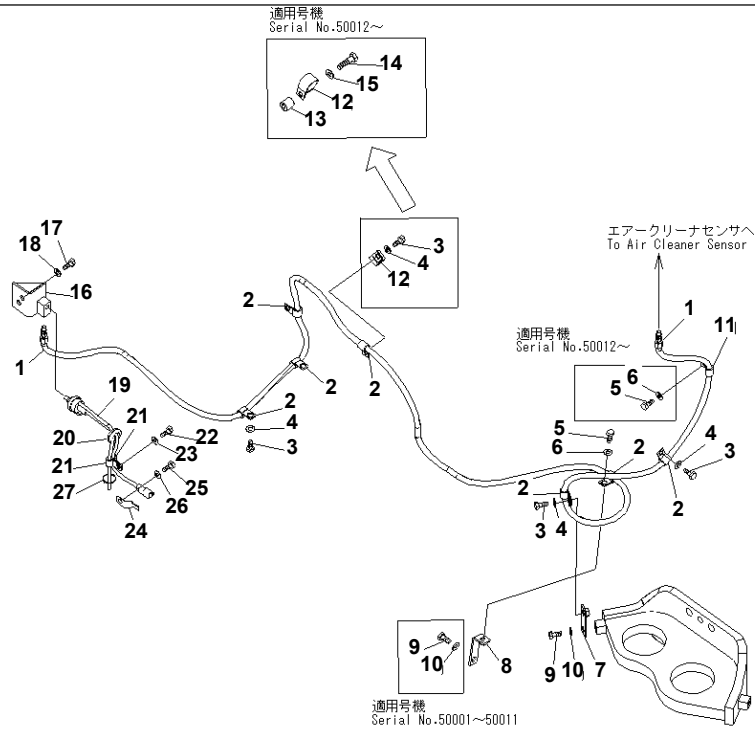

00045192-V

Ref. B0100-04A0

Page 030090

PC800LC-8 S/N 5001-UP (ecot3)
ENGINE MOUNTING (AIR CLEANER SENSOR)(#50001-55000)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41460	HOSE	1	50001-@
2	04434-51412	CLIP	7	50001-@
3	01010-81225	BOLT	5	50012-@
	01010-81225	BOLT	6	50001-50011
4	01643-31232	WASHER	5	50012-@
	01643-31232	WASHER	6	50001-50011
5	01010-81020	BOLT	2	50012-@
	□01010-81220	BOLT	1	50001-50011
6	01643-31032	WASHER	2	50012-@
	□01643-31232	WASHER	1	50001-50011
7	209-04-77140	PLATE	1	50001-@
8	195-06-41930	BRACKET	1	50001-@
9	01010-81225	BOLT	1	50012-@
	01010-81225	BOLT	2	50001-50011
10	01643-31232	WASHER	1	50012-@
	01643-31232	WASHER	2	50001-50011
11	04434-51410	CLIP	1	50001-@
12	04434-53412	CLIP	1	50012-@
	04434-52512	CLIP	1	50001-50011
13	195-33-11220	SPACER	1	50012-@
14	01010-81250	BOLT	1	50012-@
15	01643-31232	WASHER	1	50012-@
16	209-01-77290	BRACKET	1	50001-@
17	01010-81230	BOLT	2	50001-@
18	01643-31232	WASHER	2	50001-@
19	7861-93-1420	SENSOR	1	50001-@
20	08037-02512	GROMMET	1	50001-@
21	04434-51012	CLIP	2	50001-@
22	01010-81225	BOLT	1	50001-@

Reference: B0100-04A0


Page: 030090

PC800LC-8 S/N 50001-UP (ecot3)

ENGINE MOUNTING (AIR CLEANER SENSOR)(#50001-55000)

Item	Part No.	Part Name	Qty	Serial No.
23	01643-31232	WASHER	1	50001-@
24	08193-20012	CLIP	1	50001-@
25	01010-81225	BOLT	1	50001-@
26	01643-31232	WASHER	1	50001-@
27	08034-20536	BAND	1	50001-@

 PC800LC-8 S/N 5001-UP (ecot3)
00060155

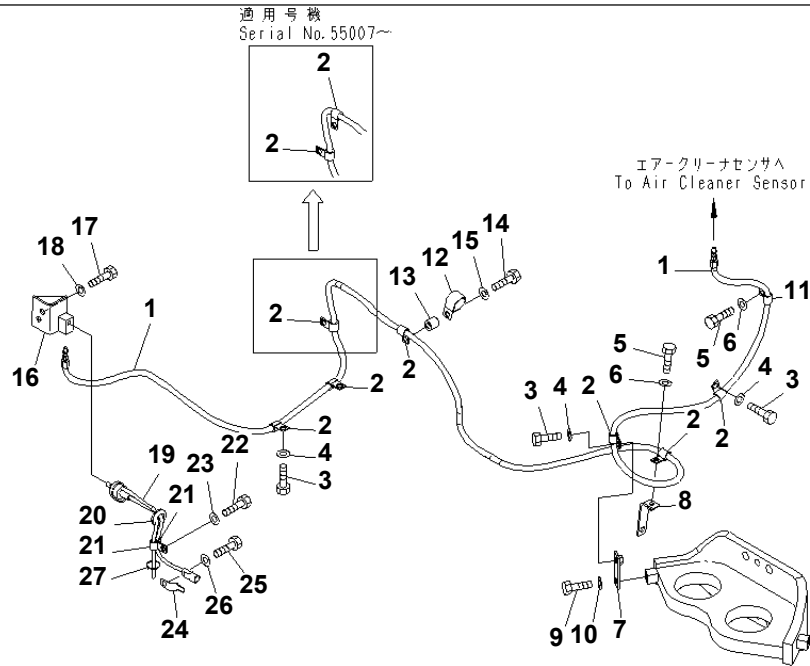

00060155

Ref. B0100-04A0A

Page 030100

PC800LC-8 S/N 5001-UP (ecot3)
ENGINE MOUNTING (AIR CLEANER SENSOR)(#55001-55045)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41460	HOSE	1	50001-@
2	04434-51412	CLIP	8	55007-55045
	04434-51412	CLIP	7	50001-55006
3	01010-81225	BOLT	6	55007-@
	01010-81225	BOLT	5	50012-55006
4	01643-31232	WASHER	6	55007-@
	01643-31232	WASHER	5	50012-55006
5	01010-81020	BOLT	2	50012-@
6	01643-31032	WASHER	2	50012-@
7	209-04-77140	PLATE	1	50001-@
8	195-06-41930	BRACKET	1	50001-@
9	01010-81225	BOLT	1	50012-@
10	01643-31232	WASHER	1	50012-@
11	04434-51410	CLIP	1	50001-55045
12	04434-53412	CLIP	1	50012-@
13	195-33-11220	SPACER	1	50012-55045
14	01010-81250	BOLT	1	50012-55045
15	01643-31232	WASHER	1	50012-55045
16	209-01-77290	BRACKET	1	50001-@
17	01010-81230	BOLT	2	50001-@
18	01643-31232	WASHER	2	50001-@
19	7861-93-1420	SENSOR	1	50001-@
20	08037-02512	GROMMET	1	50001-@
21	04434-51012	CLIP	2	50001-@
22	01010-81225	BOLT	1	50001-@
23	01643-31232	WASHER	1	50001-@
24	08193-20012	CLIP	1	50001-@
25	01010-81225	BOLT	1	50001-@
26	01643-31232	WASHER	1	50001-@


Reference: B0100-04A0A

Page: 030100

PC800LC-8 S/N 50001-UP (ecot3)


ENGINE MOUNTING (AIR CLEANER SENSOR)(#55001-55045)

Item	Part No.	Part Name	Qty	Serial No.
27	08034-20536	BAND	1	50001-@

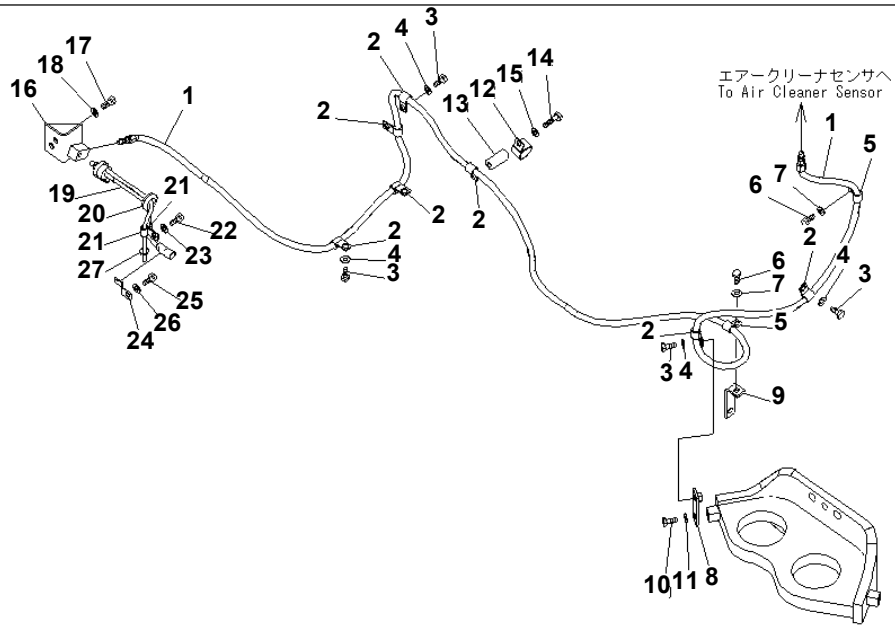 

PC800LC-8 S/N 50001-UP (ecot3)
ENGINE MOUNTING (AIR CLEANER SENSOR)(#55046-55065)


Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41460	HOSE	1	50001-@
2	04434-51412	CLIP	7	55046-55065
3	01010-81225	BOLT	6	55007-@
4	01643-31232	WASHER	6	55007-@
5	04434-51410	CLIP	2	55046-55065
6	01010-81020	BOLT	2	50012-@
7	01643-31032	WASHER	2	50012-@
8	209-04-77140	PLATE	1	50001-@
9	195-06-41930	BRACKET	1	50001-@
10	01010-81225	BOLT	1	50012-@
11	01643-31232	WASHER	1	50012-@
12	04434-53412	CLIP	1	50012-@
13	175-40-22540	SPACER	1	55046-@
14	01010-81275	BOLT	1	55046-@
15	01643-31232	WASHER	1	55046-@
16	209-01-41710	BRACKET	1	55046-@
17	01010-81230	BOLT	2	50001-@
18	01643-31232	WASHER	2	50001-@
19	7861-93-1420	SENSOR	1	50001-@
20	08037-02512	GROMMET	1	50001-@
21	04434-51012	CLIP	2	50001-@
22	01010-81225	BOLT	1	50001-@
23	01643-31232	WASHER	1	50001-@
24	08193-20012	CLIP	1	50001-@
25	01010-81225	BOLT	1	50001-@
26	01643-31232	WASHER	1	50001-@
27	08034-20536	BAND	1	50001-@

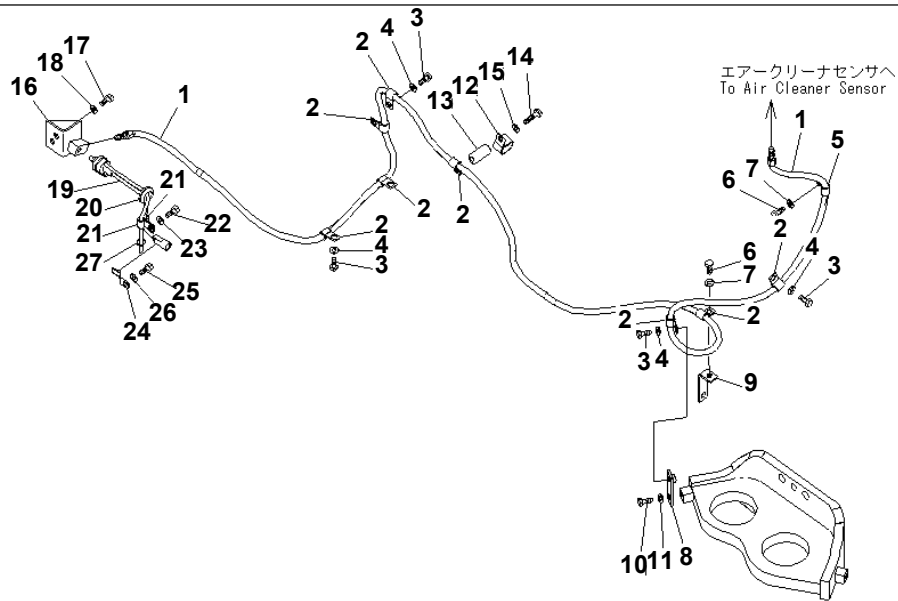 

PC800LC-8 S/N 50001-UP (ecot3)
ENGINE MOUNTING (AIR CLEANER SENSOR)(#55066-)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41460	HOSE	1	50001-
2	04434-51412	CLIP	8	55066-
3	01010-81225	BOLT	6	55007-
4	01643-31232	WASHER	6	55007-
5	04434-51410	CLIP	1	55066-
6	01010-81020	BOLT	2	50012-
7	01643-31032	WASHER	2	50012-
8	209-04-77140	PLATE	1	50001-
9	195-06-41930	BRACKET	1	50001-
10	01010-81225	BOLT	1	50012-
11	01643-31232	WASHER	1	50012-
12	04434-53412	CLIP	1	50012-
13	175-40-22540	SPACER	1	55046-
14	01010-81275	BOLT	1	55046-
15	01643-31232	WASHER	1	55046-
16	209-01-41710	BRACKET	1	55046-
17	01010-81230	BOLT	2	50001-
18	01643-31232	WASHER	2	50001-
19	7861-93-1422	SENSOR	1	55268-
	7861-93-1421	SENSOR	1	55237-55267
	7861-93-1420	SENSOR	1	50001-55236
20	08037-02512	GROMMET	1	50001-
21	04434-51012	CLIP	2	50001-
22	01010-81225	BOLT	1	50001-
23	01643-31232	WASHER	1	50001-
24	08193-20012	CLIP	1	50001-
25	01010-81225	BOLT	1	50001-
26	01643-31232	WASHER	1	50001-
27	08034-20536	BAND	1	50001-

 PC800LC-8 S/N 50001-UP (ecot3)
00041663

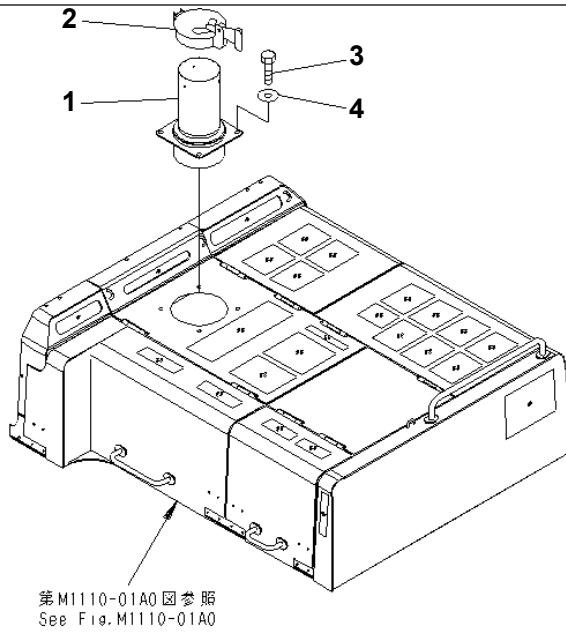

Ref. B0300-01A0


00041663

Page 030130

PC800LC-8 S/N 50001-UP (ecot3)
EXHAUST PIPE

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41310	PIPE	1	50001-
2	6164-12-5900	CAP	1	50001-
3	01010-81230	BOLT	4	50001-
4	175-54-34170	WASHER	4	50001-

 PC800LC-8 S/N 50001-UP (ecot3)
00041664

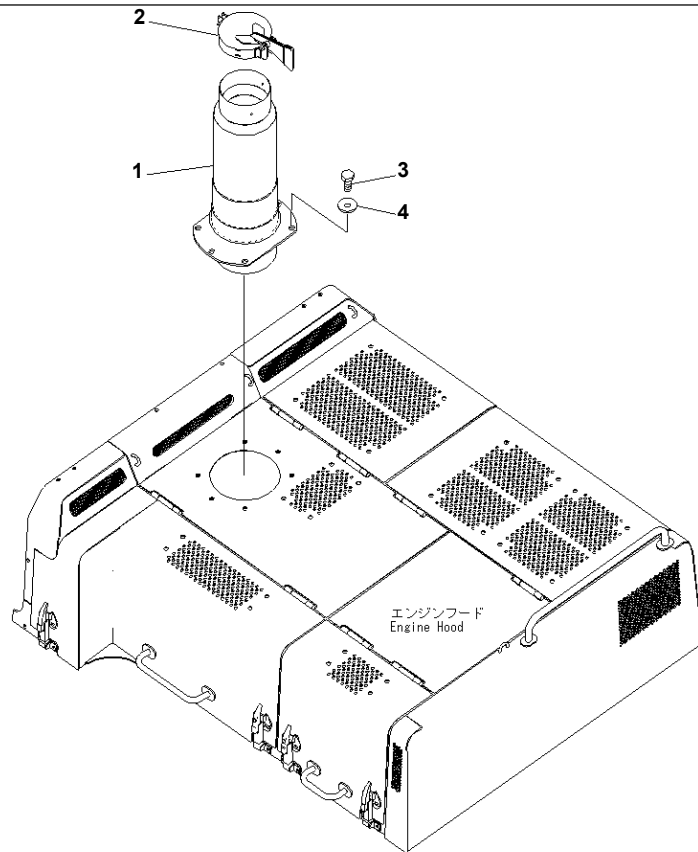


Ref. B0300-01A1A

Page 030140

PC800LC-8 S/N 50001-UP (ecot3)
EXHAUST PIPE (EU SPEC.)(#55001-)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-41510	TAIL PIPE	1	50001-
2	6164-12-5900	CAP	1	50001-
3	01010-81240	BOLT	6	50001-
4	175-54-34170	WASHER	6	50001-

 PC800LC-8 S/N 50001-UP (ecot3)
00041772

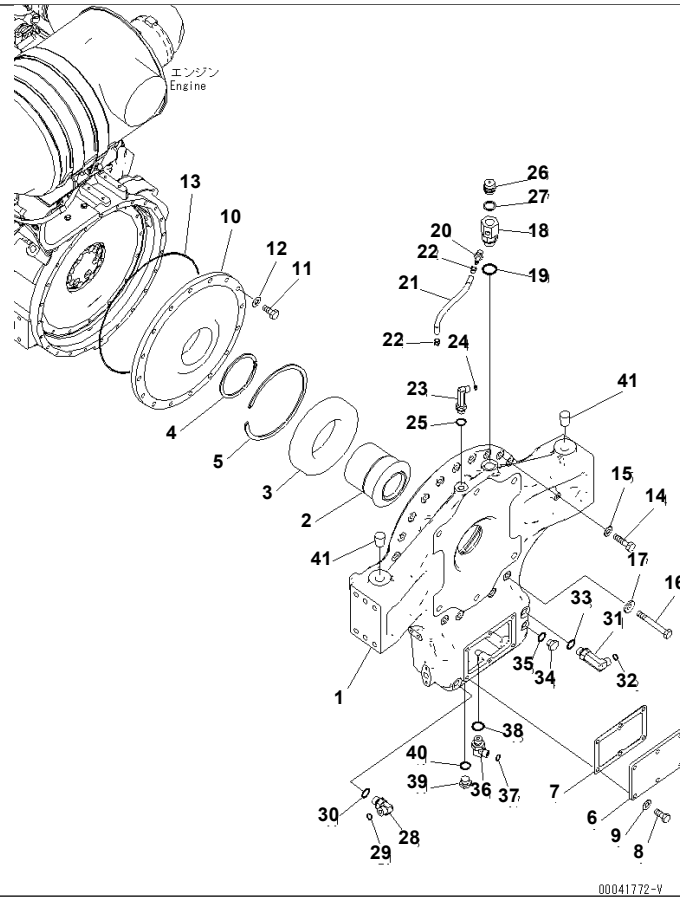

00041772-V

Ref. B0600-01A0

Page 030150


PC800LC-8 S/N 50001-UP (ecot3)
POWER TAKE OFF (COUPLING ASS'Y)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-42111	CASE	1	50001-
2	209-01-42121	SHAFT	1	50001-
3	209-01-42140	BEARING	1	50001-
4	04070-00140	RING	1	50001-
5	04071-00250	RING	1	50001-
6	209-01-42151	PLATE	1	50001-
7	209-01-42220	GASKET	1	50001-
8	01010-81230	BOLT	6	50001-
9	01643-31232	WASHER	6	50001-
10	209-01-42131	HUB	1	50001-
11	01010-81240	BOLT	16	50001-
12	01643-31232	WASHER	16	50001-
13	07000-E5500	O-RING	1	50001-
14	01010-81245	BOLT	17	50001-
15	01643-31232	WASHER	17	50001-
16	01011-81230	BOLT	4	50001-
17	01643-31232	WASHER	4	50001-
18	209-01-42291	ELBOW	1	50001-
19	07002-63334	O-RING	1	50001-
20	6138-55-7610	NIPPLE	1	50001-
21	07286-01025	HOSE	1	50001-
22	07285-00130	CLIP	2	50001-
23	02782-10317	ELBOW	1	50001-
24	02896-21009	O-RING	1	50001-
25	07002-22034	O-RING	1	50001-
26	07030-03034	BREATHER	1	50001-
27	07005-03016	SEAL, WASHER	1	50001-
28	02782-10522	ELBOW	1	50001-
29	02896-21015	O-RING	1	50001-

PC800LC-8 S/N 50001-UP (ecot3)
POWER TAKE OFF (COUPLING ASS'Y)

Item	Part No.	Part Name	Qty	Serial No.
30	07002-22434	O-RING	1	50001-
31	02782-10524	ELBOW	1	50001-
32	02896-21015	O-RING	1	50001-
33	07002-22434	O-RING	1	50001-
34	07040-12012	PLUG	1	50001-
35	07002-22034	O-RING	1	50001-
36	02782-10425	ELBOW	1	50001-
37	02896-21012	O-RING	1	50001-
38	07002-22434	O-RING	1	50001-
39	07040-12412	PLUG	1	50001-
40	07002-22434	O-RING	1	50001-
41	07049-03038	PLUG	2	50001-

 PC800LC-8 S/N 50001-UP (ecot3)
00041773

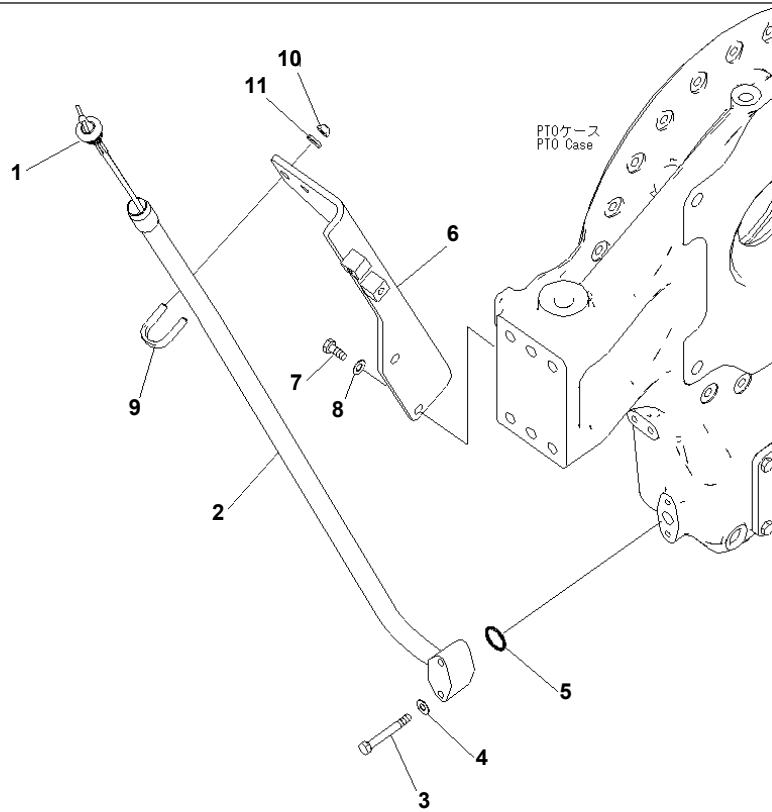

00041773

Ref. B0600-02A0

Page 030160

PC800LC-8 S/N 50001-UP (ecot3)
POWER TAKE OFF (OIL CHECK GAUGE)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-42170	GAUGE	1	50001-
2	209-01-42182	TUBE	1	50001-
3	01010-81065	BOLT	2	50001-
4	01643-31032	WASHER	2	50001-
5	07000-E3028	O-RING	1	50001-
6	209-01-42192	BRACKET	1	50001-
7	01010-81230	BOLT	2	50001-
8	01643-31232	WASHER	2	50001-
9	07283-32738	CLIP	1	50001-
10	01597-01009	NUT	2	50001-
11	01643-31032	WASHER	2	50001-



Suggest:

 
For more complete manuals. Please go to the home page.

<https://www.ebooklibonline.com>

If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.

Thank you so much for reading

PC800LC-8 S/N 50001-UP (ecot3)
00041774

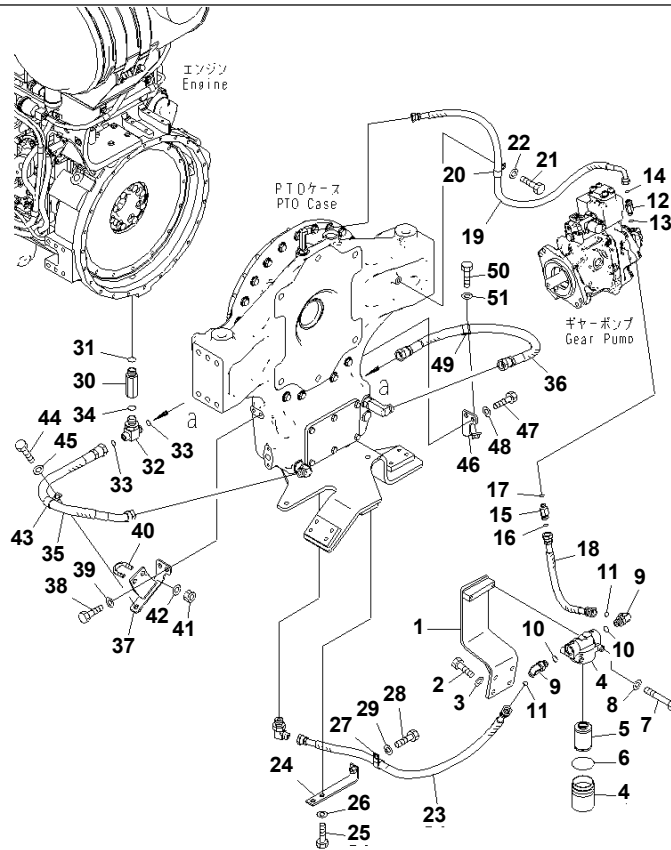

00041774

Ref. B0600-03A0

Page 030170

PC800LC-8 S/N 50001-UP (ecot3)
POWER TAKE OFF (LUBRICATION PIPING)

Item	Part No.	Part Name	Qty	Serial No.
1	209-01-42232	BRACKET	1	50001-
2	01010-81230	BOLT	4	50001-
3	01643-31232	WASHER	4	50001-
4	209-01-42251	FILTER ASS'Y	1	50001-
5	209-01-42260	· ELEMENT ASS'Y	1	50001-
6	07000-F2065	· O-RING	1	50001-
7	01011-81000	BOLT	2	50001-
8	01643-31032	WASHER	2	50001-
9	418-62-35111	ELBOW	2	50001-
10	07002-21823	O-RING	2	50001-
11	02896-21012	O-RING	2	50001-
12	21S-62-31461	NIPPLE	1	50001-
13	07002-21423	O-RING	1	50001-
14	02896-21009	O-RING	1	50001-
15	209-01-42311	UNION	1	50001-
16	02896-21012	O-RING	1	50001-
17	07002-21423	O-RING	1	50001-
18	02762-00405	HOSE	1	50001-
19	02763-00311	HOSE	1	50001-
20	04434-51612	CLIP	1	50004-
	04434-51812	CLIP	1	50001-50003
21	01010-81225	BOLT	1	50001-
22	01643-31232	WASHER	1	50001-
23	02762-00409	HOSE	1	50001-
24	22S-62-14450	BRACKET	1	50001-
25	01010-81225	BOLT	2	50001-
26	01643-31232	WASHER	2	50001-
27	04434-51912	CLIP	1	50004-
	04434-52112	CLIP	1	50001-50003

PC800LC-8 S/N 50001-UP (ecot3)
POWER TAKE OFF (LUBRICATION PIPING)

Item	Part No.	Part Name	Qty	Serial No.
28	01010-81225	BOLT	1	50001-
29	01643-31232	WASHER	1	50001-
30	203-62-61410	JOINT	1	50001-
31	07002-22434	O-RING	1	50001-
32	21N-64-36720	TEE	1	50001-
33	02896-21015	O-RING	2	50001-
34	07002-22434	O-RING	1	50001-
35	02764-00506	HOSE	1	50001-
36	02762-00507	HOSE	1	50001-
37	209-01-42281	BRACKET	1	50001-
38	01010-81225	BOLT	2	50001-
39	01643-31232	WASHER	2	50001-
40	07283-32738	CLIP	1	50001-
41	01597-01009	NUT	2	50001-
42	01643-31032	WASHER	2	50001-
43	04434-52312	CLIP	1	50001-
44	01010-81225	BOLT	1	50001-
45	01643-31232	WASHER	1	50001-
46	209-01-42270	BRACKET	1	50001-
47	01010-81225	BOLT	2	50001-
48	01643-31232	WASHER	2	50001-
49	04434-52312	CLIP	1	50001-
50	01010-81225	BOLT	1	50001-
51	01643-31232	WASHER	1	50001-

<https://www.ebooklibonline.com>

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

<https://www.ebooklibonline.com>