



# **Large Square Baler**

**870N**

**870R**

**870S**

**990N**

**990R**

**990S**

**1270N**

**1270S**

**1290N**

**1290S**

**1290NXD**

**1290SXD**

**12130N**

**12130S**

**S/N: AGCFxxxxxEHB0x101 and After**

# Large Square Baler

<b>1 General</b>	<b>1-1</b>
<b>1.1 General information</b>	<b>1-5</b>
1.1.1 Introduction to this service manual	1-5
1.1.2 Units of measurement	1-5
1.1.3 Table of contents	1-5
1.1.4 Page numbers	1-5
1.1.5 Installing a stake nut	1-5
1.1.6 Removing a gib key	1-6
1.1.7 Installing a gib key	1-6
1.1.8 Removing an eccentric locking collar	1-7
1.1.9 Installing an eccentric locking collar	1-7
<b>1.2 Safety</b>	<b>1-9</b>
1.2.1 Safety alert symbol	1-9
1.2.2 Safety messages	1-9
1.2.3 Informational messages	1-9
1.2.4 Safety signs	1-9
1.2.5 Safety warnings	1-10
1.2.6 A word to the technician	1-10
1.2.7 The service manual	1-11
1.2.8 The operator manual	1-12
1.2.9 Toolbox	1-12
1.2.10 Operation	1-12
1.2.10.1 General information	1-12
1.2.10.2 Prepare for operation	1-13
1.2.10.3 Personal protective equipment	1-14
1.2.10.4 Seat instructions	1-14
1.2.10.5 Shield and guards	1-14
1.2.10.6 Exhaust warning	1-15
1.2.10.7 Flying debris	1-15
1.2.10.8 Handrails	1-16
1.2.10.9 Agricultural chemicals	1-16
1.2.11 Travel on public roads	1-16
1.2.12 Maintenance	1-18
1.2.12.1 General maintenance information	1-18
1.2.12.2 Fire prevention and first aid	1-20
1.2.12.3 High pressure leaks	1-21
1.2.12.4 Accumulator safety	1-22
1.2.12.5 Tire safety	1-22
<b>1.3 Specifications</b>	<b>1-23</b>
1.3.1 Dimensions and weights	1-23
1.3.2 Drive system specifications	1-24
1.3.3 Shearbolt specifications	1-25
1.3.4 Hydraulic specifications - on board	1-26
1.3.5 Pickup specifications	1-26
1.3.6 Rotor cutter specifications - early production	1-27
1.3.7 Rotor cutter specifications - late production	1-28
1.3.8 Packer specifications	1-29
1.3.9 Packer/cutter specification, if equipped	1-29
1.3.10 Stuffer specifications	1-29
1.3.11 Plunger specifications	1-30
1.3.12 Twine specifications	1-30
1.3.13 Knotter and needle specifications	1-31

1.3.14	Bale chamber tension specifications	1-31
1.3.15	Ejector specifications	1-31
1.3.16	Roller bale chute specifications, if equipped	1-32
1.3.17	Lamp specification	1-32
1.3.18	Knotter lubrication pump specifications	1-32
1.3.19	Chain lubrication pump specifications, if equipped	1-33
1.3.20	Lubricants and capacities	1-33
1.3.21	Tire specifications	1-34
1.3.22	Brake specifications, if equipped	1-35
1.3.23	Maximum speed	1-37
1.3.24	Tractor requirements	1-37
1.3.25	Noise levels	1-38
<b>1.4</b>	<b>Bolt torque values</b>	<b>1-39</b>
<b>1.5</b>	<b>Machine identification</b>	<b>1-41</b>
1.5.1	Serial number plate location	1-41
1.5.2	Serial number description	1-42
<b>1.6</b>	<b>Machine components</b>	<b>1-43</b>
1.6.1	Outside view - left-hand side	1-43
1.6.2	Outside view - right-hand side	1-44
1.6.3	Inside view - left-hand side	1-45
1.6.4	Inside view - right-hand side	1-46
1.6.5	Description of operation	1-46
<b>1.7</b>	<b>Service schedule</b>	<b>1-48</b>
<b>1.8</b>	<b>Lubrication points</b>	<b>1-52</b>
1.8.1	Driveline lubrication and maintenance	1-52
1.8.1.1	Removing and installing the implement driveline shields	1-53
1.8.2	Lubricating the hitch ball, if equipped	1-54
1.8.3	Lubricating the main drive slip clutch	1-54
1.8.4	Lubricating the overrunning clutch	1-55
1.8.5	Lubricating the flywheel bearing	1-55
1.8.6	Lubricating the connecting rods	1-55
1.8.7	Lubricating the packer crank bearings	1-56
1.8.8	Inspecting the packer crank bearings	1-57
1.8.9	Lubricating the packer/cutter crank bearings	1-57
1.8.10	Inspecting the packer/cutter crank bearings	1-57
1.8.11	Lubricating the cutter rotor clutch, if equipped	1-58
1.8.12	Lubricating the anchor for the rotor cutter chain tensioner	1-58
1.8.13	Lubricating the rotor cutter bearings	1-59
1.8.14	Lubricating the knife cranks, if equipped	1-59
1.8.15	Lubricating the main drive sprocket	1-60
1.8.16	Lubricating the stuffer drive	1-60
1.8.17	Lubricating the knotter/needle clutch	1-61
1.8.18	Lubricating the brake linkage	1-61
1.8.19	Lubricating the tandem axle pivot bushings	1-62
1.8.20	Lubricating the metering wheel shaft	1-62
1.8.21	Lubricating the six twine knotter center fitting	1-62
1.8.22	Lubricating the tucker arm and twine arm cam rollers	1-63
1.8.23	Lubricating the bale density cylinders	1-63
1.8.24	Lubricating the packer clutch	1-64
1.8.25	Lubricating the main packer/cutter crank bearing	1-64
1.8.26	Lubricating the packer/cutter chain tensioner	1-64
1.8.27	Lubricating the pickup overrunning clutch	1-65
1.8.28	Lubricating the pickup linkage roller	1-65
1.8.29	Lubricating the pickup spring pivot	1-66
<b>1.9</b>	<b>Connecting to the tractor - CE</b>	<b>1-67</b>
1.9.1	Removing the shipping bracket	1-67
1.9.2	Hitch component identification	1-67

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**

1.9.3	Baler height setting . . . . .	1-68
1.9.4	Tractor setup dimensions with an 80 mm (3.15 in) ball hitch, a CE spherical ball hitch, or a 50 mm (2 in) ring hitch . . . . .	1-68
1.9.5	Tractor setup dimensions with a 40 mm (1.6 in) high ring hitch . . . . .	1-69
1.9.6	Installing the machine hitch . . . . .	1-69
1.9.7	Connecting the machine hitch to the tractor drawbar . . . . .	1-71
1.9.8	Connecting a 50 mm (2 in) ring hitch to the tractor . . . . .	1-72
1.9.9	Connecting an 80 mm (3.15 in) ball hitch to the tractor . . . . .	1-72
1.9.10	Connecting a 40 mm (1.6 in) high ring hitch to the tractor . . . . .	1-72
1.9.11	Operating a hydraulic tongue jack . . . . .	1-73
1.9.12	Installing the safety transport chain . . . . .	1-73
1.9.13	Constant velocity implement driveline, if equipped . . . . .	1-74
1.9.13.1	Connecting a quick disconnect yoke to a power take off . . . . .	1-74
1.9.13.2	Making marks on the constant velocity implement driveline . . . . .	1-75
1.9.13.3	Checking the constant velocity implement driveline angle . . . . .	1-76
1.9.13.4	Adjusting the constant velocity implement driveline angle . . . . .	1-76
1.9.13.5	Checking the constant velocity implement driveline clearance . . . . .	1-77
<b>1.10</b>	<b>Checklists . . . . .</b>	<b>1-78</b>
1.10.1	Daily checklist . . . . .	1-78
1.10.2	Inspection after the first hour of operation . . . . .	1-78
<b>1.11</b>	<b>Lighting and reflectors - CE . . . . .</b>	<b>1-79</b>
1.11.1	Lighting and reflectors . . . . .	1-79
<b>1.12</b>	<b>Lighting and reflectors - NA . . . . .</b>	<b>1-80</b>
1.12.1	Lighting and reflectors . . . . .	1-80
<b>1.13</b>	<b>Baler operation . . . . .</b>	<b>1-81</b>
1.13.1	Preparing to bale . . . . .	1-81
1.13.2	Starting the baler . . . . .	1-81
1.13.2.1	The plunger is away from the bale . . . . .	1-81
1.13.2.2	The plunger is near or on the bale . . . . .	1-81
1.13.2.3	Baler fails to start . . . . .	1-82
1.13.3	Baling the first bale . . . . .	1-82
1.13.4	Baling . . . . .	1-83
1.13.5	Stopping the baler . . . . .	1-83
<b>1.14</b>	<b>Preparing to road the machine or to move the machine on a trailer . . . . .</b>	<b>1-85</b>
<b>1.15</b>	<b>Lifting and tie down . . . . .</b>	<b>1-88</b>
1.15.1	Lifting a baler correctly . . . . .	1-88
1.15.2	Lifting points . . . . .	1-88
1.15.3	Tie down points . . . . .	1-89
<b>1.16</b>	<b>Air brake pressure release . . . . .</b>	<b>1-91</b>
<b>1.17</b>	<b>Disconnecting the tractor . . . . .</b>	<b>1-92</b>
<b>2</b>	<b>Main frame . . . . .</b>	<b>2-1</b>
<b>2.1</b>	<b>Wheels and tires . . . . .</b>	<b>2-3</b>
2.1.1	Tire specifications . . . . .	2-3
2.1.2	Remove a wheel . . . . .	2-3
2.1.3	Installing a wheel . . . . .	2-4
<b>2.2</b>	<b>Single axle . . . . .</b>	<b>2-5</b>
2.2.1	Removing an axle shaft without brakes . . . . .	2-5
2.2.2	Removing the axle shaft with brakes . . . . .	2-5
2.2.3	Inspecting an axle . . . . .	2-5
2.2.4	Installing an axle shaft without brakes . . . . .	2-5
2.2.5	Installing an axle shaft with brakes . . . . .	2-6
<b>2.3</b>	<b>Tandem axle . . . . .</b>	<b>2-7</b>
2.3.1	Tandem axle steering lock . . . . .	2-7
2.3.2	Removing the rear tandem axle . . . . .	2-7
2.3.3	Removing the front tandem axle . . . . .	2-8

2.3.4	Inspecting an axle . . . . .	2-9
2.3.5	Installing the rear tandem axle . . . . .	2-9
2.3.6	Installing the front tandem axle . . . . .	2-11
2.3.7	Adjusting the rear wheel alignment . . . . .	2-11
<b>2.4</b>	<b>Wheel bearing . . . . .</b>	<b>2-13</b>
2.4.1	Inspect the wheel bearings for too much movement . . . . .	2-13
2.4.2	Remove a wheel . . . . .	2-13
2.4.3	Removing the wheel bearings - single axle without brakes . . . . .	2-13
2.4.4	Remove the wheel bearings - machines with brakes . . . . .	2-14
2.4.5	Inspecting the wheel bearing . . . . .	2-15
2.4.6	Installing the wheel bearings - single axle without brakes . . . . .	2-16
2.4.7	Install the wheel bearings - single axle with brakes and all tandem axles . . . . .	2-16
<b>2.5</b>	<b>Axle frame group . . . . .</b>	<b>2-19</b>
2.5.1	Removing the axle frame - single axle without brakes . . . . .	2-19
2.5.2	Removing the axle frame - single axle with hydraulic brakes . . . . .	2-19
2.5.3	Removing the axle frame - single axle with air brakes . . . . .	2-20
2.5.4	Removing the axle frame - tandem axle without brakes . . . . .	2-20
2.5.5	Removing the axle frame - tandem axle with hydraulic brakes . . . . .	2-21
2.5.6	Removing the axle frame - tandem axle with air brakes . . . . .	2-21
2.5.7	Installing the axle frame - single axle without brakes . . . . .	2-22
2.5.8	Installing the axle frame - single axle with hydraulic brakes . . . . .	2-22
2.5.9	Installing the axle frame - single axle with air brakes . . . . .	2-23
2.5.10	Installing the axle frame - tandem axle without brakes . . . . .	2-23
2.5.11	Installing the axle frame - tandem axle with hydraulic brakes . . . . .	2-24
2.5.12	Installing the axle frame - tandem axle with air brakes . . . . .	2-24
2.5.13	Removing the leaf spring assembly . . . . .	2-25
2.5.14	Inspecting the leaf spring assembly . . . . .	2-25
2.5.15	Installing the leaf spring assembly . . . . .	2-26
<b>2.6</b>	<b>Brakes . . . . .</b>	<b>2-27</b>
2.6.1	Inspection procedure for brakes . . . . .	2-27
2.6.2	Inspect the air brake system . . . . .	2-27
2.6.3	Connecting the machine hydraulic brake hoses to the tractor . . . . .	2-28
2.6.4	Bleeding the hydraulic brake system . . . . .	2-28
2.6.5	Inspect the brake lining thickness . . . . .	2-28
2.6.6	Replace the brake linings . . . . .	2-29
2.6.7	Adjust the brakes . . . . .	2-31
2.6.8	Rubber brake wiper . . . . .	2-32
2.6.9	Inspect the park brake system . . . . .	2-32
<b>3</b>	<b>Drive system . . . . .</b>	<b>3-1</b>
<b>3.1</b>	<b>Implement driveline . . . . .</b>	<b>3-3</b>
3.1.1	Equal angle implement driveline, if equipped . . . . .	3-3
3.1.1.1	Connecting a quick disconnect yoke to a power take-off . . . . .	3-3
3.1.1.2	Adjusting the angles of an equal angle implement driveline . . . . .	3-4
3.1.2	Constant velocity implement driveline, if equipped . . . . .	3-5
3.1.2.1	Connecting a quick disconnect yoke to a power take off . . . . .	3-5
3.1.2.2	Making marks on the constant velocity implement driveline . . . . .	3-6
3.1.2.3	Checking the constant velocity implement driveline angle . . . . .	3-7
3.1.2.4	Adjusting the constant velocity implement driveline angle . . . . .	3-7
3.1.2.5	Checking the constant velocity implement driveline clearance . . . . .	3-8
3.1.3	Removing the implement driveline (IDL) . . . . .	3-9
3.1.4	Installing the implement driveline (IDL) . . . . .	3-10
3.1.5	Replacing a pawl on a quick disconnect yoke . . . . .	3-12
3.1.6	Replacing the cross and bearing . . . . .	3-15
<b>3.2</b>	<b>Main drive shaft . . . . .</b>	<b>3-22</b>
3.2.1	Driveline troubleshooting . . . . .	3-22
3.2.2	Main drive shaft . . . . .	3-22

3.2.3	Removing the main drive shaft	3-23
3.2.4	Inspecting the main drive shaft	3-25
3.2.5	Installing the main drive shaft	3-25
<b>3.3</b>	<b>Main drive clutch</b>	<b>3-27</b>
3.3.1	Main drive slip clutch adjustment	3-27
3.3.2	Lubricating the main drive slip clutch	3-28
3.3.3	Removing the main drive clutch	3-28
3.3.4	Disassembling the main drive clutch	3-28
3.3.5	Inspecting the main drive clutch	3-29
3.3.6	Assembling the main drive clutch	3-31
3.3.7	Disassembling the main drive overrunning clutch	3-32
3.3.8	Inspecting the main drive overrunning clutch	3-32
3.3.9	Assembling the main drive overrunning clutch	3-33
3.3.10	Installing the main drive clutch	3-33
<b>3.4</b>	<b>Flywheel</b>	<b>3-34</b>
3.4.1	Flywheel brake	3-34
3.4.2	Inspecting the flywheel brake lining	3-34
3.4.3	Replacing the flywheel shearbolt	3-35
3.4.4	Shearbolt troubleshooting	3-36
3.4.5	Removing the flywheel	3-38
3.4.6	Inspecting the flywheel	3-40
3.4.7	Inspecting the pinion seal	3-41
3.4.8	Replacing the pinion seal	3-41
3.4.9	Installing the flywheel	3-42
<b>3.5</b>	<b>Auxiliary drive shaft</b>	<b>3-47</b>
3.5.1	Removing the auxiliary drive shaft	3-47
3.5.2	Inspecting the auxiliary drive shaft	3-48
3.5.3	Installing the auxiliary drive shaft	3-49
<b>3.6</b>	<b>Gearbox</b>	<b>3-51</b>
3.6.1	Removing the gearbox	3-51
3.6.2	Installing the gearbox	3-53
3.6.3	80x70 (2x3), 80x90 (3x3), 120x70 (2x4), 120x90 (3x4), and 120x90 XD (3x4 XD) gearbox components	3-56
3.6.4	Disassembling a 80x70 (2x3), 80x90 (3x3), 120x70 (2x4), 120x90 (3x4), and 120x90 XD (3x4 XD) gearbox	3-57
3.6.5	Assembling a 80x70 (2x3), 80x90 (3x3), 120x70 (2x4), 120x90 (3x4), and 120x90 XD (3x4 XD) gearbox	3-61
3.6.6	Disassembling a 120x130 (4x4) gearbox	3-75
3.6.7	Assembling the 120x130 (4x4) gearbox	3-82
3.6.8	Adjusting the gearbox crank arm bolts	3-87
3.6.9	Gearbox troubleshooting	3-87
<b>4</b>	<b>Hydraulic system</b>	<b>4-1</b>
<b>4.1</b>	<b>Hydraulic system general information</b>	<b>4-3</b>
4.1.1	Hydraulic reservoir general information	4-3
4.1.2	Hydraulic components, left-hand side	4-4
4.1.3	Hydraulic components, rear	4-4
4.1.4	Connecting the machine hydraulic hoses to the tractor	4-5
<b>4.2</b>	<b>Bale density circuit</b>	<b>4-6</b>
4.2.1	Bale density circuit description	4-6
4.2.2	Filling the hydraulic system	4-6
4.2.3	Replacing a cartridge	4-6
<b>4.3</b>	<b>Baler control valve assembly</b>	<b>4-8</b>
4.3.1	Removing the baler control valve assembly	4-8
4.3.2	Installing the baler control valve assembly	4-10
4.3.3	Disassembling the baler control valve assembly	4-11
4.3.4	Inspecting the baler control valve assembly	4-13

4.3.5 Assembling the baler control valve assembly . . . . .	4-15
<b>4.4 Bale ejector/chute valve . . . . .</b>	<b>4-18</b>
4.4.1 Bale ejector hydraulic connections . . . . .	4-18
4.4.2 Bale chute hydraulic connections . . . . .	4-18
4.4.3 Removing the bale ejector/chute valve . . . . .	4-19
4.4.4 Installing the bale ejector/chute valve . . . . .	4-20
<b>4.5 Accumulator auxiliary valve . . . . .</b>	<b>4-22</b>
4.5.1 Accumulator hydraulic system . . . . .	4-22
4.5.2 Accumulator and bale ejector hydraulic connections . . . . .	4-22
4.5.3 Disassembling the accumulator auxiliary valve . . . . .	4-23
4.5.4 Inspecting the accumulator auxiliary valve . . . . .	4-23
4.5.5 Assembling the accumulator auxiliary valve . . . . .	4-24
<b>4.6 Pickup lift cylinder . . . . .</b>	<b>4-26</b>
4.6.1 Pickup lift cylinder components . . . . .	4-26
4.6.2 Removing the pickup lift cylinder . . . . .	4-26
4.6.3 Installing the pickup lift cylinder . . . . .	4-27
4.6.4 Disassembling the pickup lift cylinder . . . . .	4-28
4.6.5 Inspecting the pickup lift cylinder . . . . .	4-29
4.6.6 Assembling the pickup lift cylinder . . . . .	4-29
<b>4.7 Bale density cylinders . . . . .</b>	<b>4-30</b>
4.7.1 Bale density cylinder components . . . . .	4-30
4.7.2 Removing the bale density cylinders . . . . .	4-30
4.7.3 Installing the bale density cylinders . . . . .	4-31
4.7.4 Disassembling the bale density cylinders . . . . .	4-32
4.7.5 Inspecting the bale density cylinders . . . . .	4-33
4.7.6 Assembling the bale density cylinders . . . . .	4-33
<b>4.8 Hydraulic troubleshooting . . . . .</b>	<b>4-35</b>
4.8.1 Testing the load control system - load decrease . . . . .	4-37
4.8.2 Testing the load control system - load increase . . . . .	4-37
<b>4.9 Cutter hydraulics - GHB0x101 and later . . . . .</b>	<b>4-39</b>
4.9.1 Removing the knife cylinders . . . . .	4-39
4.9.2 Installing the knife cylinders . . . . .	4-41
4.9.3 Disassembling the knife cylinders . . . . .	4-43
4.9.4 Assembling the knife cylinders . . . . .	4-44
4.9.5 Removing the cutterbed cylinders . . . . .	4-45
4.9.6 Installing the cutterbed cylinders . . . . .	4-46
4.9.7 Disassembling the cutterbed cylinders . . . . .	4-46
4.9.8 Assembling the cutterbed cylinders . . . . .	4-47
4.9.9 Removing the cutter valve . . . . .	4-48
4.9.10 Installing the cutter valve . . . . .	4-49
4.9.11 Disassembling the cutter valve . . . . .	4-50
4.9.12 Inspecting the cutter valve . . . . .	4-50
4.9.13 Assembling the cutter valve . . . . .	4-52
4.9.14 Checking the accumulator charge pressure . . . . .	4-53
4.9.15 Charging an accumulator . . . . .	4-54
4.9.16 Discharging an accumulator . . . . .	4-56
4.9.17 Removing the accumulator . . . . .	4-57
4.9.18 Installing the accumulator . . . . .	4-58
<b>5 Electrical system . . . . .</b>	<b>5-1</b>
<b>5.1 Basic troubleshooting information . . . . .</b>	<b>5-3</b>
5.1.1 Basic troubleshooting procedures . . . . .	5-3
5.1.2 Tools . . . . .	5-4
5.1.3 Continuity check . . . . .	5-4
5.1.4 Voltage check . . . . .	5-5
5.1.5 Testing a solenoid valve . . . . .	5-5
5.1.6 Testing a coil . . . . .	5-7

<b>5.2 Connectors</b>	<b>5-8</b>
5.2.1 Machine lamp plug wiring diagram - North America	5-8
5.2.2 Machine lamp plug wiring diagram CE	5-9
5.2.3 Connecting the control harness plug	5-10
5.2.4 Connecting the four pin plug, machines with a disconnect brake	5-10
5.2.5 Checking a connector	5-10
5.2.6 Terminal numbers	5-11
5.2.7 Pins and sockets	5-11
5.2.8 Replacing a Packard connector	5-12
5.2.9 Replacing an AMP connector	5-13
<b>5.3 Sensors and switches</b>	<b>5-14</b>
5.3.1 Adjusting sensors and switches	5-23
5.3.2 Sensors and switches locations and specifications	5-24
5.3.3 Testing a sensor	5-25
5.3.4 Testing a switch	5-25
5.3.4.1 Testing a switch with the terminal	5-26
5.3.4.2 Testing a switch with a continuity test	5-26
<b>5.4 Terminal</b>	<b>5-27</b>
5.4.1 General terminal information	5-27
5.4.1.1 Terminal harness information	5-27
5.4.1.2 Icon functions	5-27
5.4.1.3 Terminal screen trees	5-33
5.4.2 CAN bus system overview	5-37
5.4.3 Startup screen	5-39
5.4.4 Main work screens	5-40
5.4.4.1 Changing the main work screen boxes	5-41
5.4.4.2 Main work screen boxes	5-41
5.4.4.3 Operating directional arrows	5-45
5.4.4.4 Flakes per bale	5-46
5.4.4.5 Bale density cylinder pressure	5-46
5.4.4.6 Changing between automatic and manual control mode	5-48
5.4.4.7 Plunger load	5-49
5.4.4.8 Plunger load setting information	5-50
5.4.4.9 Setting the plunger load	5-51
5.4.4.10 Feeder slip	5-52
5.4.4.11 Main work screen display area	5-53
5.4.5 Accumulator (if equipped)	5-55
5.4.5.1 Accumulator bale position	5-55
5.4.5.2 Accumulator modes	5-55
5.4.5.3 Accumulator manual mode operation	5-56
5.4.5.4 Accumulator bale unload indication	5-56
5.4.5.5 Accumulator errors	5-56
5.4.5.6 Accumulator shift lockout setting	5-57
5.4.6 Scale, if equipped	5-58
5.4.6.1 Bale weight	5-58
5.4.7 Strokes per flake	5-59
5.4.8 Releasing the bale chamber pressure before ejecting a bale	5-59
5.4.9 Releasing the bale chamber pressure	5-60
5.4.10 Machine settings screen	5-61
5.4.10.1 Machine settings screen information	5-61
5.4.10.2 Setting the chain lubrication interval	5-61
5.4.10.3 Setting the knotter lubrication interval	5-62
5.4.10.4 Setting the knotter lubrication operating time	5-63
5.4.10.5 Manual knotter lubrication start	5-63
5.4.10.6 Manual knotter lubrication stop	5-63
5.4.10.7 Changing the bale length	5-63
5.4.10.8 Changing the crop type	5-64
5.4.10.9 Changing the audio settings	5-64

5.4.11	Service screen . . . . .	5-65
5.4.11.1	Service screen display . . . . .	5-65
5.4.11.2	Switch service screen . . . . .	5-66
5.4.11.3	Voltage service screen . . . . .	5-69
5.4.11.4	Frequency service screen . . . . .	5-70
5.4.12	Alarm log screen . . . . .	5-72
5.4.12.1	Alarm detail screen . . . . .	5-73
5.4.12.2	Removing an alarm . . . . .	5-73
5.4.13	Machine configuration screen . . . . .	5-74
5.4.14	Calibrating the accumulator scale . . . . .	5-74
5.4.15	Calibrating the bale length, if equipped . . . . .	5-76
5.4.16	Calibrating the roller bale chute scale with an object of a known weight . . . . .	5-78
5.4.17	Calibrating the roller bale chute scale with a test bale . . . . .	5-80
5.4.18	Calibrating the cutter . . . . .	5-81
5.4.19	Rotor cutter - late production cutter . . . . .	5-82
5.4.19.1	Changing the cutter knife setting . . . . .	5-84
5.4.19.2	Lowering the cutterbed . . . . .	5-86
5.4.19.3	Raising the cutterbed . . . . .	5-87
5.4.19.4	Removing debris from the cutter knives . . . . .	5-88
5.4.19.5	Unplugging the cutter . . . . .	5-91
5.4.20	Work records screen . . . . .	5-92
5.4.20.1	Job record screen . . . . .	5-93
5.4.20.2	Changing the current job . . . . .	5-95
5.4.20.3	Customer record screen . . . . .	5-95
5.4.20.4	Changing the current customer . . . . .	5-96
5.4.20.5	Year record screen . . . . .	5-97
5.4.20.6	Changing the current year . . . . .	5-98
5.4.20.7	Clearing a record . . . . .	5-98
5.4.20.8	Storing work records on a data card . . . . .	5-99
5.4.20.9	Lifetime counter screen . . . . .	5-99
5.4.21	Indicator icons and error number . . . . .	5-100
5.4.21.1	Machine indicator icons and error numbers . . . . .	5-100
5.4.21.2	Accumulator indicator icons and error numbers . . . . .	5-101
5.4.21.3	Scale indicator icons and error numbers . . . . .	5-102
5.4.22	Alarms . . . . .	5-102
5.4.22.1	Alarm information . . . . .	5-102
5.4.22.2	Visual alarm descriptions . . . . .	5-102
5.4.22.3	Audible alarm descriptions . . . . .	5-102
5.4.22.4	Alarm table . . . . .	5-103
<b>5.5</b>	<b>Terminal troubleshooting . . . . .</b>	<b>5-113</b>
<b>6</b>	<b>Bale feeding system . . . . .</b>	<b>6-1</b>
<b>6.1</b>	<b>General information . . . . .</b>	<b>6-3</b>
6.1.1	Pickup assembly . . . . .	6-3
6.1.2	Pickup assembly operation and settings . . . . .	6-3
6.1.3	Pickup height . . . . .	6-4
6.1.4	Adjusting the pickup assembly flotation - torsion rod system . . . . .	6-4
6.1.5	Adjusting the pickup assembly flotation - compression spring system . . . . .	6-5
6.1.6	Adjusting the flotation and the gauge wheels height . . . . .	6-5
<b>6.2</b>	<b>Chain adjustment . . . . .</b>	<b>6-7</b>
6.2.1	Adjusting the left-hand pickup chains . . . . .	6-7
6.2.2	Adjusting the right-hand pickup chains . . . . .	6-7
<b>6.3</b>	<b>Pickup clutch - FHB0x999 and prior . . . . .</b>	<b>6-8</b>
6.3.1	Pickup assembly clutch operation . . . . .	6-8
6.3.2	Pickup assembly slip clutch components . . . . .	6-8
6.3.3	Pickup assembly overrunning clutch components . . . . .	6-8
6.3.4	Adjusting the pickup assembly slip clutch . . . . .	6-9

6.3.5	Adjusting the pickup assembly overrunning clutch . . . . .	6-9
6.3.6	Removing the pickup assembly clutch . . . . .	6-9
6.3.7	Disassembling the pickup assembly clutch . . . . .	6-10
6.3.8	Assembling the pickup assembly clutch . . . . .	6-10
6.3.9	Installing the pickup assembly clutch . . . . .	6-11
<b>6.4</b>	<b>Pickup clutch - GHB0x101 and later . . . . .</b>	<b>6-13</b>
6.4.1	Checking the pickup slip clutch - GHB0x101 and later . . . . .	6-13
6.4.2	Adjusting the pickup slip clutch - GHB0x101 and later . . . . .	6-13
6.4.3	Removing the pickup slip clutch - GHB0x101 and later . . . . .	6-14
6.4.4	Installing the pickup slip clutch - GHB0x101 and later . . . . .	6-14
6.4.5	Disassembling the pickup slip clutch - GHB0x101 and later . . . . .	6-14
6.4.6	Assembling the pickup slip clutch - GHB0x101 and later . . . . .	6-16
<b>6.5</b>	<b>Augers . . . . .</b>	<b>6-18</b>
6.5.1	Augers general information . . . . .	6-18
6.5.2	Left-hand auger components . . . . .	6-18
6.5.3	Removing the primary drive sprocket and the top auger drive sprocket . . . . .	6-19
6.5.4	Removing the bottom augers . . . . .	6-20
6.5.5	Removing the scrapers and wear plates . . . . .	6-21
6.5.6	Right-hand auger components . . . . .	6-22
6.5.7	Removing the right-hand auger . . . . .	6-22
6.5.8	Installing the scrapers . . . . .	6-23
6.5.9	Installing the top auger . . . . .	6-24
6.5.10	Installing the bottom auger . . . . .	6-24
<b>6.6</b>	<b>Reel . . . . .</b>	<b>6-26</b>
6.6.1	Removing the tines . . . . .	6-26
6.6.2	Installing the tines . . . . .	6-26
6.6.3	Removing the cam bearings . . . . .	6-26
6.6.4	Installing the cam bearings . . . . .	6-27
6.6.5	Removing the reel bearings . . . . .	6-27
6.6.6	Installing the reel bearings . . . . .	6-28
6.6.7	Tine bar components . . . . .	6-30
6.6.8	Removing the tine bar and the bearing . . . . .	6-30
6.6.9	Installing the tine bar and the bearing . . . . .	6-33
6.6.10	Removing the reel . . . . .	6-36
6.6.11	Installing the reel . . . . .	6-39
<b>6.7</b>	<b>Gauge wheels . . . . .</b>	<b>6-42</b>
6.7.1	Removing the wheel bearing . . . . .	6-42
6.7.2	Installing the wheel bearing . . . . .	6-42
6.7.3	Adjusting the wheel bearing . . . . .	6-43
<b>6.8</b>	<b>Pickup . . . . .</b>	<b>6-44</b>
6.8.1	Removing the pickup . . . . .	6-44
6.8.2	Installing the pickup . . . . .	6-45
<b>6.9</b>	<b>Troubleshooting . . . . .</b>	<b>6-48</b>
6.9.1	Troubleshooting the pickup assembly . . . . .	6-48
<b>7</b>	<b>Bale forming system . . . . .</b>	<b>7-1</b>
<b>7.1</b>	<b>Optional rotor cutter - FHB0x999 and prior . . . . .</b>	<b>7-7</b>
7.1.1	Rotor cutter - early production cutter . . . . .	7-7
7.1.2	Cutterbed . . . . .	7-7
7.1.2.1	Replacing the knives . . . . .	7-7
7.1.2.2	Sharpening the knives . . . . .	7-9
7.1.2.3	Lowering the cutterbed . . . . .	7-10
7.1.2.4	Removing the cutterbed . . . . .	7-10
7.1.2.5	Removing the knife selector rod and knives . . . . .	7-12
7.1.2.6	Removing the springs . . . . .	7-13
7.1.2.7	Removing the knife roller pivots . . . . .	7-14
7.1.2.8	Installing roller pivots - wide cutterbed . . . . .	7-15

7.1.2.9	Installing roller pivots - narrow cutterbed	7-19
7.1.2.10	Installing the springs	7-24
7.1.2.11	Installing the knife selector rod and knives	7-24
7.1.2.12	Installing the cutterbed	7-25
7.1.2.13	Raising the cutterbed	7-26
7.1.2.14	Filler plate location - narrow cutterbed	7-27
7.1.2.15	Filler plate location - wide cutterbed	7-29
7.1.3	Cutter group assembly	7-30
7.1.4	Removing the cutter assembly	7-31
7.1.5	Installing the cutter assembly	7-34
7.1.6	Replacing the cutter strippers	7-36
7.1.7	Knife engaging and disengaging	7-39
7.1.8	Changing the cut length	7-40
7.1.9	Gearbox	7-41
7.1.9.1	Cutter gearbox components	7-41
7.1.9.2	Disassembling the cutter gearbox	7-41
7.1.9.3	Assembling the cutter gearbox	7-43
7.1.10	Slip clutch and drive chain	7-48
7.1.10.1	Removing the cutter drive chain	7-48
7.1.10.2	Removing the cutter slip clutch	7-48
7.1.10.3	Replacing the slip clutch hub	7-49
7.1.10.4	Installing the cutter slip clutch	7-50
7.1.10.5	Rotor cutter slip clutch adjustment, if equipped	7-50
7.1.10.6	Installing the cutter drive chain	7-50
<b>7.2</b>	<b>Optional rotor cutter - GHB0x101 and later</b>	<b>7-52</b>
7.2.1	Rotor cutter - late production cutter	7-52
7.2.2	Changing the cutter knife setting	7-52
7.2.3	Lowering the cutterbed	7-54
7.2.4	Raising the cutterbed	7-55
7.2.5	Replacing the knives	7-57
7.2.6	Removing debris from the cutter knives	7-59
7.2.7	Unplugging the cutter	7-62
7.2.8	Sharpening the knives	7-63
7.2.9	Gearbox	7-64
7.2.9.1	Cutter gearbox components	7-64
7.2.9.2	Disassembling the cutter gearbox	7-64
7.2.9.3	Assembling the cutter gearbox	7-66
7.2.10	Slip clutch and drive chain	7-71
7.2.10.1	Removing the cutter drive chain	7-71
7.2.10.2	Removing the cutter slip clutch	7-71
7.2.10.3	Replacing the slip clutch hub	7-72
7.2.10.4	Installing the cutter slip clutch	7-73
7.2.10.5	Rotor cutter slip clutch adjustment, if equipped	7-73
7.2.10.6	Installing the cutter drive chain	7-73
7.2.11	Removing the cutterbed	7-74
7.2.12	Installing the cutterbed	7-76
7.2.13	Disassembling the cutterbed	7-77
7.2.14	Assembling the cutterbed	7-78
7.2.15	Replacing the rotor blades	7-80
7.2.16	Removing the rotor	7-80
7.2.17	Installing the rotor	7-81
7.2.18	Replacing the cutter strippers	7-82
<b>7.3</b>	<b>Optional packer cutter</b>	<b>7-86</b>
7.3.1	Unplugging the cutter	7-86
7.3.2	Changing the cut length	7-86
<b>7.4</b>	<b>Packer</b>	<b>7-88</b>
7.4.1	Adjusting the packer chain	7-88
7.4.2	Adjusting the packer clutch	7-88

7.4.3	Disassembling the packer clutch	7-89
7.4.4	Inspect the packer clutch	7-89
7.4.5	Assemble the packer clutch	7-90
7.4.6	Troubleshooting the packer clutch	7-90
7.4.7	Removing the packer fingers	7-90
7.4.8	Packer crank components	7-92
7.4.9	Installing the packer fingers	7-92
7.4.10	Removing the packer finger links	7-93
7.4.11	Installing the packer finger links	7-94
7.4.12	Replacing the packer finger link bearing	7-94
7.4.13	Packer crank shaft assembly components	7-95
7.4.14	Removing the packer crank	7-95
7.4.15	Assembling the packer crank	7-97
7.4.16	Installing the packer crank	7-107
<b>7.5</b>	<b>Stuffer</b>	<b>7-112</b>
7.5.1	Stuffer general information	7-112
7.5.2	Stuffer cycle	7-112
7.5.3	Stuffer troubleshooting	7-113
<b>7.6</b>	<b>Stuffer finger bar</b>	<b>7-115</b>
7.6.1	Removing the stuffer finger bar - 130x120 and 4x4	7-115
7.6.2	Installing the stuffer finger bar - 130x120 and 4x4	7-116
7.6.3	Removing the stuffer finger bar - all except 130x120 and 4x4	7-117
7.6.4	Installing the stuffer finger bar - all except 130x120 and 4x4	7-117
<b>7.7</b>	<b>Stuffer arm</b>	<b>7-118</b>
7.7.1	Removing the stuffer arm	7-118
7.7.2	Installing the stuffer arm	7-119
<b>7.8</b>	<b>Stuffer arm bearing</b>	<b>7-120</b>
7.8.1	Removing the stuffer arm bearing	7-120
7.8.2	Installing the stuffer arm bearing	7-121
<b>7.9</b>	<b>Stuffer brake</b>	<b>7-122</b>
7.9.1	Stuffer brake general information	7-122
7.9.2	Adjusting the stuffer brake	7-122
7.9.3	Removing the stuffer brake	7-123
7.9.4	Disassembling the stuffer brake	7-125
7.9.5	Assembling the stuffer brake	7-126
7.9.6	Installing the stuffer brake	7-126
<b>7.10</b>	<b>Stuffer clutch</b>	<b>7-128</b>
7.10.1	Removing the stuffer clutch	7-128
7.10.2	Disassembling the stuffer clutch	7-130
7.10.3	Assembling the stuffer clutch	7-130
7.10.4	Installing the stuffer clutch	7-131
7.10.5	Adjusting the stuffer clutch	7-132
7.10.6	Replacing the stuffer drive sprocket bushing	7-133
<b>7.11</b>	<b>Stuffer shaft</b>	<b>7-134</b>
7.11.1	Removing the right-hand stuffer shaft bearing	7-134
7.11.2	Installing the right-hand stuffer shaft bearing	7-135
7.11.3	Removing the left-hand stuffer shaft bearing	7-136
7.11.4	Installing the left-hand stuffer shaft bearing	7-139
7.11.5	Removing the stuffer shaft	7-140
7.11.6	Installing the stuffer shaft	7-143
<b>7.12</b>	<b>Holding fingers</b>	<b>7-145</b>
7.12.1	Holding finger components	7-145
7.12.2	Adjusting the holding fingers	7-145
7.12.3	Removing the holding finger assembly	7-147
7.12.4	Installing the holding finger assembly	7-148
7.12.5	Removing the left-hand holding finger bearing	7-149
7.12.6	Installing the left-hand holding finger bearing	7-149

7.12.7	Removing the right-hand holding finger bearing	7-149
7.12.8	Installing the right-hand holding finger bearing	7-150
<b>7.13</b>	<b>Stuffer sensor door</b>	<b>7-151</b>
7.13.1	Stuffer sensor door general information	7-151
7.13.2	Adjusting the stuffer sensor door	7-151
<b>7.14</b>	<b>Stuffer chute</b>	<b>7-153</b>
7.14.1	Stuffer chute adjustment	7-153
<b>7.15</b>	<b>Plunger</b>	<b>7-154</b>
7.15.1	Plunger components	7-154
7.15.2	Removing the plunger	7-155
7.15.3	Installing the plunger	7-159
7.15.4	Removing the connecting rods	7-162
7.15.5	Installing the connecting rods	7-163
7.15.6	Removing the crank arm bearing assemblies	7-164
7.15.7	Installing the crank arm bearing assemblies	7-168
7.15.8	Removing the main plunger rollers	7-170
7.15.9	Disassembling the main plunger rollers	7-171
7.15.10	Assembling the main plunger rollers	7-171
7.15.11	Installing the main plunger rollers	7-172
7.15.12	Adjusting the front main plunger rollers	7-172
7.15.13	Adjusting the side plunger rollers	7-173
7.15.14	Adjusting the plunger knives	7-174
7.15.15	Adjusting the face angles	7-174
7.15.16	Adjusting the slot cleaners	7-175
<b>7.16</b>	<b>Hay dogs</b>	<b>7-176</b>
7.16.1	Inspecting the top and side hay dogs	7-176
7.16.2	Inspecting the stationary hay dogs	7-176
7.16.3	Adjusting the stationary knife	7-176
<b>7.17</b>	<b>Tension arms</b>	<b>7-178</b>
7.17.1	Bale tension arm components	7-178
7.17.2	Removing the bale tension arms	7-178
7.17.3	Inspecting the bale tension arms	7-179
7.17.4	Installing the bale tension arms	7-180
7.17.5	Bale tension roller components	7-180
7.17.6	Removing the bale tension roller	7-181
7.17.7	Installing the bale tension roller	7-181
<b>7.18</b>	<b>General knotter information</b>	<b>7-182</b>
7.18.1	Double knotter system description	7-182
7.18.2	Double knotter system	7-183
7.18.3	Knotter operation	7-183
7.18.4	Knotter/needle lockout	7-186
7.18.5	Twine specifications	7-187
7.18.6	Monitoring flags	7-188
7.18.7	Monitoring flags	7-189
<b>7.19</b>	<b>Threading a four twine baler</b>	<b>7-190</b>
7.19.1	Installing twine balls	7-190
7.19.2	Threading the left-hand needle twine box	7-190
7.19.3	Threading the right-hand needle twine box	7-191
7.19.4	Threading the needle twine box tensioners	7-193
7.19.5	Threading the needle twines into the needle twine area	7-193
7.19.6	Needle twine tensioners	7-194
7.19.7	Threading the needle slacker arms	7-194
7.19.8	Threading the twines to the needles	7-195
7.19.9	Threading the left-hand knotter twine box	7-196
7.19.10	Threading the right-hand knotter twine box	7-197
7.19.11	Threading the twines into the knotter area	7-199
7.19.12	Threading the twines through the knotters	7-200

7.19.13	Threading and tying the needle and the knotter twines	7-201
<b>7.20</b>	<b>Threading a six twine baler</b>	<b>7-203</b>
7.20.1	Installing twine balls	7-203
7.20.2	Threading the left-hand needle twine box	7-203
7.20.3	Threading the right-hand needle twine box	7-205
7.20.4	Threading the needle twine box tensioners	7-206
7.20.5	Threading the needle twines into the needle twine area	7-207
7.20.6	Threading the needle slacker arms	7-207
7.20.7	Threading the twine hooks for needles	7-208
7.20.8	Threading the twines to the needles	7-209
7.20.9	Threading the left-hand knotter twine box	7-209
7.20.10	Threading the right-hand knotter twine box	7-211
7.20.11	Twine box tensioners for knotters	7-213
7.20.12	Threading the twines into the knotter area	7-213
7.20.13	Threading the twines through the knotters	7-214
7.20.14	Threading and tying the needle and the knotter twines	7-215
<b>7.21</b>	<b>General maintenance</b>	<b>7-217</b>
7.21.1	General maintenance information	7-217
7.21.2	Causes of tying failure	7-217
7.21.3	Knotter head components	7-218
7.21.4	Adjusting the twine box twine tensioner	7-219
7.21.5	Billhook and billhook cam	7-219
7.21.6	Adjusting the billhook and billhook cam	7-219
7.21.7	Replacing a billhook	7-220
7.21.8	Replacing the twine knife	7-221
<b>7.22</b>	<b>Stripper arm adjustment</b>	<b>7-222</b>
7.22.1	Adjusting the stripper arm	7-222
7.22.2	Twine disc operation	7-223
7.22.3	Timing the twine disc	7-224
7.22.4	Adjusting the twine holder	7-225
<b>7.23</b>	<b>Needle maintenance</b>	<b>7-226</b>
7.23.1	Installing a needle	7-226
7.23.2	Centering a needle	7-226
7.23.3	Needle actuating rod length	7-227
7.23.4	Checking needle penetration	7-227
7.23.5	Adjusting needle penetration - all needles	7-227
7.23.6	Adjusting needle penetration - one needle	7-228
7.23.7	Adjusting the needle roller height	7-228
7.23.8	Adjusting the needle lateral load	7-229
7.23.9	Adjusting the twine fingers	7-230
<b>7.24</b>	<b>Twine finger adjustment</b>	<b>7-232</b>
7.24.1	Adjusting the tucker arms	7-232
7.24.2	Timing the baler	7-233
7.24.3	Adjusting the knotter/needle brake	7-233
7.24.4	Inspecting the knotter/needle inner cam lobe	7-235
7.24.5	Adjusting the needle protection linkage	7-235
7.24.6	Checking the needle curve	7-236
7.24.7	Adjusting the twine and tucker finger shaft bearings	7-237
<b>7.25</b>	<b>Twine tensioners</b>	<b>7-238</b>
7.25.1	Removing the lower twine tensioner assembly	7-238
7.25.2	Disassembling the lower twine tensioner assembly	7-238
7.25.3	Disassembling the lower tensioner arm	7-240
7.25.4	Assembling the lower tensioner arm	7-241
7.25.5	Disassembling a lower tensioner	7-242
7.25.6	Assembling a lower tensioner	7-243
7.25.7	Assembling the lower twine tensioner assembly	7-244
7.25.8	Installing the lower twine tensioner assembly	7-245

7.25.9	Upper twine tensioner assembly components . . . . .	7-245
7.25.10	Disassembling the upper twine tensioner assembly . . . . .	7-246
7.25.11	Assembling the upper twine tensioner assembly . . . . .	7-247
7.25.12	Twine tension . . . . .	7-247
<b>7.26</b>	<b>Knotter frame . . . . .</b>	<b>7-249</b>
7.26.1	Checking the knotter frame timing . . . . .	7-249
7.26.2	Knotter Assembly . . . . .	7-250
7.26.3	Removing the knotter frame . . . . .	7-251
7.26.4	Installing the knotter frame . . . . .	7-252
<b>7.27</b>	<b>Knotter assembly . . . . .</b>	<b>7-254</b>
7.27.1	Removing the knotter assembly . . . . .	7-254
7.27.2	Disassembling a four twine knotter assembly . . . . .	7-257
7.27.3	Knotter assembly inspection . . . . .	7-258
7.27.4	Assembling the four twine knotter assembly . . . . .	7-258
7.27.5	Six twine knotter assembly specifications . . . . .	7-261
7.27.6	Disassembling the six twine knotter assembly . . . . .	7-262
7.27.7	Knotter assembly inspection . . . . .	7-263
7.27.8	Assembling the six twine knotter assembly . . . . .	7-264
<b>7.28</b>	<b>Twine finger cam . . . . .</b>	<b>7-272</b>
7.28.1	Twine finger cam components . . . . .	7-272
7.28.2	Removing the twine finger cam . . . . .	7-272
7.28.3	Installing the twine finger cam . . . . .	7-276
<b>7.29</b>	<b>Knotter clutch . . . . .</b>	<b>7-277</b>
7.29.1	Knotter clutch components . . . . .	7-277
7.29.2	Removing the knotter clutch . . . . .	7-277
7.29.3	Inspecting the knotter clutch . . . . .	7-279
7.29.4	Installing the knotter clutch . . . . .	7-280
<b>7.30</b>	<b>Knotter brake . . . . .</b>	<b>7-283</b>
7.30.1	Knotter brake components . . . . .	7-283
7.30.2	Removing the knotter brake . . . . .	7-283
7.30.3	Installing the knotter brake . . . . .	7-286
<b>7.31</b>	<b>Knotter head . . . . .</b>	<b>7-291</b>
7.31.1	Knotter head components . . . . .	7-291
7.31.2	Disassembling the knotter head . . . . .	7-291
7.31.3	Inspecting the knotter head . . . . .	7-298
7.31.4	Assembling the knotter head . . . . .	7-299
<b>7.32</b>	<b>Knotter trip arm . . . . .</b>	<b>7-306</b>
7.32.1	Knotter trip arm assembly . . . . .	7-306
7.32.2	Knotter trip arm system components . . . . .	7-307
7.32.3	Adjusting the knotter trip arm system . . . . .	7-307
7.32.4	Starwheel components . . . . .	7-308
7.32.5	Starwheel tower components . . . . .	7-309
7.32.6	Removing the Starwheel and bell crank . . . . .	7-309
7.32.7	Installing the starwheel and bell crank . . . . .	7-312
<b>7.33</b>	<b>Knotter blower . . . . .</b>	<b>7-317</b>
7.33.1	Knotter blower components . . . . .	7-317
7.33.2	Removing the knotter blower . . . . .	7-318
7.33.3	Disassembling the knotter blower . . . . .	7-319
7.33.4	Assembling the knotter blower . . . . .	7-320
7.33.5	Installing the knotter blower . . . . .	7-321
<b>7.34</b>	<b>Knotter stack . . . . .</b>	<b>7-322</b>
7.34.1	Adjusting the knotter stack preload . . . . .	7-322
7.34.2	Adjusting the knotter sprocket preload . . . . .	7-325
<b>7.35</b>	<b>Knotter lubrication pump . . . . .</b>	<b>7-329</b>
7.35.1	Priming the knotter lubrication lines . . . . .	7-329
<b>7.36</b>	<b>Removing a bale from the bale chamber . . . . .</b>	<b>7-331</b>



**Suggest:**

**For more complete manuals. Please go to the home page.**

**<https://www.ebooklibonline.com>**

**If the above button click is invalid. Please download this document first, and then click the above link to download the complete manual.**

**Thank you so much for reading**

7.36.1	Operating the ejector, if equipped	7-331
7.36.2	Removing a bale from the bale chamber - no ejector	7-332
7.36.3	Removing high moisture bales	7-333
<b>7.37</b>	<b>Knotter tying troubleshooting</b>	<b>7-334</b>
7.37.1	Tying troubleshooting	7-334
<b>8</b>	<b>Accessories</b>	<b>8-1</b>
<b>8.1</b>	<b>Accumulator</b>	<b>8-3</b>
8.1.1	Adjustments	8-3
8.1.1.1	Adjusting the center bale sensor	8-3
8.1.1.2	Adjusting the front bale stops	8-3
8.1.1.3	Adjusting the counterbalance weights	8-4
8.1.1.4	Adjusting the bale guide	8-5
8.1.1.5	Adjusting the extension panel stops	8-5
8.1.1.6	Adjusting the side cart latch	8-6
8.1.1.7	Testing the side cart latch	8-7
8.1.1.8	Bale shift bar	8-8
8.1.1.9	Adjusting the unloading solenoids	8-8
8.1.1.10	Adjusting the caster brake	8-9
8.1.2	Specifications	8-9
8.1.2.1	Dimensions and weights	8-9
8.1.2.2	Tires and axles	8-9
8.1.2.3	Bale size	8-10
8.1.2.4	Capacity	8-10
8.1.2.5	Control and monitoring system	8-10
8.1.2.6	System voltage	8-10
8.1.2.7	Hydraulics	8-10
8.1.2.8	Bale weight kit (optional)	8-10
8.1.2.9	Lubrication system	8-11
8.1.2.10	Lubrication	8-11
<b>8.2</b>	<b>Bale chute</b>	<b>8-12</b>
8.2.1	Flat bale chute components	8-12
8.2.2	Replacing the flat bale chute pivot bushing	8-12
8.2.3	Raising the roller bale chute	8-12
8.2.4	Lowering the roller bale chute	8-14
8.2.5	Roller bale chute components	8-16
8.2.6	Adjusting the roller bale chute length	8-16
8.2.7	Adjusting the roller bale chute brake	8-18
8.2.8	Replacing the bale chute front roller bearings	8-18
8.2.9	Replacing the bale chute rear roller bearings	8-19
8.2.10	Replacing the roller bale chute brass washers	8-19
8.2.11	Replacing the roller bale chute pivot bushing	8-19
<b>8.3</b>	<b>Electronic Knotter Trip</b>	<b>8-21</b>
8.3.1	Remove and install the encoder	8-21
8.3.2	Remove the knotter trip harness	8-24
8.3.3	Install the knotter trip harness	8-26
8.3.4	Remove the motor, the reset arm, and the reset mount	8-29
8.3.5	Install the reset mount, the reset arm, the motor	8-31
8.3.6	Remove and install the knotter/needle lockout switch	8-34
8.3.7	Install the decals for the electronic knotter trip	8-36
8.3.8	Check the electronic knotter trip system	8-36
<b>9</b>	<b>Diagrams</b>	<b>9-1</b>
<b>9.1</b>	<b>Electrical diagrams and schematics</b>	<b>9-3</b>
9.1.1	Reading a harness diagram	9-3
9.1.2	Wiring diagram color codes	9-5
9.1.3	Electrical components - NA	9-9

9.1.4	Electrical components - CE	9-10
9.1.5	Cutter and pickup electrical components - GHB0x101 and later	9-13
9.1.6	Circuit and connector table	9-13
9.1.7	Main control harness - FHB0x999 and prior	9-33
9.1.8	Main control harness - GHB0x101 and later	9-35
9.1.9	Lower control harness	9-37
9.1.10	Main lamp harness NA	9-38
9.1.11	Main lamp harness CE	9-40
9.1.12	Accumulator extension harness	9-43
9.1.13	Accumulator power harness	9-43
9.1.14	Accumulator switch harness	9-44
9.1.15	Beacon lamp harness	9-44
9.1.16	Cutter harness - FHB0x999 and prior	9-45
9.1.17	Cutter harness - GHB0x101 and later	9-47
9.1.18	Ejector chute harness	9-49
9.1.19	Electronic knotter trip harness	9-50
9.1.20	Front lamp harness	9-50
9.1.21	Left connecting rod harness	9-51
9.1.22	Packer cutter harness - FHB0x999 and prior	9-51
9.1.23	Packer cutter harness - GHB0x101 and later	9-52
9.1.24	Feeder slip harness - GHB0x101 and later	9-52
9.1.25	Release valve harness	9-53
9.1.26	Right connecting rod harness	9-53
9.1.27	Tandem axle harness	9-53
9.1.28	Telemetry adapter harness	9-54
9.1.29	Upper control harness	9-54
<b>9.2</b>	<b>Hydraulic diagrams and schematics</b>	<b>9-56</b>
9.2.1	Machine hydraulic schematic	9-56
9.2.2	Bale ejector and bale chute hydraulic schematic	9-57
9.2.3	Rotor cutter schematic - late production	9-58
9.2.4	Hydraulic brake systems	9-58
9.2.5	Cutter with tandem axle and hydraulic brakes	9-61
9.2.6	Cutter and pickup - GHB0x101 and later	9-63
9.2.7	Packer with tandem axle and pneumatic brakes	9-65
9.2.8	Packer/cutter with single axle and hydraulic jack	9-66
<b>9.3</b>	<b>Pneumatic brake system</b>	<b>9-69</b>
9.3.1	Pneumatic brake system - single axle	9-69
9.3.2	Pneumatic brake system - tandem axle	9-70
<b>9.4</b>	<b>Power flow</b>	<b>9-71</b>
9.4.1	Power flow diagrams	9-71
<b>10</b>	<b>Index</b>	<b>Index-1</b>

**<https://www.ebooklibonline.com>**

Hello dear friend!

Thank you very much for reading.

Enter the link into your browser.

The full manual is available for immediate download.

**<https://www.ebooklibonline.com>**